

Cellphone manual

myPhone 3300



Table of contents

Contents	2
Box Contains.....	4
Technical parameters.....	5
1. Introduction.....	7
Appearance of phone.....	7
Turning on and off.....	9
Installation SIM cards, memory cards and battery.....	9
Charging phone.....	11
2. Using basic functions.....	11
Phone's keypad block.....	11
Access to the phone's menu.....	12
Telephone customization.....	13
Connectivity.....	18
Text messages.....	19
Contacts.....	21
3. Advanced features.....	24
Connecting number from the phone book (contacts).....	24

Missed calls / messages.....	25
Connecting your phone with computer.....	26
4. Other functions.....	28
Date and time settings.....	28
Setting the menu language.....	29
Connection settings.....	29
Configure alarm / alarms.....	29
Factory settings.....	31
Calls list.....	31
Calendar.....	32
Bluetooth.....	33
Camera.....	36
Phone icons.....	38
Phone Tracking.....	39
The declaration of conformity with European Union Directives.....	40

Contents of the set

Before using the phone make sure, that the following elements are in the box:

- myPhone 3300 cellphone,
- Li-Ion 800 mAh battery,
- network adapter,
- headset,
- user manual,
- warranty card.

Technical parameters

- Dual SIM GSM 900/1800 MHz
- Clear 1.77" color display
- Audio player, FM radio
- Flashlight

- Bluetooth
- Camera
- microSD reader compatible with cards to up to 16GB

1. Introductions

Cellphone appearance



1. Display.
2. Receiver speaker.
3. Flashlight indicator.
4. **<Red button>.**
5. **Navigation buttons: <up>, <down>, <left>, <right>. and <OK> button.**
6. **<Green button>.**
7. Microphone.
8. **<0>** button turns on the flashlight.
9. Camera lens.
10. Buzzer.
11. microUSB port.
12. Audio socket.

Turning the phone on/off

In order to turn the phone on or off, press and hold the **<red button>**.

If, after turning on the phone you see a PIN prompt, enter the code (it will be displayed as asterisks: ****) and press **<OK>**.

Installing the SIM card, memory card and the battery

If the phone is on - turn it off. Remove the back cover by pressing your finger in the crevice (marked with an arrow on the picture below).



Insert
- SIM1



SIM1 card
has to be

placed in the recess according to the illustration inside the phone.


Insert SIM2 card - SIM2 has to be placed in the removable tray under the SIM1 card according to the illustration inside the phone.

microSD card has to be placed with golden contacts directed downward and fitted inside the recess. The reader supports cards to up to 16 GB.

Insert the battery - the battery has to be placed with gold contacts connecting with the contacts inside the phone. Place the battery cover (by pressing it into place).

Charging the phone

Connect the microUSB-B cable to the microUSB socket in the phone, then connect the adapter to the low voltage socket.

During charging, the battery icon , located in the top right corner will be animated. After the battery has been charged, disconnect the adapter from the socket.

Disconnect the cable from the phone socket.

2. Using the basic functions

Locking the phone keyboard

In order to to unlock the phone keyboard, press the left "Unlock" button (located in the bottom left corner) and then the <*> button. The keyboard will be unlocked. If the screen is turned off, press any key before trying to unlock the keyboard.

Accessing the phone menu

In order to access the phone menu, press the **<OK>** or **[Menu]** button on the home screen.

Using the **<up>**, **<down>**, **<left>** and **<right>** navigation buttons go to the desired menu option.

Press the **[OK]**, button to confirm the selection (enter the chosen menu) or **[Back]**, to return to the previous menu/home screen.

Customizing the phone

myPhone 3300 can be customized to suit your needs.

By customizing the phone you will make it easier and more fun to use it.

User sounds and profiles

In order to configure the sound profile, use the **[User profiles]** option, available in **[Menu] → [Settings] → [User profiles]**.

Select the desired sound profile from the list and click **[Options] → [Activate] → [Select]**, to activate the chosen profile or **[Options] → [Customize] → [Select]**, in order to edit the profile according to your preferences.

Available sound profile customization options:

- **[Alarm type]** – choose **[Options] → [Change] → [Select]** and pick the type you prefer.
- **[Ringer mode]** – choose **[Options] → [Change] → [Select]** and pick the

mode you prefer.

- **[SIM1 ringer]** – this option allows you to change the incoming calls sound for SIM1 card – go to **[Options]** → **[Change]** → **[Select]**, choose the sound and confirm, by pressing **[OK]**.
- **[SIM2 ringer]** – this option allows you to change the incoming calls sound for SIM2 card – go to **[Options]** → **[Change]** → **[Select]**, choose the sound and confirm, by pressing **[OK]**.
- **[Ringer loudness]** - choose **[Options]** → **[Change]** → **[Select]** and use the **<up>** and **<down>** joystick buttons (marked as 9 on the picture, in order to adjust the loudness.
- **[SIM1 message]** – change the sound

of incoming SMS messages for SIM 1 card - select **[Options]** → **[Change]** → **[Select]** and select the sound you want and confirm with **[OK]**.

- **[SIM2 message]** – change the sound of incoming SMS messages for SIM 2 card - select **[Options]** → **[Change]** → **[Select]** and select the sound you want and confirm with **[OK]**.
- **[Message loudness]** - change the loudness of the incoming SMS message alarm, choose **[Options]** → **[Change]** → **[Select]** and use the **<up>** and **<down>** joystick buttons (marked as 9 on the picture, in order to adjust the loudness).
- **[Keyboard loudness]** - select **[Options]** → **[Change]** → **[Select]**

and choose the keyboard sounds (no sound, clicking, tone or speaking keyboard), and then confirm, using **[OK]**.

- **[Keyboard loudness]** - change the loudness of the keyboard, choose **[Options]** → **[Change]** → **[Select]** and use the **<up>** and **<down>** buttons (marked as 9 on the picture, in order to adjust the loudness.
- **[Activation sound]** – select **[Options]** → **[Change]** → **[Select]** and select the sound the system activation sound, then confirm with **[OK]**.
- **[Phone off]** – select **[Options]** → **[Change]** → **[Select]** and select the sound the system turn off sound, then confirm with **[OK]**.
- **[System notifications]** – select

[Options] → **[Change]** → **[Select]**
and turn on or off the system
notification sound
(for example, low battery), and
confirm with **[OK]**.

Caution! In order to save the changes,
press **[Options]** → **[Save]** and confirm
with **[Select]**. Otherwise, the introduced
changes will not be saved.

Functions related to calls

Making calls

In standby mode (on the home screen)
enter the number using the numeric
keyboard.

It is recommended to enter the area code
before the phone number.

Press the **<green button>** to make the
call. Next, choose the SIM card that you
want to use (in case Dual SIM has been

set to both cards).

Press the **<red button>** to finish the call.

Answering calls

If there is an incoming call, press the **<green button>** or **[Options]** → **[Answer]** to answer the incoming call.

Press the **<red button>** to reject/end the call.

Text messages

Sending messages

Select: **[Menu]** → **[Messages]** → **[Enter the message]**.

Enter the message using the phone keyboard. You have to type in every letter.

<#> key is used to change the input

method. The following methods are available:

- **PI** – First letter will be a capital letter, the remaining ones will be small,
- **123** – only digits will be used.
- **PL** – only capital letters will be used,
- **PL** – only capital letters will be used.

After entering the message, press the **[Options]**, button and select **[Send to]** option. Next, choose the SIM card that you want to use (in case Dual SIM has been set to both cards).

A selection menu will appear:

- **[Enter number]** – enter the number using a numeric keyboard, then press **[OK]**.

- **[Add to contacts]** – after selecting this option type in the first letters of the contact name in order to find it in the contact list.

Select **[Add]** to confirm your choice. After typing the number/selecting the contact, choose: **[Options]** → **[Send]** in order to send the message.

Displaying the message

Select: **[Menu]** → **[Messages]** → **[Received]**, choose a message from the list and select **[Options]** → **[Preview]** → **[Select]** in order to display message.

Contacts

Adding a new contact

In order to add a contact, select: **[Menu]** → **[Contacts]** → **[Add a new contact]** → **[On SIM1]** (or **[On SIM2]**, **[On the**

phone]) → [OK].

Enter the contact information by highlighting the name or the number and pressing **<OK>**. After entering the number/name, press **<OK>**. Select **[Options] → [Save]** in order to save the contact.

In order to move contacts between the SIM card and phone memory, select: **[Menu] → [Contacts] → [Options] → [Personal settings] → [Move contacts] → [From the phone]** (or **[from SIM1]**, **[from SIM2]**), then select **[To SIM1]**, **[To SIM2]** or **[To the phone]** and confirm with **[OK]**.

Searching for a contact

In order to find a contact, select: **[Menu] → [Contacts]**.

Enter the first letter of the contact name.

The list of contacts beginning with the chosen letter will be displayed.

In order to find another contact, you need to use the **<up>** and **<down>** buttons.

After finding the contact and selecting **[Options]**, a list of operations will be displayed:

- **[Preview]** – allows you to display contact details (name and number).
- **[Send SMS]** – allows you to send a text message.
- **[Select]** – allows you to make a call.
- **[Edit]** – allows you to edit contact information.
- **[Delete]** – allows you to delete the contact.
- **[Copy]** – used to copy contact information from the chosen SIM card

to phone memory or vice versa.

- **[Add to the blacklist]** – allows you to add a contact to a blocked numbers list.
- **[Select many]** – in order to send a SMS message to multiple contacts at a time or delete a number of contacts.
- **[Personal settings]** – contains advanced settings for the [contacts] app, such as preferred contact directory, quick dial, additional number, memory usage, etc.

3. Using the advanced functions

Calling a number from a contact list (phone book)


In order to call a number saved in the **[Contacts]** (phone book) app, you have to perform the following:

In standby mode, select **[Menu]** → **[Contacts]** → **[OK]**.

Find the contact you want to use on the contact list (by typing in the name of the contact), then call the contact by pressing the **<green button>** on the phone keyboard or select **[Options]** → **[Connect]** → **[Select]**.

Missed calls/messages

Missed calls are displayed on the home screen.

A notification is displayed on the phone display, along with the icon: .

In order to check, who called:

Press **[Preview]**.

You can also use the **[Calls]** function.

In order to access it, select **[Menu]** → **[Calls]** → **[Call list]** → **[Missed]** → **[OK]**.

In order to return a missed call, choose it from the list, then press the **<green button>** on the keyboard.

Connecting the phone to the computer

myPhone 3300 can be connected to a PC using the USB port. This allows you to preview and exchange data between the computer and the phone. In order to do this, you have to:

- 1) Plug in the microUSB to the phone socket (located at the bottom), then plug in the USB-A plug to the USB socket in the computer.
- 2) The USB connection notification will

be displayed on the screen.

- 3) Select the **[Mass storage device]** option from the list.
- 4) The phone is now connected to the PC. The contents of the phone memory can be browsed using Windows explorer.
- 5) **COM port** option is used for UART (modem) connections, the manufacturer does not recommend using this option.

4. Remaining phone functions

Setting date and time

In order to set the date and time, you need to go to: **[Menu] → [Settings] → [Phone settings] → [Date and time]**.

Select **[Set time/date]** and confirm using **[OK]**.

Enter the current time using the numeric keyboard.

Using the navigation buttons, go **<down>**, in order to input the current date and confirm, by pressing **<OK>** or choosing **[Save]**.

[Phone settings] → [Time and date] → [Format], then select the appropriate date and time format for the phone display.

Menu language option

In order to set or change the menu language, go to: **[Menu] → [Settings] → [Phone settings] → [Language]**.

Select a preferred language from the list.

Call settings

Available from **[Menu] → [Settings] →**

[Call settings] → [Advanced settings].

The following call settings are available:

Blacklist, auto redial, call duration reminder (**[Call duration]** function) etc.

Configuring alarm/alarms

Go to:**[Menu]→[Schedule]→[Alarm]**

Select an option from the list, then choose **[Edit]**.

You can choose the following settings:

- **[Status]** - allows you to turn the alarm on/off.
- **[Time]** - allows you to send the alarm time using the numeric keyboard.
- **[Repeat]** - allows you to decide when the days on which the alarm is to be used. Available options are: once, every day and on a chosen day).

- **[Alarm sound]** - allows you to choose the alarm ringtone.
- **[Snooze(min)]** - allows you to set the snooze time in minutes.

In order to confirm the settings, choose **[Options]** → **[Save]**.

Factory settings

In order to restore factory settings, choose **[Menu]** → **[Settings]** → **[Restore factory settings]**, enter the password and confirm the selection by pressing **<OK>**.

The password used to restore the factory settings is: **1122**.

Call list

The phone offers the **[Call list]** option. It is available in **[Menu] → [Calls]**.

This option allows you to browse the call list (calls made, calls received etc.). The sub menu contains the following options:

- Missed
- Outgoing
- Received
- Clear history
- Call time

In order to open one of the options, select

it from the list, then confirm by pressing **[OK]**.

Calendar

myPhone 3300 has a calendar function. It allows you to display current date or any other date.

In order to turn on the calendar app, go to: **[Menu]** → **[Schedule]** → **[Calendar]**.

Bluetooth

The phone is equipped with a Bluetooth module.

It is used to make wireless connections and exchange files with other devices equipped with a Bluetooth connectivity function.

Bluetooth controls are available from: **[Menu]** → **[Multimedia]** → **[Bluetooth]**.

The following options are available from this menu

- **[Status]** – by pressing the **<OK>** button you turn the Bluetooth module on or off. Bluetooth activation is indicated by a blue icon displayed in the status bar
- **[Visibility]** – this option makes the phone visible to other devices, such as cellphones, tablets and computers using the Bluetooth module.
- **[My devices] – [Find a new device]** option is available here, allowing you to display a list of available Bluetooth devices withing range.. This function allows you to connect to other devices.
- **[Find audio devices]** – this option allows you to find and connect your

phone to audio devices using Bluetooth connectivity, such as wireless Bluetooth headsets.

- **[My name]** – allows you to enter a name under which the phone will be displayed in other Bluetooth devices. The default name is myPhone 3300.
- **[Advanced]** – This option allows you to configure the voice sending feature between the Bluetooth headset and the phone (**[Audio]** function) and to display phone MAC address (**[My address]** function).

Bluetooth pairing

In order to connect to a Bluetooth device, you need to select it from the list of available devices from

[Menu] → **[Multimedia]** → **[Bluetooth]** → **[My devices]** → **[Find a new device]** and then press **[Cancel]**

to select the device from the list and press **[Connect]**. Both devices will display a password prompt. Press **[Yes]** to pair the devices.

Sending files via Bluetooth.

In order to send a file stored on a memory card of the connected (paired) device, go to: **[Menu]** → **[File manager]** → **[Memory card]** → and select a file to send, then choose **[Options]** → **[Send]** → **[Via Bluetooth]** and select the receiver device or add it from the list of paired devices. The file will be sent when the recipient accepts it.

Camera

myPhone 3300 is equipped with a camera that can take photos and record video.

Taking photos

In order to take a photo, open the camera app: **[Menu]** → **[Multimedia]** → **[Camera]**. After opening the camera app, direct the camera at your target, then press **<OK>** to take a photo.

The pictures are saved in the "Photos" directory on the microSD card.

The photos can be displayed using the **[Photos]** app (in **[Menu]** → **[Multimedia]** → **[Photos]**).











Recording video.



In order to record video you have to open the **[Camera]** app, from:

[Menu] → **[Multimedia]** → **[Camera]**, and direct the camera at your subject, then press **<OK>** to begin recording. The films are saved in the "Videos" directory on the microSD card. The videos can be

played using the **[Video playback]** app (in **[Menu]** → **[Multimedia]** → **[Video playback]**).

Phone icons

	GSM signal strength
	Keyboard locked
	Bluetooth on
	"General" profile on
	"Silent" profile on
	Alarm
	Missed call
	Battery status
	Unread SMS
	Music playback

	Headset connected
	Connected to a PC

Locating the phone


MyPhone 3300 has a security feature that allows you to locate it if it is lost or stolen. This feature allows you to send a text message to a predefined number when a SIM card is being changed. In order to activate it, go to: **[Menu] → [Settings] → [Security settings] → [Phone tracking]**, enter the phone password and confirm with **<OK>**. Then select and activate **[Status]**.

The password used to restore the factory settings is: **1122**.

You also have to go to **[Settings]** and

input the number and the contents of the text message.

Conformity with EU directives

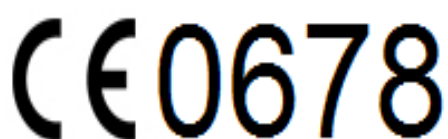

myPhone Sp. z o.o.
declares that this product conforms with
the basic requirements
and other resolutions of EU Directive
1999/5/EC.

Numer Deklaracji 20/03/2014
Number of Declaration of Conformity

Data wystawienia deklaracji 28-03-2014
(date of issue of declaration)

DEKLARACJA ZGODNOŚCI WE

EC DECLARATION OF CONFORMITY

My/We, **myPhone Sp. z o. o.**
(nazwa importera / importer's name)

ul. Nowogrodzka 31, 00-511 Warszawa
(adres importera / importer's address)

niniejszym deklarujemy, że następujący wyrób:
declare under our responsibility, that the electrical product:

telefon komórkowy / GSM mobile phone
(nazwa wyrobu / name)

myPhone 3200

(typ wyrobu / type of model)

spełnia wymagania następujących norm:

to which this declaration relates is in conformity with the following standards:

Safety:

EN 60950-1:2006+A11:2009+A1:2010+A12:2011
EN 50360:2001+A1:2012
EN 62209-1:2006
EN 62209-2:2010
EN 62479:2010

EMC;

EN 301 489-1 V1.9.2
EN 301 489-7 V1.3.1
EN 301 489-17 V2.2.1

RADIO;

EN 301 511 V9.0.2
EN 300 328 V1.7.1


jest zgodny z postanowieniami następujących dyrektyw:

following the provisions following directives:

Dyrektywa R&TTE 1999/5/EC - Artykuł 3.1a, 3.1b, 3.2

Rok, w którym umieszczono oznaczenie CE na produkcie: 2014

28-03-2014 Warszawa
(data i miejscowość / date, place)

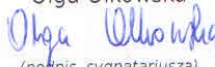Olga Olkowska

(podpis sygnatariusza)
(signature of the signatory)

myPhone sp. z o.o.
ul. Nowogrodzka 31, 00-511 Warszawa
NIP 895-18-45-043, REGON 020167256