

# ABS2



## PRESTA



Open Presta valve and pull sleeve back on ABS2 chuck.



Press onto valve, slide sleeve forward and rotate sleeve 1/4 turn to seal.



Inflate to desired pressure and use the bleed valve to adjust pressure.



Pull sleeve back to instantly release the ABS2.

## SHRADER



Slide sleeve forward and thread onto Shrader valve.



Inflate to desired pressure and use the bleed valve to adjust pressure.



Unthread to remove ABS2.



Go to [www.lezyne.com](http://www.lezyne.com) for more information.