

Welcome

Thank you for purchasing this product. In order to fully benefit from this product, please follow the instructions in this user manual very carefully. Store this user manual in a safe place for future reference. We are sure your new Radio CD/MP3/USB will satisfy your needs

PREPARATION FOR USE

Unpacking and Setup

* Carefully remove the unit from the display carton and remove all packing material from the unit itself.

* Remove any descriptive labels that may be found on either the front or top cabinet of the unit. Do not remove any labels located on either the back or bottom cabinet of the unit.

* Press the CD door OPEN Button to open the CD compartment door. There is a white card in the CD compartment which is intended to prevent the CD pickup from moving during shipment of the product. Remove this card from the CD compartment before use.

POWER SUPPLY

Using AC Power

1. Check if the power voltage, as shown on the type plate located on the bottom of the set, corresponds to your local AC power supply. If it does not, consult your dealer or service center.
2. Connect the power cord to the AC socket inlet and the wall outlet, the power supply is now connected and ready for use.
3. To switch off completely, unplug the power cord from the wall outlet.
4. Unplug the power cord from the wall outlet to protect your set during heavy thunderstorms.



Batteries (not included)

Open the battery compartment and insert six batteries, type LR14, UM-2 or C-cells, (Preferably Alkaline) with the correct polarity as indicated by the "+" and "-" symbols inside the compartment

Batteries contain chemical substances, so they should be disposed of properly.


Incorrect use of batteries can cause electronic leakage and will corrode the compartment or cause the batteries to burst. Therefore:

Do not mix battery types: e.g. alkaline with carbon Zinc. Only use batteries of the same type for the set. When inserting new batteries, do not try to mix old batteries with new ones.

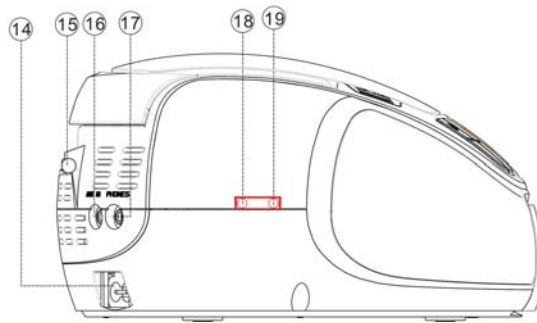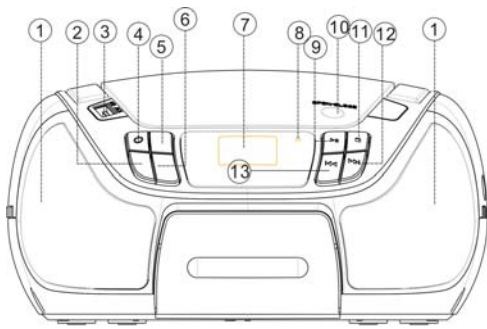

1. LEFT&RIGHT SPEAKER
2. REPEAT BUTTON
3. USB JACK
4. POWER BUTTON
5. FUNCTION SELECT
6. TIME/PROGRAM BUTTON
7. LCD DISPLAY
8. STANDBY
9. PLAY/PAUSE BUTTON

10. CD DOOR OPEN/CLOSE BUTTON
11. STOP BUTTON
12. NEXT BUTTON
13. BACK BUTTON
14. AC SOCKET
15. FM ANTENNA
16. AUX JACK
17. PHONES JACK
18. VOLUME+ BUTTON
19. VOLUME- BUTTON

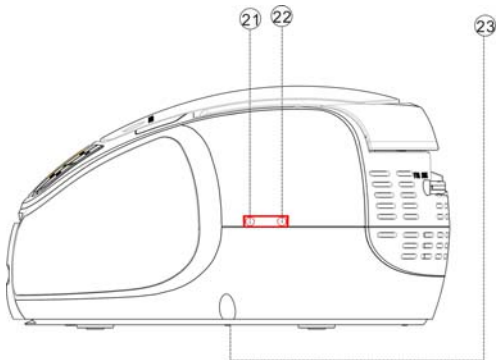

21. PRE-DN BUTTON
22. PRE-UP BUTTON
23. BATTERY DOOR

BASIC FUNCTION

1.LEFT&RIGHT SPEAKER

2.REPEAT BUTTON

- repeat a track/CD/MP3/USB program.
- play mode : normal->repeat 1->repeat all->repeat 1 folder ->normal

3.USB JACK

- To listen to your USB flash memory stick with Mp3 music files.

4.POWER BUTTON

- Press power button on.

5.FUNCTION SELECT

- select source of sound CD/USB/(AUX)/RADIO.

6.TIME/PROGRAM BUTTON

- In standby mode, to setup the time of the unit.
- program and review programmed track numbers.
- In the working status, push down this button can on CD/MP3 / USB/RADIO for programming.

7.LCD DISPLAY

- show the FM dial frequency.
- show the number of tracks.

8.STANDBY INDICATOR

9.PLAY/PAUSE BUTTON

- start or pause MP3/CD/USB play
- In radio mode, press the play/pause button enter the automatic channel surfing mode.

10.CD DOOR OPEN/CLOSE BUTTON

- press here to open/close the CD door.

11.STOP BUTTON

- cancel preset program

12.NEXT BUTTON

- To setup the time standby state NEXT track selection.
- Press and hold more than 1.5 sec forward search intra track.
- In the radio mode, Press NEXT button will tuning frequency to high-end

13.BACK BUTTON

- To setup the time standby state BACK track selection.
- Press and hold more than 1.5 sec BACK search intra track.
- In the radio mode , Press BACK button will tuning frequency to low-end.

14.AC SOCKET

- inlet for power cord.

15.FM ANTENNA

- to improve FM reception.

16.AUX JACK

- Push FUNC button , select AUX station. play MP3、DISCMAN、 WALKMAN AUX insert.
- insert when no disc.
- NOTE: Please take out the CD disc.

17.PHONES JACK

- 3.5 mm stereo headphone jack.

18.VOLUME+ BUTTON

19.VOLUME- BUTTON

20.PRE-DN BUTTON

- In the radio mode Press PRE-DN button to select backward, primary pre-set channel.
- In the mp3 mode Press PRE-DN button to enter the backward folder

21.PRE-UP BUTTON

- In the radio mode Press PRE-UP button to select the next primary pre-set channel.
- In the mp3 mode Press PRE-DN button to enter the forward folder

22.BATTERY DOOR

- to open battery compartment

CLOCK ADJUSTMENT

To setup the time of the unit:

1. Connect the AC power cord (The following operation must be done in standby mode).
2. Press the PROG/TIME button to enter into time setting mode. The time will flash on the LCD display.
3. Press BACK or NEXT button to select the time format by 12h or 24h or adjust the time.
4. After setting the time, press PROG/TIME button to confirm.

Then you can set the minute with the same step.

Note: After setup the beginning time, the lcd will display the radio/cd/usb/aux mode.

Press the BACK or NEXT to choose the mode, then it press PROG/TIME button to affirm, otherwise it play usb or aux mode first.

RADIO FUNCTION

Radio reception

1. Press the FUNCTION button to select the "RADIO" mode.
2. Tune to the required station by pressing BACK/TUNE DN or NEXT/ TUNE UP

Manual Tuning: Press BACK or NEXT and then release within 1 sec.

Auto Tuning: Press the Play/Pause button to enter the automatic channel search mode.

Preset Channel :(FM 30 Preset memories)

- (1) Press the BACK/TUNE-DN or NEXT/TUNE-UP to select the desired station.
 - (2) Press the PROGRAM button once and the MEMORY number indicator will begin to flash on the display.
 - (3) Press the PRESET-UP OR PRESET DOWN buttons to select the desired station number.
 - (4) Press the PROGRAM button to save the station.
 - (5) Repeat steps (1) to (4) procedures for storing the rest of the stations.
3. After storing the stations, press PRE-UP or PRE-DN to play the selected frequency.
 4. Press [VOL-] or [VOL +] to adjust the volume level.
 5. Extend the telescopic antenna to its full length while listening in FM mode and for better reception.
 6. Turn off the radio by pressing the FUNCTION button. Select any other mode or press the power button to off the unit.
 7. The preset memories will be stored even though the unit is switched off and on.

PROGRAM TRACKS IN CD/MP3

(1) Press the PROGRAM key while in STOP mode.

The PRG icon and P01 will start to blink. This prompts the user to enter the first track in the program playlist.

(2) Select the desired tracks by using [NEXT] or [BACK] keys.

Once done, the display will indicate the selected track.

(3) After selecting the desired track, press the [PROGRAM] key once again to store it in memory. For MP3 discs you can program up to a maximum of 99 tracks while in CD disc a maximum of 20 tracks can be programmed.

Repeat steps (2) to (3) for the rest of the tracks.

(4) If the [STOP] key is pressed during the program mode, the selected tracks will be stored in the memory and the unit will return to STOP mode (Continuous Play mode)

(5) If the [PLAY] key is pressed during the program mode, the unit will start the program PLAY mode. Playback will start from P01 track.

Erasing a Program

Follow the below steps to delete a Program:

- While playing, press the STOP button twice.
- Open the CD door
- Select any other mode.

AUX IN

The unit includes an Aux in jack which enables connection to any external audio device such as MP3, Discman or Walkman.

1. Connect your external audio device to the AUX in of the Radio CD/MP3/USB.
2. Select the function to AUX. Play the music from your audio device to hear it through the speakers.
Adjust the volume level to your desire.

Note: The Radio CD/MP3/USB buttons cannot control the external device. All functions must be operated from the external audio device.

CD/MP3 PLAYER

Playing a CD/MP3

This CD-player can playback the following formats: Audio Discs, MP3, CD-R.

Do not attempt to play CD-ROM, CDI, VCD, DVD or computer CD's.

1. Press the function button to select CD mode.
2. To open the CD door, press the CD open button.
3. Insert an MP3/CD or CD-R, with the printed side facing up and press the CD door gently to close.
4. Press Play/Pause button on the unit to start playback.
5. Press the pause button to pause at any time. Press the play button once again to resume playback.
6. Press STOP, to end CD playback.

Note: CD/MP3 playback will also stop when:

- You open the CD compartment;
- You select the Radio source;
- The CD/MP3 has reached to the end.

Selecting a different track.

During playback you can use the Back or Next Buttons to select a particular track.

If you have selected a track number while in stop or pause position, press play to start playback.

Press next once briefly for the next track, or press repeatedly until the desired track number appears on the display.

Press back once briefly to return to the beginning of the current track.

Press back twice to access to the previous track.

Finding a passage within a track

1. Press and hold down the back or next button.

The CD will move at higher speed.

2. When you recognize the passage you want Simply, release the back or next button.

Play back modes: normal, repeat.

Normal: Plays the track in normal order.

Repeat 1: Plays the current track continuously.

Repeat all: Plays the entire media continuously.

Repeat album: Plays the tracks in the same folder continuously.

EQ function

Press the EQ button on remote to select audio mode as follow: CLASSIC -> ROCK -> POP -> JAZZ -> FLAT

Playing a USB

USB Audio functions

1. Select the USB function to enter USB mode.
2. Press NEXT or BACK to advance or go back.
3. Program up to 99 tracks in MP3 mode.
4. Play Modes: there are 4 different play modes: Normal->Repeat 1-> Repeat all ->Repeat album->
5. A maximum of 99 folders can be read from the USB.
6. Maximum files supported in 1 folder: 999
7. Maximum capacity supported: 32GB

***Notice :**

- When the unit has not the disc, inserting the usb card will automatically read usb card, it read the USB first while having the USB.

- The unit don't support the HDD all and the portion usb with mp3 player.

Note: at the mode of CD/MP3 / USB ,the lcd will display the number of song or the song playing time.

 
Power Off Erp2 function

When the unit idle on CD/AUX/USB mode over 10 min. Then the unit will switch into standby mode automatically.

MAINTENANCE & SAFETY


Precautions & General Maintenance

- * Place the unit on a hard and flat surface so that the unit does not tilt.
- * Do not expose the unit, batteries or CD's to humidity, rain, sand or excessive heat caused by heating equipment or direct sunlight.
- * Do not cover the unit. Adequate ventilation with a minimum gap of 6 inches between the ventilation holes and surrounding surfaces is necessary to prevent heat build-up.
- * The mechanical parts of the unit contain self-lubricating bearings and must do not be oiled or lubricated.
- * To clean the set, use a soft dry cloth. Do not use any cleaning agents containing alcohol, ammonia, benzene or abrasives as these may harm the cabinet.

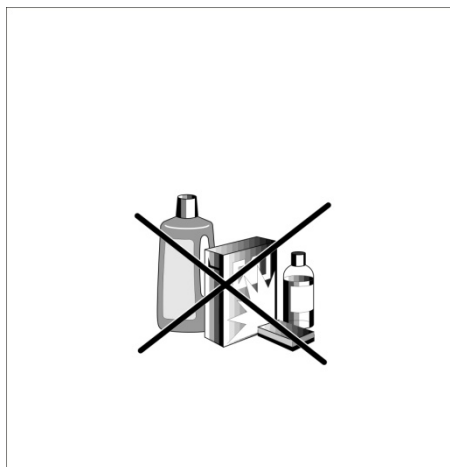

CD player and CD handling

- * The lens of the CD player should never be touched!
 - * Sudden changes in the surrounding temperature can cause condensation to form and the lens of your CD player or cloud over. Playing a CD is then not possible. Do not attempt to clean the lens but leave the set in a warm environment until the moisture evaporates.
 - * Always close the CD door to keep the CD compartment dust-free. To clean, dust the compartment with a soft dry cloth.
 - * To clean the CD, wipe in a straight line from the center towards the edge using a soft, lint-free cloth.
- Do not use cleaning agents as they may damage the disc.
- Never write on a CD or attach any stickers to it.

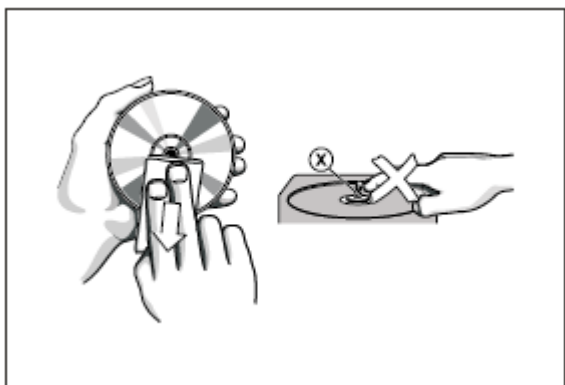

TROUBLESHOOTING

Troubleshooting

If a fault occurs, it is important you first check the points listed below before taking the unit for repair. Do not open the unit as there is a risk of electric shock.

If you are unable to remedy a problem by following these hints, consult your dealer or service center.

WARNING: Under no circumstances should you try to repair the unit yourself, as this will invalidate the warranty.

- Problem
- Solution

No Sound / Power

- Volume not adjusted
- Adjust the Volume level
- Power cord not securely connected
- Connect the AC power cord properly
- Batteries dead/ incorrectly inserted
- Insert new batteries correctly

Display does not function properly.

No reaction to operation of any of the controls

- Electrostatic discharge
- Switch off and unplug the unit. Connect it after a few seconds

No disc indication

- No CD inserted
- Insert a CD, MP3,CD-R.
- CD badly scratched or dirty
- Replace/clean CD. See Maintenance.
- CD-R is blank or the disc is not finalized
- Use a finalized CD-R.

CD/MP3/USB playback does not work

- CD/MP3/USB badly scratched or dirty
- Replace or clean the CD/MP3/USB (see maintenance)
- Laser lens steamed up
- Wait until the lens has adjusted to room temperature.

The CD/MP3 skips tracks

- CD/MP3 damaged or dirty
- Replace or clean CD/MP3
- Program is active
- Quit Program mode(s)

TECHNICAL SPECIFICATIONS

GENERAL	
Power Requirement	AC 220-240V ~ 50Hz
Power consumption	AC 13.5 Watts
Dimensions.....	Approx.215 mm(L)x 208 mm(W) x 113 mm(H))
Operation temperature.....	+5 °C - +35°C

RECEIVER SECTION	
Receiving Bands.....	FM ST
Tuning Range.....	FM: 87.5-108MHz

COMPACT DISC SECTION	
Optical Pickup.....	3-Beam Laser
Frequency Response.....	100Hz - 16KH z

AUDIO SECTION	
Output Power.....	Maximum 1.5 Watt x 2
Headphone Impedance	4 ~ 32 Ohms

ACCESSORIES	
Instruction Booklet.....	1
Ac line cord.....	1