

# **Bluetooth CD tower speaker**

**TCD600BT**

**INSTRUCTION MANUAL**

# Contents

- 2 Safety instructions
- 3 Description of parts
- 4 Remote control & Installation
- 5 General operation
- 6 Bluetooth / NFC/ USB operation
- 7 Audio/ FM operation
- 8 Trouble shooting
- 9 Specifications

## In the box

- Tower speaker unit
- Tower base plate and screw to attach the unit
- 3.5mm-RCA Audio cable
- Instruction manual
- Remote control
- Power cable

# Safety instructions

 
When using the electrical equipments basic safety precautions should always be followed

- This equipment is not intended for use by persons(including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge. They should be given appropriate supervision and instructions to use the equipment by a person responsible for their safety.
- Ensure the equipment is not too close to heat emitting appliances or placed in direct sunlight.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the equipment to the mains power supply.
- Do not leave the equipment unattended while connected to the power supply.
- Do not immerse the equipment in water or any other liquids.
- It is imperative to unplug the power cord after the equipment has been used, before it is cleaned and while being repaired.
- Close supervision is required when using this equipment near children.
- Never leave the equipment within reach of children.
- Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place the user and/or equipment at serious risk.
- This equipments intended for household use only and should not be used for industrial or commercial purposes.
- Do not operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Do not use this equipment for anything other than its intended use.
- This equipment must be placed on a stable, heat resistant surface.
- Do not push objects into any openings as damage to the equipment and/or electric shock may occur.
- Do not use this product in wet or bad weather conditions.
- This product is not a toy.
- Do not play music at excessive levels especially near children.

# Description of parts


## Top panel

1. Volume+/-
2. Standby
3. Mode
4. Previous/Next
5. Eject (Open or close the disc tray)
6. Play/pause

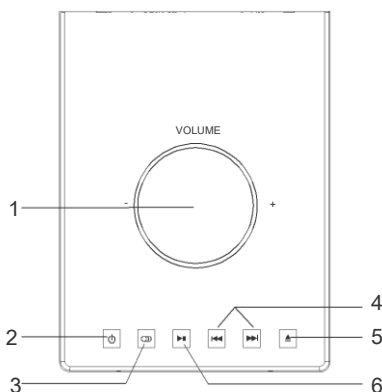


## Front

 1. Display screen
2. Remote sensor
3. Indicator
4. Disc tray
5. USB port for playing MP3
6. USB port for charging
7. NFC sensor
8. Speakers

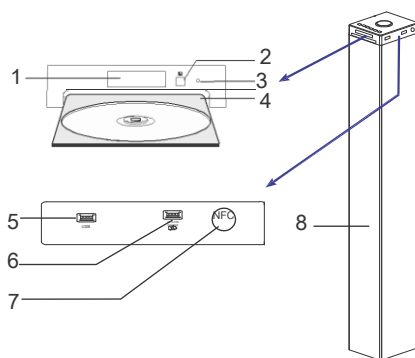


## Back panel

 1. FM antenna
2. 3.5mm Aux in Jack
3. R/L RCA Jack
4. Power input
5. Power switch

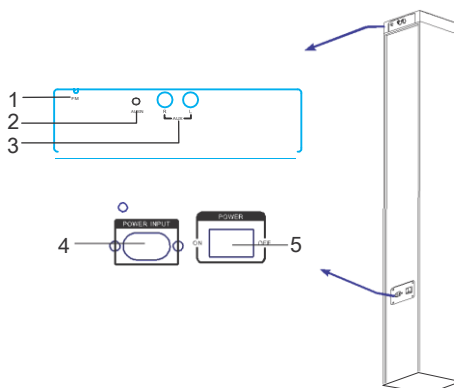


## Remote control

 - |                |                  |
|----------------|------------------|
| 1. Standby     | 13. Up           |
| 2. Mute        | 14. Next         |
| 3. Previous    | 15. Play/pause   |
| 4. Fast rewind | 16. Fast forward |
| 5. Down        | 17. Program      |
| 6. Repeat      | 18. Volume+      |
| 7. Volume-     | 19. Tone         |
| 8. Bluetooth   | 20. Aux in       |
| 9. CD/USB      | 21. FM           |
| 10. Numbers    | 22. Frequency    |
| 11. Search     | 23. Mono/stereo  |
| 12. Eject      | 24. Save         |

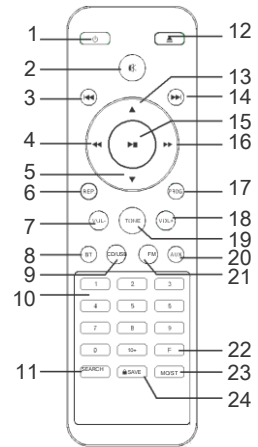

## Installation

 Please install the machine as below (do not connect to power):

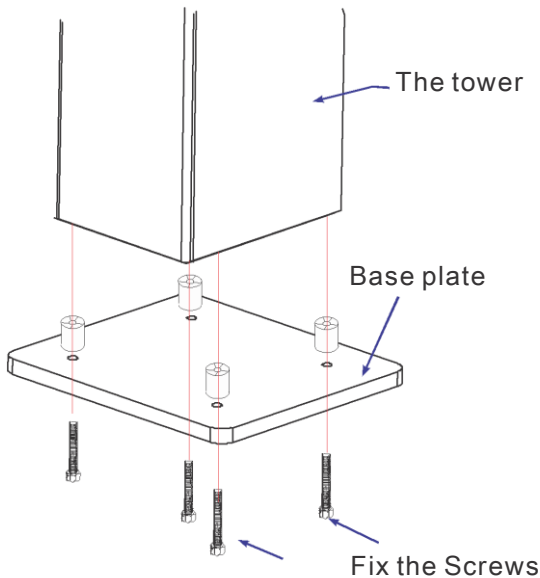


# General operation

## STANDBY MODE

Press the STANDBY  button to wake up the unit or turn to standby mode.


## SELECT MODE

Press the MODE  button to switch to one of the modes: CD, USB, FM, Bluetooth, or Aux. Press the CD/USB button on remote to select CD or USB mode, press the AUX button on remote to select Aud-1 or Aud-2 mode.





## VOLUME SETTING

Press the VOLUME+/- buttons or rotate the Volume knob to adjust the volume.


## MUTE THE SOUND

Press the MUTE  button on remote control to mute the sound. Press again or press the VOLUME+/- buttons to resume the volume level.



## SKIP TRACKS

Press the PREVIOUS /NEXT  button on remote control or press and hold the /  button to skip to the previous or next track.

## PLAY/PAUSE

Press the PLAY/PAUSE  button to pause the playback, press again to resume.


## ACCELERATE THE MUSIC

In USB or CD mode, press the /  button on remote control to forward or reward the music. Press repeatedly to resume the normal speed.


## REPEAT MODE

Press the REP. button on remote control to repeat the song by once, press again to repeat all songs, press the third time to resume normal.


## PROGRAM


In CD mode, press the PROG. button on remote control to enter the program setting, " P :0100", use the NUMBER buttons to select the song you want to program, then press the  button to confirm and start playing the music in the programmed order.

# Bluetooth operation


1. Press the MODE  button to switch to the Bluetooth mode.
2. The previous paired device will connect to speaker tower automatically when each time changing to Bluetooth mode.
3. Turn on the Bluetooth device (e.g. phone) and enter the Bluetooth search interface.
4. Search "MP720" and pair it, input the password "0000" if necessary. Then the indicator will light steadily.
5. If it still doesn't work, reset the Bluetooth and follow above steps again.

## NFC operation

1. Press the MODE  button to enter the Bluetooth mode.
  2. Place the back of phone (with NFC function) on the position of word " NFC" on the front panel of the unit for 3 seconds, the Bluetooth function of the phone is activated automatically.
3. When the indicator lights steadily and you can hear an audible signal, they are paired.
4. To disconnect NFC Bluetooth connection, place the back of the phone on the position of the word " NFC" on the front panel of the unit. When there comes an audible signal, they are disconnected.
5. Some devices of Android system 4.0 or below need to install the NFC.apk to enable the NFC function. Some devices may be in a weak compatibility for NFC function, that may relate to the NFC software.

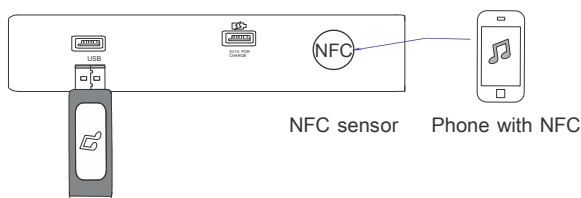

## USB operation


1. Power on the unit and insert a USB Flash Drive (not supplied) into the USB Port, ensuring the plug is fully inserted at the correct way.
2. Press the MODE  button to switch to the USB mode.
3. The tower will play music from the USB automatically.
4. The maximum size of Flash Drive that can be connected is 32GB max.

 
5. The supported format for USB play is MP3.







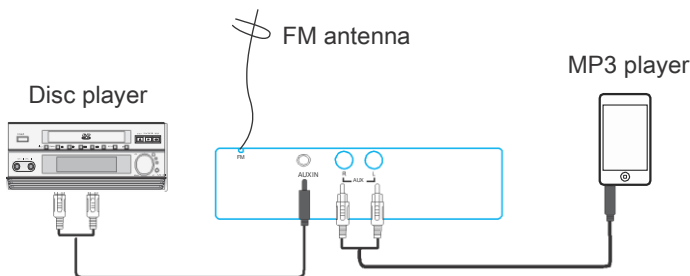


# Audio operation

Use the 3.5mm-RCA Audio cable (included) to connect the unit with Disc player/MP3 player/phone/computer or other music device.

1. Connect one end of the Audio cable to the R/L Audio-in Jack on the back panel of the unit, then connect the other end to the MP3 player.
2. Press the MODE  button on the top panel or press the AUX button on remote to switch to Aux in mode (Aud-1/ Aud-2).
3. Press the AUX button to enter the Aud-1 mode and start playback by the device connected to the R/L RCA Jack.
- 4.. Press the AUX button to enter the Aud-2 mode and start playback by the device connected to the 3.5mm Aux in Jack.



# FM operation

1. Adjust the FM antenna to get the best reception.
2. Press the MO/ST button to turn stereo on.
3. Press the MODE  button to switch to the FM mode.
4. Press the /  button to skip to the previous or next station.
5. Press the /  button on remote to tune the frequency by 0.05MHz.
6. Press and hold the /  button on remote to skip to strongest station.
7. Press the SEARCH button on the remote control to search the stations, press again to stop searching.
8. Save (60) stations:

Press the NUMBER buttons to select the preset number, then press the F button and input the frequency, at last press the SAVE button to save the station.

E.g. to save the 107.5MHz into preset 36. Press the NUMBER button 10+, 6, then press F and input 1, 7, 5, 0, at last press the SAVE button.

# Trouble shooting

Before taking the unit to be repaired, please check the following table when a problem occurs. Consult your dealer or service center if the problem cannot be solved with the following information.

Problem	Remedy
(Power) System does not turn on or does not respond to the Remote control.	<ul style="list-style-type: none"><li>- Make sure AC power plug is connected to the wall socket outlet properly and it has power.</li><li>- If this does not help, leave the unit unplugged before seeking advice.</li></ul>
(Remote control) No functions or short range.	<ul style="list-style-type: none"><li>- Insert new batteries.</li><li>- Aim remote directly towards the remote sensor located in center of speaker.</li></ul>
(Pairing the product) Cannot pair successfully.	<ul style="list-style-type: none"><li>- Check whether the speaker is in Off or searching mode.</li><li>- Check whether there are other Bluetooth receivers around your Bluetooth device. Turn them off to avoid any disturbance. Attempt to pair again.</li></ul>
Cannot play properly, the music plays intermittently.	<ul style="list-style-type: none"><li>- Check whether the distance between the speaker and your Bluetooth device is out of its working distance (10m).</li><li>- Check whether there are some obstacles blocking the communication between the speaker and the Bluetooth device.</li><li>- Move the speaker or the Bluetooth device to get the best reception.</li></ul>
The sound is distorted.	<ul style="list-style-type: none"><li>- Check the volume setting on both the speaker and your Bluetooth device and adjust the volume to a suitable level.</li></ul>

# Specifications

Power	AC 220-240V, 50Hz
Operation temperature	0°C to + 35°C
Max power output	90W
Remote control range	7 meters
Bluetooth range	10 meters
Input jack	3.5mm Aux in jack; R/L RCA jack; USB

NOTE:  
As a result of continual improvements, the design and specifications of the product within differ slightly from the unit illustrated on the packaging.