


For Intel® NUC boards
NUC6i5SYH / NUC6i5SYK / NUC6i3SYH / NUC6i3SYK

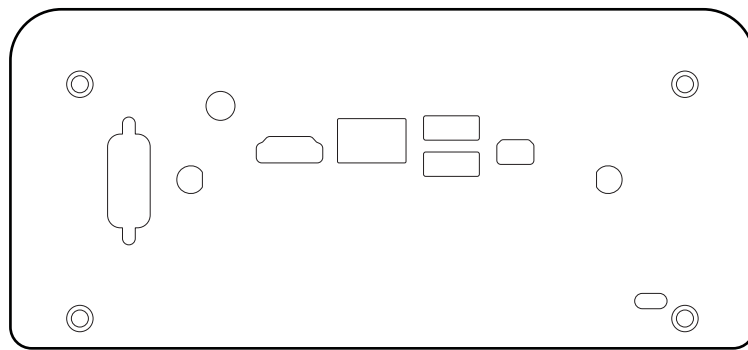

Rear panel (included)

GB

The rear panel for Intel NUC5i5RYH / NUC5i5RYK / NUC5i3RYH / NUC5i3RYK is pre-mounted. Use the Phillips screwdriver to unscrew and change to the included panel for Intel NUC6i5SYH / NUC6i5SYK / NUC6i3SYH / NUC6i3SYK.

FR

Le panneau arrière pour Intel NUC5i5RYH / NUC5i5RYK / NUC5i3RYH / NUC5i3RYK est pré-monté. Utilisez le tournevis cruciforme de pour dévisser et changer le panneau pour Intel NUC6i5SYH / NUC6i5SYK / NUC6i3SYH / NUC6i3SYK.

D

Die Rückseite des Intel NUC5i5RYH / NUC5i5RYK / NUC5i3RYH / NUC5i3RYK ist vorinstalliert. Verwenden Sie den Kreuzschlitzschraubendreher, um die Seite des Intel NUC6i5SYH / NUC6i5SYK / NUC6i3SYH / NUC6i3SYK abzuschrauben und zu ändern.

PT

O painel traseiro para Intel NUC5i5RYH / NUC5i5RYK / NUC5i3RYH / NUC5i3RYK é pré-montado. Utilize a chave Phillips de fenda para trocar o painel para Intel NUC6i5SYH / NUC6i5SYK / NUC6i3SYH / NUC6i3SYK.

ES

El panel posterior para Intel NUC5i5RYH / NUC5i5RYK / NUC5i3RYH / NUC5i3RYK ya viene montado. Utilice un destornillador Phillips de para aflojar y cambiar el panel para Intel NUC6i5SYH / NUC6i5SYK / NUC6i3SYH / NUC6i3SYK.

JP

Intel NUC5i5RYH / NUC5i5RYK / NUC5i3RYH / NUC5i3RYK 用背面パネルがあらかじめ取付けられています。プラスドライバーでねじを外し、Intel NUC6i5SYH / NUC6i5SYK / NUC6i3SYH / NUC6i3SYK 用パネルに取り替えます。

CN

预装搭配 Intel NUC5i5RYH / NUC5i5RYK / NUC5i3RYH / NUC5i3RYK 使用的后面板。如需改用NUC6i5SYH / NUC6i5SYK / NUC6i3SYH / NUC6i3SYK主板，请使用十字螺丝刀将预装的后面板更换。

