

Jabra SOLEMATE



USER MANUAL

GN Netcom

CONTENTS

WELCOME	2
JABRA SOLEMATE OVERVIEW	3
CONNECTING	6
PLAY MUSIC, CHAT AND VOICE GUIDANCE	8
SUPPORT	.12
TECHNICAL SPECIFICATIONS	.16

WELCOME

Thank you for purchasing the Jabra Solemate. We hope you enjoy it!

WHAT YOUR JABRA SOI FMATE CAN DO

Connect to just about anything on the planet

· Bluetooth, USB, 3.5 mm Jack Connector - wirelessly or wired

Play music with unbeatable sound and volume


Chat with your friends on your phone, tablet or PC


 Use the Jabra Solemate as a speakerphone to make calls, answer calls and more...

Voice guidance

• The Jabra Solemate tells you what you need to know about battery status and pairing instructions

JABRA SOLEMATE OVERVIEW

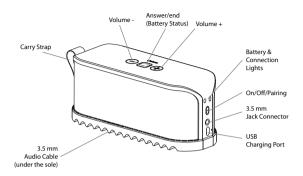

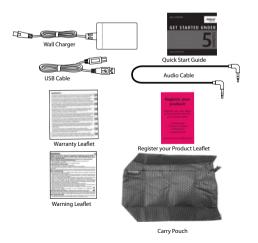

POSITIONING THE JABRA SOI FMATE

The Jabra Solemate functions best when placed flat on any surface, and with the Jabra logo facing forward.



TURNING ON THE JABRA SOLEMATE

 
Slide the **On/off** switch up to turn the Jabra Solemate on.



CHARGING

Charge using PC

Connect the Jabra Solemate to any available USB slot on your PC using the USB cable.



Charge using the wall charger

Connect the Jabra Solemate to the wall charger, and plug into an available power source.



Battery status

What you see	What it means	
Û	The battery is full	
	The battery is half full	
Û	The battery is low	
'	The battery is critically low, and requires immediate charging	

The battery takes 2.5 hours to fully charge. The Jabra Solemate can be used during charging.

CONNECTING

The Jabra Solemate can connect wirelessly to any Bluetooth device, or via 3.5 mm audio cable to any audio device, or via USB to any PC.

WIRED CONNECTIONS

3.5 mm Jack Connector

Connect the Jabra Solemate to any audio device with a 3.5mm Jack Connector, using the supplied audio cable. The Jabra Solemate microphone is disabled when connected via the 3.5 mm Jack Connector.



Note: When a device is connected to the 3.5 mm Jack Connector, Bluetooth is disabled and wireless devices will not be able to play music.

USB (Plug and play)

Plug the Jabra Solemate into any available USB port on your PC. The Jabra Solemate microphone is enabled when connected via USB



WIRELESS CONNECTION (BLUETOOTH)



- 1. Hold the **On/off** switch in the Up position for 3 seconds.
- 2. Pairing mode will be announced and the Bluetooth light will flash.
- 3. Follow the voice guided pairing instructions to pair to your Bluetooth device.

Note: If connection is lost (e.g. out of range) tap the **Answer/end** button when the Jabra Solemate is in range and turned on to reconnect.

PLAY MUSIC, CHAT AND VOICE GUIDANCE

PLAY MUSIC


Music played on your connected device will automatically transfer to the Jabra Solemate. If you cannot hear audio, ensure the device is connected to the Jabra Solemate via USB, 3.5 mm Jack Connector or Bluetooth, or turn up the speaker volume.

To control the music (skip tracks, pause music etc) use the connected phone, tablet or PC.

Note: When a device is connected to the 3.5 mm Jack Connector, Bluetooth is disabled and wireless devices will not be able to play music.

CHAT USING MOBILE PHONE OR SOFTPHONE (PC)

When the Jabra Solemate is Bluetooth connected to your mobile phone, or USB connected to your PC, calls made or answered will automatically transfer to the Jabra Solemate, which will function as a speakerphone.

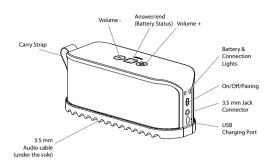

Q	Make call	Call will automatically transfer to the Jabra Solemate. If not, tap the Answer/end button
	Answer/end call	Tap the Answer/end button to answer an incoming. Music will be automatically paused
	Reject call	Double-tap the Answer/end button
Q	Redial last number	Double-tap the Answer/end but- ton to redial the last number dialled (phone dependent)
0 8	Speaker volume up/ down*	Tap Volume + or Volume - button Press and hold the Volume + or Volume - button to scroll the volume quickly up or down.
13	Mute/un-mute microphone	Press and hold (1 sec) both Volume + and Volume - buttons simultaneously

Note: Music will automatically pause during a call, and will resume when the call is ended.

VOICE GUIDANCE

What you hear	What it means
Go ahead and connect me. Use the Bluetooth setting in your phone	The Jabra Solemate is in pairing mode and will search for any Bluetooth devices to pair with
Solemate is connected	A Bluetooth device is now connected
Bluetooth off	Bluetooth is disabled when a device is connected to the 3.5 mm Jack Connector
Battery full	The battery is full
Battery medium	The battery is half full
Battery low	The battery is low
Recharge battery	The battery is critically low, and requires immediate charging
Muted	Muted during a call
un-muted	Mute off during a call
Voice dialing	Voice dialing for your Bluetooth connected device
Redialing	Redialing the last number dialed
Sound prompts off	Sound prompts have been manually turned off
Sound prompts on	Sound prompts have been manually turned on
Connection cancelled	Bluetooth connection cancelled

TURN VOICE GUIDANCE OFF/ON

Turn off voice guidance:

- 1. Turn off the Jabra Solemate.
- Press and hold the Volume button while turning on the Jabra Solemate. Release the Volume - button when you hear 'Voice off' to indicating that the voice guidance have been turned off.

Turn on voice guidance:

- 1. Turn off the Jabra Solemate.
- Press and hold the Volume + button while turning on the Jabra Solemate. Release the Volume + button when you hear 'Voice on' to indicating that the voice guidances have been turned on.

UPDATE FIRMWARE

To update the Jabra Solemate firmware visit jabra.com/solemate and download the latest firmware in the support section. Follow the on-screen instructions.





SUPPORT

FAO

Q I hear crackling noises

A Bluetooth is a radio technology, which means it is sensitive to objects between the Jabra Solemate and the connected device. The Jabra Solemate is designed to be used within 33 feet (10 meters) of a connected device, with no major objects inbetween (walls, etc.).

Q I cannot hear anything on my Jabra Solemate

- A Increase the volume in the Jabra Solemate.
 - Ensure that the Jabra Solemate is paired or connected to a device that is playing.
 - Make sure your phone is connected to the Jabra Solemate by tapping the **Answer/End** button.

Q I am having pairing problems

A You may have deleted your Jabra Solemate pairing connection in Bluetooth device. Re-pair by holding the on/off switch in the Up position for 3 seconds to put the Jabra Solemate into pairing mode, and then connect using your Bluetooth device

Q Will the Jabra Solemate work with other Bluetooth equipment?

A The Jabra Solemate is designed to work with all Bluetooth devices that are compliant with Bluetooth version 1.1 or higher and support a headset, hands-free and/or advance audio distribution profile.

Q I cannot use Reject call, Redial or voice dialing

A These features are dependent on the ability of your phone to support a hands-free profile. Even if the hands-free profile is implemented reject call, call hold and voice dialing are optional features which are not supported by all devices. Please consult your device manual for details.

O Can I connect two Bluetooth devices at once?

A No. It is not possible for two Bluetooth devices to be connected at once.

Q Why can I not connect wirelessly to the Jabra Solemate

A Ensure that Bluetooth is turned on in your device. Follow the instructions in section 3.1 to manually enter pairing mode.

HOW TO CARE FOR YOUR JABRA SOLEMATE

Always store the Jabra Solemate with the power off.

Avoid storage at extreme temperatures (above 45°C/113°F or below -10°C/14°F). This may shorten battery life and affect operation. High temperatures may also degrade performance.

Do not expose to rain or other liquids.

NEED MORE HELP?

1. Web: www.jabra.com

(latest support info and online User Manuals)

2. E-mail:

Deutsch support.de@iabra.com English support.uk@jabra.com Español support.es@jabra.com Français support.fr@iabra.com Italiano support.it@iabra.com Nederlands support.nl@jabra.com Polska support.pl@iabra.com Scandinavian support.no@iabra.com Россия support.ru@jabra.com Australia support.au@jabra.com China support.cn@iabra.com Japan support.jp@jabra.com Singapore support.sq@jabra.com

3. Phone:

Belgique/Belgie +32 28080766 Danmark +45 69918794 Deutschland +49 30896778991 Suomi +45 35256540 France +33 182880251 Italia +39 0662207674 Luxemboura +45 35256540 Nederland +31 208080962 Norge +47 22577785 Österreich +43 720880558 Portugal +45 35256540 Россия +7 916 246 69 00 Sverige +46 852507012 Die Schweiz +41 435002460 España +34 911875539 United Kingdom +44 2033180070 Australia 1-800-738-521 China 800-858-0789 Japan 03-3242-8722 Singapore 800-101-2329 United State 1 (800) 327-2230 Canada 1 (800) 489-4199 International

+45 35256540

TECHNICAL SPECIFICATIONS

Weight:

610 grams

Dimensions:

L 172 mm x W 64 mm x H 70 mm

Microphone:

Omni-directional MEMS microphone, SLR = 14 dB +/- 3 dB

Speakers:

1 x 4 inch Mid/woofer

2 x 3/4 inch Soft dome tweeters

Operating range:

Up to 10 meters (33 feet)

Bluetooth version:

3.0

Paired devices:

Up to 8 paired devices. One active device connected at a time

Supported Bluetooth profiles:

Hands Free profile (v. 1.5), Headset profile (v. 1.2), A2DP (v. 1.2)

Supported modes:

SCO, eSCO, Sniff mode

Digital signal processing (DSP):

Noise reduction on transmit and receive audio, Noise dependent volume control, Automatic volume adjustment on receive audio, Acoustic shock protection

Talk time:

Up to 8 hours

Standby time:

Up to 60 days

Music playing time:

Up to 8 hours depending on volume and music type.

Charging time:

Approximately 2.5 hours

AC power supply:

100-240 V, 50-60 Hz

Charging plug dimensions:

L 5 mm x W 8.7 mm x H 2.4 mm, 5 PIN micro USB, B Type

Operating temperature:

-10° C to 55° C (-50° F to 131° F)

Storage temperature:

-40° C to 70° C (-104° F to 158° F)

Resistances:

Dust, shock and water resistance

Materials:

Polycarbonate, Acryl Butadien Styren (PC/ABS), Polycarbonite (PC), Thermoplastic Elastomer (TPE), Silicon rubber, Iron, Fabric

Pairing passkey or PIN:

0000

Certification:

Bluetooth 3.0, CE, FCC, IC, GOST, RoHS, REACH

Warranty:

One-year limited warranty



Dispose of the product according to local standards and regulations.



A BRAND BY GN Netcom

© 2012 GN Netcom US, Inc. All rights reserved. Jabra® is a registered trademark of GN Netcom A/S. All other trademarks included herein are the property of their respective owners. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by GN Netcom A/S is under license. (Design and specifications subject to change without notice).

© 2012 GN Netcom A/S. All rights reserved. Jabra® is a registered trademark of GN Netcom A/S. All other trademarks included herein are the property of their respective owners. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by GN Netcom A/S is under license. (Design and specifications subject to change without notice).

MADE IN CHINA TYPE: HFS200





Bluetooth*