

**OLYMPUS**

---



OLYMPUS AIR

**A01**

# **Instruction Manual**

# Introduction

## Unpack the box contents


- OLYMPUS AIR A01 (Body)
- AIR-CP01 AIR Coupling (already attached)



- AIR-ST01 Hand Strap




- CB-USB9 USB Cable

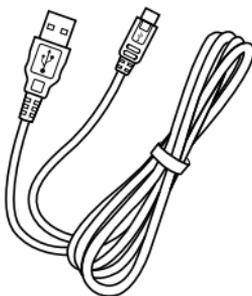

- Warranty card
- Welcome Card
- Safety Precautions
- Lens\*

\* In the case of a lens kit, the lens (or lenses) of the relevant kit is supplied.

## Names of parts

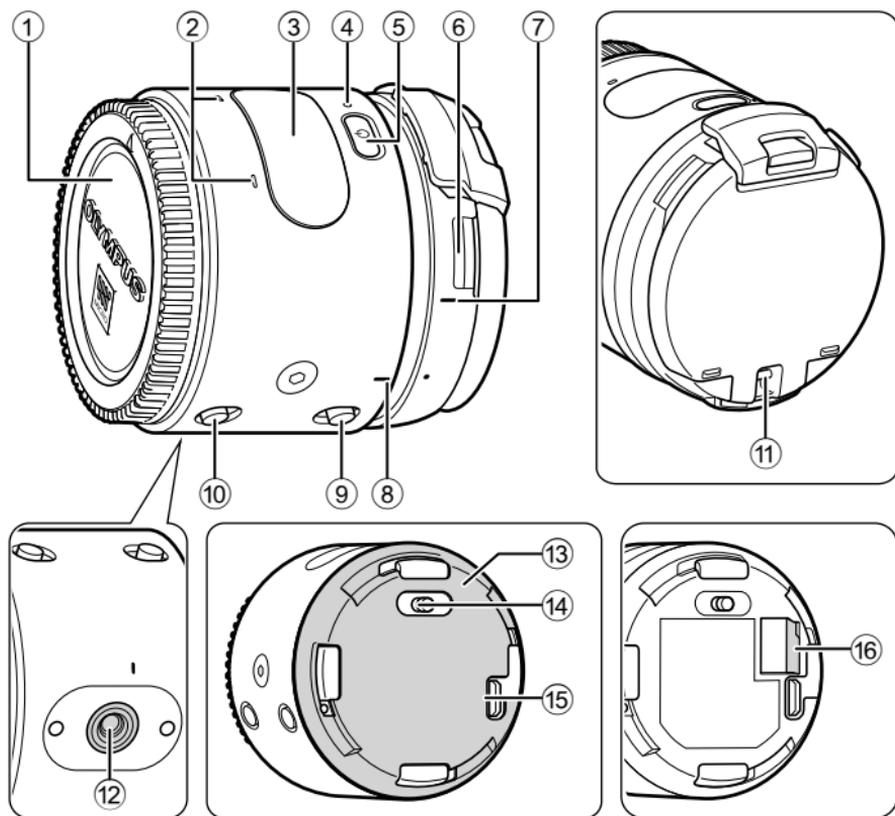


- |                              |                               |
|------------------------------|-------------------------------|
| ① Body cap                   | ⑨ Accessory Release Lever     |
| ② Stereo Microphone          | ⑩ Lens Release Lever          |
| ③ Shutter Button             | ⑪ Strap eyelet (AIR Coupling) |
| ④ LED Illuminator            | ⑫ Tripod socket               |
| ⑤ ON/OFF button              | ⑬ Rear Cover                  |
| ⑥ Open Button (AIR Coupling) | ⑭ Radio switch                |
| ⑦ Mount index (AIR Coupling) | ⑮ micro USB Connector         |
| ⑧ Accessory attachment mark  | ⑯ microSD card Slot           |

## Preparation


### Removing the AIR coupling

Turn the AIR coupling in the direction of arrow ② while pressing the accessory release lever (arrow ①).

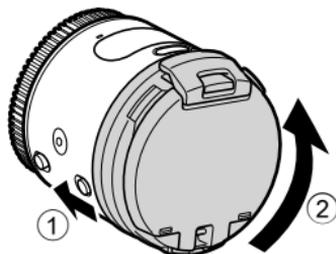

### Charging

Connect OLYMPUS AIR to your computer using the USB cable (supplied).

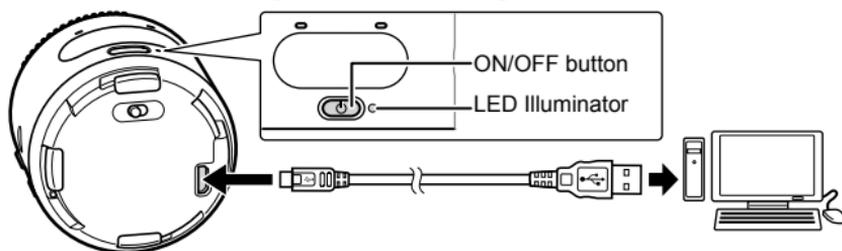

- 1** Turn off OLYMPUS AIR.
  - When the power is off, the LED illuminator on the body is off.
- 2** Connect the supplied USB cable to the micro USB connector.
- 3** Connect to a USB port on your computer.
  - During charging, the LED illuminator on the body is lit orange.
  - Charging takes a maximum of approx. 4 hours 30 minutes.
  - When charging has finished, the LED illuminator goes off.


## Inserting the card

Use a commercially available microSD card that complies with the SD standards.

### Cautions


- Before inserting or removing the card, turn OLYMPUS AIR off and turn the radio switch OFF.
- Do not forcibly insert a damaged or deformed card. Doing so may damage the card slot.

### 1 Remove the OLYMPUS AIR rear cover.

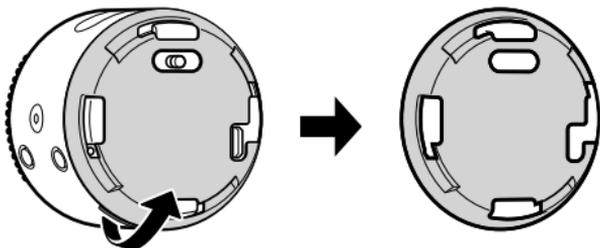

### 2 Insert the microSD card.

- With the connector surface facing toward the outer side of OLYMPUS AIR, push in the card until you hear a click.

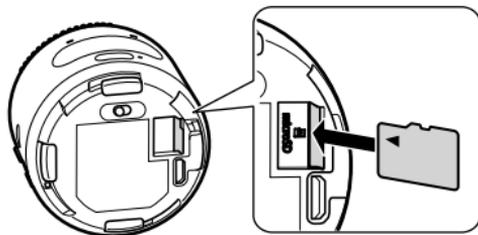

### 3 Attach the rear cover.


## Removing the card

Press the inserted card lightly and it will be ejected. Pull out the card.

## Attaching a lens to the camera

You can use lenses of the Micro Four Thirds Mount standard.

### 1 Attach a lens to the camera.

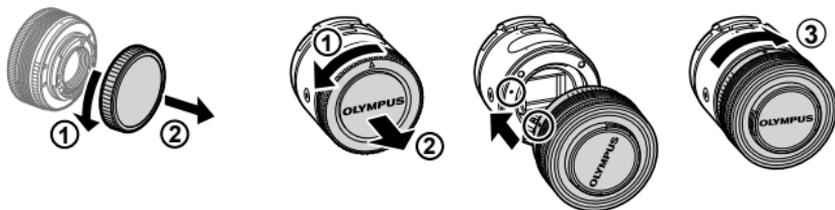

- Remove the OLYMPUS AIR body cap and the lens rear cap.
- Align the lens attachment mark on OLYMPUS AIR (red mark) with the mount index on the lens (red mark) and press the lens onto OLYMPUS AIR.
- Rotate clockwise (direction of arrow ③) until the lens clicks.

### ⚠ Cautions


- Do not operate the lens release lever.
- Do not touch any of the internal parts of OLYMPUS AIR.

### 2 Remove the lens cap.



## Removing the lens from the camera

### 1 Turn the lens while pressing the lens release lever in the direction indicated.

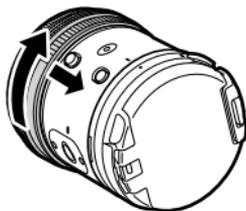


## Attaching the AIR coupling

- 1** Attach the hand strap.




- Attach the hand strap to the strap eyelet on the AIR coupling.

- 2** Align the mount index on the AIR coupling with the accessory attachment mark on OLYMPUS AIR, and attach.

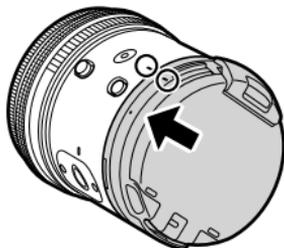


- 3** Turn the AIR coupling in the indicated direction until you hear a click.

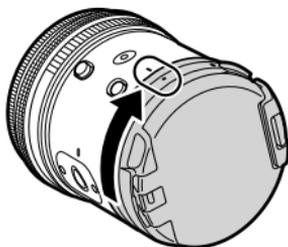


## Attaching to a smartphone


**1** Press the open button to open the AIR coupling.

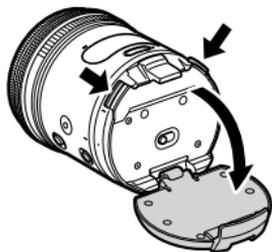

**2** Switch the adjustment lever position to fit the size of your smartphone.

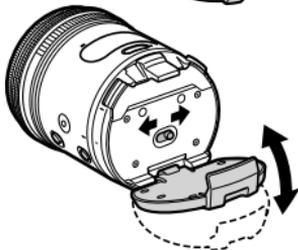

**3** Attach your smartphone to the AIR coupling.

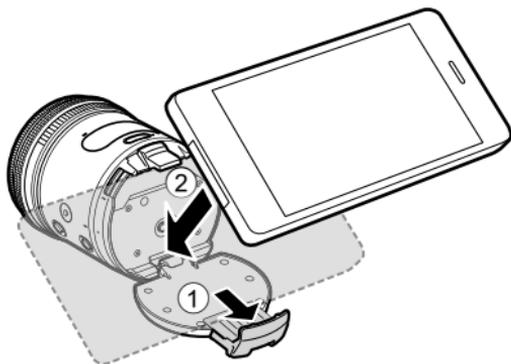

Width of compatible smartphones:  
58.6 – 77.8 mm

- Secure attachment may not be possible with smartphones of certain shapes.

### **!** Cautions

- Use the hand strap to avoid inadvertently dropping the system during use.
- Firmly grip both OLYMPUS AIR and your smartphone. Before carrying around OLYMPUS AIR, please detach your smartphone.
- If you hold only the smartphone, there is a risk it will detach from the AIR coupling. Please hold both the camera body and lens.
- OLYMPUS will not be held responsible for any damage incurred to your smartphone, smartphone case, protective film, or other smartphone accessories.

## Connection settings

### Connecting to a smartphone

OLYMPUS AIR connects to your smartphone over Bluetooth or Wi-Fi, and is controlled using our dedicated app. To establish Bluetooth and Wi-Fi connections, you will have to carry out one-time initial settings.

You will need to first install the dedicated app (OA.Central) on your smartphone. Download the app from the App store or Google Play.

#### Cautions

- Smartphone not equipped with Bluetooth Smart will only work with a Wi-Fi connection.



OA.Central

### OLYMPUS AIR initial settings

Start the installed app and proceed with the settings as instructed by the app.

#### 1 Start OA.Central.

##### ■ Setting for the first time



##### ■ Already carried out settings



## FAQ

### **Battery does not get charged.**

- Please turn off the power of OLYMPUS AIR before charging.

### **OLYMPUS AIR does not turn on.**

- Charge OLYMPUS AIR.
- If you cannot switch on OLYMPUS AIR using your smartphone, check your Bluetooth settings.

### **LED is blinking (blue or green).**

- Battery is missing. Please Charge.
- A movie is shooting.

### **LED is flashing slowly in green.**

- OLYMPUS AIR is in sleep mode (energy saving mode).  
OLYMPUS AIR will wake from Sleep Mode when operated. When in the Sleep Mode and not operated for a specified time period, OLYMPUS AIR will automatically turn off.

### **No response to operations on OA.Central.**

- OLYMPUS AIR has not been turned on.
- If the LED illuminator is on and there is still no response, press and hold down the ON/OFF button (for approximately 8 seconds). This restarts OLYMPUS AIR.

### **I want to change the OLYMPUS AIR settings, such as image size.**

- Perform settings on your smartphone using OA.Central. Various detailed settings can be changed from the OLYMPUS AIR setting screen of the OA.Central app.

### **I want to return the network settings to the state at the time of purchase.**

- Please operate the following with the power off and microSD card removed.
  1. Push the ON/OFF button briefly with the shutter button pressed all the way down and the lens release lever pulled all the way.
  2. Once the power goes on, it will automatically turn off.
  3. Again, turn the power on and you can use the network settings in the state at the time of purchase.

## Charging without using a computer.

- Use the USB-AC adaptor (F-3AC), which is sold separately. With this adaptor, charging takes a maximum of approx. 2 hours 30 minutes.

## OLYMPUS AIR shut down suddenly during use.

- Operation may stop for safety reasons when shooting a movie in high-temperature conditions. Wait for the temperature of OLYMPUS AIR to drop before use.

## LED illuminator display

The LED illuminator lights up orange during use to indicate an error.

LED status and warning details	Trouble	Solution
Orange, blinking at 3Hz (shooting not possible)	microSD card is not inserted.	Insert microSD card. Or re-insert the card correctly.
	microSD card has a problem.	Insert different microSD card.
	Card is write-protected.	Unlock write-protection.
	Number of shots remaining is 0.	Change the card or delete unwanted images.
	Lens has an error.	Turn off camera and re-attach lens.
	Camera internal temperature is high.	After showing warning, camera will turn off automatically. Wait a few minutes for the internal temperature to drop to a level that permits shooting.

## Cleaning and storing

### Cleaning the camera

Turn OLYMPUS AIR off before cleaning.

#### Outer parts of OLYMPUS AIR:

Wipe gently with a soft cloth. If the camera is very dirty, soak the cloth in mild soapy water and wring well. Wipe the camera with the damp cloth and then dry it with a dry cloth.

If you have used the camera at the beach, use a cloth soaked in clean water and well wrung.

#### Lens:

Blow dust off the lens with a commercially available blower. For the lens, wipe gently with a lens cleaning paper.

### Storage

If you do not intend to use OLYMPUS AIR for a long period, charge and turn the radio switch off before storing. Also, please charge at least once every six months.

- Insert the battery periodically and test the camera's functions.
- Remove dust and other foreign matter from the body cap before attaching them.
- Attach the body cap to the camera to prevent dust from getting inside when no lens is attached. Be sure to replace the front and rear lens caps before putting the lens away.
- Clean the camera after use.
- Do not store with insect repellent.

## Checking the image pickup device

Do not touch internal parts within the mount such as the lens signal contact. Blow away any dust within the mount using a commercially available blower.

#### Cautions

- Avoid using spray-type blowers as these may damage the camera.

# Specifications

<b>Product type</b>		
Product type	Interchangeable lens digital camera	
Lens mount	Micro Four Thirds mount	
<b>Image pickup device</b>		
Product type	4/3" Live MOS sensor	
Total no. of pixels	Approx. 17,200,000 pixels	
No. of effective pixels	Approx. 16,050,000 pixels	
Screen size	17.3 mm (H) × 13.0 mm (V)	
Aspect ratio	1.33 (4:3)	
<b>Shutter</b>		
Product type	Electronically controlled	
Shutter speed	1/16000 - 4 sec.	
<b>Auto focus</b>		
Product type	Imager AF	
<b>Exposure control</b>		
Metering system	Imager metering	
Metered range	EV -2 - 20 (Equivalent to M.ZUIKO DIGITAL 17mm f2.8, ISO100)	
<b>Recording</b>		
Memory	microSD, UHS-I compatible	
Recording system	Still picture	JPEG (DCF-compatible), RAW*
	Movie	MPEG-4 AVC/H.264
	Audio	Stereo, PCM 48kHz
<b>Bluetooth</b>		
Compatible standard	Bluetooth Smart	
<b>Wireless LAN</b>		
Compatible standard	IEEE 802.11b/g/n	
<b>Energy-saving function</b>		
Time to sleep	3 minutes; setting can be changed.	
Sleep to OFF time	5 minutes	
<b>Power supply</b>		
Battery	Lithium-ion battery (not replaceable)	
Battery charging time	USB (PC) approx. 4 hours 30 minutes	
Battery life (number of shots)	320	
<b>Dimensions/weight</b>		
Dimensions	56.9 mm (W) × 57.1 mm (H) × 43.6 mm (D) (2.2" × 2.3" × 1.7")	
Weight	Approx. 147 g (0.3 lb.) (including battery and memory card)	
<b>Operating environment</b>		
Temperature	0 °C - 40 °C (32 °F - 104 °F) (operation)/ -20 °C - 60 °C (-4 °F - 140 °F) (storage)	
Humidity	30% - 90% (operation)/10% - 90% (storage)	

\* RAW data can only be handled using OLYMPUS Viewer

# SAFETY PRECAUTIONS



**CAUTION**  
**RISK OF ELECTRIC SHOCK**  
**DO NOT OPEN**



CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER (OR BACK).  
 NO USER-SERVICEABLE PARTS INSIDE.  
 REFER SERVICING TO QUALIFIED OLYMPUS SERVICE PERSONNEL.



An exclamation mark enclosed in a triangle alerts you to important operating and maintenance instructions in the documentation provided with the product.



## DANGER

If the product is used without observing the information given under this symbol, serious injury or death may result.



## WARNING

If the product is used without observing the information given under this symbol, injury or death may result.



## CAUTION

If the product is used without observing the information given under this symbol, minor personal injury, damage to the equipment, or loss of valuable data may result.

### WARNING!

**TO AVOID THE RISK OF FIRE OR ELECTRICAL SHOCK, NEVER DISASSEMBLE, EXPOSE THIS PRODUCT TO WATER OR OPERATE IN A HIGH HUMIDITY ENVIRONMENT.**

## General Precautions

**Read All Instructions** — Before you use the product, read all operating instructions. Save all manuals and documentation for future reference.

**Cleaning** — Always unplug this product from the wall outlet before cleaning. Use only a damp cloth for cleaning. Never use any type of liquid or aerosol cleaner, or any type of organic solvent to clean this product.

**Attachments** — For your safety, and to avoid damaging the product, use only accessories recommended by Olympus.

**Water and Moisture** — For precautions on products with weatherproof designs, read the weatherproofing sections.

**Location** — To avoid damage to the product, mount the product securely on a stable tripod, stand, or bracket.

**Power Source** — Connect this product only to the power source described on the product label.

**Foreign Objects** — To avoid personal injury, never insert a metal object into the product.

**Heat** — Never use or store this product near any heat source such as a radiator, heat register, stove, or any type of equipment or appliance that generates heat, including stereo amplifiers.

**⚠ WARNING****Handling the Camera**

- **Do not use the camera near flammable or explosive gases.**
- **Do not use or store the camera in dusty or humid places.**
- **Keep young children and infants away from the camera.**
  - Always use and store the camera out of the reach of young children and infants to prevent the following dangerous situations which could cause serious injury:
    - Becoming entangled in the camera strap, causing strangulation.
    - Accidentally swallowing cards or other small parts.
- **Use microSD memory cards only. Never use other types of cards.**  
If you accidentally insert another type of card into the camera, contact an authorized distributor or service center. Do not try to remove the card by force.

**Using the wireless LAN function and Bluetooth Smart function**

- **Turn off the camera in hospitals and other locations where medical equipment is present.**  
The radio waves from the camera may adversely affect medical equipment, causing a malfunction that results in an accident.
- **Turn off the camera when onboard aircraft.**  
Using wireless devices onboard may hinder safe operation of the aircraft.
- **If using the wireless LAN function and Bluetooth Smart function in a country outside the region where the camera was purchased, there is a risk that the camera will not conform to the wireless communication regulations of that country. Olympus will not be held responsible for any failure to meet such regulations.**

**⚠ CAUTION****Handling the Camera**

- **Stop using the camera immediately if you notice any unusual odors, noise, or smoke around it.**
- Never hold or operate the camera with wet hands.  
This may cause overheating, exploding, burning, electrical shocks, or malfunctions.
- Be careful with the strap when you carry the camera. It could easily catch on stray objects and cause serious damage.
- If rechargeable batteries have not been recharged within the specified time, stop charging them and do not use them.
- **Do not leave the camera in places where it may be subject to extremely high temperatures.**
- **Handle the camera with care to avoid getting a low-temperature burn.**
  - When the camera contains metal parts, overheating can result in a low-temperature burn. Pay attention to the following:
    - When used for a long period, the camera will get hot. If you hold on to the camera in this state, a low-temperature burn may be caused.
    - In places subject to extremely cold temperatures, the temperature of the camera's body may be lower than the environmental temperature. If possible, wear gloves when handling the camera in cold temperatures.
- To protect the high-precision technology contained in this product, never leave the camera in the places listed below, no matter if in use or storage:
  - Places where temperatures and/or humidity are high or go through extreme changes. Direct sunlight, beaches, locked cars, or near other heat sources (stove, radiator, etc.) or humidifiers.
  - In sandy or dusty environments.
  - Near flammable items or explosives.
  - In wet places, such as bathrooms or in the rain. When using products with weatherproof designs, read their manuals as well.
  - In places prone to strong vibrations.
  - Never drop the camera or subject it to severe shocks or vibrations.

- When attaching the camera to or removing it from a tripod, rotate the tripod screw, not the camera.
- Before transporting the camera, remove a tripod and all other non-OLYMPUS accessories.
- Do not touch electric contacts on cameras.
- Do not leave the camera pointed directly at the sun. This may cause lens or shutter curtain damage, color failure, ghosting on the image pickup device, or may possibly cause fires.
- Do not leave the viewfinder exposed to a strong light source or direct sunlight. The heat may damage the viewfinder.
- Do not push or pull severely on the lens.
- Before storing the camera for a long period, select a cool, dry location for storage to prevent condensation or mold from forming inside the camera. After storage, test the camera by turning it on and pressing the shutter button to make sure that it is operating normally.
- The camera may malfunction if it is used in a location where it is subject to a magnetic/ electromagnetic field, radio waves, or high voltage, such as near a TV set, microwave, video game, loud speakers, large monitor unit, TV/radio tower, or transmission towers. In such cases, turn the camera off and on again before further operation.
- Always observe the operating environment restrictions described in the camera's manual.

## Legal and Other Notices

- Olympus makes no representations or warranties regarding any damages, or benefit expected by using this unit lawfully, or any request from a third person, which are caused by the inappropriate use of this product.
- Olympus makes no representations or warranties regarding any damages or any benefit expected by using this unit lawfully which are caused by erasing picture data.

## Disclaimer of Warranty

- Olympus makes no representations or warranties, either expressed or implied, by or concerning any content of these written materials or software, and in no event shall be liable for any implied warranty of merchantability or fitness for any particular purpose or for any consequential, incidental or indirect damages (including but not limited to damages for loss of business profits, business interruption and loss of business information) arising from the use or inability to use these written materials or software or equipment. Some countries do not allow the exclusion or limitation of liability for consequential or incidental damages or of the implied warranty, so the above limitations may not apply to you.
- Olympus reserves all rights to this manual.

## Warning

Unauthorized photographing or use of copyrighted material may violate applicable copyright laws. Olympus assumes no responsibility for unauthorized photographing, use or other acts that infringe upon the rights of copyright owners.

## Copyright Notice

All rights reserved. No part of these written materials or this software may be reproduced or used in any form or by any means, electronic or mechanical, including photocopying and recording or the use of any type of information storage and retrieval system, without the prior written permission of Olympus. No liability is assumed with respect to the use of the information contained in these written materials or software, or for damages resulting from the use of the information contained therein. Olympus reserves the right to alter the features and contents of this publication or software without obligation or advance notice.

## FCC Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Only the OLYMPUS-supplied USB cable should be used to connect the camera to USB enabled personal computers.

## FCC Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that are deemed to comply without testing of specific absorption ratio (SAR).

Please recycle batteries to help save our planet's resources. When you throw away dead batteries, be sure to cover their terminals and always observe local laws and regulations.

## For customers in North America, Central America, South America and the Caribbean

Declaration of Conformity

Model Number: A01

Trade Name: OLYMPUS

Responsible Party: **OLYMPUS IMAGING AMERICA INC.**

Address: 3500 Corporate Parkway, P.O. Box 610,  
Center Valley, PA 18034-0610, USA

Telephone Number: 484-896-5000

Tested To Comply With FCC Standards  
FOR HOME OR OFFICE USE

This device complies with Part 15 of FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus complies with Canadian ICES-003.  
CAN ICES-3(B)/NMB-3(B)

**OLYMPUS AMERICAS LIMITED WARRANTY - OLYMPUS IMAGING AMERICA INC. PRODUCTS**

Olympus warrants that the enclosed Olympus® imaging product(s) and related Olympus® accessories (individually a “Product” and collectively the “Products”) will be free from defects in materials and workmanship under normal use and service for a period of one (1) year from the date of purchase.

If any Product proves to be defective within the one-year warranty period, the customer must return the defective Product to the authorized Olympus Repair Service Center designated by Olympus, following the procedure set forth below (See “WHAT TO DO WHEN SERVICE IS NEEDED”). Olympus, at its sole discretion, will repair, replace, or adjust the defective Product at Olympus’s cost, provided that an Olympus investigation and factory inspection disclose that (a) such defect developed under normal and proper use and (b) the Product is covered under this limited warranty. Repair, replacement, or adjustment of defective Products shall be Olympus’s sole obligation and the customer’s sole remedy hereunder. Repair or replacement of a Product shall not extend the warranty period provided herein, unless required by law. Except where prohibited by law, the customer is liable and shall pay for shipment of the Products to the designated Olympus Repair Service Center. Olympus shall not be obligated to perform preventive maintenance, installation, deinstallation, or maintenance. Olympus reserves the right to (i) use reconditioned, refurbished, and/or serviceable used parts (that meet Olympus’s quality assurance standards) for warranty or any other repairs and (ii) make any internal or external design and/or feature changes on or to its products without any liability to incorporate such changes on or to the Products.

**WHAT IS NOT COVERED BY THIS LIMITED WARRANTY**

Excluded from this limited warranty and not warranted by Olympus in any fashion, either express, implied, or by statute, are:

- (a) products and accessories not manufactured by Olympus and/or not bearing the “OLYMPUS” brand label (the warranty coverage for products and accessories of other manufacturers, which may be distributed by Olympus, is the responsibility of the respective manufacturer of such products and accessories in accordance with the terms and duration of such manufacturers’ warranties);
- (b) any Product which has been disassembled, repaired, tampered with, altered, changed, or modified by persons other than Olympus’s own authorized service personnel unless repair by others is made with the written consent of Olympus;
- (c) defects or damage to the Products resulting from wear, tear, misuse, abuse, negligence, sand, liquids, impact, improper storage, nonperformance of scheduled operator and maintenance items, battery leakage, use of non-“OLYMPUS” brand accessories, consumables, or supplies, or use of the Products in combination with non-compatible devices;
- (d) software programs;
- (e) supplies and consumables (including but not limited to lamps, ink, paper, film, prints, negatives, cables and batteries); and/or
- (f) Products which do not contain a validly placed and recorded Olympus serial number, unless they are a model on which Olympus does not place and record serial numbers.
- (g) Products shipped, delivered, purchased, or sold from dealers located outside of North America, Central America, South America and the Caribbean; and/or
- (h) Products that are not intended or authorized to be sold in North America, South America, Central America, or the Caribbean (ie. Gray Market Goods).

**WARRANTY DISCLAIMER; LIMITATION OF DAMAGES; AFFIRMATION OF ENTIRE WARRANTY AGREEMENT; INTENDED BENEFICIALLY**  
EXCEPT FOR THE LIMITED WARRANTY SET FORTH ABOVE, OLYMPUS MAKES NO AND DISCLAIMS ALL OTHER REPRESENTATIONS, GUARANTIES, CONDITIONS, AND WARRANTIES CONCERNING THE PRODUCTS, WHETHER DIRECT OR INDIRECT, EXPRESS OR IMPLIED, OR ARISING UNDER ANY STATUTE, ORDINANCE, COMMERCIAL USAGE OR OTHERWISE, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OR REPRESENTATION AS TO THE SUITABILITY, DURABILITY, DESIGN, OPERATION, OR CONDITION OF THE PRODUCTS (OR ANY PART THEREOF) OR THE MERCHANTABILITY OF THE PRODUCTS OR THEIR FITNESS FOR A PARTICULAR PURPOSE, OR RELATING TO THE INFRINGEMENT OF ANY PATENT, COPYRIGHT, OR OTHER PROPRIETARY RIGHT USED OR INCLUDED THEREIN.

IF ANY IMPLIED WARRANTIES APPLY AS A MATTER OF LAW, THEY ARE LIMITED IN DURATION TO THE LENGTH OF THIS LIMITED WARRANTY.

SOME STATES MAY NOT RECOGNIZE A DISCLAIMER OR LIMITATION OF WARRANTIES AND/OR LIMITATION OF LIABILITY SO THE ABOVE DISCLAIMERS AND EXCLUSIONS MAY NOT APPLY.

THE CUSTOMER MAY ALSO HAVE DIFFERENT AND/OR ADDITIONAL RIGHTS AND REMEDIES THAT VARY FROM STATE TO STATE.

THE CUSTOMER ACKNOWLEDGES AND AGREES THAT OLYMPUS SHALL NOT BE RESPONSIBLE FOR ANY DAMAGES THAT THE CUSTOMER MAY INCUR FROM DELAYED SHIPMENT, PRODUCT FAILURE, PRODUCT DESIGN, SELECTION, OR PRODUCTION, IMAGE OR DATA LOSS OR IMPAIRMENT OR FROM ANY OTHER CAUSE, WHETHER LIABILITY IS ASSERTED IN CONTRACT, TORT (INCLUDING NEGLIGENCE AND STRICT PRODUCT LIABILITY) OR OTHERWISE. IN NO EVENT SHALL OLYMPUS BE LIABLE FOR ANY INDIRECT, INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES OF ANY KIND (INCLUDING WITHOUT LIMITATION LOSS OF PROFITS OR LOSS OF USE), WHETHER OR NOT OLYMPUS SHALL BE OR SHOULD BE AWARE OF THE POSSIBILITY OF SUCH POTENTIAL LOSS OR DAMAGE.

Representations and warranties made by any person, including but not limited to dealers, representatives, salespersons, or agents of Olympus, which are inconsistent or in conflict with or in addition to the terms of this limited warranty, shall not be binding upon Olympus unless reduced to writing and approved by an expressly authorized officer of Olympus.

This limited warranty is the complete and exclusive statement of warranty which Olympus agrees to provide with respect to the Products and it shall supersede all prior and contemporaneous oral or written agreements, understandings, proposals, and communications pertaining to the subject matter hereof.

This limited warranty is exclusively for the benefit of the original customer and cannot be transferred or assigned.

#### **WHAT TO DO WHEN SERVICE IS NEEDED**

The customer must contact the designated Olympus Consumer Support Team for your region to coordinate the submission of your Product for repair service. To contact your Olympus Consumer Support Team in your region please visit or call the following:

Canada:

[www.olympuscanada.com/repair/](http://www.olympuscanada.com/repair/)  
1-800-622-6372

United States:

[www.olympusamerica.com/repair/](http://www.olympusamerica.com/repair/)  
1-800-622-6372

Latin America:

[www.olympusamericalatina.com](http://www.olympusamericalatina.com)

The customer must copy or transfer any image or other data saved on a Product to another image or data storage medium prior to sending the Product to Olympus for repair service.

IN NO EVENT SHALL OLYMPUS BE RESPONSIBLE FOR SAVING, KEEPING OR MAINTAINING ANY IMAGE OR DATA SAVED ON A PRODUCT RECEIVED BY IT FOR SERVICE, OR ON ANY FILM CONTAINED WITHIN A PRODUCT RECEIVED BY IT FOR SERVICE, NOR SHALL OLYMPUS BE RESPONSIBLE FOR ANY DAMAGES IN THE EVENT ANY IMAGE OR DATA IS LOST OR IMPAIRED WHILE SERVICE IS BEING PERFORMED (INCLUDING, WITHOUT LIMITATION, DIRECT, INDIRECT, INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES, LOSS OF PROFITS OR LOSS OF USE), WHETHER OR NOT OLYMPUS SHALL BE OR SHOULD BE AWARE OF THE POSSIBILITY OF SUCH POTENTIAL LOSS OR IMPAIRMENT.

The customer should package the Product carefully using ample padding material to prevent damage in transit. Once the Product is properly packaged, ship the package to Olympus or the Olympus Authorized Repair Service Center location as instructed by the respective Olympus Consumer Support Team.

When sending Products for repair service, your package should include the following:

- 1) Sales receipt showing date and place of purchase. Handwritten receipts will not be accepted;
- 2) Copy of this limited warranty **bearing the Product serial number corresponding to the serial number on the Product** (unless it is a model on which Olympus does not place and record serial numbers);
- 3) A detailed description of the problem; and
- 4) Sample prints, negatives, digital prints (or files on disk) if available and related to the problem.

KEEP COPIES OF ALL DOCUMENTS. Neither Olympus nor an Olympus Authorized Repair Service Center will be responsible for documents that are lost or destroyed in transit.

When service is completed, the Product will be returned to you postage prepaid.

## PRIVACY

Any information provided by you to process your warranty claim shall be kept confidential and will only be used and disclosed for the purposes of processing and performing warranty repair services.

## Trademarks

- Android, Google Play are registered trademarks of Google Inc.
- microSD Logo is a trademark of SD-3C, LLC.
- “Shadow Adjustment Technology” function contains patented technologies from Apical Limited.
- Micro Four Thirds, Four Thirds, and the Micro Four Thirds and Four Thirds logos are trademarks or registered trademarks of the OLYMPUS IMAGING Corporation in Japan, the United States, the countries of the European Union, and other countries.
- Wi-Fi is a registered trademark of the Wi-Fi Alliance.
- The Wi-Fi CERTIFIED logo is a certification mark of the Wi-Fi Alliance.
- The standards for camera file systems referred to in this manual are the “Design Rule for Camera File System/DCF” standards stipulated by the Japan Electronics and Information Technology Industries Association (JEITA).
- Bluetooth Smart is a registered trademark of Bluetooth SIG, Inc.
- All other company and product names are registered trademarks and/or trademarks of their respective owners.



THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NONCOMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD (“AVC VIDEO”) AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com)

The software in this camera may include third party software. Any third party software is subject to the terms and conditions, imposed by the owners or licensors of that software, under which software is provided to you.

Those terms and other third party software notices, if any, may be found in the software notice PDF file stored at <http://www.olympus.co.jp/en/support/imgs/digicamera/download/notice/notice.cfm>

date of issue 2015.02.

# OLYMPUS

<http://www.olympus.com/>

## OLYMPUS IMAGING AMERICA INC.

3500 Corporate Parkway, P.O. Box 610, Center Valley, PA 18034-0610, U.S.A. Tel. 484-896-5000

### **Technical Support (U.S.A. / Canada)**

24/7 online automated help:

<http://www.olympusamerica.com/support>

Phone customer support:

Tel. 1-800-260-1625 (Toll-free)

Our phone customer support is available from  
9 am to 9 pm (Monday to Friday) ET

<http://olympusamerica.com/contactus>

Olympus software updates can be obtained at:

<http://www.olympusamerica.com/digital>