


# MX mini Wall Mount

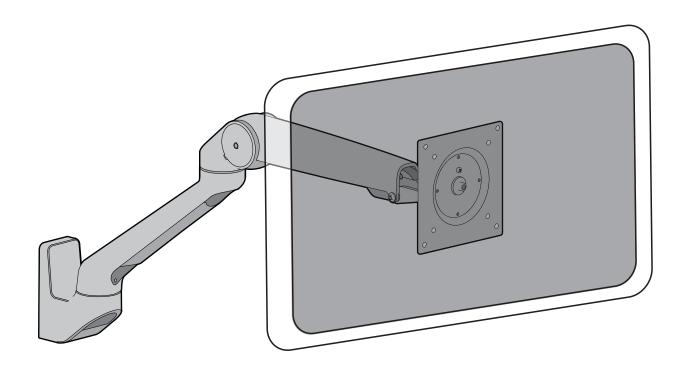

### **Tools Needed**













For the latest User Installation Guide please visit: www.ergotron.com



User's Guide - English Guía del usuario - Español Manuel de l'utilisateur - Français Gebruikersgids - Deutsch Benutzerhandbuch - Nederlands Guida per l'utente - Italiano Användarhandbok - svenska ユーザーガイド:日本語 用户指南: 汉语



USA 1-800-888-8458 Europe +31 (0)33-45 45 600 ⊾ China 400-120-3051

# Hazard Symbols Review

These symbols alert users of a safety condition that demands attention. All users should be able to recognize and understand the significance of the following Safety Hazards if encountered on the product or within the documentation. Children who are not able to recognize and respond appropriately to Safety Alerts should not use this product without adult supervision!

Symbol	Signal Word	Level of Hazard
	NOTE	A NOTE indicates important information that helps you make better use of this product.
	CAUTION	A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.
<u> </u>	WARNING	A WARNING indicates either potential for property damage, personal injury, or death.
(A)	ELECTRICAL	An Electrical indicates an impending electrical hazard which, if not avoided, may result in personal injury, fire and/or death.

# Safety


Warning: Because mounting surface materials can vary widely, it is imperative that you make sure mounting surface is strong enough to handle mounted product and equipment.



#### **Caution:**

To avoid the potential to pinch cables it is important to follow the cable routing instructions in this manual. Failure to follow these instructions may result in equipment damage or personal injury.


### Components

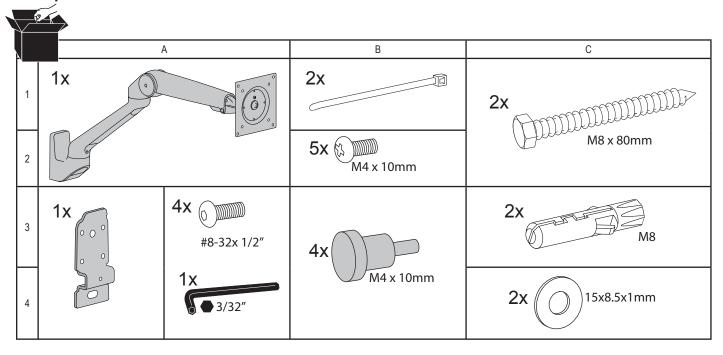


#### **Mounting Height for Ergonomic Workstation**


This mounting height is a recommendation for an ergonomic workstation that accommodates user heights of 5'0" - 6'0" (152 - 183cm) when set up for standing and user heights of 5'0" - 6'3" (152 - 190.5cm) when set up for sitting.

 If user heights are different than this, you should change mounting height to accommodate user heights. (Change mounting height one inch for every one inch difference in user heights).




Mounting height assumes there is a 6" (152 mm) distance between the center of your monitor mounting holes and the top of the screen. If your distance is smaller, you should increase mounting height accordingly, if your distance is larger, you should decrease your mounting height accordingly.

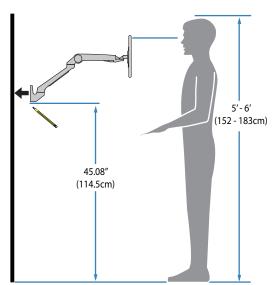

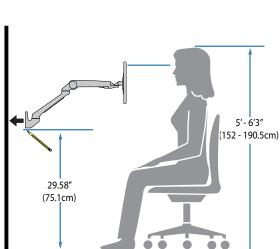


### **Determine mounting location:**


Front view with arm pushed back against the wall.

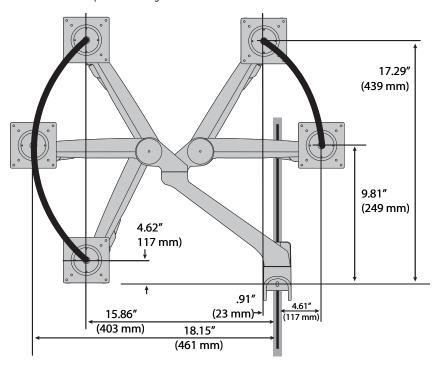


 
Top view showing range of motion when pulled out from the wall.




# Features & Specifications

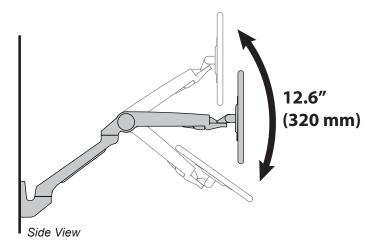

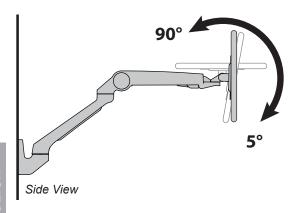

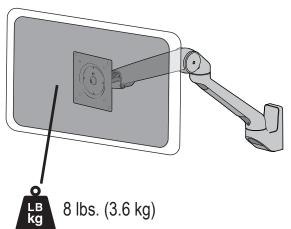


CAUTION: DO NOT EXCEED MAXIMUM LISTED WEIGHT CAPACITY. SERIOUS INJURY OR PROPERTY DAMAGE MAY OCCUR!

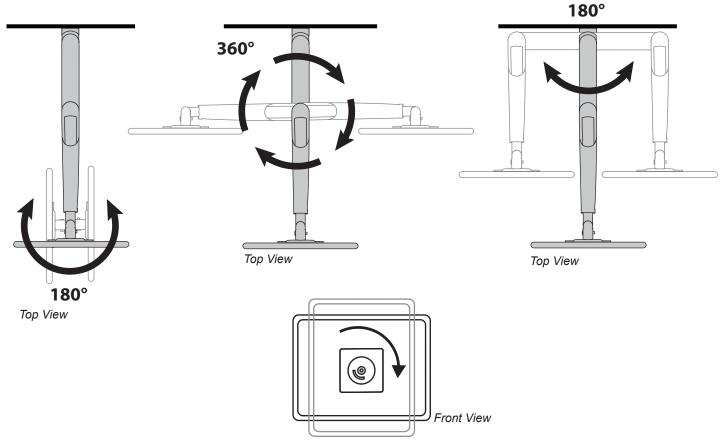



Portrait/Landscape Rotation.


### Remove Stop Screw if you would like Portrait/Landscape Rotation.

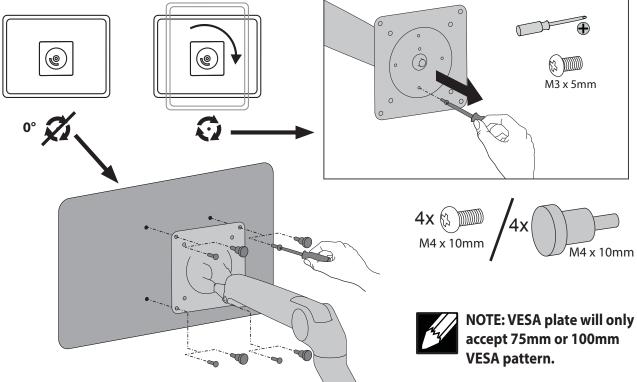


## Choose Mounting Method

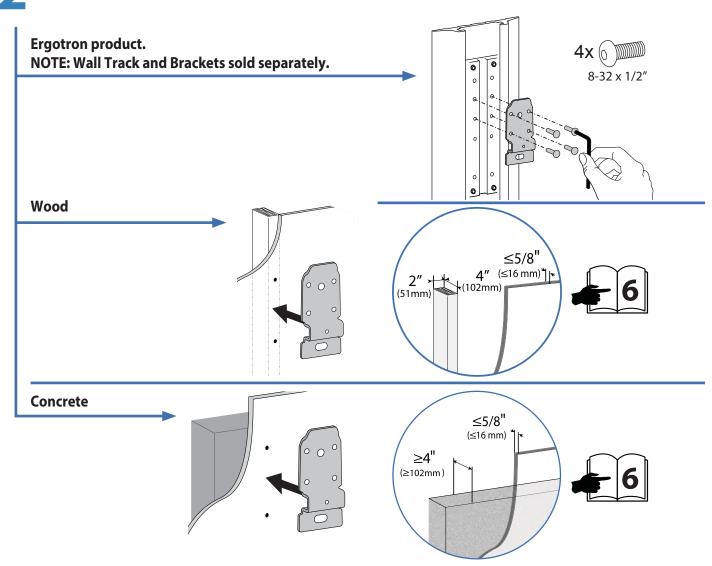

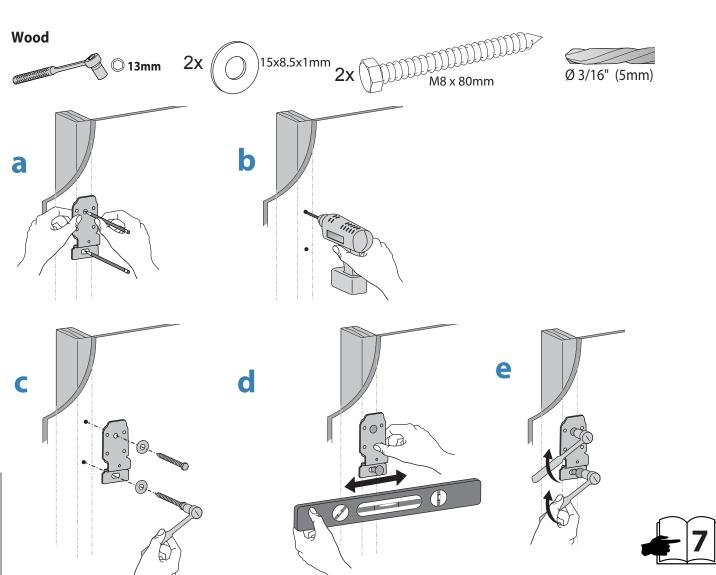

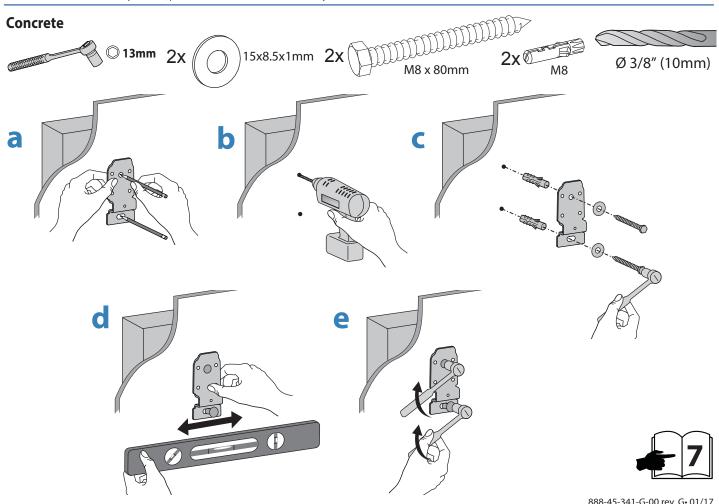


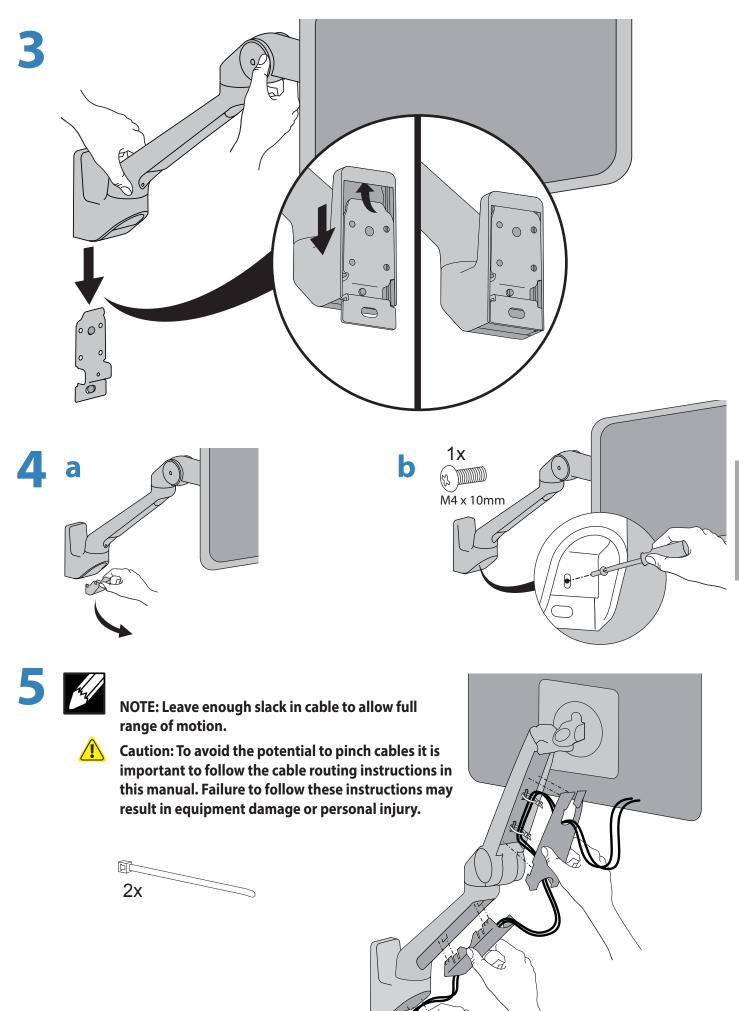




# Adjustment Step

You may need to adjust this arm over time as the friction pivot could change tension.

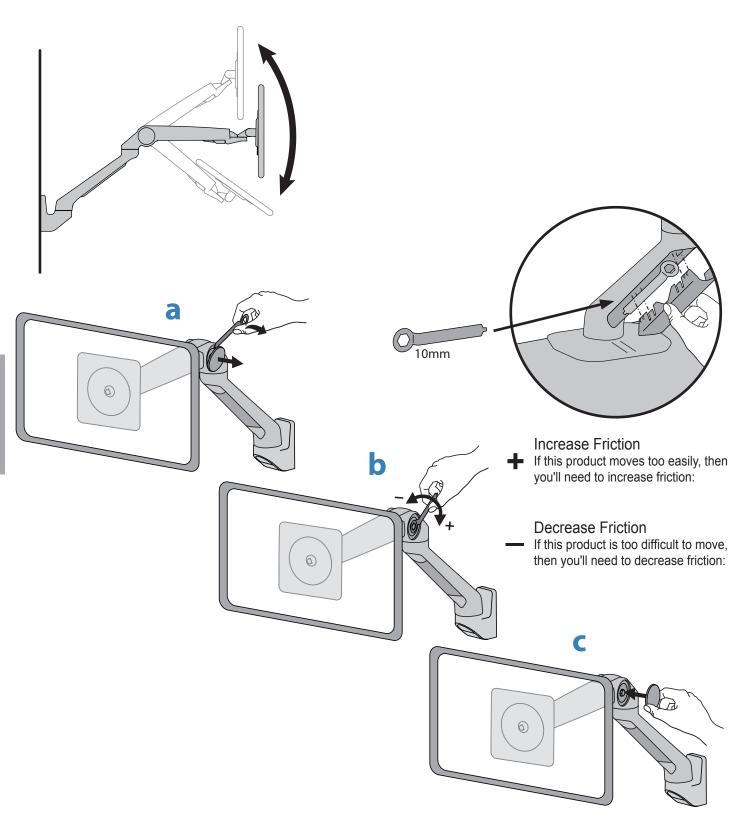

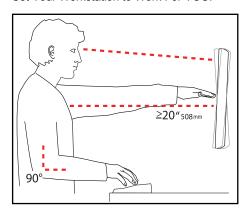

Learn more about ergonomic computer use at: www.computingcomfort.org

Height Position top of screen slightly below eye level.

Position keyboard at about elbow height with wrists flat.

Distance Position screen an arm's length from face—at least 20" (508mm).

Position keyboard close enough to create a 90° angle in elbow.

Angle Tilt screen to eliminate glare.

Tilt the keyboard back 10° so that your wrists remain flat.

To Reduce Fatigue

Breathe - Breathe deeply through your nose.

Blink - Blink often to avoid dry eyes. Break • 2 to 3 minutes every 20 minutes

• 15 to 20 minutes every 2 hours.


For Warranty visit: www.ergotron.com/warranty

For Service visit: www.ergotron.com

For local customer care phone numbers visit: <a href="http://contact.ergotron.com">http://contact.ergotron.com</a>



NOTE: When contacting customer service, reference the serial number.

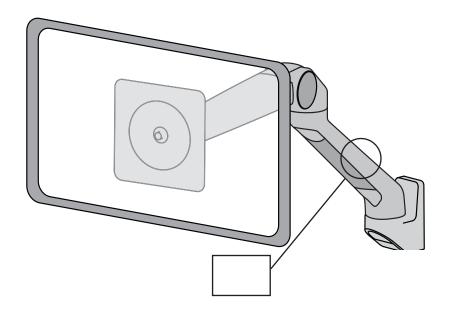

#### Americas Sales and Corporate Headquarters

1181 Trapp Rd. St. Paul, MN USA

(800) 888-8458 +1-651-681-7600 www.ergotron.com sales@ergotron.com

#### **EMEA Sales**

Amersfoort, The Netherlands +31 33 45 45 600 www.ergotron.com info.eu@ergotron.com

#### **APAC Sales**

#### Worldwide OEM Sales

Tokyo, Japan www.ergotron.com apaccustomerservice@ergotron.com www.ergotron.com info.oem@ergotron.com

### **ERGOTRON®**

While Ergotron, Inc. makes every effort to provide accurate and complete information on the installation and use of its products, it will not be held liable for any editorial errors or omissions (including those made in the process of translation from English to another language), or for incidental, special or consequential damages of any nature resulting from furnishing this instruction and performance of equipment in connection with this instruction. Ergotron, Inc. reserves the right to make changes in the product design and/or product documentation without notification to its users. For the most current product information, or to know if this document is available in languages other than those herein, please contact Ergotron. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise without the prior written consent of Ergotron, Inc.,1181 Trapp Road, Eagan, Minnesota, 55121, USA Patents Pending and Patented U.S.& Foreign. Ergotron is a registered trademark of Ergotron, Inc.

© 2015 Ergotron, Inc. All rights reserved.