


型号:FX5321

便携高清无损音乐播放器 注:X5三代在该手册简称X5

机器接口介绍

简体中文

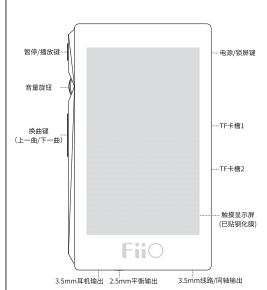

便携高清无损音乐播放器

使用前准备

一、机器简单操作

选择界面,选择相应语言,点击右上角箭头输从语言进入主界面。开机状态下 长按电源键将弹出关机对话框,可选择重启或关机,若是误操作可点击返回键

数据传输:在下拉菜单中,将USB模式设置为存储,用附件中的Micro USB线连接XS和电脑,X5桌面下拉通知栏弹出"已连接USB"提示框,点击提示框 进入USB存储设备界面,点击界面下方"打开USB存储设备",显示"USB存储设备正在使用中",此时就可以将文件拷贝到TF卡或本机存储中。 播放曲目:打开FiiO Music然后再进入本地音乐可选择内置存储或TF卡上的曲

目放曲即可享受高品质音乐,也可以在设置中开启WiFi下载三方APP在线听

连接电脑作为USB DAC:

. 用数据线连接X5和电脑(需先安装驱动),桌面在下拉框中,点击存储将 会弹出对话框,点击确定即可进入USB DAC模式 b、连接成功,X5显示DAC界面

电脑端洗择播放输出设备为"FiiO X5",电脑播放器播放曲目即可享受高 品质音乐。在DAC界面,点击右上角设置按钮就可进入设置选项,若需退出 DAC模式可在设置项中选择退出DAC模式即可。

X5支持普通充电和快充充电,推荐使用(DC5/9/12V 2A)快充充电器进行充 由 2小时内可充满

二、TFF 1、推荐品牌:Sandisk、Kingston-Class10及以上 2、最大支持TF卡容量大小为256GB 3、推荐TF卡文件格式为FAT32,或者将TF卡插入X5,由X5对其格式化 4 插λ/取出Micro Sd卡

l、插入/取出Micro Sd卡 a、使用卡托顶针插入卡托下方小孔轻轻戳下即可弹出TF卡槽(如图所示) b、取出卡托将TF卡放入卡托中后再将卡托放入卡槽轻轻推入即可

重复步骤a即可取出TF卡

注意:插入卡托时应注意卡托针孔在下,避免插反损坏TF卡槽



便携高清无损音乐播放器

四、无线连接功能

X5支持蓝牙、WIFI功能,方便用户通过无线连接拓展X5功能。

X5连接到新的蓝牙设备(如蓝牙耳机、蓝牙音箱)时,需要先和该蓝牙设备进 行配对 步骤如下

a、进入X5设置-蓝牙界面

b、打开蓝牙开关; X5将自动搜索并列出附近可用的的蓝牙设备。

人。人对自治疗系术为证的少月的的证法 及留, 人,点击连接到相应设备,连接成功的设备将显示在"已配对的设备"栏; 注意:X5开启蓝牙功能时,将优先连接到最近一次连接的可用设备。

X5支持连接到WiFi热点,在线获取音乐资源;也可支持推送歌曲到WiFi音箱 播放。X5连接到新的WiFi设备的步骤如下

a 讲 \ X5设置-WiFi 界面:

、近人人以及音·Winfi面;)、打开WiFi开关,X5将自动搜索并列出附近可用的WiFi连接; 、点击并连接到相应的WiFi设备(可能需要输入用户名和密码);

注意:X5开启WIFI功能时,将优先连接到最近一次连接的可用设备

五、纯音/安卓模式切换

在安卓權式下,占击卓面下拉萃单中的權式图标为"安卓權式",將強出 对话框,点击确定即可切换到纯音模式,将X5作为一台纯净播放器,欣赏音乐

版的问题》。 2、在纯音模式下,点击桌面下拉菜单中的模式图标为"纯音模式",将弹出 更丰富的音乐体验。



6 纯音模式

六. 固件升级

面件升级可能会因为错误操作而导致机器不能正常工作!请在升级前仔细阅读以下升级操作说明。

升级固件方法:

OTA在线升级

打开X5的WiFi功能,并连接到可用网络。

b. X5会自动检测版本,如果检测到更新版本,将弹出提示框。

c、点击"是",XS将自动下载并交装更新包(注意:请连接高速网络下载以 节省时间;下载过程中可随时暂停或取消下载)

d、安装完成后,请按照提示删除更新包,以免重复升级。

便携高清无损音乐播放器

▲ 系统升级 ▲ 系统升级 杏 是 market 927400

2、TF卡升级

络FiiO提供的升级文件X5undate zin接回到FAT32核式的TE卡根日录(武 者X5本机存储积目录),将TF-档、X5中并开机,在安卓模式下点击桌面的"技术支持"一面件升级一本地升级一external_sd(X5本机选择 internal sd) 点击升级文件就会弹出如下提示框。



b、点击确定之后请不要进行任何操作,耐心等待,X5会自动重启并进入固件



c、升级进度条完成后X5会再次自动重启机器,进入锁屏界面,可正常使用。 注意:TF卡升级暂不支持exFAT格式

3、 手动在线升级

打开YS的WiFiTh能 并许控列可用网络

b、在安卓模式下点击桌面的"技术支持"→固件升级→在线升级,点击升级 文件就会強出如下提示框。



便携高清无损音乐播放器

c. 手动点击"检查更新",X5会自动检测版本,如果检测到更新版本,将弹

出提示框。 d、点击"是", X5将自动下载并安装更新包(注意:请连接高速网络下载以

节省时间;下载过程中可随时暂停或取消下载) e、安装完成后,请按照提示删除更新包,以免重复升级。

▲ 系统升级	系统升级		▲ 系统升级
可以升级新版本!确定要升级吗?,大 小:213MB	剰余时间:1min 42%	1MB/S	恭喜升级成功!是否删除升级包?如果 不删除,系统可能再次提示升级,可
			能会给您带来不便!
否 是	取消下载	暂停	8 B

4. 固件升级时请注意

升级前建议X5有充足的电量以免升级失败(最好是满电状态下进行升

x,, b、使用TF卡升级时,需要一张FAT32或NTFS格式的TF卡,如果升级不成 功,请尝试更换32G以下的空白TF卡,用X5格式化后再将固件复制到里面重

77 云以77 33。 5、若使用本机存储升级,则需保证本机存储容量充足(最好是在可用容量超

过1G时),再将升级文件拷贝到本机存储中进行升级。 d、升级过程中请不要操作机器。

★遇到解码不正常的曲目机器会自动跳过,以免造成"假死"现象 ★充电适配器电压过高可能损坏机器,请选择合适的充电器。X5支持快充充

,推荐使用(DC5/9/12V 2A)快充充电器进行充电。 ★系统发生故障时按住电源键10秒强制重启

★USB解码时建议使用X5原配USB线、推荐插入台式机背板USB插孔。

★第一次使用X5 APP的会局的总量不引进影曲库 ★因安卓系统固有的开放性,为保证系统稳定,我们推荐您在安卓模式下,点

击桌面的"飞傲市场"选择经过严格兼容性测试的第三方应用。


若要了解有关产品信息请访问网址www.fiio.net。 有关产品详细说明,请在 fiio.cn/products 下载相关PDF文档。

5190254

Portable high resolution music player English

Note: X5 third generation is hereinafter referred to as X5

Buttons and Ports labeled/Operation explained

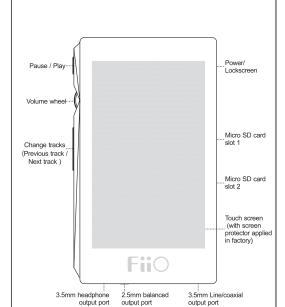

Portable high resolution music player

A. Before First Use

1.Simple Operation of the X5 1.Simple Operation of the X5 Power on: Hold the Power button to turn on the X5 with startup animation onscreen. On first startup, language selection screen shows; Click the preferred language onscreen and then the confirm button on upper right to enter main UI. Hold the Power button when the X5 is on, shutdown dialogue pops up, Reboot and Power off are available for selecting. Press the Back

button to exit the dialogue if it's misoperation.

2.Data transfer

a. Pull down the menu from the upper right of the X5's screen, set "USB

a. Pul down the intent from the upper right of the X5's screen, set USB mode't to "Storage";
b. Connect the X5 to the computer using the supplied Micro USB cable, a notification of "USB connected" will pop up at the Notification Center.
c. Click on the notification to enter the "USB Mass Storage" menu, and the click on "Turn on USB storage" at the bottom. After the notice changes to "USB storage in use", you can start copying files from the computer to the Y5.

X5.

3.Music playback: Open FiiO Music app and select songs on internal storage or Micro SD card or you can connect to WiFi and download other music players to listen to online music.

4.Used as an USB DAC connecting with computer:

a.Connect the X5 to the computer with the supplied Micro USB cable (need to install Driver beforehand);

b.If connected successfully, DAC screen will come up;

c.Choose "FiiO X5" as the playback output device on computer. On the X5 DAC screen, you can click the Settings at upper right to enter settings then click "Exit DAC mode" to exit.

b. Unlarging Both normal charge and quick charge are supported. In case of quick charge, it's recommended to use a charger with DC 5/9/12V 2A which takes about 2 hours to complete a full charge.

C. Storage (micro SD card)


1.Recommend using genuine Sandisk or Kingston micro SD cards of Class
10 speed or above
2.Maximum supported capacity: 256GB
3.Recommend inserting into the X5 and formatting the micro SD card using

the XS
Alnserting / Removing Micro SD card:
a.Insert the small paperclip into the small pin hole opening in the micro SD card tray. Apply a small amount of pressure until the card tray pops out of the X5. Don't apply pressure at an angle, only in the direction of the pin hole.
b. Grab hold of the card tray and pull straight out. Put in your micro SD card and revisest the tray.

and re-insert the tray.

Note: Make sure you have inserted card tray in the correct orientation with
the small pin hole at the lower side; otherwise, it might damage the card slot.

Portable high resolution music player

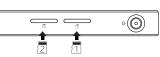

D. Wireless Connection

The X5 supports connecting via Bluetooth and WiFi, allowing users to expand the X5's functions via connected wireless devices.

1. Buelcourt
To connect with a wireless device for the first time, (e.g. Bluetooth earphones
/ speakers for playback) the X5 needs to be paired with the device as follows:
a. Turn on the pairing / ID broadcast function of the Bluetooth device to be

Pull down the settings menu from the upper right of the X5's screen, then c. Click the slider on the upper right to turn on Bluetooth;
d. The X5 will automatically search and display nearby Bluetooth devices that are broadcastion their D. as above the blazer.

roadcasting their ID, as shown below: e.Click on the name of the device to be paired to pair with it. Successfully paired devices will be shown under the list of "Paired Devices", as shown

Note: When the X5's Bluetooth function is turned on, it attempts to pair with the device it paired with most recently first

The X5 can connect to WiFi hotspots to e.g. connect to the World Wide Web and make use of online music apps; it can also send audio to WiFi audio devices. To connect to a WiFi hotspot for the first time:

a. Pull down the settings menu from the upper right of the screen and hold the Wi-Fi button to enter the WiFi settings menu;

b. Click the slider on the upper right to turn on the X5's WiFi radio. The X5 will autimatically search and display audiable WiFi betsnote as shown:

will automatically search and display available WiFi hotspots as shown; c. Click on the name of the WiFi hotspot to connect to and enter the hotspot's password where necessary. The screen will update to show the connection

status as shown:

Note: When its WiFi is turned on, the X5 will attempt to connect to the WiFi hotspot it connected to most recently first.

E. Pure Music / Android Mode switch

1. While in Android Mode, pull down the status menu from the right and click on the "Pure Music Mode" icon; a confirmation dialogue will pop up, click "OK" to switch to "Pure Music Mode", allowing uninterrupted music enjoyment with the built in Music app.

2. While in Pure Music Mode, pull down the status menu from the right and

click on the "Android Mode" icon; a confirmation dialogue will pop up, click "OK" to switch to "Android Mode", allowing a rich music experience with 3rd

Portable high resolution music player





F. Firmware upgrade

r. rimiware upgrade Firmware upgrades may enhance functionality of the player but improper operation while upgrading may render the player unusablel Please read the following instructions carefully before updating the firmware: "Ensure that the X5 is adequately (preferably fully) charged before

attempting to upgrade.

"Switch the XS from Pure Music mode to Android Mode and restart the XS from Pure Music mode to Android Mode and restart the X5 for a laready in Android Mode) so that Android functions may be accessed: pull down settings menu from the right and click Mode button to change from Pure Music to Android and reboot.

dialogue appears:

Firmware update methods:

1. Over-the-air automatic firmware updates
a. Turn on the X5's WiFi and connect to a hotspot connected to the internet.
b.If any over-the-air firmware update is available, the X5 will detect it
automatically and the following dialogue will appear:
c.Click "Yes" and the update will be downloaded and installed automatically
(note: please connect to a high speed network connection to save download
time. The download may be paused or cancelled at any time; it can resume
from the last position.) ther installation is complete, please click "Yes" to delete the update ckage as indicated.



2. Manual update via update zip file a.Copy the update file "X5 update.zip" provided by FiiO into the root directory of a micro SD card in the X5 (or root directory of the X5's internal storage). b.With the SD card in the X5, turn on the X5 in Android mode and select "Technical support"->Firmware Update ->external sd (or internal, sd if you put the file ininternal storage) and select X5 update.zip. The following

> select the package to upgrade? Cancel OK

Portable high resolution music player

c.After clicking "OK", wait patiently and do not operate the X5. The X5 will



Firmware update screen
6. After the firmware upgrade is complete, the X5 will restart again in normal android mode for use.

Note: SD card in exFAT format is not supported for firmware update at

Over-the-air firmware undates via manual operation Turn on the X5's WiFi and connect to a hotspot connected to the internet.
 Turn on the X5 in Android mode and select "Technical support"Firmware Update -> OTA and select the update file. The following dialogue



c. Click "Check for updates": If any over-the-air firmware update is available, the X5 will detect it automatically and the following dialogue will appear: d.Click "Yes" and the update will be downloaded and installed automatically (note: please connect to a high speed network connection to save download time. The download may be paused or cancelled at any time; it can resume from the last position.) e.After installation is complete, please click "Yes" to delete the update package as indicated.







Portable high resolution music player

4. Notes and precautions:
a. If attempting upgrade using SD card, the SD card should be formatted in FAT32; if upgrade fails, try using a card of 32GB capacity or under, format it using the X5 (back up data on the card first), copy X5 update.zip inside again and attempt upgrade again.
b. If attempting upgrade using internal memory, there needs to be adequate free space (preferably over 1GB); copy X5 update.zip to the internal storage and select "internal sd" for the upgrade.
c. Do not push the X5's buttons while the upgrade is in progress.

G.Notes and Precautions

**The X5 will automatically skip songs that it cannot play; please refer to product package / full manual regarding supported formats.

* It takes about 2 hours to reach a full charge by quick charge (recommended specs for the charger is DC 5/9/12V 2A. Out-of-spec USB charger may dameane the VF.

charger may damage the X5. ★ In the unlikely event that the X5 hangs up, you may hold the power button ★ In the unimed event that the X hangs up, you may hold the power button for 10 seconds to force a reboot.

★ Supplied USB cable (or quality aftermarket cable) is recommended for USB DAC use; when connecting to a desktop computer, using a USB port at the back is recommended.

★ On first use, the X5 music app will prompt for scanning connected storage

tor music.

* To preserve system stability under the open Android architecture, FiiO recommends that you click on the "FiiO Marketplace" icon to select and install 3rd party apps for which we have rigorously tested compatibility with