



MultiReader 3764

PER3764BC

Prestigio MultiReader

User Manual

Version 1.0

www.prestigio.com

About this user manual

This user manual is specially designed to detail the device's functions and features.

- Please read this manual before using the device to ensure safe and proper use.
- Descriptions are based on the device's default settings.
- Prestigio continuously strives to improve its products. Due to software upgrading, some contents in this user manual may be different from your product. Prestigio reserves the rights to revise this user manual or withdraw it at any time without prior notice. Please take your product as standard.

Conventions used in this manual

In this user manual, we use the following symbols to indicate useful and important information:



Caution: provides safety precaution and important information.



Note: gives additional information.



Tips: usage tips.



The order of options or menus you must select to perform a step.

Contents

1. Unboxing	1
Open your package	1
Your eReader at a glance	1
2. Getting started.....	3
Insert a memory card	3
Power on your eReader	3
Home screen	4
3. Basics	5
Charge the battery	5
Connect to your PC	5
4. eReader	6
Download an eBook	6
Read an eBook	6
Add a bookmark	6
Open the bookmark	6
Go to page.....	7
Auto paging.....	7
Add to favorites.....	7
5. Photos	8
Start a photo slideshow	8
View your photos	8
6. Calendar	8
View the calendar	8
7. File management	9
View my files	9
Move a file	9
Delete a folder or a file	9
8. Settings.....	10
Set up your eReader.....	10
Read eBooks in dim light.....	10
Set up options	10
9. Specifications	11
10. Troubleshooting.....	12
11. Safety precautions	13


1. Unboxing

1

Open your package

- Prestigio MultiReader
- USB cable
- Quick start guide
- Warranty card

Your eReader at a glance

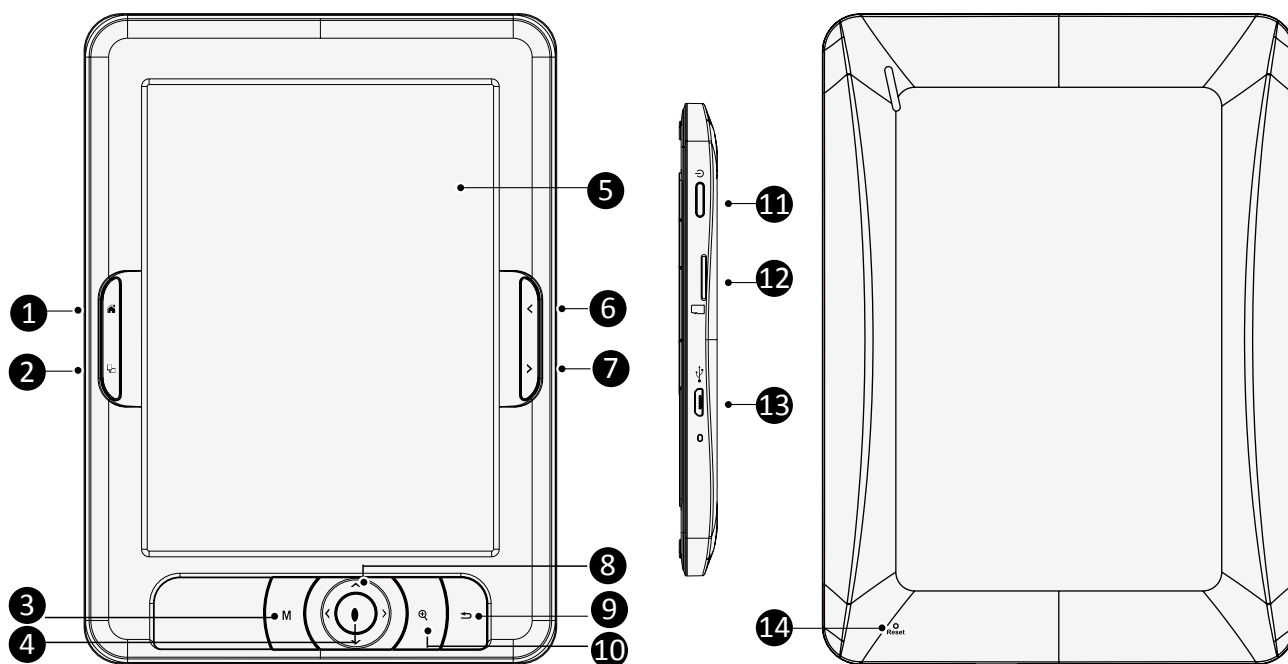

1

Home button

- Press to return to Home screen.

2

Screen rotation button

- Press to switch between landscape/ portrait views.

3

Menu button

- Press to access the option menu during reading.
- Press to toggle between thumbnails and list view.

4

OK button

- Press to confirm a selection.

5

E-ink screen

6

Back button

- Press to return to the previous page.
- Press to select the previous option on Home screen.

7

Forward button

- Press to go to the next page.
- Press to select the next option on Home screen.

8

Navigator

- Press to move the cursor left, right, up, or down.
- Press to go to the previous or the next page.

9

Exit button

- Press to cancel a selection or return to the previous menu.

10	Zoom button <ul style="list-style-type: none"> • Press to access the font settings menu during reading. • Press to zoom in/zoom out while viewing photos.
11	Power button <ul style="list-style-type: none"> • Press and hold to power on or off your eReader. • Press to lock or unlock the screen.
12	Memory card slot
13	Micro USB port
14	Reset hole

2. Getting started

2

Congratulations on your purchase and welcome to Prestigio.
To get the most of your product and enjoy all Prestigio has to offer, please access:

<http://www.prestigio.com/catalogue/MultiReaders>

More details about your product, please access:

<http://www.prestigio.com/support>




Please read "Safety precautions" on last page before use.

Insert a memory card

You can expand the memory of your eReader and store more files by adding a micro-SD card. Depending on the memory card manufacturer and type, some memory cards may not be compatible with your device.

1. Insert a memory card with the gold-coloured contacts facing downwards.
2. Push the memory card into the slot until it locks in place.

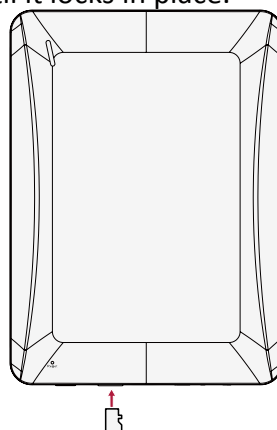

Some memory cards may not be fully compatible with the device. Using an incompatible card may damage the device or the memory card, or corrupt the data stored in it.




- Frequent writing and erasing of data shortens the lifespan of memory cards.
- When inserting a memory card into the device, the memory card's file directory appears in the **SD card**.




Remove the memory card: push the memory card until it disengages from the device, and then pull it out.


Power on your eReader


Press and hold the Power button  for a few seconds to power on your eReader.



To turn off your eReader, press and hold the Power button .

Home screen

Your Home screen is the starting point to access all of the eReader’s features. Press  to access home screen. Use the Navigator to select the desired options, and then press OK button to confirm the selection. Your eReader’s home screen consists of the following areas:

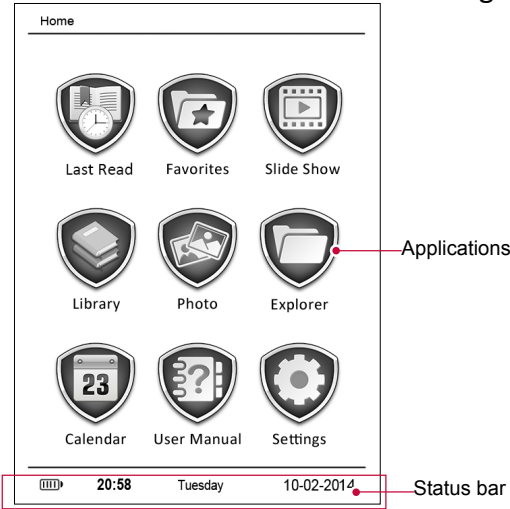

3. Basics

3

Charge the battery

A new battery is partially charged. The battery icon in the lower-left corner shows the battery level of charging status.

1. Plug the small end of the charger into the micro USB port of the device, and plug the large end into the PC.
2. After fully charging, disconnect the device from the PC. First unplug the USB cable from the device, and then unplug it from the PC.



- You can use the eReader while it is charging.
- Keeping the charger plugged to the eReader when the battery is fully charged will not damage the battery. The only way to turn off the charger is to unplug it, so it is advisable to use an easily accessible power socket.

Connect to your PC

You may need to connect your eReader to computer in order to complete activation. Your eReader's micro USB port lets you exchange media and other files with a connected computer.

- Connect your eReader to the PC using the supplied USB cable.

Load files from your PC

1. Connect your eReader to the PC by using the USB cable.
2. Transfer the files from your PC to the eReader.

4. eReader

4

Learn to use eReader functions, such as reading eBooks, using options available during reading or customizing and using eReader-related features. Your eReader supports most of popular eBook formats.

Download an eBook

You can download eBooks from an eBook store on your PC. Some eBooks are free to download, and some eBooks need a paid.

1. Download eBooks from an eBook store on your PC.
2. Connect your eReader to the PC by using the USB cable.
3. Transfer the files from your PC to the eReader.

Read an eBook

Method one

- On home screen, use the navigator to select **Last Read**. You can start reading the last read books.

Method two

- On home screen, use the navigator to select **Favorites**. You can start reading your favorite books.

Method three

1. Use the navigator to select **Library** on home screen.
2. Press OK button to confirm the selection, and then choose a source.
3. Find your desired eBook by using the navigator.
4. Press OK button to start reading the eBook.



While opening the library, you can use **M** button to toggle between thumbnails and list view.

Use the following to control your reading:

- Press < or > to page up or page down.
- Press ⊕ to change the font size and font type.
- Press **M** to access the available options.

Read eBooks in dim light

When reading eBook in dim light, long press < or >, press ⊕ or enter **Settings** to adjust brightness.

Add a bookmark

1. While reading an eBook, press **M**.
2. Use the navigator to select **Add bookmark**, and then press OK button.
3. The certain page is added to bookmark.



You can set five bookmarks for one book.

Open the bookmark

You can continue reading your eBook from the certain page which you have added to bookmark.

1. While reading an eBook, press **M**.
2. Use the navigator to select **Get bookmark**.
3. Select your desired bookmark, and then press OK button.

Go to page

You can go to a certain content in the eBook.

1. While reading an eBook, press **M**.
2. Use the navigator to select **Go to Page**.
3. Use the navigator to move the cursor left right and increase or decrease the digits.
4. Press OK button to go to the desired page.

Auto paging

You can set a time span for your eReader to auto paging up while reading.

1. While reading an eBook, press **M**.
2. Use the navigator to select **Auto Mode**.
3. Select your desired time span, and then press OK button.

Add to favorites

You can add the desired eBook to your favorites list. Then you can read the eBook just select the **Favorites** on home screen.

1. While reading an eBook, press **M**.
2. Use the navigator to select **Add to Favorites**.
3. Press OK button to confirm it.

5. Photos

5

You can view the photos stored in the eReader internal memory or Micro SD memory card.


Start a photo slideshow

1. Use the navigator to select **Slide Show** on home screen.
2. Press OK button to start the slideshow.

View your photos

1. Use the navigator to select **Photo** on home screen.
2. Press OK button to confirm the selection, and then choose a source.
3. Find your desired photo by using the navigator.
4. Press OK button to view the photo.

Zoom in and out

Press  to zoom in or zoom out an image.

Set flip time

You can set a flip time for you to view the photos.

1. While viewing a photo, press **M**.
2. Use the navigator to select **Flip Time**.
3. Select your desired flip time, and then press OK button.

6

6. Calendar

You can check the calendar on the eReader.

View the calendar

1. Use the navigator to select **Calendar** on home screen.
2. Press OK button to confirm the selection.
 - Use navigator to choose the date.
 - Long press < or > in navigator to change the month.
 - Long press ^ or v in navigator to change the year.

7. File management

7

Use this application to access all kinds of files stored on your eReader and memory card. Learn to copy, delete or sort your files.

View my files

1. Use the navigator to select **Explorer** on home screen.
2. Press OK button to confirm the selection, and then choose a source.
3. You can view all the files stored on your eReader and memory card.
 - Use the navigator to move the cursor up or down.
 - Press < or > to page up or page down.

Move a file

You can move a file from a folder to another folder.

1. Use the navigator to select **Explorer** on home screen, and then press OK button.
2. Find the desired file, and then press **M**.
3. Use the navigator to select **Copy**.
4. Select the folder which you want to move the file to.
5. Press **M**, and then select **Paste**.
6. Press OK button to confirm it.

Delete a folder or a file

1. Use the navigator to select **Explorer** on home screen, and then press OK button.
2. Find the desired file or folder, and then press **M**.
3. Use the navigator to select **Delete**, and then press OK button.
4. Use the navigator to select **Yes**.
5. Press OK button to delete the selected file or folder.



You can also manage files on PC when the eReader is connected.

8. Settings

8

Use this function to control and customize eReader settings.

- On home screen, select .

Set up your eReader

Follow the steps to finish settings:

1. Use the navigator to select **Settings** on home screen, and then press OK button.
2. Use the navigator to select the desired option.
3. Press OK button if you want to set the desired item.
4. Select the parameter by using the navigator.
5. Press OK button to confirm your selection.

Set up options

The following settings are available:

Options	What it means
Language	Select a language displayed on your eReader.
Set time	Set up the current time and date.
Auto off	Choose a time span to power off your eReader automatically when there is no operation.
Start reading	Choose to reading the last read book or display the home screen when you power on your eReader.
Clear History	Choose to clear all your reading history.
Restore Default	Restore to default settings.
System Information	Check the system information of your eReader.
Set Bright	Adjust brightness.
Auto lock	Lock the screen automatically after a time span.

9. Specifications

9

Item	Specification
Memory	4GB Flash memory, Micro SD slot supports up to 32GB
Display	6" electronic paper, 16 grey scale
Resolution	600*800 pixels
Interfaces	Micro USB 2.0, Micro SD (micro SDHC compatible)
Battery	1400mAh Lithium battery
Dimension	172*125*9.5mm
Weight	191g

10. Troubleshooting

10

The device hang or cannot be switched on.

- The battery capacity may not be enough to power on.
- Charge the device using the USB cable at least for one hour. Press the power button.
- If you have the eReader connected to the computer, please disconnect and press the power button.
- Restart the device by pressing the Reset button.

Battery capacity seems short:

- The battery was not used for a long time. Please charge the device completely.
- The battery is not fully charged. Please charge the device for approximately 5 hours.

Cannot read/open an eBook:

Check if the eBook format is supported by device.

The device cannot be operated during micro USB connection:

The device cannot be operated while it is transferring data to a computer to prevent any damage on reader internal memory or micro SD card.

Micro SD card is not being detected


- After inserted a micro SD card, if there is no response on your device, please take out and insert again.
- Do not remove micro SD card or turn off the device during data writing or reading, it might damage the data and your device.
- Make sure the micro SD card is unlocked before writing or deleting data.
- Backup your files and data before formatting the micro SD card.
- Your eReader only can read micro SD cards up to 32 GB.

11. Safety precautions

11

Please observe all safety precautions before using your eReader. Please follow all procedures outlined in this user manual to correctly operate the device.

- Do not attempt to open the shell or attempt to repair, if the device or any parts are defective, please go to the professional maintenance point for repairing.
- To avoid risk of electrical shock, do not connect or disconnect the device with wet hands.
- Do not place the device near a heat source or directly expose it to flame or heat.
- Never place the device in vicinity of equipments generating strong electromagnetic fields. Exposure to strong magnetic fields may cause malfunctions or data corruption and loss.
- Please use the device under natural temperature, do not work under the temperature which human body cannot adapt to.
- Do not use harsh chemicals, cleaning solvents or cleaning agents to clean the device. Please use a slightly damp soft cloth to clean the device.
- Please use it under sufficient light, please do not make the lens directly face to the sun or other super-light so as to avoid damage to the optical components.
- Do not use it in dusty environment in order to avoid the lens and other components to be dusty and affect the camera effects.

 As Prestigio products are constantly updated and improved, your device's software and hardware may have a slightly different appearance or modified functionalities than presented in this user manual.

Prestigio hereby states that this MultiReader complies to basic requirements and other relevant regulations given by the EU directive 1999/5/EC. Full version of the declaration of conformity is available on:

<http://www.prestigio.com/compliance>.