



CONTENTS

| | |
|-----------------------------|----|
| 1. SAFETY INFORMATION..... | 3 |
| 2. SAFETY INSTRUCTIONS..... | 5 |
| 3. PRODUCT DESCRIPTION..... | 7 |
| 4. ACCESSORIES..... | 8 |
| 5. CONTROL PANEL..... | 9 |
| 6. PROGRAMME TABLE..... | 11 |
| 7. OPTIONS..... | 15 |
| 8. BEFORE FIRST USE..... | 16 |
| 9. DAILY USE..... | 17 |
| 10. HINTS AND TIPS..... | 19 |
| 11. CARE AND CLEANING..... | 20 |
| 12. TROUBLESHOOTING..... | 23 |
| 13. TECHNICAL DATA..... | 25 |
| 14. INSTALLATION..... | 26 |

FOR PERFECT RESULTS

Thank you for choosing this AEG product. We have created it to give you impeccable performance for many years, with innovative technologies that help make life simpler features you might not find on ordinary appliances. Please spend a few minutes reading to get the very best from it.

Visit our website for:



Get usage advice, brochures, trouble shooter, service information:

www.aeg.com/webselfservice



Register your product for better service:

www.registeraeg.com



Buy Accessories, Consumables and Original spare parts for your appliance:

www.aeg.com/shop

CUSTOMER CARE AND SERVICE

Always use original spare parts.

When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number.

The information can be found on the rating plate.



Warning / Caution-Safety information



General information and tips



Environmental information

Subject to change without notice.

1. SAFETY INFORMATION

Before beginning the installation and use of this appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damages that are the result of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.



- Read the supplied instructions.

1.1 Children and vulnerable people safety



WARNING!

Risk of suffocation, injury or permanent disability.

- This appliance can be used by children aged 8 years and above and by persons with reduced capabilities provided that they have been given instruction and/or supervision regarding the safe use of the appliance and understand the potential hazards involved.
- Do not let children play with the appliance.
- Children aged 3 years and under must be kept away from this appliance when it is in operation at all times.
- Keep all packaging away from children and dispose of it appropriately.
- Keep detergents away from children.
- Keep children and pets away from the appliance door when it is open.
- If the appliance has a child safety device, this should be activated.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

1.2 General Safety

- Do not change the specification of this appliance.
- If the tumble dryer is put on top of a washing machine, use the stacking kit. The stacking kit, available from your authorized vendor, can be used

only with the appliance specified in the instructions, supplied with the accessory. Read it carefully before installation (Refer to the Installation leaflet).

- The appliance can be installed as freestanding or below the kitchen counter with correct space (Refer to the Installation leaflet).
- Do not install the appliance behind a lockable door, a sliding door or a door with a hinge on the opposite side, that would prevent the appliance door from being fully opened.
- The ventilation opening in the base (if applicable) must not be covered by a carpet, mat, or any floor covering.
- Connect the mains plug to the mains socket only at the end of the installation process. Make sure that the mains plug is accessible after installation.
- Ensure good air ventilation in the located room to avoid the backflow of unwanted gases into the room from appliances burning gas or other fuels, including open fires.
- Exhaust air must not be discharged into a flue which is used for exhausting fumes from any appliances burning gas or other fuels.
- If the mains power supply cable is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons to avoid an electrical hazard.
- Do not exceed the maximum load of 8 kg (refer to the "Programme chart" chapter).
- Do not use the appliance if items have been soiled with industrial chemicals.
- Wipe away lint or packaging debris that has accumulated around the appliance.
- Do not run the appliance without a filter. Clean the lint filter before or after each use.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot

removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Fabric softeners, or similar products, should only be used as specified by the product manufacturer's instructions.
- Remove all objects from items that could be a source of fire ignition such as lighters or matches.
- Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- Before any maintenance operation, deactivate the appliance and disconnect the mains plug from the socket.

2. SAFETY INSTRUCTIONS

2.1 Installation

- Remove all the packaging and the transit bolts.
- Do not install or use a damaged appliance.
- Follow the installation instruction supplied with the appliance.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Do not install or use the appliance where the temperature can be less than 5°C or higher than 35°C.
- The floor area where the appliance is to be installed must be flat, stable, heat resistant and clean.
- Make sure that there is air circulation between the appliance and the floor.

- Always keep the appliance vertical when being moved.
- The rear surface of the appliance must be put against the wall.
- When the appliance is in its permanent position, check that it is fully level with the aid of a spirit level. If it is not, adjust the feet accordingly.

2.2 Electrical connection



WARNING!

Risk of fire and electrical shock.

- The appliance must be earthed.
- Make sure that the electrical information on the rating plate agrees with the power supply. If not, contact an electrician.

- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Do not touch the mains cable or the mains plug with wet hands.
- This appliance complies with the E.E.C. Directives.

2.3 Use



WARNING!

Risk of injury, electrical shock, fire, burns or damage to the appliance.

- This appliance is for household use only.
- Do not dry damaged (torn, frayed) items that contain padding or fillings.
- Only dry fabrics which are applicable to dry in the tumble dryer. Follow the instructions on the fabric label.
- If you have washed your laundry with a stain remover start an extra rinse cycle before you start the dryer.
- Do not drink or prepare food with the condensed water/distilled water. It can cause health problems to people and pets.
- Do not sit or stand on the open door.
- Do not dry dripping wet clothes in the tumble dryer.

2.4 Internal light



WARNING!

Risk of injury.

- Visible LED radiation, do not look directly into the beam.
- The type of light bulb or halogen lamp used for this appliance is only for household appliances. Do not use it for house lighting.

- To replace the internal light, contact the Authorised Service Centre.

2.5 Care and cleaning



WARNING!

Risk of injury or damage to the appliance.

- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.

2.6 Compressor



WARNING!

Risk of damage to the appliance.

- The compressor and its system in the tumble dryer is filled with the special agent which is free from fluoro-chloro-hydrocarbons. This system must stay tight. The damage of the system can cause a leakage.

2.7 Disposal




WARNING!

Risk of injury or suffocation.

- Disconnect the appliance from the mains electrical and water supplies.
- Cut off the mains electrical cable close to the appliance and dispose of it.
- Remove the door catch to prevent children or pets from becoming trapped in the drum.
- Dispose of the appliance in accordance with local requirements for the disposal of Waste Electrical and Electronic Equipment (WEEE).

3. PRODUCT DESCRIPTION

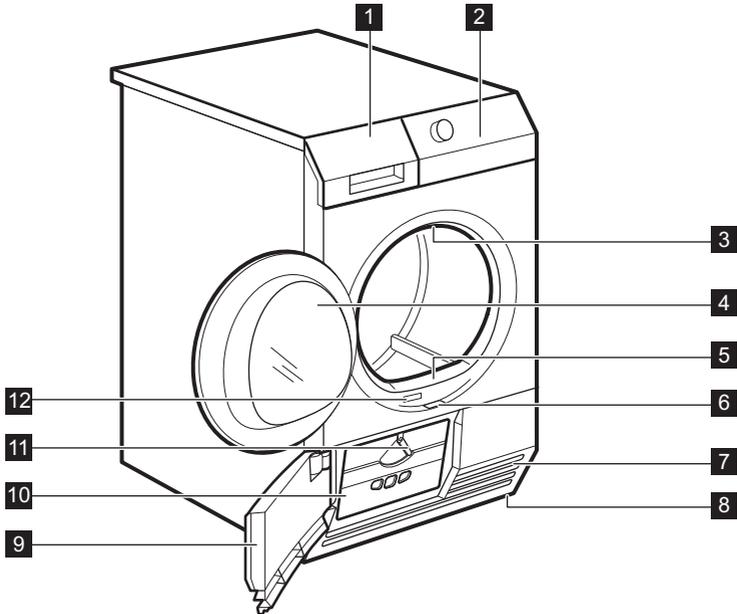


- | | | | |
|----------|--|-----------|---|
| 1 | Water container | 8 | Adjustable feet |
| 2 | Control panel | 9 | Heat exchanger door |
| 3 | Internal light | 10 | Heat exchanger cover |
| 4 | Appliance door | 11 | The knob to lock the heat exchanger cover |
| 5 | Filter | 12 | Rating plate |
| 6 | The button to open the heat exchanger door | | |
| 7 | Airflow slots | | |

i For ease of loading laundry or ease of installation the door is reversible. (see separate leaflet).

4. ACCESSORIES

4.1 Stacking kit

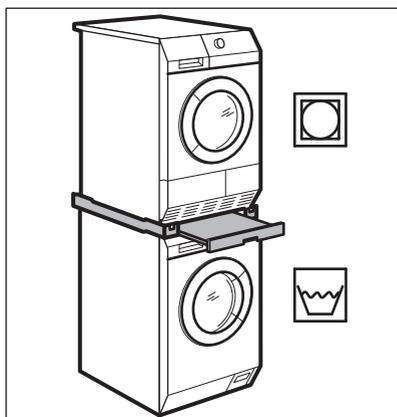


Accessory name: SKP11, STA9

Available from your authorised vendor.

Stacking kit can be used only between washing machines and tumble dryers specified in the leaflet. See the leaflet attached.

Read carefully the instructions supplied with the accessory.

4.2 Draining kit

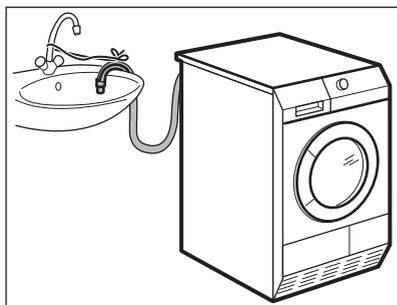

Accessory name: DK11.


Available from your authorised vendor (can be attached to some types of tumble dryer)

For through draining of the condensed water into a basin, siphon, gully, etc. After installation, the water container is drained automatically. The water container must stay in the appliance.

The installed hose must be minimum 50 cm to maximum of 1m from floor level. The hose cannot be in loop. Decrease the length of the hose if necessary.

Read carefully the instructions supplied with the accessory.

4.3 Pedestal with drawer

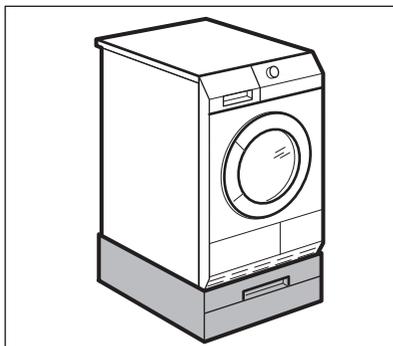

Accessory name: PDSTP10.


Available from your authorised vendor.

For increasing the height of the appliance in order to ease loading and unloading of laundry.

The drawer can be used for laundry storage e.g. : towels, cleaning products etc.

Read carefully the instructions supplied with the accessory.

4.4 Drying rack

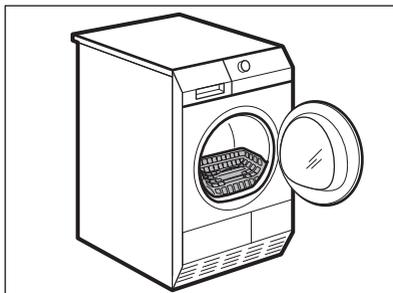

Accessory name: RA5, RA6, RA11, RA12.

Available from your authorised vendor (can be attached to some types of

tumble dryers). Check with the vendor if the accessory is compatible with your appliance.


Use the drying rack when drying:

- Sport shoes

- Wool
- Soft toys
- Lingerie

Read carefully the instructions supplied with the accessory.


5. CONTROL PANEL

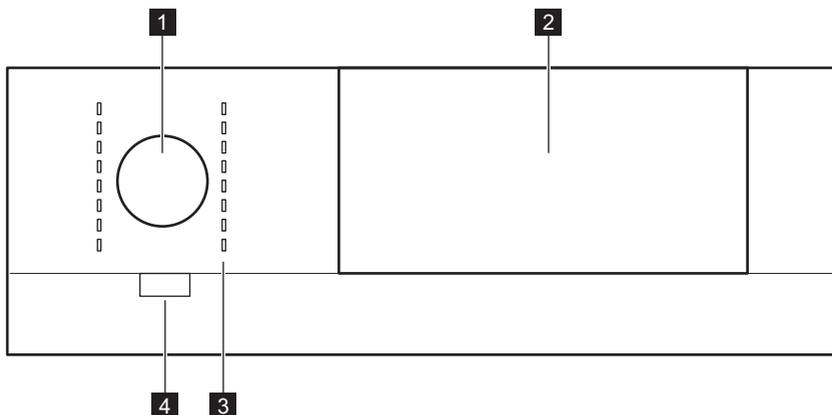

- 1 Programme dial
- 2 Touch panel with the display
- 3 Programme indicators

- 4  On/Off button with the **Auto Off** function

5.1 The touch panel

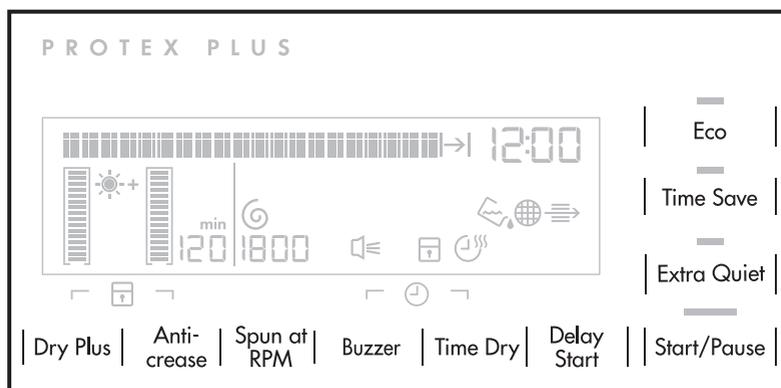


As alternative for the buttons to set the option you must touch the area with the option name. Each area between the vertical marks *senses* the user finger.




For accurate selection touch the centre point of the area between the vertical marks. Do not wear gloves when you touch the panel to set the function. Make sure the panel is always clean and dry.

5.2 Display

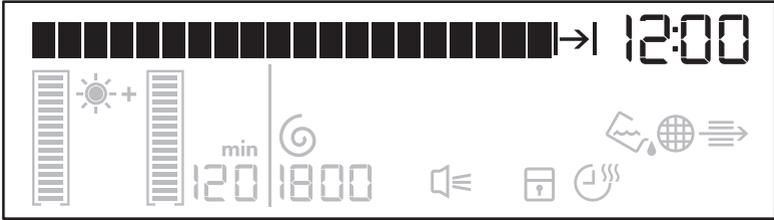


| Symbol on the display | Symbol description |
|-----------------------|--|
| Time of day | text bar |
| 12 : 00 | clock |
| >12.00 | cycle time indication |
| -> 16 : 20 | estimated hour of the programme end |
| -> 16 : 30 | estimated hour of the time programme end time programme interval 10min. — 120min. |
| -> 16 : 50 | estimated hour of the programme end with the delayed start delay start interval 30min. — 20h. |

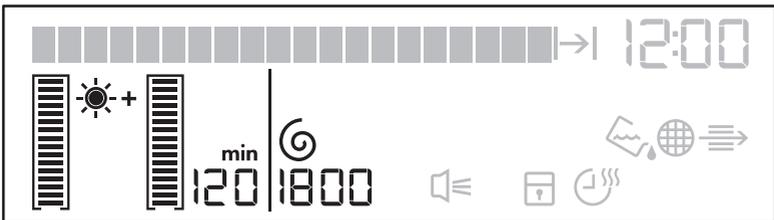

| Symbol on the display | Symbol description |
|-----------------------|---|
| * , ** , *** | extra laundry dryness: default, moderate, maximum |

| Symbol on the display | Symbol description |
|---|--|
|  | anti-crease phase duration: default, interval (30min. - 120min.) |
|  | laundry was spun at: 800 — 1800 rpm default |

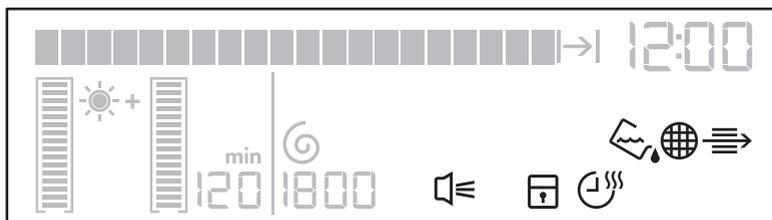

| Symbol on the display | Symbol description |
|---|--|
|  | buzzer on |
|  | child lock on |
|  | time dry option on |
|  | indicator: <i>drain the water container</i> |
|  | indicator: <i>clean filter</i> |
|  | indicator: <i>do the check of the heat exchanger</i> |

6. PROGRAMME TABLE

| Programmes | Load ¹⁾ | Properties / Fabric mark |
|--|--------------------|--|
| Cottons | | |
| Extra Dry | 8 kg | Drying level: extra dry. /  |
| Cupboard Dry + | 8 kg | Drying level: cupboard dry +. /  |
| Cupboard Dry  ²⁾³⁾ | 8 kg | Drying level: cupboard dry. /  |
| Iron Dry ²⁾ | 8 kg | Drying level: suitable for ironing. /  |

| Programmes | Load 1) | Properties / Fabric mark |
|--|--------------------|---|
| Jeans | 8 kg | Leisure clothing such as jeans, sweat-shirts of different material thicknesses (e.g. at the neck, cuffs and seams). /  |
| Bed Linen | 3 kg | To dry bed linen such as single and double sheets, pillowcases, bedspreads. /  |
| Duvets | 3 kg | To dry single or double duvets and pillows (with feather, down or synthetic fillings). /  |
| Time Drying | 8 kg | With this programme you can use the Time Dry option and set the programme duration. /  |
| Synthetics | | |
| Extra Dry | 3,5 kg | Drying level: extra dry. /  |
| Cupboard Dry ²⁾ | 3,5 kg | Drying level: cupboard dry. /  |
| Iron Dry | 3,5 kg | Drying level: suitable for ironing. /  |
| Easy Iron | 1 kg (or 5 shirts) | Easy care fabrics for which a minimum of ironing is necessary. The drying results can be different from one type of fabric to the another. Shake the items before you put them in the appliance. When the programme is completed, immediately remove the items and put them on a hanger. /  |
| Outdoor | 2 kg | To dry outdoor clothing, technical, sports and pile fabrics, waterproof and breathable jackets, shell jackets with a removable fleece or inner insulation. |
| Silk  | 1 kg | To dry hand-washable silk gently. /  |

| Programmes | Load 1) | Properties / Fabric mark |
|---|---------|--|
| Wool 4)   | 1 kg | <p>Wool fabrics. Gentle drying for hand-washable woollens. Remove immediately the items when the programme is completed.</p>   <p>WOOL HAND WASH SAFE</p> |
| Extra Quick Mixed | 3 kg | To dry cotton and synthetic fabrics. /    |

1) The maximum weight refers to dry items.

2) **For test institutes only:** Standard programmes for tests are specified in the EN 61121 document. If is necessary to correct the remaining moisture level of the laundry, adjust the programme with the Dry Plus option Clean the filter after each cycle

3) The  Cottons Cupboard Dry programme is the "Standard cotton programme". It is suitable for drying normal wet cotton laundry and it is the most efficient programme in terms of energy consumption for drying wet cotton laundry.

4) The wool drying cycle of this tumble drying machine has been tested and approved by The **Woolmark** Company. The cycle is suitable to dry wool garments, which are labelled "hand wash" provided that the garments are washed in a **Woolmark** endorsed hand washing cycle and tumble dried according to the instructions issued by the manufacturer. **1780SW13W**.

6.1 Programmes and options selection

| Programmes 1) | Options | | | | | | |
|---|----------|-------------|-------------|----------|--------|-----------|-------------|
| | Dry Plus | Anti-crease | Spun at RPM | Time Dry | Eco 2) | Time Save | Extra Quiet |
| Cottons; Extra Dry | ■ | ■ | ■ | | ■ | ■ | ■ |
| Cottons; Cupboard Dry + | ■ | ■ | ■ | | ■ | ■ | ■ |
| Cottons;  Cupboard Dry | ■ | ■ | ■ | | ■ | ■ | ■ |
| Cottons; Iron Dry | ■ | ■ | ■ | | ■ | ■ | |
| Jeans | ■ | ■ | ■ | | ■ | ■ | |
| Bed Linen | ■ | ■ | ■ | | ■ | | |
| Duvets | ■ | | ■ | | ■ | | |

| Programmes ¹⁾ | Options | | | | | | |
|--|----------|-------------|-------------|-----------------|-------------------|-----------|-------------|
| | Dry Plus | Anti-crease | Spun at RPM | Time Dry | Eco ²⁾ | Time Save | Extra Quiet |
| Time Drying | | ■ | | ■ | ■ | | |
| Synthetics; Extra Dry | ■ | ■ | ■ | | ■ | ■ | ■ |
| Synthetics; Cupboard Dry | ■ | ■ | ■ | | ■ | ■ | ■ |
| Synthetics; Iron Dry | ■ | ■ | ■ | | ■ | ■ | |
| Easy Iron | ■ | ■ | ■ | | ■ | | |
| Outdoor | ■ | | ■ | | ■ | | |
| Silk  | ■ | | ■ | | ■ | | |
| Wool   | ■ | | | ■ ³⁾ | ■ | | |
| Extra Quick Mixed | ■ | ■ | ■ | | | ■ | |

1) Together with the programme you can set 1 or more options.

2) The option is off if the 1 of the options Time Save or Extra Quiet is on.


3) Only with the drying rack — see chapter ACCESSORIES

6.2 Consumption data

| Programme | Spun at / residual humidity | Drying time | Energy consumption |
|-------------------|-----------------------------|-------------|--------------------|
| Cottons 8 kg | | | |
| Cupboard Dry | 1400 rpm / 50% | 189 min. | 1,32 kWh |
| | 1000 rpm / 60% | 215 min. | 1,51 kWh |
| Iron Dry | 1400 rpm / 50% | 144 min. | 1,04 kWh |
| | 1000 rpm / 60% | 164 min. | 1,19 kWh |
| Synthetics 3,5 kg | | | |
| Cupboard Dry | 1200 rpm / 40% | 76 min. | 0,47 kWh |
| | 800 rpm / 50% | 86 min. | 0,53 kWh |

7. OPTIONS

7.1 Dry Plus

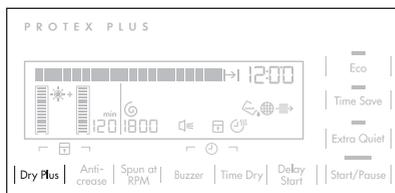


This option helps to get the laundry more dried. There are 3 possible selections:

 - the default selection which is related to the programme.

 - the selection to get the laundry lightly dried.


 - the selection to get the laundry more dried.

7.2 Anti-crease

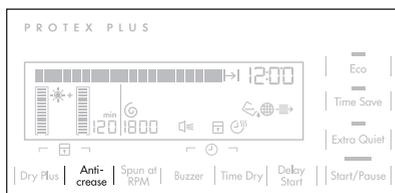

Extends of 30, 60, 90 or 120 minutes the standard anti-crease phase (30 minutes) at the end of the drying cycle. This option prevents laundry from creases. Laundry can be removed during the anti-crease phase.


7.3 Spun at RPM

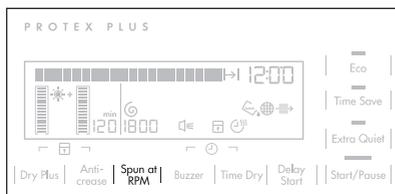

This option helps to set the best condition to dry the laundry.

If you know the initial spin speed when you washed you can use this option. Higher spin speed causes that the laundry contains less water.

7.4 Buzzer

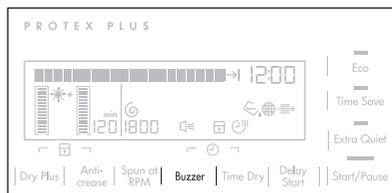

When the buzzer option is activated you can hear the sound at the:


- cycle end
- anti-crease phase start and end
- cycle interruption

The buzzer option is by default always on. You can use this option to activate or deactivate the sound.




You can activate the Buzzer option with all programmes.

7.5 Time Dry

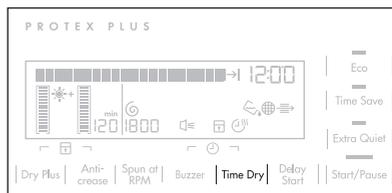

Operates only with the Time Drying programme. Lets the user to set special time of drying programme from minimum 10 min. to maximum of 2 hours (in 10 min. steps).

7.6 Delay Start

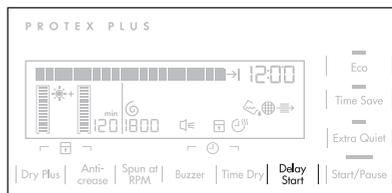



Lets to delay the start of a drying programme from minimum of 30 minutes to maximum of 20 hours.


1. Set the drying programme and options.
2. Touch the Delay Start option field again and again.

The time of the delay come into the view on the display (e.g. 12h if the programme has to start after 12 hours.)

3. To activate the Delay Start option, touch the Start/Pause field.

Time to start decreases on the display.

7.7 Eco

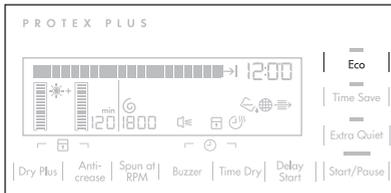

This option is on by default with all the programmes. Does not include the Extra Quick Mixed programme.

The power consumption is at the minimum level.

The option Eco is off if 1 of the options Time Save or Extra Quiet is on.

8. BEFORE FIRST USE


Before you use the appliance for the first time:

- Clean the tumble dryer drum with a moist cloth.
- Start a short programme (e.g. 30 minutes) with moist laundry.




At the beginning of the drying cycle (first 3-5 min.) there could be a slightly higher sound level. This is due to the compressor starting up. This is normal for compressor powered appliances such as refrigerators and freezers.

7.8 Time Save

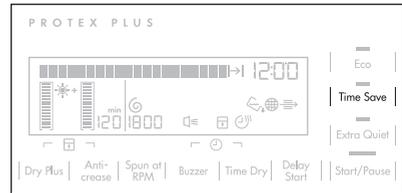

Decreases the time of the cycle without the effect on the drying quality. The cycle time can be shorter by 30% on the cottons and 40% on synthetics. The appliance operates with the higher energy consumption.

7.9 Extra Quiet

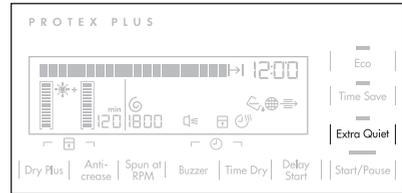

The appliance operates with low noise 62 dB without the effect on the drying quality. The appliance operates slowly with the longer cycle time.

8.1 Language

The first time you turn on the dryer the default language comes into the view on the display. You can confirm it or change the different language from the available languages list.

To set the different language:

1. Turn the programme dial to set your language.
2. Touch the Start/Pause field. The language is memorised.

8.2 Clock

The first time you turn on the dryer the default time comes into the view on the display. You can confirm or change it.

To set the different time:

1. Turn the programme dial to set new hour.

2. Touch the Start/Pause field. The hour is memorised.
3. Turn the programme dial to set new minutes.
4. Touch the Start/Pause field. The minutes are memorised.

9. DAILY USE

9.1 Preparing the laundry

- Close the zippers.
- Close the fasteners of duvet covers.
- Do not dry ties or ribbons loose (e.g. apron ribbons). Tie them before you start a programme.
- Remove all items from pockets.
- If an item has an internal layer made of cotton, turn it inside out. Make sure that the cotton layer is always outward facing.
- We recommend that you set a correct programme suitable for the type of fabrics that are in the appliance.
- Do not put dark colours together with light colours. Dark colours can bleed.
- Use a suitable programme for cotton, jersey and knitwear to prevent shrinkage.
- Make sure that the load size is not more than the maximum stated the programme table.
- Only dry laundry that is suitable for tumble drying. Refer to the fabric label on the items.
- Do not dry large and small items together. Small items can be trapped inside the large items and remain wet.

| Fabric label | Description |
|---|---|
|  | Laundry is suitable for tumble drying. |
|  | Laundry is suitable for tumble drying at higher temperatures. |
|  | Laundry is suitable for tumble drying at low temperatures only. |
|  | Laundry is not suitable for tumble drying. |

9.2 Loading the laundry



CAUTION!

Ensure the laundry is not trapped between the appliance door and rubber seal.

1. Pull open the appliance door.
2. Load the laundry one item at a time.
3. Close the appliance door.

9.3 Turning on the appliance

To turn on the appliance:

Push the On/Off button.

If the appliance is on, some indicators appear on the display.

9.4 Auto Off function


To decrease the energy consumption, the Auto Off function turns off automatically the appliance:

- if the Start/Pause field was not touched in the time of 5 minutes.
- after 5 minutes from the programme end.

Push the  On/Off button to turn on the appliance.

If the appliance is on, some indications come in to the view on the display.

9.5 Setting a programme

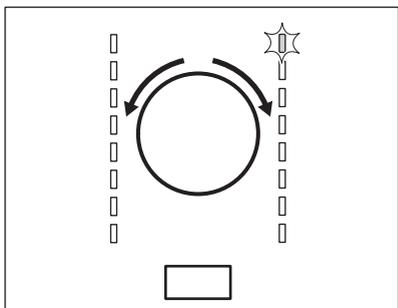


Use the programme dial to set the programme.
The possible time to complete the programme comes into the view on the display.



The drying time you see is related to the load of 5 kg for cotton and jeans programmes. For the other programmes the drying time is related to the recommended loads. The drying time of the cotton and jeans programmes with the load more than 5 kg is longer.

9.6 Options

Together with the programme you can set 1 or more special options.

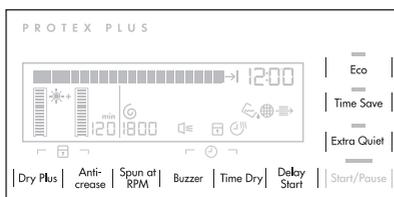

To activate or deactivate an option touch the applicable option field.

When the option is activated the LED above the option field or symbol on the display illuminates.

9.7 Child lock option

The child lock can be set to prevent children from playing with the appliance. The child lock option locks all push


buttons and the programme dial (this option does not lock the **On/Off** button).

You can activate the child lock option:

- before you push the **Start/Pause** button - the appliance cannot start
- after you push the **Start/Pause** button - programmes and option selection is unavailable.

Child lock option activation:


1. Turn the dryer on.
2. Wait approximately 8 seconds.
3. Select 1 of the available programmes.
4. Touch and hold down the **Dry Plus** and **Anti-crease** option fields at the same time.

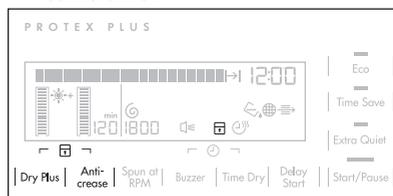

The symbol  appears on the display.

5. To deactivate the child lock, touch the above option fields again until the symbol disappears.

9.8 Starting a programme

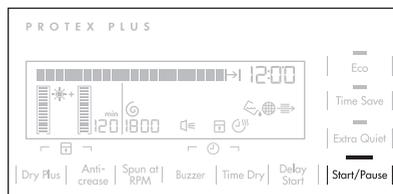

To start the programme:

Touch the **Start/Pause** field.

The appliance starts and the LED above the touch field stops flashing and stays on.

9.9 Programme change

To change a programme:

1. Push the **On/Off** button to turn the appliance off.
2. Push the **On/Off** button again to turn on the appliance.

3. Set a new programme.

9.10 Programme end

i Clean the filter and drain the water container after each drying cycle. (See chapter CARE AND CLEANING.)

If the drying cycle has finished, the symbol  flashes on the display. If the Buzzer option is activated, the acoustic signal sounds intermittently for 1 minute.

i If you do not turn off the appliance, the anti-crease phase starts. Laundry can be removed during this phase.

To remove the laundry:

1. Push the On/Off button for 2 seconds to turn the appliance off.
2. Open the appliance door.
3. Remove the laundry.
4. Close the appliance door.

10. HINTS AND TIPS


10.1 Ecological hints

- Spin the laundry well before drying.
- Do not exceed the load sizes which are specified in the programme chart.
- Clean the filter after each drying cycle.
- Do not use fabric softener to wash and then dry. In the tumble dryer laundry becomes soft automatically.
- Use distilled water like that used for steam ironing. If it is necessary, clean the distilled water before (e.g. with a coffee filter) to remove any particles.
- Always keep the airflow slots at the bottom of the appliance clear.
- Make sure there is good airflow where the appliance is to be installed.

10.2 Adjustment of dryness levels

To change the default dryness level:

1. Turn the appliance on.
2. Wait approximately 8 seconds.
3. Select 1 of the available programmes.
4. Touch and hold down the **Dry Plus** and **Spun at RPM** option fields at the same time.

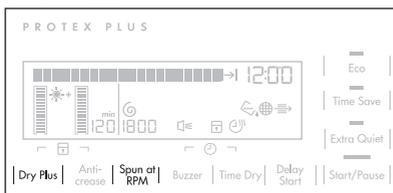

One of the symbols appears on the display:

 - Maximum dryness

 - Extra dryness

 - Standard dryness


5. Touch the **Start/Pause** field repeatedly until you reach the desired dryness level.
6. To set the new dryness level as the default, touch the **Dry Plus** and **Spun at RPM** option fields for approximately 2 seconds at the same time.

10.3 Deactivating the tank indicator

The water container indicator is activated by default. It illuminates at the end of the drying cycle or during the cycle if the water reservoir is full. If the draining kit is installed the water container is drained automatically and the indicator can be deactivated.

To deactivate the indicator:

1. Turn the appliance on.
2. Wait approximately 8 seconds.
3. Select 1 of the available programmes.
4. Touch and hold down the **Dry Plus** and **Buzzer** option fields at the same time.

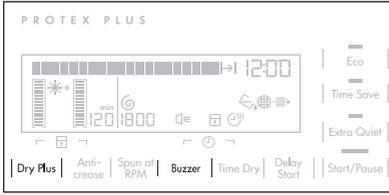

One of 2 configurations is possible:


- the Tank indicator: is on if the symbol appears - the water container indicator is permanently **activated**
- the Tank indicator: is off if the symbol appears - the water container indicator is permanently **deactivated**

10.4 Language

You can change the language each time you want.

To set the different language:

1. Turn on the dryer.
2. Wait approximately 8 seconds.
3. Touch at the same time the **Anti-crease** and **Spun at RPM** option fields and hold down.

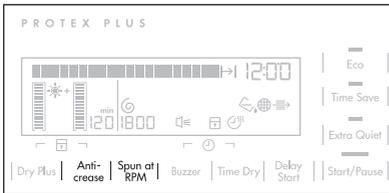

You see the language name on the display.


4. Turn the programme dial to set the new language.
5. Touch the **Start/Pause** field. The language is memorised.

10.5 Clock

You can change the clock each time you want.

To set the different time:

1. Turn on the dryer.
2. Wait approximately 8 seconds.
3. Touch at the same time the **Buzzer** and **Time Dry** option fields and hold down.

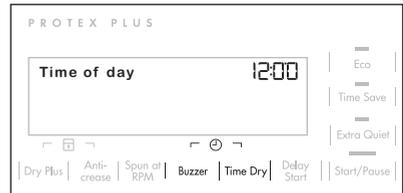

Clock digits start to flash on the display.

4. Turn the programme dial to set new hour.
5. Touch the **Start/Pause** field. The hour is memorised.
6. Turn the programme dial to set new minutes.
7. Touch the **Start/Pause** field. The minutes are memorised.

11. CARE AND CLEANING


11.1 Cleaning the filter

At the end of each cycle the *Filter* symbol comes on the display and you must clean the filter.




The filter collects the fluff produced during the drying cycle.


1. Open the door. Pull the filter up.

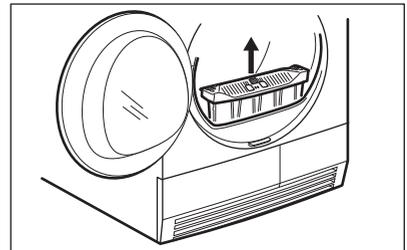


2. Push the hook to open the filter.

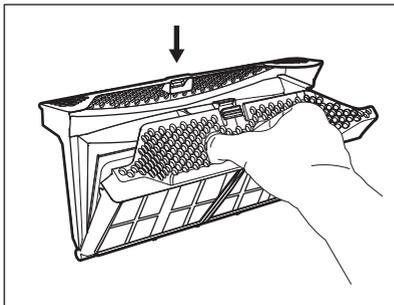


3. Use a moist hand to clean both parts of the filter.

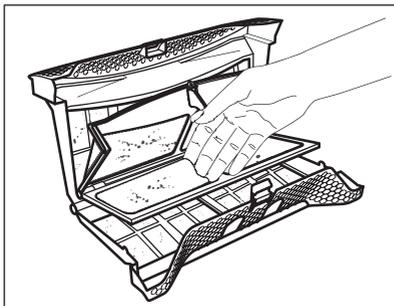

4. If necessary, clean the filter with a brush under warm tap water and/or a vacuum cleaner. Close the filter.

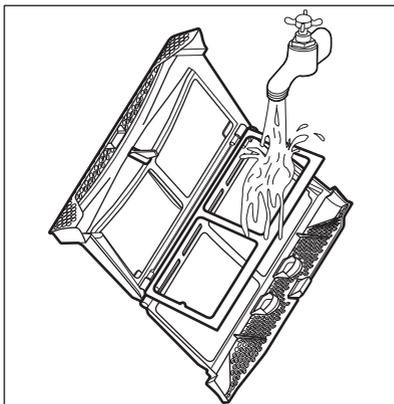

5. If necessary, remove fluff from the filter socket and gasket. You can use a vacuum cleaner. Place the filter back inside the filter socket.

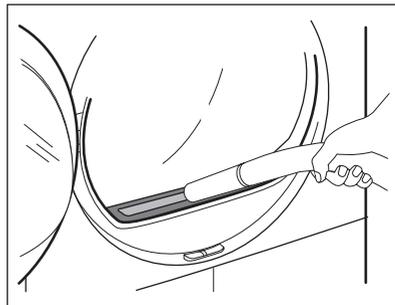


11.2 Emptying the water container

Empty the condensed water container after each drying cycle.


If the condensed water container is full, the programme stops automatically. The  Tank symbol comes on the display and you must empty the water container.

To empty the water container:

1. Pull the water container out keeping it in a horizontal position.

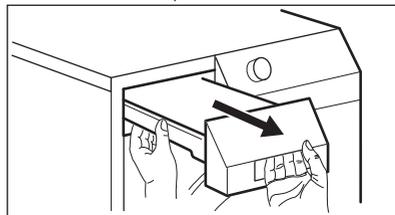

2. Pull the plastic connection out and drain the water into a basin or equivalent receptacle.

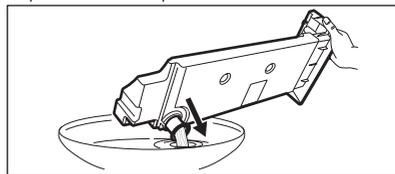

3. Push the plastic connection back in and place the water container back into position.
4. To continue the programme press the Start/Pause button.

11.3 Cleaning the condenser

If the symbol \Rightarrow *Condenser* flashes on the display, inspect the condenser and its compartment. If it is dirty, clean it.




WARNING!


Do not touch the metal surface with bare hands. Risk of injury. Wear protective gloves. Clean carefully to avoid damaging the metal surface.

To inspect:


1. Open the door. Pull the filter up.

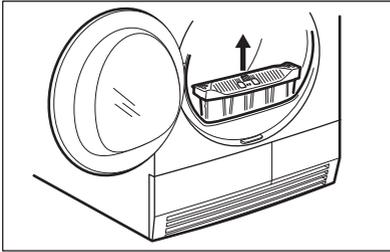


2. Slide the release button on the bottom of the door to open the condenser door.

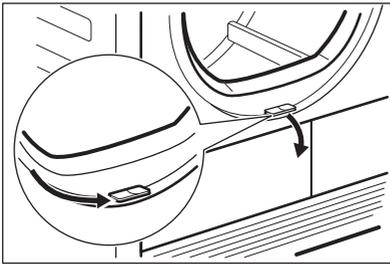


3. Turn the lever to unlock the condenser cover.

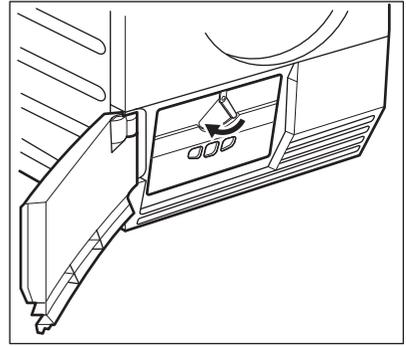

4. Lower the condenser cover.

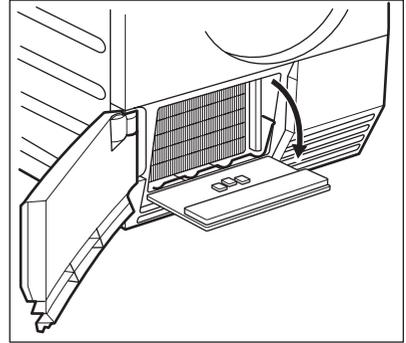

5. If necessary, remove the fluff from the heat exchanger and its compartment. You can use a wet cloth and/or a vacuum cleaner with a brush attachment.

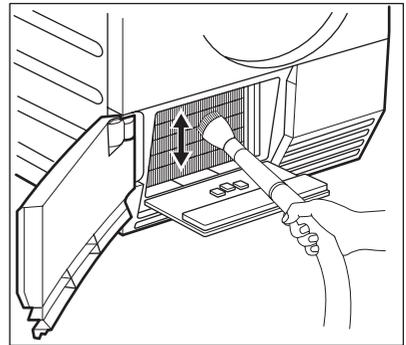

6. Close the heat exchanger cover.
7. Turn the lever until it clicks into position.
8. Put the filter back.

11.4 Cleaning the drum



WARNING!

Disconnect the appliance before you clean it.

Use a standard neutral soap detergent to clean the inner surface of the drum and drum lifters. Dry the cleaned surfaces with a soft cloth.



CAUTION!

Do not use abrasive materials or steel wool to clean the drum.

Use a moist cloth to clean. Dry the cleaned surfaces with a soft cloth.



CAUTION!

Do not use furniture cleaning agents or cleaning agents which can cause corrosion to clean the appliance.

11.5 Cleaning the control panel and housing

Use a standard neutral soap detergent to clean the control panel and housing.

11.6 Cleaning the airflow slots

Use a vacuum cleaner to remove fluff from the airflow slots.

12. TROUBLESHOOTING

| Problem 1) | Possible cause | Remedy |
|------------------------------------|--|---|
| The tumble dryer does not operate. | The tumble dryer is not connected to mains supply. | Connect in at mains socket. Check fuse in fuse box (domestic installation). |
| | The loading door is opened. | Close the loading door. |
| | The On/Off button was not pushed. | Push the On/Off button. |
| | The Start/Pause button was not pushed. | Push the Start/Pause button. |
| | The appliance is in the standby mode. | Push the On/Off button. |

| Problem ¹⁾ | Possible cause | Remedy |
|--|---|--|
| Unsatisfactory drying result. | Incorrect programme selection. | Do the selection of the applicable programme. ²⁾ |
| | The filter is clogged. | Clean the filter. ³⁾ |
| | The Dry Plus option was in minimum level. ⁴⁾ | Change the Dry Plus option to the moderate or maximum level. ⁴⁾ |
| | Too high volume of the load. | Obey the maximum load volume. |
| | The airflow grill is clogged. | Clean the airflow grill in the bottom of the appliance. |
| | Dirt on the humidity sensor in the drum. | Clean the front surface of the drum. |
| | Incorrect remaining laundry moisture degree. | Adjust remaining laundry moisture degree. ⁵⁾ |
| | The heat exchanger is clogged. | Clean the heat exchanger. ³⁾ |
| The loading door does not closed | The filter not locked in the position. | Put the filter in the correct position. |
| | The laundry is locked between the door and the seal. | Put the load correctly in the drum. |
| Err (Error) on the display. | You try to change the programme or the option after the start of the cycle. | Turn the tumble dryer off and on. Make the new selection. |
| | The option you try to activate is not applicable with the selected programme. | Turn the tumble dryer off and on. Make the new selection. |
| No drum light | Defective drum lamp. | Contact the service centre to replace the drum lamp. |
| Abnormally elapsing time on the display. | The time to end is calculated on the basis of the volume and dampness of the laundry. | The automatic procedure — this is not the appliance malfunction. |
| Programme inactive. | The water container is full. | Drain the water container, push the Start/Pause button. ³⁾ |

| Problem 1) | Possible cause | Remedy |
|-------------------------------------|---|---|
| Drying cycle too short. | Too small laundry volume. | Do the selection of time programme. The time value must be related to the load. To dry 1 item or small quantities of the laundry we recommend to use short times. |
| | The laundry is too dry. | Do the selection of time programme or higher drying level (e.g. Extra Dry) |
| Drying cycle too long ⁶⁾ | The filter is clogged. | Clean the filter. |
| | Too high volume of the load. | Obey the maximum load volume. |
| | The laundry not spun sufficiently. | Spin correctly the laundry. |
| | Too low or too high room temperature - this is not the appliance malfunction. | Ensure a room temperature higher than +5°C and lower then +35°C. |

¹⁾ If there is an error message on the display (e.g. **E51**): Turn the tumble dryer off and on. Make a selection of the new programme. Push the Start/Pause button. Does not operate? - contact the service centre and give the error code.

²⁾ Follow the programme description — see PROGRAMME TABLE

³⁾ See chapter CARE AND CLEANING

⁴⁾ Only dryers with the Dry Plus option

⁵⁾ See HINTS AND TIPS chapter

⁶⁾ Note: After maximum 5 hours the drying cycle ends automatically.

13. TECHNICAL DATA

| | |
|---|-------------------------------------|
| Height x Width x Depth | 850 x 600 x 600 mm (maximal 640 mm) |
| Max. depth with the appliance door open | 1090 mm |
| Max. width with the appliance door open | 950 mm |
| Adjustable height | 850 mm (+ 15 mm - feet regulation) |
| Drum volume | 118 l |
| Maximum load volume | 8 kg |
| Voltage | 230-240 V |
| Frequency | 50 Hz |
| Necessary fuse | 13 A |
| Total power | 1000 W |
| Energy efficiency class | A+++ |

| | |
|--|-----------------|
| Energy consumption ¹⁾ | 1,51 kWh |
| Annual energy consumption ²⁾ | 176,92 kWh |
| Left—on mode power absorption | 0,11 W |
| Off mode power absorption | 0,11 W |
| Type of use | Household |
| Permitted ambient temperature | + 5°C to + 35°C |
| Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture | IPX4 |
| This product contains fluorinated gas hermetically sealed | |
| Gas designation | R134a |
| Weight | 340 g |
| Global-warming potential (GWP) | 1430 |

1) With reference to EN 61121. 8kg of cotton centrifuged at 1000 rpm.

2) Energy consumption per year in kWh, based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used (REGULATION (EU) No 392/2012).


14. INSTALLATION

14.1 Unpacking



CAUTION!

Before use all transport packaging must be removed.

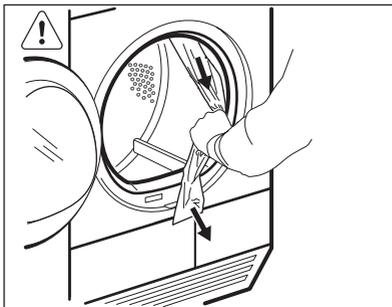


To remove the polystyrene blocks:

1. Open the door.
2. Pull plastic hose with the polystyrene blocks out from the drum.


14.2 Feet levelling

It is possible to adjust the height of the tumble dryer. To do that adjust the feet.

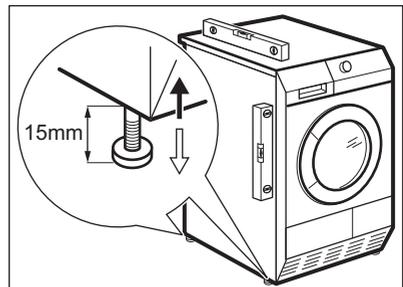

14.3 Installation under a counter

The appliance can be installed as freestanding or below the kitchen counter if space permits (see picture).

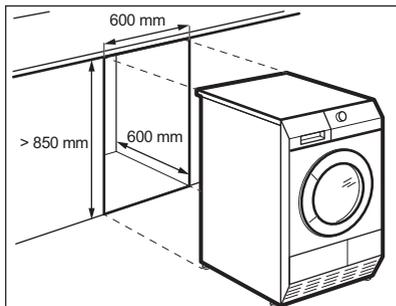

15. ENVIRONMENTAL CONCERNS

Recycle the materials with the symbol . Put the packaging in applicable containers to recycle it. Help protect the environment and human health and to recycle waste of electrical and electronic appliances. Do not dispose appliances

marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

www.aeg.com/shop



136942410-A-052016

