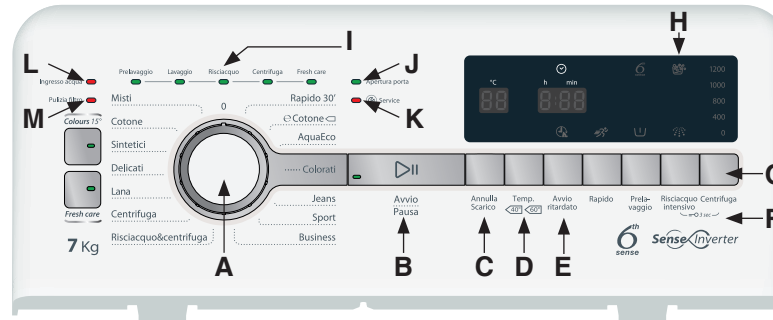


 

 

 
 





 

 

 
 

 
 



 
 
 
 





 


- A. Programme selector
 B. “Start/Pause” button
 C. “Reset/Drain” button
 D. “Temperature” button
 E. “Start delay” button
 F. Child lock button combination 3 sec
 G. “Spin” button
 H. Detergent overdosage indication
 I. Programme sequence indicator



- J. “Lid open” indication
 This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately:
 K. “Service” indication
 L. “Water tap closed” indication
 M. “Clean filter” indication

Programme		Temperature	Care Labels	Max. Load kg	Type of wash / Notes - Respect the manufacturer's recommendations on the care label	Detergents and additives			Options							Max spin speed rpm
						Pre-wash 	Main wash 	Softener 	Colours 15°	Fresh care	Start delay Avvio ritardato	Rapid Rapido	Pre-wash Pre-lavaggio	Intensive rinse Risciacquo intensivo	Spin Centrifuga	
Mixed	Misti	cold - 60°C	 	3.0	Lightly to normally soiled robust laundry made of cotton, linen, artificial fibres and their blends. Effective one-hour programme. Make sure to wash only similar colours together in one wash load.	—	Yes	*	*	*	*	—	—	*	*	max.
Cotton	Cotone	cold - 95°C	  	7.0	Normally to heavily soiled towels, underwear, table and bed linen etc. made of cotton and linen.	*	Yes	*	*	*	*	*	*	*	*	max.
Synthetics	Sintetici	cold - 60°C	  	3.0	Normally soiled garments made of artificial fibres (like polyester, polyacryle, viscose etc.) or their blends with cotton.	*	Yes	*	*	*	*	*	*	*	*	max
Delicates	Delicati	cold - 40°C	 	1.5	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	*	Yes	*	*	*	*	—	*	—	*	1000 ¹⁾
Wool	Lana	cold - 40°C	 	1.0	Woollens, labelled with the Woolmark and identified as machine washable, as well as textiles made of silk (keep to care label!), linen, wool and viscose marked as handwashable.	—	Yes	*	*	*	*	—	—	—	*	1000 ¹⁾
Rapid 30'	Rapid 30'	cold - 30°C		3.0	Shortly worn clothing made of cotton, polyester, polyamide and blends with cotton. Brief programme to refresh your laundry.	—	Yes	*	*	*	*	—	—	—	*	max.
 Cotton 	 Cotone 	40 - 60°C	 	7.0	Normally soiled cotton laundry. At 40°C and 60°C standard cotton programme and most favourable programme in terms of combined water and energy consumption for washing cotton laundry. - Reference programme for the Energy Label.	—	Yes	*	—	*	*	—	—	*	*	max.
AquaEco	AquaEco	cold - 40°C	  	2.5	Lightly soiled laundry made of synthetic fibres, or synthetics mixed with cotton garments. Saving programme with a very low water consumption. Use liquid detergent and the lowest recommended amount for 2.5kg laundry. Do not use softener.	—	Yes	—	*	*	*	—	—	—	*	max.
Colours	Colorati	cold - 60°C	  	4.0	White and pastel shaded garments made of delicate fabrics. Gentle wash programme to avoid graying or yellowing of your laundry. Use heavy duty detergent, if necessary also stain removers or bleaches on oxygen basis. Do not use liquid detergent.	*	Yes	*	*	*	*	*	*	*	*	1000 ¹⁾
Jeans	Jeans	cold - 60°C	 	4.0	Normally soiled cotton jeans-wear and garments made of robust jeans-like material, such as trousers and jackets. For dark jeans-wear, use of special detergent for dark laundry recommended.	*	Yes	*	*	*	*	*	*	*	*	1000 ¹⁾
Sport	Sport	cold - 30°C	 	3.0	Normally soiled and sweaty sportswear made of cotton jersey or microfibers. Programme includes a prewash cycle - add detergent also to the prewash chamber. Do not use softener.	*	Yes	*	*	*	*	*	*	*	*	max.
Business	Business	cold - 40°C	  	1.5	Shirts and blouses made of cotton, linen, synthetic fibers or their blends. Gentle programme for fine garments which have been used or which are only lightly soiled. Pre-treatment of stains recommended.	*	Yes	*	*	*	*	—	*	—	*	800 ¹⁾
Rinse & Spin	Risciacquo & Centrifuga	-	-	7.0	Rinse and intensive spin programme. Same as the last rinse and the final spin in the “Cotton” programme.	—	—	*	—	*	*	—	—	*	*	max.
Spin	Centrifuga	-	-	7.0	In this programme spinning is intensive. Same as the spin cycle in the “Cotton” programme.	—	—	—	—	*	*	—	—	—	*	max.




*: optional / Yes : dosing required

¹⁾ For improved garment care, spin speed is restricted in these programmes.

 - the sensor technology adapts water, energy and programme duration to your wash load.

CONSUMPTION DATA

Power consumption in off-mode 0.11 W / in left-on mode 0.11 W

Programme	Tempe- rature (°C)	Load (kg)	Water (l)	Energy without "Rapid" (kWh)	Approx. Programme Duration (hrs : min)		Approx. remaining moisture content (%)***	
					without "Rapid"	with "Rapid"	1000 rpm	1200 rpm
Mixed	40	3.0	45	0.43	1:00	–	68	61
Cotton	95	7.0	58*	2.00	2:35	2:00	64	57
Cotton	60	7.0	54	1.20	2:35	1:45		
Cotton	40	7.0	64	1.00	3:00	1:30	47	40
Synthetics	60	3.0	54*	0.85	1:55	1:14		
Synthetics	40	3.0	50	0.52	1:40	0:59		
Delicates	40	1.5	50	0.51	0:45	–		
Wool	40	1.0	40	0.55	0:35	–		
Rapid 30'	30	3.0	42	0.25	0:30	–		
Aqua Eco	40	2.5	19	0.40	1:00	–		
Colours	40	4.0	59	0.40	1:20	1:00		
Jeans	40	4.0	48	0.35	1:30	1:10		
Sport	30	3.0	55	0.40	1:55	1:14		
Business	40	1.5	50	0.51	0:45	–		
eCotton** 	60	7.0	48	0.90	4:00	–		
eCotton** 	60	3.5	34	0.79	2:30	–	62	53
eCotton** 	40	3.5	34	0.61	2:30	–		

Consumption values were measured in normalized conditions in compliance with standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash. Water and energy consumption refer to the default setting of the programmes; selecting special options or modifying spin speed or temperature will change the consumption data.

☺ The programme duration may differ from the values indicated above as it depends on the operation conditions applicable at that time (see also "Troubleshooting Guide" in your Instructions for Use).

* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

** Standard Cotton programme and basis for Energy Label. For reasons of energy saving, the real water temperature may deviate from the declared cycle temperature.

*** After programme and spinning with maximum selectable spin speed, in default programme setting.

PREPARATION OF THE WASH CYCLE

1. Load the washing machine, close the drum door and check that it is closed properly.
2. Pour in the detergent and any additives, as described overleaf and in the instruction manual.
3. Close the lid.
4. Turn the **programme selector** to the desired programme. The display shows the duration of the selected programme (in hours and minutes), and the indicator for the **"Start/Pause"** button flashes. The temperature and spin speed can be changed by pressing the "Temperature" and "Spin" buttons. If you do not start the programme soon after having made your choice, the washing machine will switch off automatically after about a quarter of an hour. Switch on the washing machine again by turning the programme selector back to "O" and then to the desired programme.

SELECT ANY DESIRED OPTION

When the combination of programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

"Colours 15°" button

- Saves energy used for water heating while maintaining a good wash result.
- Supports colour maintenance when washing coloured laundry.

- Recommendable for lightly soiled laundry without stains.
- Make sure that your detergent is suitable for cold wash temperatures.
- Not selectable for Cotton 70 - 95°C.

"Fresh care" button

- Select this option if you cannot unload the laundry soon after programme end, or if you tend to forget the laundry in your washing machine. It will help to keep your laundry fresh.
- The washing machine will start to tumble the laundry periodically after programme end.
- The light of the "Fresh care" button will blink while this function is active, and the display will show an animation.
- The periodic tumbling will last up to approximately 6 hours after the end of your wash programme, and you can stop it at any time by pressing the "Fresh care" button. It will last a while until you can open the door.
- After the "Fresh care" period has run out, the display indicates "End".

"Rapid" button

- Enables quicker washing by shortening the programme duration.

- Recommendable for small loads or only lightly soiled laundry.

"Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt). Increases the cycle time by approximately 15 min.
- Do not use liquid detergent for the main wash when activating the Prewash option.

"Intensive rinse" button

- More water is added and rinse cycle is prolonged.
- This option is particularly suitable for areas with very soft water, washing baby linen and helping people with allergies.

"Spin" button

- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during the rinse. The water is drained out only.

START DELAY

The "Start delay" button allows the user to run the machine at his convenience, for example at night when electricity is cheaper.

- Do not use liquid detergent when activating this function.
- Select programme, spin speed and options.
- Press the "Start delay" button several times to select a delay time by 1 to 24 hours.
- Start the countdown of the "Start delay" by pressing **"Start/Pause"**. the lamp over the "Start delay" button blinks, and it goes off when the programme starts.
- Once having pressed the **"Start/Pause"** button, the countdown of the time delay begins. The time delay indication on the display disappears when the programme starts and is replaced by the remaining programme time.
- After the **"Start/Pause"** button has been pressed, the number of hours preselected can be reduced by pressing again the "Start delay" button.

To cancel the "Start delay"

..before you press the "Start/Pause" button:

- Turn the programme selector to another position or press the **"Reset/Drain"** button.

..after having pressed the "Start/Pause" button:

- Press the **"Reset/Drain"** button for at least 3 second. The start delay indicator light goes off.

PROGRAMME START

Open the tap and press the **"Start/Pause"** button. The indication lamp next to the **"Start/Pause"** button lights up. The display shows the remaining programme time. Due to variations in load and temperature of inlet water, the remaining time is newly calculated in certain programme phases. If this is the case, **an animation appears on the time display.**

"LID OPEN" INDICATION

Before starting and after end of a programme, the lamp lights to show the the lid can be opened. As long as a wash programme is running, the lid remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Cancel a running programme before the end".

CHILD LOCK BUTTONS

You can lock the buttons of the control panel against improper use (e.g. by children).

- Press both of the child lock buttons simultaneously and hold them for at least 3 seconds. The key symbol on the display lights up.
- To unlock the buttons again: proceed in the same way.

FAILURE INDICATIONS

In case of any failures or irregularities, consult the "Troubleshooting Guide" in your Instructions for Use.

"Water tap closed" -

No or not sufficient inlet water.

"Service" -

Failure or malfunction of an electrical component.

"Clean pump" -

Waste water is not pumped out.

Spin speed on display blinks: unbalance during spinning

PROGRAMME END

- The "Lid open" indication lights up and the display shows "End". After about a quarter of an hour, the washing machine will switch off completely to save energy.
 1. Turn the programme selector to the "O" position.
 2. Close the water tap.
 3. Open lid and drum and unload the machine.
 4. Leave the lid open for some time to allow the interior of the machine to dry.

DETERGENT OVERDOSAGE INDICATION

The symbol will light up at the end of the programme if you used too much detergent. use less detergent next time. If the symbol lights up and the display shows "Fod", too much foam interrupted the wash process; refer to the "Troubleshooting Guide" in your Instructions for use.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the **"Start/Pause"** button to pause the programme. The light blinks.
2. Select the new programme, temperature, any options and another spin speed if you want.
3. Press the **"Start/Pause"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

CANCEL A RUNNING PROGRAMME BEFORE THE END

The **"Reset/Drain"** button cancels a programme before the end.

- Press the **"Reset/Drain"** button for at least 3 seconds. The water is drained out; it may last a while until you can open the lid.