


IMPORTANT USAGE INSTRUCTIONS

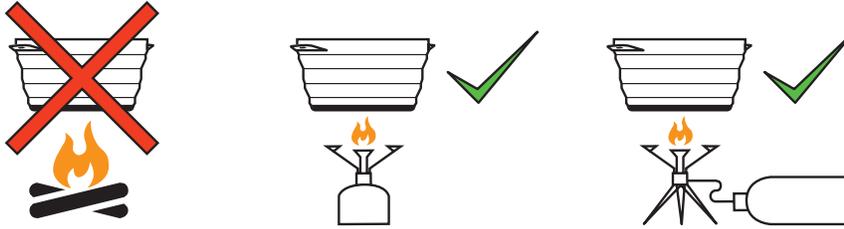

Intended for use with camping stoves only.

WARNINGS

General Use:

- Intended for use with camping stoves only. Not intended for open campfires, microwave ovens or conventional ovens
- The silicone handles are designed to secure the lid to the pot only during transport. Attaching them to the lid during cooking can cause damage to the lid
- Pot should be fully expanded when cooking to avoid direct exposure of flame to silicone sides
- Do not wash in dishwasher
- Always turn off stove before lifting pot or lid
- Wait 30 seconds before handling, as pot handles can be hot and steam may be exiting from lid steam/strainer
- Beware that boiling water may cause steam to vent anywhere around the pot rim. Be careful using sharp objects when cooking as they may damage silicone
- Be aware that silicone walls are collapsible. Do not apply top pressure to walls while cooking as they may collapse
- Always point lid steam/strainer away from self while cooking to avoid reaching over it when grabbing lid grip
- Before using pot for the first time wash with hot water and mild detergent and dry immediately

Pouring:

- Always hold lid securely against the pot when straining or pouring
- Always pour away from yourself to avoid contact with water and steam. Pour contents slowly and at a shallow angle
- Beware hot contents may heat lid. Place thumbs on locking knobs of lid to reduce contact to hot surface

Heat damage:

- Do not allow the flames from your stove to extend beyond the base of the pot or allow pot to boil dry
- Low to medium heat output on camp stove is highly recommended. High heat output on camp stove may create excess flame that wastes fuel and damages silicone walls
- Prolonged exposure to flames may cause the silicone to become brittle and disintegrate. A white external external coating or hardness to touch are signs that the silicone has become brittle. Discontinue use



Beware that boiling water may cause steam to vent anywhere around the pot rim

Do not allow the flames from your stove to extend beyond the base of the pot

Do not allow to boil dry, always have some liquid in the pot



Pour at a low angle to avoid hot contents heating surface near hands. Place thumbs on locking knobs of lid to reduce contact to hot surface