

THOMSON

Digitální HD Satelitní Přijímač


THS815




skylink 
READY

Návod k obsluze
Používateľská príručka
User Manual


Obr. 1a

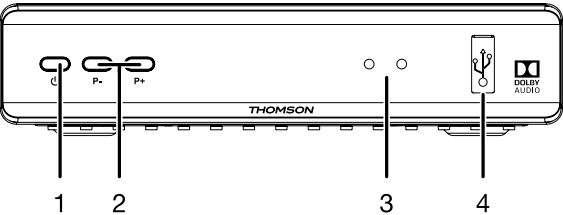


Obr. 1b

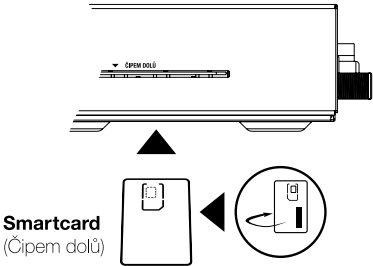


Obr. 2

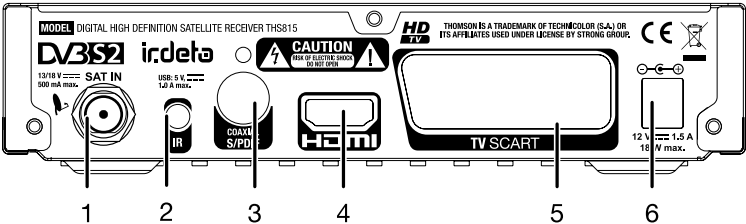

Obr. 3

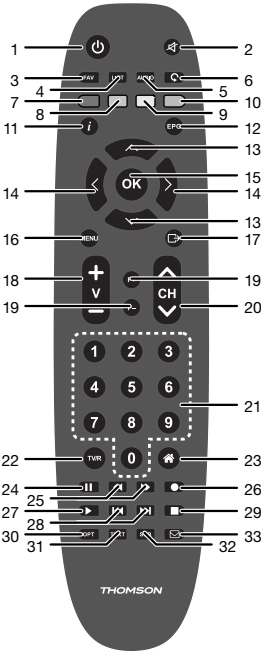


Obr. 4

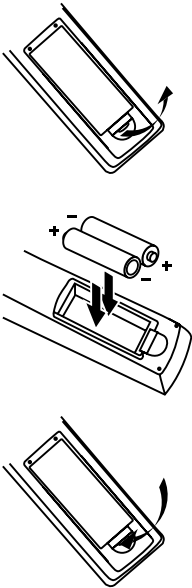


Obr. 5




Obr. 6

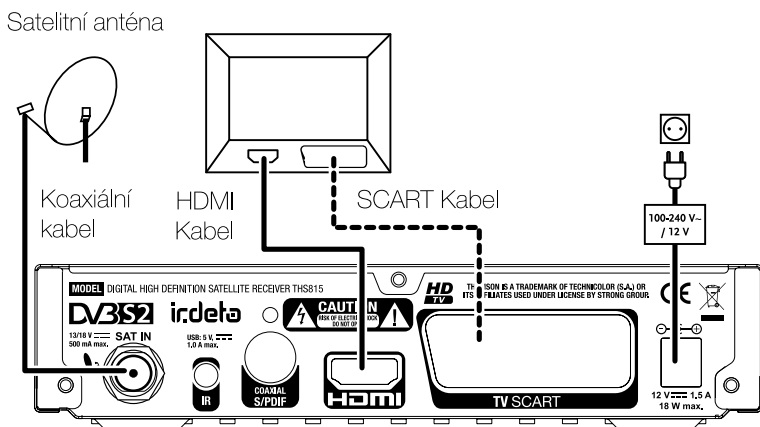


Obr. 7

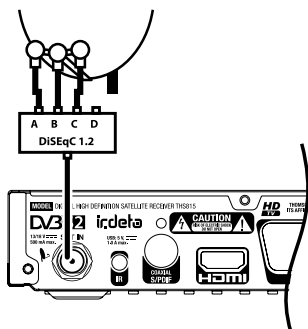

Obr. 8

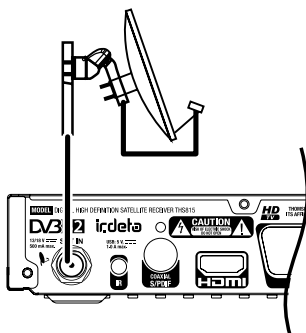

Obr. 9

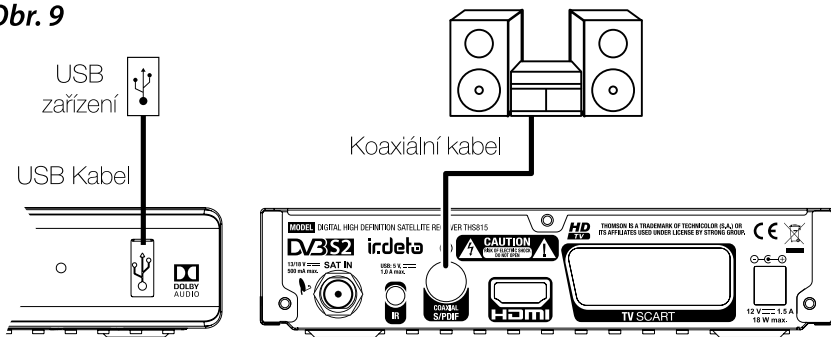

Děkujeme vám, že jste si koupili satelitní přijímač THOMSON s vysokým rozlišením. Přejeme vám, abyste si s ním užili mnoho zábavy při sledování televize. V případě dotazů, týkajících se instalace, kontaktujte svého prodejce nebo pošlete e-mail v angličtině z naší webové stránky www.thomsonstb.net/cz/contact-form.

Ďakujeme, že ste si vybrali satelitný prijímač s vysokým rozlíšením značky THOMSON. Želáme vám, aby ste s ním zažili vynikajúcu TV zábavu.

Ohľadom otázok a asistencie počas inštalácie kontaktujte, prosím, svojho predajcu alebo nám zašlite e-mail v anglickom jazyku z našej webovej stránky www.thomsonstb.net/cz/contact-form.

Thank you for choosing a THOMSON High Definition Satellite Receiver. We wish you great TV entertainment with it. For questions and assistance during the installation please contact your dealer or send us an email in English from our website www.thomsonstb.net/cz/contact-form.

THOMSON

Za výrobu a prodej tohoto produktu je zodpovědná společnost STRONG Group. THOMSON a logo THOMSON jsou ochranné známky společnosti Technicolor (S.A.) nebo jejich přidružených organizací používané společností STRONG Group v rámci licence.

Dodavatel STRONG & Co, Japonsko
Zastoupený STRONG Gesm.b.H
Franz-Josefs-Kai 1
1010 Vídeň, Rakousko
support_at@thomsonstb.net

Jakékoli jiné zde odkazované produkty, služby, společnosti, obchody nebo názvy a loga produktů nejsou společností Technicolor (S.A.) nebo jejími přidruženými organizacemi podporovány ani sponzorovány.

Licenses

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NONCOMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM **MPEG LA, L.L.C.** SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com)

This product contains one or more programmes protected under international and U.S. copyright laws as unpublished works. They are confidential and proprietary to **Dolby Laboratories**. Their reproduction or disclosure, in whole or in part, or the production of derivative works therefrom without the express permission of Dolby Laboratories is prohibited. Copyright 2003-2009 by Dolby Laboratories. All rights reserved.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by **Rovi Corporation**, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering or disassembly is prohibited.

If degraded picture quality is observed while viewing copy-protected pay-per-view programmes, connect the set-top box directly to the TV set. Do not connect through a VCR.

TABLE OF CONTENTS

1.0 INTRODUCTION 3

1.1 Safety Instructions 3

1.2 Storage 4

1.3 Equipment Set-up 4

1.4 Accessories 4

1.5 Usage of external USB devices 4

2.0 YOUR RECEIVER 5

2.1 DEFAULT PIN-CODE: 0000 5

2.2 Front Panel 5

2.3 Side Panel 5

2.4 Rear Panel 5

2.5 Remote Control 5

2.6 Installing the batteries 6

2.7 Using the remote control 6

3.0 CONNECTIONS 6

3.1 Basic connection via HDMI or SCART 6

3.2 Connecting to multiple fixed antennas 7

3.3 Connecting to your motorised dish via DiSEqC 1.2 or GOTO-X 7

3.4 Extended connections for your home entertainment 7

4.0 STARTING UP FOR THE FIRST TIME 7

4.1 Language (Step 1) 7

4.2 Audio and Subtitle Setup (Step 2) 7

4.3 Time (Step 3) 8

4.4 Channel List Selection (Step 4) 8

4.5 Satellite DiSEqC Selection (Step 5) 8

4.6 Programme Search (Step 6) 8

5.0 QUICK GUIDE TO USING YOUR RECEIVER 8

6.0 OPERATION 9

6.1 Changing channels 9

6.2 Info Banner 9

6.3 Selection of audio language 10

6.4 Teletext 10

6.5 Subtitles 10

6.6 Changing the video format 10

6.7 EPG (Electronic Programme Guide) 10

6.8 Recording 10

6.9 Timeshift 11

6.10 Playback of recording 11

7.0 MAIN MENU 12

7.1 Installation 12

7.2 Channels and Timer Manager 14

7.3 Settings 15

7.1 Storage 18

7.2 Tools 19

7.3 Software Update 21

8.0 TROUBLESHOOTING 22

9.0 SPECIFICATIONS 24



1.0 INTRODUCTION

1.1 Safety Instructions

Read all of the instructions before operating the device. Keep these instructions well for later use.

- Only use attachments/accessories specified or provided by the manufacturer (such as the exclusive supply adapter, battery etc.).
- Please refer to the information on the product enclosure for electrical and safety information before installing or operating the apparatus.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspaper, table-cloths, curtains, etc.
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.



- This mark indicates a risk of electric shock.
- To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- Danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent types.
- The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Excessive sound pressure from earphones and headphones can cause hearing loss.
- Listening to music at high volume levels and for extended durations can damage one's hearing.
- In order to reduce the risk of damage to hearing, one should lower the volume to a safe, comfortable level, and reduce the amount of time listening at high levels.
- The mains plug or appliance coupler is used as disconnect device, it shall remain readily operable. When not in use and during movement, please take care of the power cord set, e.g. tie up the power cord set with cable tie or something like that. It shall be free from sharp edges or similar which can cause abrasion of the power cord set. When put into use again, please make sure the power cord is not damaged. The absence of a light indication on the apparatus does not mean that it is fully disconnected from the mains. To disconnect the apparatus completely, the mains plug must be pulled out.
- Attention should be drawn to environmental aspects of battery disposal.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
-  To prevent the spread of fire, keep candles or other open flames away from this product at all times.
-  Equipment with this symbol is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

Precautions

- Never try to open the device. It is dangerous to touch the inside of the device due to high voltages and possible electrical hazards. Opening the device will void the warranty of the product. Refer all maintenance or servicing to suitably qualified personnel.
- When you are connecting cables, be sure that the device is disconnected from the mains supply voltage. Wait a few seconds after switching off the device before you move the device or disconnect any equipment.
- It is a necessity that you only use an approved extension and compatible wiring that is suitable for the electrical power consumption of the installed equipment. Please ensure that the electrical power supply corresponds with the voltage on the electrical identification plate at the back of the device.

Operating Environment

- Do not install this equipment in a confined space such as a bookcase or similar unit.
- Do not use the set near damp, and cold areas, protect the set from overheating.
- Keep away from direct sunlight.
- Do not use the set near dust place.

- Do not place candles near the opening area, to avoid flammable foreign material from entering the device.

WEEE Directive



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

1.2 Storage

Your device has been carefully checked and packed before shipping. When unpacking it, make sure that all the parts are included and keep the packaging away from children. We recommend that you keep the carton during the warranty period, to keep your device perfectly protected in the event of repair or warranty.

1.3 Equipment Set-up

We recommend you to consult a professional installer to set up your equipment. Otherwise, please follow the instructions below:

- Refer to the user manual of your TV and your antenna.
- Make sure that the SCART/HDMI cable and outdoor components are in a good condition and the SCART/HDMI connections are well shielded and from good quality.

This user manual offers complete instructions for installing and using this receiver. The following symbols will serve as follows.

WARNING	Indicates warning information.
NOTE	Indicates any other additional important or helpful information.
MENU	Represents a button on the remote control or the receiver. (Bold characters)
<i>Move to</i>	Represents a menu item within a screen. (<i>Italic characters</i>)

1.4 Accessories

- 1x Installation instructions
- 1x remote control unit
- 2x batteries (AAA type)
- 1x adapter 12 Volt DC, 1,5 Ampère

1.5 Usage of external USB devices


- It is recommended to use USB 2.0 or higher storage devices. If your device is not compatible to USB 2.0 specifications, recording, Time shift and playback with your receiver might not work properly.
- If you are going to use external USB HDD (Hard Disk Drive) please consider that it might be the case that the power specifications exceed the supported output of your receiver (5 V/1 A). If so, please connect your USB HDD to an according external power adapter.
- STRONG cannot guarantee compatibility with all types of USB storage devices.
- It is advised not to store important information on USB storage devices used with the receiver. Always make backups of data on your USB storage device before using it with this receiver. STRONG will not take responsibility for any loss of information or circumstances caused by loss of information.
- Please ensure that either the USB device is already formatted to FAT32, or format the USB device via your receiver, refer to chapter **6.8 Recording**.
- Playback of files cannot be guaranteed although extensions are listed, as it depends on codec, data bit rate and resolution used (all MPEG codec formats are supported).

2.0 YOUR RECEIVER

2.1 DEFAULT PIN-CODE: 0000

2.2 Front Panel

Obr. 1a

- | | |
|--|---|
| 1.  | Switches the receiver ON or into Standby |
| 2. P-/P+ | Changes to the next/previous channel |
| 3. Indicator LED | GREEN indicates that the receiver is currently ON,
RED indicates that the receiver is currently in standby mode. |
| 4. USB | To connect your USB storage device |


2.3 Side Panel

Obr. 1b

- | | |
|-------------------|--|
| 1. Smartcard slot | To insert your valid and activated Irdeto smartcard for proper reception of your desired channel bouquet. For the correct insertion of smartcard please see the insertion drawing. |
|-------------------|--|





 

2.4 Rear Panel








Obr. 2

- | | |
|-------------------|--|
| 1. SAT IN | To connect to the LNB of your satellite antenna for reception of satellite broadcast signal |
| 2. IR | To connect the IR extender |
| 3. S/PDIF (coax.) | To connect to a digital amplifier or home theatre set |
| 4. HDMI | To connect to the HDMI input of your TV set using a good quality HDMI cable |
| 5. TV SCART | To connect to your TV set using a SCART cable |
| 6. Power adapter | To connect to the original included main power adapter
(Input 110 ~240V 50~60 Hz/ Output 12 V DC/ 1,5 A ) |

2.5 Remote Control

Obr. 3

- | | |
|---|---|
| 1.  | Switches the receiver On/Standby |
| 2.  | Mutes audio output of the receiver in every mode incl. videotext |
| 3. FAV | Opens the favourite list selection |
| 4. LIST | Show the currently selected channel list. |
| 5. AUDIO | Opens the list of audio languages |
| 6.  | Opens recent list with previously watched channels |
| 7. RED | In menu for specific functions. |
| 8. GREEN | In menu for specific functions. |
| 9. YELLOW | In menu for specific functions. |
| 10. BLUE | In menu for specific functions. |
| 11. <i>i</i> | Shows the actual channel information |
| 12. EPG | Shows the EPG (Electronic Programme Guide) |
| 13.  | Menu Off: Change channel to next/previous. Menu On: Moves the cursor up/down. |
| 14.  | Menu Off: Decreases/increases the volume level. Menu On: Change settings and navigation in menu. |
| 15. OK | Menu Off: Displays the current channel list. Menu On: Opens the highlighted setting or for confirmation |
| 16. MENU | Opens the main menu and step back in main menu |
| 17.  | Exits from the menu, sub-menu or cancels actions |
| 18. V+/V- | Increases/decreases the volume in all modes |
| 19. P+/P- | Scroll page wise in all lists |

20. CH+/CH-	Channel up/down
21. 0~9	Channel selection or value input
22. TV/R	Toggles between TV and RADIO mode
23. 	No function
24. II	To freeze TV screen in viewing mode if Timeshift is off or in multimedia and HDD manager to pause playback of a file
25. 	Fast rewind/Fast forward
26. 	Starts recording of the current broadcast
27. 	Opens the Timeshift banner in viewing mode if this function is activated in the recording menu. In Multimedia and HDD Manager it starts playback of the selected file.
28. 	During playback mode jumps to the previous / next file
29. 	Stops the current recording, Timeshift or playback of the selected file
30. OPT	Opens quick menu settings for TV ratio and resolution
31. TEXT	Opens the teletext if available
32. SUB	Shows the list of subtitle languages if available
33. 	Gives direct access to mails from your service provider

2.6 Installing the batteries

Obr. 4

Remove the battery cover from the remote control and put 2x AAA size batteries inside the compartment.

The diagram inside the battery compartment shows the correct way to install the batteries.

1. Open the cover
2. Install batteries
3. Close the cover

WARNING:

The batteries should not be recharged, disassembled, electrically short-circuited, be mixed or used with other types of batteries. If rechargeable accumulators instead of batteries are going to be used, we recommend using (e.g. NiMH) types with low self-discharge to ensure long time operation of remote control.

2.7 Using the remote control

Obr. 5

To use the remote control, point it towards the front of the digital receiver. The remote control has a range of up to 5 metres from the receiver, if properly aligned towards the IR eye on the front panel.

NOTE:

The remote control will not operate if its path is blocked or affected by bright/stroboscopic light.

3.0 CONNECTIONS

3.1 Basic connection via HDMI or SCART

Obr. 6.

- a) Connect the LNB or Monoblock for ASTRA 19.2 /ASTRA 23.5 of your satellite antenna to the SAT IN connector of your receiver using a good quality coax cable and suitable 'F-connector' plugs.
- b) Connect one end of a good quality HDMI cable to the HDMI connector of your receiver and the other end to the HDMI input of your TV set.
- c) Plug the power adapter jack to the receiver and the other end to a suitable wall outlet.

Optional: If your TV set doesn't have an HDMI connector you can use the SCART connection instead. In such case connect one end of a good quality SCART cable to the TV SCART of your receiver and the other end to the SCART input of your TV set.

3.2 Connecting to multiple fixed antennas

Obr. 7.

- Connect the LNBs of your fixed antenna to the desired inputs of a DiSEqC 1.0 switch using a good quality coaxial cable and suitable 'F-connectors'.
- Connect the output or "to receiver" output of the DiSEqC 1.0 switch to the SAT IN connector on your receiver using a good quality coaxial cable and suitable 'F-connectors'.
- Plug the power adapter jack to the receiver and the other end to a suitable wall outlet.

3.3 Connecting to your motorised dish via DiSEqC 1.2 or GOTO-X

Obr. 8

Another possibility for watching programmes from multiple satellites is by mounting a dish to a motorized DiSEqC 1.2 or GOTO-X positioner. For the correct setup and mounting of your motorised dish we recommend referring to the advice of a professional satellite equipment installer to ensure correct alignment and function. Please ensure that all connections are fitting well and are correctly assembled, then you only need to connect the "OUT" connector of your positioner to the SAT IN connector on the rear side of your receiver.

3.4 Extended connections for your home entertainment

Obr. 9

- Connect one end of a good quality coaxial audio cable to the S/PDIF output of your receiver and the other end to the coaxial audio input of your home theatre set, amplifier or any other device supporting digital audio.
- Connect your USB 2.0 storage device to this connector by using a good quality USB cable or insert the device directly.

4.0 STARTING UP FOR THE FIRST TIME

Ensure that your satellite signal is of good quality and that all connections are properly setup. In case you encounter difficulties or you have questions, please ask your local dealer for assistance.

It is recommended to follow the *First Time Installation* step by step. It will guide you through the basic setup and installation process. You will enjoy digital HD broadcasts within just a few minutes.

In the unusual/uncommon case that the receiver should not start-up within the *First Time Installation*, please reset the receiver with the factory reset **DEFAULT PIN: 0000**.

Please insert your valid and activated Irdeto smartcard for proper reception of the channel bouquet of your choice.

4.1 Language (Step 1)

After connecting your receiver for the first time, the *Welcome 1st Step: Language* menu will be shown on screen. First, choose your preferred language by using ▲▼. After selecting, confirm by pressing OK to go to *Step 2*.

4.2 Audio and Subtitle Setup (Step 2)

In this next step *Welcome 2nd Step: A/V Output Settings* menu you can choose your preferred audio language and TV screen settings. If you are satisfied with the default settings just proceed by pressing OK at the selection *Next*.

Aspect Ratio Select the TV screen you are using. The options are **16:9** and **4:3**.

Aspect Conversion

Select conversion for the TV screen if needed. The options are *Pan&Scan*, *Letterbox*, *Pillar* or *Full screen*.

First Audio Language

Select the main audio track language which you prefer to hear as first choice. Either press OK for a list with all available languages or use ◀▶ to select a language.

Second Audio Language

Select the second audio track language which you prefer to hear if the first choice not is available.

Subtitle Language

Subtitles support. Select the preferred language. If not needed, keep this selection **Off**.

When all settings have been made, proceed with the selection **Next** and press **OK** to go to **Step 3**.

4.3 Time (Step 3)

In the next step **Welcome 3rd Step: Time** menu you can change the time zone and select if you would like to use one hour extra during summertime. To change settings, use **▲▼** to select **GMT Offset** and select with **◀▶** your time zone with **◀▶**. With the option **Summer Time** you can set **On** for one extra hour during this time of the year. If the time is correct in the default settings or corrections have been made, proceed with the selection **Next** and press **OK**.

4.4 Channel List Selection (Step 4)

In **Welcome 4th Step: Service Searching** menu you can decide which of the Fast Scan channel lists you want to install. Use **▲▼** to highlight your selection in blue. Press **OK** to choose a list and the receiver will go to **Step 5**.

NOTE:

The Fast Scan channel lists are maintained and updated automatically by the service list provider and can't be edited. Editing of channels can only be performed for channels which are saved above channel number 4000 or additionally saved in favourite list(s). If you want to change to another list, you need to do a Factory Reset.

4.5 Satellite DiSEqC Selection (Step 5)

In the menu **Welcome 5th Step: DiSEqC Select** the receiver will do an automatic scan for connected LNBs and suitable satellites. The most common satellites, such as Astra 23.5E, Astra 19.2E, Hot Bird 13.0E and Eutelsat 9.0E, will be scanned for availability. Please, wait for a short time to let the receiver complete the scan and then apply the settings to the next step by pressing **OK** at **Next**. Press **OK** at **Back** if you have forgotten to connect a satellite cable or need to correct anything else that was adjusted before. Also it is possible to select or change connections manually by selecting a satellite and change the port. Once the Auto **DiSEqC Select** is finished and you have confirmed with **OK** you will automatically go to the next last **Step 6** of the Installation Wizard.

4.6 Programme Search (Step 6)

After **Step 5** the receiver will automatically load the channel list from the operator. Please be patient as this takes some time. When the list has been successfully loaded, the installation is finished and the first channel starts to play. To watch and open scrambled channels from the operator, you need to insert the smartcard in the slot on the left side of the receiver with the golden chip facing down.

NOTE:

To ensure reception and to scan the channels from your operator follow the above **Fast Scan** method in these steps. The reception of Astra 23.5E is essential.

5.0 QUICK GUIDE TO USING YOUR RECEIVER

We understand that you can't wait to enjoy your new HD receiver. We do, however, advice you to read the full manual to get the best performance from your THOMSON HD receiver.

To switch your receiver on or to Standby, use the **⏻** button on the remote control or the button on the left-hand side of the front panel. Please, insert your valid and activated Irdeto smartcard for proper reception of the channel bouquet of your choice.

Choose a channel with **▲▼** or the **CH+/CH-** buttons. Alternatively, you can digit the channel number with the **0~9** buttons on the remote control or press **OK** in viewing mode to display the channel list.

The volume can be adjusted with the **V+ / V-** buttons. The usage of **V+ / V-** and **⏻** is possible in ALL menus which a TV picture present in the background and can additionally be used in the videotext mode. In viewing mode you can also use **◀ ▶**.

P+ / P- enables you to scroll page wise in all list modes to make your channel selection or another selection as comfortable as possible.

NOTE:

After switching the receiver to standby it will enter to the *Real Standby* deep sleep mode after 3 minutes. Within this time, you can switch quickly back to On. Starting up from this deep sleep takes approx. 1 min.

6.0 OPERATION

In viewing mode, several features are available to make watching TV a true entertainment. This chapter describes these features. Please also read chapter 7.0 to get familiar with the menu of your new receiver.

6.1 Changing channels

Your new receiver is equipped with three options to switch channels.

1. Via direct access
2. Via the channel list and
3. Via the **CH+ / CH-** or **P- / P+** keys.

6.1.1 Direct access

To gain direct access to a certain channel, simply enter its number with the **0~9** buttons on the remote control. Channel numbers can be up to four digits long. Entering a number with less than four digits is possible. After entering the channel number, wait a few seconds and your receiver will switch to the selected channel.

6.1.2 Channel list alphabet

Press **OK** in viewing mode to display the channel list. Use **▲ ▼** or **P+ / P-** in the channel list to highlight the channel of your choice and press **OK** to switch to the highlighted channel.

The channel list is equipped with a filter function to facilitate finding your favourite channels. While in the channel list, press **RED**. A menu will open with filter options at the left hand side *Sort*, in the middle *Class* and on the right-hand side the channel *Programme* list. Use **▲ ▼** at the left-hand side to select *Sort* to make follow selections:

- | | |
|------------|--|
| ALL | Show all TV or Radio channels in normal order. |
| A-Z | Calls the middle <i>Class</i> banner of the alphabet. Select a letter and at the right-hand side the channels will be shown in this order. |
| FAV | Displays the favourite lists |
| SAT | Opens selection to find a channel from a satellite. |

To return to the original channel list, select a channel from channel list and press **OK** or **⏻**.

6.1.1 Using the **CH+ / CH-** buttons

CH+ or **▲** will switch to a higher channel number.

CH- or **▼** will switch a lower channel number.

6.2 Info Banner

Anytime during viewing mode you can press the **i** button to get information about the current channel and programme*. Press **i** twice to display detailed programme information of the current or next programme. For the current programme information use **◀ ▶** to change between the current and next event information. Press the button a third time to close the info banner.

* Programme information is displayed when available. Availability depends on the broadcast.

6.3 Selection of audio language

Some channels support a choice of different audio formats and/or languages. To select another audio stream, press **AUDIO** in viewing mode. A list with the available audio languages will be displayed. Press **▲▼** to select an audio language and confirm with **OK**. It is also possible to select another audio mode with **◀▶**. When your settings have been made, press **OK** to apply.

6.4 Teletext

Your receiver includes a fully featured videotext (Teletext). To access it, press the **TEXT** button in viewing mode and enter the page number of choice with the **0~9** buttons. You can use also the **▲▼** buttons to step through the videotext pages. In this mode the usage of **V+/V-** and **⌂** is supported as well. If subpages are available for the current page, use **◀▶** to select one of the subpages. Press **⏏** to quit.

6.5 Subtitles

Some channels support a choice of different subtitle languages. Press the **SUB** button in viewing mode to display a list of available subtitle languages.

If you have switched in menu *Language* the *Subtitle Language* to a language selection, you will see these subtitles. If any language is available, it is automatically appearing on screen.

If the setting is *Off* then subtitles are switched off. If you select manually on a channel and subtitles to *On*, it will memorize it as a channel that you would like to have subtitles on.

6.6 Changing the video format

Press **OPT** button to change settings like *Aspect Ratio*, *Aspect Conversion* or adjust *Resolution*. Select a setting with **▲▼** and use **◀▶** to change it. When all settings have been made, press **⏏** to quit.

NOTE:

If you configure an HDMI resolution which isn't supported by your TV, don't press any button (other than **◀▶** again) and the screen will reappear. If the TV can communicate over HDMI to your receiver and the format is not supported, then it will show a popup message.

6.7 EPG (Electronic Programme Guide)

The Electronic Programme Guide (EPG) provides an overview on the current television programme. This information is provided by the respective broadcaster and may not be available for all channels. The Electronic Programme Guide is a very useful function that allows you to watch programme schedules and information on screen and to add events for recording. Press the **EPG** button to open it. Use **▲▼** or **P+/P-** to select a channel and **▶** to move the highlight to the events of this channel. In this part you can also use **▲▼** or **P+/P-** to select or scroll through these. The detailed information about the selected event is shown below. If available, the current parental rating can be found in the event details as well.

Press **GREEN** to display programme information for the next day and **RED** to return to previous day. Simply press **OK** to set a timer for the selected event. If you have connected a HDD, you can also press **●** to set a timer for record.

NOTE:

Availability of EPG data depends on broadcast and can be displayed for up to 14 days. If you are opening the EPG just after the receiver was switched on or changed to another transponder we recommend to wait for a short moment in order to collect the new data.

6.8 Recording

Your new receiver allows you to make a recording of the programme you are watching. Simply connect a USB storage device to the USB entrée, press **●** and the record is starting. The recording icon is shown at the upper left corner of the TV screen. To stop the recording, press **■**.

The receiver automatically reads the remaining time of the current programme from the EPG info. If you want to change the duration for the recording, enter the recording time with the **0~9** buttons. For a recording duration of 45 min, enter 45 and press **OK** or for 1h 30 min, enter 130 and press **OK**.

NOTE: Please connect a USB storage device formatted in FAT32 with sufficient free space before you start a recording. In the menu **Storage Device Setup** you can format the USB-device, if necessary or if you know the device is formatted in another format. Confirm the message displayed in TV-mode to format your USB-device. For recording of an HD broadcast, we strongly recommend to use a high speed USB device.

WARNING: For encrypted channels broadcasting rights may be limited by the provider and recording may not be possible. Recordings via the analogue output (VCR or DVD recorder) could also be blocked. When the Maturity Rating is activated for a certain programme, you must enter the corresponding PIN code **Maturity Rating master PIN: 0000** to be able to record this programme.

6.9 Timeshift

The Timeshift/Instant record function allows you to pause live broadcast and resume watching later or to rewind to the beginning. First, connect a USB device to the USB entrée at the front panel. Then go to menu **DVR Setup** and select option **Timeshift Status** to **Enable**. Exit by pressing **⏮** from this menu to return to live TV. In the background, after 30 seconds, the Timeshift instant recording function will start. This will automatically be repeated after every channel change you make. Press simply on the **⏮** to the freeze broadcast. Press again **⏮** to resume watching or press **▶** button which will call and show the Timeshift banner on screen. In this state you can use the navigations **◀▶** or multimedia buttons to navigate and jump in the shifted record. To show or hide it press the **i** button and press **■** to stop Timeshift.

NOTE: Timeshift only works correctly when a fast USB storage device such as a USB 2.0 HDD is connected to the receiver. Distorted picture and/or audio during Timeshift indicates a too low USB device speed. In the case of Timeshift being activated at channels with a high data rate (HD), we cannot guarantee an accurate playback of the Timeshift file.

WARNING: The broadcasting rights of encrypted channels may be limited by the provider and fast forward/rewind may not be possible or the Timeshift function may be limited.

6.10 Playback of recording

If you have made recordings, you can find these in menu **Storage** and select **Media player**. Press **OK** to open the media player and make sure the selection is **DVR** by using the **◀▶** buttons. The root of USB is shown as **disk_0** and press **OK** to open the record list.

Select the recorded event with **▲▼** and start the playback in PIG screen mode with **OK**. Press again **OK** to start playback in full screen modes. During this playback you can press **i** to call the playback screen banner. Here you can select options to step, to rewind or jump forward and to read details of event and time.

WARNING: For encrypted channels broadcasting rights may be limited by the provider, which is why some channels are restricted during playback to fast forward/rewind, or possibly limited in another way. When the Maturity Rating is activated for a certain programme, you must enter the corresponding PIN code **Maturity Rating master PIN: 0000** to be able to record this programme.

NOTE: The default maturity rating master PIN can be changed by the operator.

7.0 MAIN MENU

Press **MENU** in viewing mode to display the menu. All important settings and features of your receiver can be operated from this menu. It consists of the following sub-menus: *Installation*, *Channel*, *Settings*, *Storage* and *Tools*.

Use ◀▶ to select a sub-menu and ▲▼ to choose an option. Press **OK** to advance to the chosen submenu.

7.1 Installation

This menu allows you to change satellite settings and to search for channels. Furthermore, you can adjust important settings for your receiver. It consists of the following sub-menus: *Installation Guide*, *Dish Settings*, *Motor Settings*, *Channel Search*, *Manual Search* and *FST/FNT Search*. Choose a sub menu with ▲▼ and press **OK** to advance.

7.1.1 Installation Guide

Use this menu to follow the first installation wizard again as you did the first time to install the receiver. It will guide you through the *Welcome 1st Step: Language* to the last Step6 to search for channels.

7.1.2 Dish Settings

Use this menu to change or add settings for an already installed or a new satellite and to configure its parameters. Here you can configure which type of DiSEqC you are using, use ◀▶ to change. In case your setup differs from the default setting, you can adjust *DiSEqC* to any port you would like. If you use *DiSEqC OFF* you will only be able to setup one satellite. For usage with *DiSEqC 1.0* you can setup up to 4 satellite positions. If you use *DiSEqC 1.1* you can setup up to 16 satellites positions.

<i>Satellite</i>	Press OK to open the list of available satellites and chose the preferred satellite with ▲▼ or P+/P- and confirm by pressing OK .
<i>LNB Power</i>	Change the LNB power with ◀▶ if necessary.
<i>LNB Type</i>	Shows which type of LNB is supported <i>universal LNB</i> .
<i>LNB Freq.</i>	Show the Local Oscillator Frequency of the Universal LNB <i>9750/10600</i> .
<i>22KHz Tone</i>	This setting shows that it is set to automatically. <i>Auto</i> .
<i>DiSEqC 1.0</i>	Select a port <i>1 to 4</i> according to the connected satellite dish.
<i>DiSEqC 1.1</i>	Select a port <i>1 to 16</i> according to the connected satellite dish.
<i>Transponder</i>	Press OK to open the list of available transponders for the chosen satellite, in order to check your reception or align the antenna.

Press the **RED** button to start scanning on the selected transponder if selection is on *Transponder*.

Press the **RED** button to start scanning on the whole satellite if selection is on *Satellite*.

7.1.3 Motor Settings

If you use *DiSEqC 1.2* or *GOTO-X*, you can install satellites which are received by a motorized dish. For setup and installation as well as for correct setup of the positions in the receiver we highly recommend taking the advice of a professional and experienced dish installer. The menu allows you to configure the motor type and to adjust the motor position for the satellite which you want to receive.

<i>Satellite</i>	Press OK to open the list of available satellites and choose a satellite with ▲▼ or P+/P- and confirm by pressing OK .
<i>Transponder</i>	Press OK to open the list of available transponders if you need to adjust a transponder for the above selected satellite.
<i>DiSEqC Motor</i>	Select between type <i>DiSEqC 1.2</i> and <i>GOTO-X</i> or <i>Off</i> .

Selection on DiSEqC 1.2

Move: Press ◀▶ to move the dish to East or West. Carefully move until you can observe that both signal bars show acceptable reception levels. When you have found the selected satellite press ⇐ and select *Yes* to save the position.

Move fine: Here you can move the motor in small steps to adjust it more precisely.

- Limit:** Press **OK** to open this submenu in order to adjust mechanical limits for your dish. This is only necessary if your dish could interfere with a wall, tree, or similar mechanical margins.
- Go To: Position** Press **OK** to move the motor to the centre position of 0 degrees. This is only needed for the first time to adjust the dish correctly or select a number from a position.
- Save/Recalculation**
To store and save a position or do a recalculation.

Selection on GOTO-X

Configure the motor position through the GOTO-X function. Enter your geographical position. The motor is able to find all available satellite positions itself.

Antenna Position:

- Press **OK** to open submenu.
Use the **0 ~ 9** buttons to enter the value of your longitude.
Select **East** or **West**.
Use the **0 ~ 9** buttons to enter the value of your latitude.

Select **North** or **South**. At the end select **Save** and press

OK to confirm the values.

GOTO: Press **OK** to move the motor to the wanted position

NOTE: Detailed information about correct geographical values for your location can be found on websites like dishpointer.com, itouchmap.com or other reliable sources.

7.1.4 Channel Search

Use this menu to perform an automatic, network or transponder channel search or to search on all satellites that have been setup. Use **▲▼** to highlight an item and **◀▶** to change settings. Below are the settings listed you can find in the search method selection.

Satellite Select the satellite on which you would like to search for channels.

Transponder list

Select a specific transponder you would like to search on. By pressing **◀▶** you can change between the transponders referring to the selected satellite, you can also press **OK** to list and select with **▲▼** or **P+/P-**. Afterwards press **OK** to choose. Press **RED** to **Edit TP**, with **BLUE** you can **Delete TP** and with **GREEN** you can enter data for a new transponder **Add TP**. Details of the transponder are shown on screen.

Scan Mode Here you can decide which type of channels you want to scan for: Either scan all channels **ALL**, for Free-To Air only **FTA** or use **Scramble** to scan for scrambled channels only.

Channel Type **TV & Radio** will scan for TV and radio channels, **TV** for TV channels only and **Radio** for radio channels only.

Search Type Select if you would like to search all or only one satellite, Manual search only on one Transponder or on a Network.

Scanning all the selected satellites is only available if more than one satellite has been setup.

When all settings have been made, press **OK** at the preferred scan method to start the scan process or **↵** to quit without scanning. All new found channels will be stored at the end of the channel list.

NOTE: NIT (Network Identification Table): This option will scan for the NIT table of the satellite and allows you to receive new appeared channels.

NOTE: When you want to add technical data for a new transponder we recommend verifying it by consulting websites like: www.lyngsat.com or www.kingofsat.net or you can refer to professional publications.

7.1.5 Manual Search

This submenu allows to search on a specific transponder and to enter values for it. You can also create new satellites with corresponding transponder data base.

- Satellite** Select the satellite to which you would like to add a new transponder. If you select **NewSat** then you can start to create a new satellite.
- Transponder** By pressing ◀ ▶ you can change between the transponders referring to the selected satellite. Select **TP new** to enter in the next step new transponder values.
- Frequency:** Enter a frequency with the 0 ~ 9 buttons.
- Symbol rate:** Enter the required symbol rate with the 0 ~ 9 buttons.
- Polarization:** The polarization can be changed with ◀ ▶.
- Search One TP** Press **OK** to start to search only this transponder.

7.1.6 FST/FNT Search

The submenu allows you to search again manually for the broadcaster's (FST) channel list. This option you can use to search when new channels are broadcasting but not installed yet. Simply select this option and press **OK** to start.

7.2 Channels and Timer Manager

Select a menu item you'd like to manage **TV Manager**, **Radio Manager**, **Delete all** and **Timer Manager**. Use ▲ ▼ to highlight the submenu of choice and press **OK** to select.

7.2.1 TV Manager

The menu allows you to create Favourite lists, Move channels in order, Lock channels with PIN protection and Delete channels from the TV list.

7.2.1.1 Adding channels to favourite lists

Channels from the **Channel List** can be added to up to 8 different favourite groups. Press the red button **Fav** and select the wanted FAV group and press 2 x times ▶. Use ▲ ▼ to select a channel you wish to add to a favourite group. When the highlight is on the channel of your choice, press **OK**. In the middle column will you see your new created favourite list. If you would like to remove a channel from the favourite list, select that channel in the **Favor list** and press **OK** to delete.

Sorting of selected FAV list is possible by selecting the channel and press the yellow **Move** button. Behind the selected channel the move icon will be shown. Use ▲ ▼ to select the new position. Press the yellow **Move** button again. Select another channel to move or press ⇨ to finalize the process. A confirmation banner will pop up. Select **OK** to save the changes or **Cancel** to discard.

7.2.1.2 Move channels in Program channel list

Moving position of the channels belonging to the Fast Scan list of the operator below number 4000 is not possible. Moving of channels in the Program list above 4000 is possible.

In TV manager select under **Operation** the option **Move**. Use ▶ to jump to the Program List and use ▲ ▼ to select the channel you wish to move and press **OK** to select. It is possible to move one at the same time. All channels you would like to move are shown under column **Selected**.

Once ready select a group or single channel. Move the cursor in the Program List to the position where all of the single channel(s) need to move to. Press **Yellow Move** button to move these into the Program List below the selected position. Repeat above steps if you would like to move more channels.

Once ready press ⇨ to finalize the process. A confirmation banner will pop up. Select **OK** to save the changes or **Cancel** to discard.

7.2.1.3 Lock channels

Protect channels with PIN code before you can watch them. Select the option **Lock** and press ▶ to jump to the Programme List. Use ▲ ▼ to select a channel you wish to protect. When the highlight is on the channel of your choice, press **OK**. In the middle section you will see your protected channels

list. If you would like to remove a channel from the list, then press ◀▶ and select that channel and press OK to unselect.

7.2.1.4 Delete channels

Delete a channel or channels permanently from the main channel list (until you make a new search). Select the option **Delete** and press ▶. Use ▲▼ to select the channel you wish to delete. When the highlight is on that channel, press OK. In the middle section you will find the selection to delete from the channel list. If you are ready then press ⇐ and confirm.

7.2.2 Radio Manager

Create favourite lists, move channels in order, lock channels with PIN protection and delete channels from radio list. The functions of handling are the same as in the TV Manager as subscribed above. The only difference is that in **Radio manager** there is no video information, so it will always display the radio background on the preview screen.

7.2.3 Delete All

Here you can delete all channels, all TV channels or all Radio channels. To clear these channels from memory of the receiver, you have to enter your PIN code (**Default PIN: 0000**), then use ▲▼ to select **OK** to execute or **Cancel** to return to the menu. Afterwards you need to press **MENU** select the **First Time Installation** or **FST/FNT Search** to install channels again.

7.2.4 Timer

The menu allows you to setup up to 16 timer events. Timers can be used to schedule recordings or to switch to a certain channel at a specific time. It reminds you of watching your favourite events. Above the settings, the current date and time is displayed.

Use ▲▼ to select **Timer Manager** from the **Channel** menu and press OK to enter.

The receiver will display a list with 16 timers, followed by their respective status. Select the timer you wish to set or change with ▲▼ and press OK to proceed. The timer setup menu will now be displayed.

The following settings are available:

Timer Mode: Choose between **Once** (Timer will wake-up the receiver) or **Off** (Timer will not start the scheduled event).

Also you can select **Monday-Friday**, **Daily** and **Weekly**.

Timer Service: Choose between **Wake up** to wake-up the receiver, Choose **Record** to time a recording to an external USB device.

Channel: Press OK to open the channel list and use ▲▼ to select the channel where the timer will wake up with.

Date: Use the 0~9 buttons to enter the date for the timed event.

Time: Use the 0~9 buttons to enter the start time.

Duration: Use the 0~9 buttons to enter the timer duration.

When all preferred settings are made, press ⇐ to exit and save. To switch off the timer, select the timer event again and select in **Timer Status** the option **Off**.

NOTE:

If one timer is in conflict with another one or if the set time already has passed, the receiver will display a warning and ask how to solve the conflict.

7.3 Settings

Use the **Settings** menu to configure settings for background functions, audio, video, look and feel of your receiver. Choose a setting with ▲▼ and press OK to list the possibilities or use ◀▶ to change the value of the highlighted setting. Please also read the displayed instructions for each screen carefully. They will help you to adjust the settings correctly and easily.

7.3.1 System Settings

Auto PMT Monitor:

Auto Program Mapping Table means, if set to **On** it can switch automatically to local area channels when those start broadcasting. Depending on broadcaster.

Auto NIT Monitor:

Auto Network Information Table means, If set to **On** it will update channels automatically to the network. Depending on broadcaster.

Auto Standby: This function is a new power saving feature that helps reducing power consumption. It switches the receiver to standby when no command has been received from the remote control for at least the set time. Possible settings are: **1H- 6H** and **OFF** to deactivate.

S/PDIF Audio Output:

Toggles between **PCM** and **RAW** (Bitstream) output. When **PCM** is selected, all digital audio will be converted to stereo audio. **RAW** enables you to listen or transfer Dolby® Digital/Dolby® audio to a home cinema set through coaxial S/PDIF. (Not Dolby® Digital Plus)

HDMI Audio Output:

Toggles between **PCM** and **RAW** (Bitstream) output. When **PCM** is selected, all digital audio will be converted to stereo audio. **RAW** enables you to listen or transfer Dolby® Digital/Dolby® Digital Plus* audio to the TV via HDMI or to a home cinema set.

Standby After Record:


This function allows you to determine whether the receiver should switch to standby after the end of the programmed timer(s) **On**, or whether the receiver should remain switched on **Off**.

Program List Display:

Choose between **Advanced** for program list with 3 rows with 47 channels or **Simple** Programme list with 1 row with 10 channels and sort functions.

Dolby Audio First

Set to **On** if you would like to choose Dolby audio only if available on a channel.

Press  to leave the **System Settings** menu.

7.3.2 Display

In this submenu **Display Settings** you can setup which screen type you have connected and how the best way it is shown. The following parameters can you adjust:

Resolution **576i, 576p, 720p, 1080i or 1080p**, to adjust the optimum resolution your TV set supports.

Aspect Ratio **Auto, 16:9 or 4:3**, depending on the type of your TV screen.

Aspect Conversion **Pan Scan, Letterbox, Pillar Box or Full Screen**, to choose the preferred picture format.





Transparency Make the live TV video visible below the menu and information banner.

Banner Time Select the time-out of the information banner.

CEC Select **On** if you would like to share basic remote control functions like Standby and Volume over the HDMI CEC control.

These remote commands are send over the HDMI cable to the connected device.

7.3.3 Lock

This menu enables you to define and edit your PIN code, set Installation or Menu Lock. Choose a setting with   and press **OK** to list the possibilities or use   to change the value of the highlighted setting. Use the **0~9** buttons to access this menu options below. Enter the (**Default PIN: 0000**) if you have not changed it.

Menu Lock Select **ON** or **OFF**. Menu Lock allows you to lock the access to menus. Immediately if you press menu a PIN request banner will pop-up.

Programme Lock

Select **ON** or **OFF**. **Programme Lock** allows you to lock or unlock the access to channels which have a LOCK set before.

Change PIN Use **OK** to enter the menu to Change PIN code.

New PIN Code Enter the PIN code of choice with the **0~9** buttons.
(Make a note of it)

Confirm PIN Code

Use the **0~9** buttons to confirm your new PIN code. If you confirmed with the correct PIN code a banner will pop up with a message and press **OK** to store and exit from this menu.

7.3.4 Parental Rating

Parental Lock allows you to prevent children from watching adult channels if these channels support EPG or submit EPG based parental rate for your country. Adjust the **Parental Rate** accordingly.

Lock Level Use **◀▶** to change these settings. Following rates are available: **Lock None**, **Lock All**, **3** up to **18** years. Depending on the adjusted setting you will have to enter your PIN code when switching through channels which support EPG or submit EPG based parental rate.

Not Rated Content

Some channels do not carry parental information at all. The receiver cannot protect to watch these channels with PIN code. If you would like to block these, then select **Blocked**.

NOTE:

If you are using another Parental Lock Level function than **Lock None**, all FTA channels which support EPG or submit EPG based parental rate will require entering of your PIN code (**Default PIN: 0000**).

7.3.5 Local Time

Setup your time zone for clock/time in your menu and system.

GMT Offset: Allows you to adjust the time zone you live in. The **GMT Offset** range is "-11:00 ~ +12:00".

Summer Time: Select **Off** or **On** to add one extra hour for summer time during the Daylight Saving period.

7.3.6 Language

In this submenu you can setup the language used in the menus, preferred audio and subtitles.

Language: Change the language for the On-Screen-Display, use **◀▶** to select your preferred language. It affects the menu language of your receiver so all menus and messages will be displayed in the chosen language.

First Audio Language

Either use **OK** for a list with all available languages or use **◀▶** to select one.

Second Audio Language

Either use **OK** for a list with all available languages or use **◀▶** to select one.

Subtitle Language

Use **◀▶** to select a preferred language for DVB subtitle display or select **Off** for non support automatically of subtitles.

Audio Description:

Set to **On** if you would like to have support of an extra audio track which subscribes the contents on screen. Useful for the visual impaired.

Audio Description Language

Either use **OK** for a list with all available languages or use **◀▶** to select one.

Audio Description Volume offset:

Select the volume for the AD audio track.

7.1 Storage

The Storage menu consists of the following submenus: *Media player*, *DVR Setup*, *Storage Device Setup* and *USB Speed Check*. Please insert first a USB device and use ▲▼ to highlight the menu of choice and press OK to enter. Press ⇐ to quit.

7.1.1 Media Player

This function allows playback of different kind of files from the connected USB storage device. In the *Multimedia* menu, select *DVR* and press OK to enter the menu to playback your made records. Select *Media* and press OK to enter the menu to play all kind of video formats. Select *Music* to playback files as MP3, OGG and FLAC formats. Select *Pictures* to playback your favourite pictures in JPG or BMP format.

When entering the player, the highlight is on the root folder of USB storage device. Press OK to open the directory respectively its folders/subfolders. On screen in the right upper corner is the root of folders shown to make navigation easier. Press ▲▼ to select a file or folder and then press OK to open the folder/subfolder (if applicable) or start playback of the file. Press the ⇐ button to exit or press OK to open in full screen.

Use the buttons like described below in order to choose functions during the different playback modes.

General:

- ▶ Start of playback of multimedia file.
- II To pause the playback of multimedia file.
- ◀▶ Fast rewind/fast forward.
- GREEN Jump Jump function in playback modes of multimedia files.
- Stop playback.

DVR:

- SUB Subtitle: During the playback of a record with subtitles, press the button SUB Subtitle to enter the subtitle menu.
- GREEN Step: Press the Green button Step to open the *Jump By Time* menu. You can select a time where you'd like to jump to.
- i Hide: Press the i button Hide to remove or call the timeline information banner.

Media:

- GREEN Jump: Press the Green button Jump to open the *Jump By Time* menu. You can select a time where you'd like to jump to.
- INFO Hide: Press the i button Hide to remove or call the timeline information banner.

Music:

- ▲▼: Enter the folder with music files. Use the ▲▼ to select a file and press ▶ or OK button to start playback. To stop playback press ■.

Pictures:

- ▲▼: Enter the folder with pictures files. Use the ▲▼ to select a picture. If format is supported then in the small PIP screen it shows the picture. Press OK button to watch it in full screen mode.
- RED Interval: Before the playback of a picture in full screen, you can setup a slideshow / diashow. Press the Red button Interval to enter the sub option menu *Select time interval*. Select time of the slide show or switch this function off. After you select a time, press OK and show starts to play. Press the ⇐ button to stop.

7.1.2 DVR setup

This menu allows you to setup settings for Timeshift functions, DVR Timer start and stop handlings. The following settings are available:

Timeshift Status:

Choose **Enable** to activate the Timeshift function and Record DVR function will be switched Off.

Choose **Disable** to deactivate the Timeshift function and Record PVR function will be switched On.

Timeshift Step: Use the **0~9** buttons to enter the time steps in playback

Timeshift Duration:

Use the **0~9** buttons to enter the total time space you would like to use on the external connected USB device.

Start record earlier:

Select a time to start record earlier as programmed. This is a nice function if you booked events directly from EPG which can be sometimes wrong in time, due to actualities.

End record later:

Select a time to stop the record later as programmed.

REC Icon:

Select between **5 Sec** 5 seconds or **10 Sec** 10 seconds to show the record Icon on screen after you start record. Select **On** for always show the Icon during the record.

Playback Repeat:

Select between **On** to start over again playback of record you watching. Select **Off** to stop normal at the end.

7.1.3 Storage Device Setup

This option shows relevant information about the connected USB device. In this menu you can also format your USB storage device and safely remove.

Select **Storage Device Setup** in the **Storage** menu and press **OK** to enter.

All details as free and used space sizes and used file system are shown.

Press the **Red Safely Remove** button and press **OK** to safely disconnect the USB device. The receiver will display a message indicating that you can now safely remove your storage device from the receiver. Press the **Blue Format USB Device button** to format the connected USB device.

Please, enter your PIN code to access the menu and press **OK** to start formatting.

Press **↩** to leave this menu.

NOTE:

After performing the **Safely Remove** function, the USB device is no longer accessible by your receiver. To gain access to your storage device again, re-insert it or switch the receiver to standby and on-mode again.

WARNING:

Formatting will permanently delete ALL data stored on the connected device. Please make a backup copy of all data you wish to keep before entering the **Format** menu. STRONG cannot be held responsible for loss of data from USB devices used with this receiver.

NOTE:

It is possible to use USB storage devices already formatted in NTFS.

7.2 Tools

In this menu you can find information about the software and hardware version of your receiver. A customer support agent might ask for the information given in this screen. Press **↩** to return to the menu.

7.2.1 Receiver Information

This menu allows you to check information about your receiver model, software, serial number, user's ID and CSSN number.

7.2.2 Factory Default Reset

A factory default reset will restore your receiver to the factory default settings. It will delete all settings and channels. To reset the receiver, you have to enter your PIN code (**Default PIN: 0000**), then use

▲▼ to select **OK** to execute or **Cancel** to return to the menu. Afterwards the receiver will restart with the *First Time Installation*.

WARNING: A factory reset will permanently delete all your personal settings, timers and stored channels. Please consider this before you perform a factory reset.

7.2.3 CA Information

This menu allows you to check information about your (CA) Conditional Access, Service Status, Loader version, Mailbox, set up Maturity Rating and Update of software.

7.2.3.1 Smartcard Status

Your receiver is equipped with a smartcard slot which allows to access Irdeto encrypted services. Depending on your smartcard, you can read different information which might also be consulted from your broadcaster in order to give the most effective support. The programmes that can be descrambled are determined by the smartcard, respectively the subscription which you use. This sub menu gives you access to the advanced functions and information in respect to your Irdeto smartcard if it is inserted.

7.2.3.2 Service Status

This sub menu gives access to detailed information about access keys (EMM) for your bouquet.

7.2.3.3 Loader Status

This sub menu gives access to detailed information about Irdeto loader and version.

7.2.3.4 Mailbox

This menu allows access to Irdeto mails. It is used for sending important information from the broadcaster/content provider to you. When you receive a mail you will get a message immediately displayed on screen. After the mail has been removed from the screen you can find the messages in this menu and you have the possibility to delete emails by using the **BLUE Delete** button or to delete all of them by using **RED Delete ALL**.

7.2.3.5 Maturity Rating

In this menu you can define a new maturity rating group or delete an existing maturity rating group. Enter the **MATURITY Rating PIN: given by the operator** in order to access the menu. In the Maturity Rating menu, you can use the broadcasted maturity rate via the CA (Conditional Access) System. This means that whenever an Irdeto scrambled channel broadcasts a defined rate for a movie or special event you can use this possibility to protect children from watching content which is not appropriate for their age. These PIN codes are also used to start playback of a recording with protection. The availability and access of this menu depends on usage by the broadcaster.

Maturity Rating Master PIN:

Use the **0~9** buttons to access this menu **Maturity Rating**.

Maturity Rating: Use ▲▼ to select a **Profile** and press **OK** to create new age. If successful then below PIN code will be displayed behind the created age.

Change Age

Profile -: Here you will see the group displayed, starting with "00".

Age: Use the **0~9** to enter the age between **4 – 18** years.

When finished press ▲▼ to select **Save** to apply or **Cancel** to return to the menu.

If you have saved the age setting you will get a generated PIN code displayed which has to be noted in order to enable the person to watch content for his or her age.

Delete maturity rating group

Press ▲▼ to change to the maturity rating group which you want to delete and then press **RED** to delete it.

Press **GREEN** to Enable or Disable all the maturity rating groups in one time.

NOTE:

For watching a certain movie the receiver will request entering of the maturity rating PIN code. You can create up to 6 different profiles which can also be deleted again. Whenever a profile for a specific age is going to be set, please consider that the PIN code for this age is generated for this age only and should be noted by an adult person. Generally, you can use the Master PIN for every age restriction and by entering it you can also check the PIN for the different maturity rating groups.

WARNING:

The maturity rating function might have influence on the timer recording behaviour if the maturity rate for a programmed event differs to the rate of a previous movie. This will lead to a new PIN enter request or the receiver enters the auto standby mode in the meantime and so also requests the PIN. The master PIN of your smartcard can only be changed via the broadcaster.

7.3 Software Update

Update the receiver via USB or OTA (download via satellite). If these updates are available, then they will be executed by pressing **OK**.

7.3.1 USB Update

This function allows you to perform a software update with a USB storage device.

Download the software and update instructions from our website www.thomsonstb.net and unzip it on your PC. Then load the file to the root directory of your correctly formatted USB storage device and connect it to your receiver. Turn on the receiver and wait until the USB device is successfully detected.

Press **OK** in the menu **USB Update** and confirm the displayed message, then wait until the software updates and loading process begins. After the loading process has been started successfully (a progress banner is displayed) you can disconnect the USB storage device (or wait until the update is fully loaded)! Please disconnect the USB device after a successful update in order to restart the receiver!

WARNING:

NEVER disconnect the receiver from the mains or switch the power OFF during the update procedure. It can damage your receiver and warranty will be void! In case of an USB software update please consider that the receiver may delete all channels, data and user settings in certain cases.

NOTE:

The above mentioned USB functions require a correctly formatted USB storage device to be connected to the receiver.

7.3.2 OTA Software Update

The OTA (Over the Air) function check automatically if software updates available on satellite. Please ask your local dealer or visit our website www.thomsonstb.net for information.

If there is new software available via satellite, the receiver will show a message banner.



Follow all instructions that are displayed on screen. If an update is available choose **Download** with **▲▼** and press **OK** to start the update process.

WARNING:

After the update the receiver restarts automatically! During the update process NEVER disconnect the receiver from the mains, switch power OFF or disconnect the receiver from the antenna cable! This can damage your receiver and warranty will be void! In case of an OTA update please consider that the receiver in certain cases may delete all channels, data and user settings.

8.0 TROUBLESHOOTING

There may be various reasons for abnormal operation of the receiver. Please check the receiver according to the procedures shown below. If the receiver does not work properly after checking it, please contact your local service line or THOMSON dealer. Alternatively, you can send a support mail via our website: www.thomsonstb.net. NEVER open or disassemble your receiver. This may cause a dangerous situation and will void the warranty.

Symptom	Cause	Remedy
The status LED on the front panel does not light up.	The power adapter is not plugged in.	Check that the power adapter is plugged into the wall outlet.
No picture No sound No menu	Wrong input selected/ bad connection or cable. Connectors are not fully inserted.	Check that the correct TV input is selected. HDMI inputs for most TV screens are not automatically switched to the correct HDMI input. Make sure the connectors are properly connected to the TV and receiver.
	TV power OFF.	Turn ON the TV.
No sound	Audio is muted on the TV or the receiver.	Press  or  /V+ on the TV or the receiver remote control.
Macroblockings/ audio video interruptions	Audio and video are disturbed and do not run smoothly on some channels. This can be frequency dependent.	Interfering devices are too close to the receiver. Such devices can be a microwave, mobile phones or other radiating devices. Switch OFF the suspected device or move it further away.
No picture	The HDMI resolution is too high for the used TV screen.	Connect your receiver temporarily with a SCART cable to see the menu again and change the HDMI resolution to a lower value.
Message "No signal".	The receiver can't receive the signal.	The weather is very bad and the satellite signals are temporary blocked. The satellite dish is misaligned or distorted. Check the antenna cable, replace the cable, or connect the cable tightly to the receiver. Check in the menu if you have both good signal and quality levels. Trees grow between the dish and satellite position (the sky must be 100% clear)
	Incorrect values of some tuner parameters.	Set the values of the tuner parameters correctly in the menu Installation > Antenna Setup/Channel Search . Helpful websites are: http://de.kingofsat.net/ http://www.lyngsat.com/
No access to scrambled services	Expired subscription. Smartcard awaiting new authorisation. No subscription for the selected channel.	Check your current subscription status in Conditional Access > Irdeto CA System > Service Status together with your service provider. If the receiver was powered off/disconnected from the signal for a longer time it can take ~1-2h until a valid card is activated again. Switch to another channel.

Symptom	Cause	Remedy
	The card is wrongly inserted	Insert the smartcard with the golden chip down and forwards into the reader slot.
	Another smartcard is used.	Insert the correct smartcard type or check with the operator if the smartcard married function is switch on.
The remote control does not work	The batteries of the remote control are not inserted, wrongly inserted or exhausted. Fluorescent lamps are disturbing the remote IR signal. The distance or angle between the remote control and the receiver is too far or too wide.	Check whether the batteries are inserted correctly or exhausted, if so replace the batteries in the remote control. Switch OFF the suspected lamp. Try a smaller distance or angle between the remote control and the receiver.
The USB storage device is not working properly.	Formatted incorrectly. An HDD with too much folders or partitions is connected. USB 1.1 device connected.	Format the USB device by the receiver in the menu Storage > Storage Device setup . HDDs from above 500 Gb or HDDs with more partitions might need longer time to be detected. The receiver might not work properly with such an USB device or can't guarantee functionality with all available USB devices.
The receiver switches to Standby automatically.	The Auto Standby function is activated and reached the adjusted time (default 3h).	In the menu System you can adjust the Auto Standby time or disable it.
DVR record	Playback of recordings made on (another) receiver is not possible.	Based on license reasons and rights, playback is possible only on the receiver on which the recording was made.
DVR record Start of a recording not possible.	Time shift / Instant recording is set to ON.	Select in DVR setup menu the Time shift Status to Disabled.
DVR playback	MR PIN code is not accepted.	The operator can change the playback PIN code on smartcards. (Maturity Rate PIN). Please, contact your operator.

9.0 SPECIFICATIONS

Demodulator

Demodulation:	QPSK, 8PSK (integrated in processor)
Input symbol rate:	2 ~ 45 MBaud
	QPSK: 1/2, 3/5, 2/3, 3/4, 5/6, 8/9 & 9/10
	8PSK: 3/5, 2/3, 3/4, 5/6, 8/9 & 9/10

Video

Profile level:	MPEG-4, H.264/AVC
Aspect ratio:	4:3 and 16:9, Pan & Scan, Letterbox, combined, Full Screen
Video output:	Scart: 576i, CVBS/RGB
	HDMI: 576i, 576p, 720p, 1080i, 1080p with HDCP
Frame rate:	25 Hz for PAL

Audio

Audio decoding:	MPEG-1 Layer 1 & 2, Dolby Downmix
Audio mode:	Mono L/R, Stereo
Audio support:	Dolby® Digital Plus*
Transcoding for HDMI and S/PDIF:	Dolby® Digital Plus to Dolby® Digital*

* Dolby Digital Plus, Dolby Digital and the double-D symbol are registered trademarks of Dolby Laboratories

Tuner

Type:	1 F Type, IEC169-24, Female
Input frequency range:	950 – 2150 MHz
RF impedance:	75 Ohm unbalanced
Signal level:	-65 dBm ~ -20 dBm
LNB power:	13/18 V DC (+/- 1 V), max. 500 mA, overload protected
DiSEqC version:	1.0, 1.1, 1.2 and GotoX

Smartcard Reader

Number of slots:	1
Standard:	ISO 7816
Irdeto Version:	3.17.x

System & Memory

Main processor:	MSD 5029
-----------------	----------

Multimedia

Audio playback:	MP3*
Picture view:	JPG, JPEG, BMP*

* Playback of files cannot be guaranteed although extensions are listed, as it depends on codec, data bit rate and resolution used (all MPEG codec formats are supported).

Connectors

SAT IN
HDMI
TV SCART
Digital audio S/PDIF coaxial
USB port 2.0, type A5 V/1 A (max.)
IR
DC main power (12 V/1.5 A)

General Data

Power supply:	100 - 240 V AC 50/60 Hz
Input voltage:	12 V DC, 1.5 A
Power consumption:	max.18 W, typ.7 W
Power consumption in standby:	max. 0.5 W
Operating temperature:	0 °C to +40 °C
Storage temperature:	-10 °C to +50 °C
Operating humidity range:	10 ~ 85% RH, non-condensing
Size (W x D x H) in mm:	170 x 128 x 39
Weight:	0.36 kg

STRONG declares that this item complies with the basic requirements and other relevant regulations of directives CE 2004/108/EC and 73/23/EC, RoHS 2002/95/EC

This product has been manufactured and sold under the responsibility of STRONG Group. THOMSON and the THOMSON logo are trademarks of Technicolor (S.A.) or its affiliates and are used under license by STRONG Group. Any other product, service, company, trade name and logo referenced herein are neither endorsed nor sponsored by Technicolor (S.A.) or its affiliates..

Subject to alterations. In consequence of continuous research and development technical specifications, design and appearance of products may change. Dolby and the double-D symbol are registered trademarks of Dolby Laboratories, ASTRA is a registered trade mark of SES ASTRA, Irdeto is a registered trade mark of Irdeto Access B.V., HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries. Skylink® and CSlink® are trademarks which M7 Group SA uses under license. All other product names are trademarks or registered trademarks of their respective owners.

© THOMSON 2017. All rights reserved.

