



For Model No.
CLIPSY



User Manual

1. **Contents**

1.	Contents.....	1
2.	About this manual	2
3.	Notes	2
4.	Functions	2
5.	Contents of this pack	2
6.	Prior to use.....	3
7.	Operation	4
8.	Main menu	5
9.	Music	5
10.	Voice recording	7
11.	System settings.....	8
12.	Troubleshooting.....	9
13.	Technical data.....	10
14.	Disposal of used electric devices	10

2. **About this manual**

Read this manual carefully and observe, read and follow all instructions mentioned in this to ensure the long life and reliable use of the device. Please keep this manual handy for future reference and pass it on to other users of the device.

3. **Notes**

- Prevent the device from dropping.
- Do not use the device in extremely cold, hot, humid or dusty areas. Do not expose it to direct sunlight.
- Back up your device regularly to avoid possible data loss.
- Avoid using your player in strongly magnetic fields.
- Protect the device from moisture. Should moisture seep into the device, please switch it off immediately and clean and dry the device afterwards.
- Do not use any chemical solutions to clean the device. Use a dry cloth only.
- We are not liable for damages or data loss caused by malfunctions, incorrect operation, repairs done by you or changing of the battery.
- Please do not disassemble the device into components and do not try to repair it yourself as the warranty expires in this case.



WARNING: Prolonged exposure to excessively loud music can result in temporary or permanent hearing damage or hearing loss. The use of the Video player in traffic is not recommended. It can cause the listener to react disregarding towards potential hazards such as approaching vehicles.

4. **Functions**

- Playback of MP3, WMA files
- Folder navigation
- Speech recording
- Built-in re-chargeable Li-polymer battery

5. **Contents of this pack**

- MP3-Player
- Stereo headphones
- USB cable
- User manual

6. Prior to use

Connect to the PC

Please proceed as follows:

- (1) Connect the player with the USB-port of the PC
- (2) The window "CLIPSY" opens. Now you can store the data from your hard disk on the player.

Safe removal from PC

For Windows XP/Vista/Windows7/8/8.1/10:


Click with the right mouse button bottom right in the task bar onto the symbol "safe removal of hardware". Select "remove USB flash drive" with the left mouse button from the appearing context menu. Please ensure that the data transfer has been finished completely.

Now you can remove the device.

Charging the battery:

The device has a built-in re-chargeable Li-polymer battery. The battery is charged via the USB connection to your PC. Before using the device for the first time, please make sure that the battery is fully charged. This usually takes about 3 hours.

Note: for optimum performance, the re-chargeable Li-polymer battery must be used regularly. If this is not the case, fully charge the battery at least once per month.

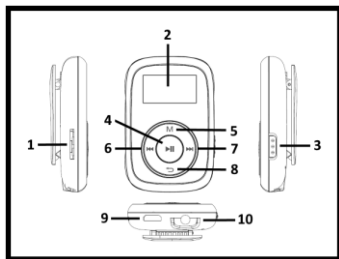

- (1) Micro SD - Card
- (2) LCD Display
- (3) Button Lock
- (4) Play / Pause key
- (5) Menu key
- (6) ⏮ key
- (7) ⏭ key
- (8) Back / Volume key ⏮/🔊
- (9) USB plug
- (10) Ear-telephone connection

7. Operation

On / Off

Keep the Play/Pause ►|| key pressed for approx. 3 seconds to switch on the player. To switch it off, press the key again for approx. 3 seconds.

Play / Pause

Press the ►|| button for playback or stopping of a track.

Adjust volume

Keep the back / volume key ⏮/🔊 pressed to open the volume selection menu. Now with the keys ⏮/⏭ you can adjust the desired volume. Because of legal provisions, you have to press the menu key to change from level 18 to 19 to continue to increase the volume with the ⏭ key.

Forward / Back

Press the ⏮/⏭ button to go to the previous or to the next track.

Fast forward

Press and hold down the ⏭ button to fast forward within the track.

Rewind

Press and hold down the ⏮ button to rewind within the track.

Key lock

By confirming the sliding key on the side of the appliance you can activate or deactivate the button lock according to the selected position.

8. Main menu

After having switched on the MP3 player the main menu is displayed. Here you can select the functions music, registration, display and setup.

To select the function press the keys ◀◀ / ▶▶ and confirm your selection by the key ▶▶.

9. Music

Select **Music** from the main menu. Now you can playback the stored tracks.

● Call folder navigation

- (1) In the music mode press the **menu** key in Pause status.
- (2) Then select the point List in the submenu.
- (3) Now all titles of the currently displayed folders are displayed for you.
- (4) To eventually reach a higher level in your folder structure, press the Back key.
- (5) With the keys ◀◀ / ▶▶ select the searched title and confirm your selection by pressing key ▶▶ to start playback.

● Delete track

To delete a single track do the following:

- (1) In music mode, press the **menu** key in pause status.
- (2) Select Delete File.
- (3) All music files of the list of a displayed song are displayed for you (if you want to delete the title in another list, you have to change to the desired list through the folder navigation).
- (4) With the keys ◀◀ / ▶▶ select the searched title and confirm your selection by pressing key ▶▶.
- (5) Now you are asked to confirm the deletion process.
- (6) Press keys ◀◀ / ▶▶ to select yes or no. Confirm your selection with key ▶▶. Press **back** key once to delete selection and make a new selection or twice to change back to playback mode.

- **Delete all music files**

To delete all music files (MP3 and WMA) on the memory card, proceed as described. Please select **Delete all music files** instead of **Delete File** and confirm your selection. Now all MP3 and WMA files are deleted from the memory card. Other file and folder types cannot be deleted by the player. For this purpose, use your computer.

- **A-B Repeat**

To repeat a special section of a title, proceed as follows:

- (1) During playback press the key **menu** and select submenu A-B repetition.
- (2) Now you can start the A-B repetition (A-B repetition) or interrupt the number of desired repetitions (repeat number) and the desired pause duration between repetitions (pause between repet.).
- (3) If by selection A-B repetition you have started the procedure, you will go back to the playback mode and symbol A flashes for A-B repetition mode. By press key **▶▶** you set the starting point and by re-pressing the same key the end point of the A-B repetition.
- (4) Now the section between the selected start and end point will be repeated according to the selected number.
- (5) To end the A-B repetition earlier, press the key **menu**.

- **Exit music mode**

Press **back** key in playback mode to change to main menu.

10. Voice recording

In the main menu select the function **record**.

- **Record**

- (1) Press the ►|| button to start recording.
- (2) During recording you can stop and/or resume the recording by pressing the ►|| button.
- (3) Press the **back** button to stop and save the recording. Recording is saved as .wav file.
- (4) Press the **menu** key before starting recording. So you can navigate through the existing recordings (list) and set up the recording quality (quality).

Attention: Do not switch off the device during recording. The recording will not be saved and is lost.

- **Playback**

By the function **playback** in the main menu the playback mode is opened for saved registrations. Playback your recordings like you playback music. Here you can also navigate through the list of your recordings, delete a single file or all voice files by pressing key **menu** before the playback start to reach the submenu.

Attention: If you select "Delete all voice files", all .wav file will be deleted on the memory card.

- **Exit the function record**

Press the **back** button to go to the main menu.

11. System settings

To set your MP3 player individually do the following:

- (1) In the main manu, selection the function **Setup**.
- (2) Press keys **◀◀/▶▶** to select the desired setting (see table). Confirm your selection with key **▶II**. Press **back** key to go back to main menu.

Function		Selection Opportunities (description)
LCD On/Off		0–60 seconds in 3 seconds steps Define after how many seconds without entry the display has to be switched off. By selecting 0, you deactivate the function.
Language		French, German, Italian, Dutch, English, Spanish Adjust the desired system language here.
Save energy	Auto Off	0–60 minutes in 5 minutes steps Define after how many minutes without use the player has to be automatically switched off. By selecting 0, you deactivate the function.
	Sleep-Timer	0–120 minutes in 10 minutes steps Define after how much time the player has to be switched off also during active playback. By selecting 0, you deactivate the function.
Brightness		0–15 Set the desired brightness level of the display.
Firmware Version		The version number of the Firmware is displayed.
Memory Information		The memory location status of the inserted memory card is displayed.
Factory Settings		Select “yes” to reset the appliance to factory settings.
Back		Here you can change back to the main menu.

12. Troubleshooting

- **The display is blank.**

- (1) The battery is empty. Charge the battery.
- (2) The keys are locked. Please deactivate the key lock.

- **No sound during playback of a file.**

- (1) The volume is too low. Increase the volume.
- (2) The audio file is defective. Please transfer the file again.

- **No connection can be established with the PC.**

- (1) The driver was not installed properly. Re-install the driver.
- (2) Please carry out a main board update.
(Please refer to the manufacturer's instructions)

- **The track time displayed keeps on changing.**

- (1) The bit rate of the MP3 file changes during playback. Please use a universal bit rate for compression.

- **The PC shows an error on connection with the player.**

- (1) The player was disconnected during data transfer from the PC.
Never disconnect the player during data transfer.

- **MP3 data is not played properly.**

- (1) The MP3 data was compressed in a wrong format, e.g. in MPEG 1 or 2.
Delete the file formats that are not supported.


13. Technical data

Item	Parameter:
LCD Display	128 x 64 pixel
Battery type	re-chargeable Li-polymer battery
Battery run-time	Max. 10 hours
Record format	WAV
Supported music formats	MP3, WMA
Bit rate	MP3/WMA: 32kbps ~ 384kbps
Output frequency	20Hz ~ 20kHz
SNR	≥ 80 dB
Channel separation	≥ 40 dB
Frequency response	≤ 3 dB (20Hz ~ 20kHz)
Output line headphones	L 9mW, R 9mW
USB port	USB 2.0 (High Speed)

Exclusion of liability

Changes to the firmware and / or hardware can be made at any time without prior notification. For this reason it is possible that parts of the manual, technical data and images in this documentation may deviate slightly from the product in your hand. All products described in this manual are only for the purpose of clarification and must not necessarily match any certain situation. No claims can be made based on this manual.

 14. Disposal of used electric devices



Devices marked with this symbol are subject to the European Directive 2012/19/EG. All electric and used electric devices must be separated from the household waste and disposed of at the provided public locations. With proper disposal of used electric devices you avoid damaging the environment.

- For more information please visit our website www.mpmaneeurope.com