



P/N: 15G062041000AK V1.0

ASRock WiFi Connector Utility

ASRock WiFi Connector Utility allows you to easily turn on/off the wireless feature.

How to install ASRock WiFi Connector Utility

For Windows® 10 (RS2) users, please install the WiFi driver and ASRock WiFi Connector Utility by running the Support CD. You can also download the latest driver and utility from ASRock's website : <http://www.asrock.com>.

*For i7-7800X, i7-7740X, or i5-7640X users, you can choose not to install the driver and utility.


If you install OS other than Windows® 10, please enable the WAN Radio feature in UEFI.

To enable the WAN Radio feature:

1. Enter UEFI by pressing <F2> or during system startup.
2. Select "Advanced > Chipset Configuration" from the menu.
3. Set "WAN Radio" settings to "Enabled".
4. Press F10 to Save and Exit.

ASRock WiFi Connector Utility

Now you can turn on/off the WiFi function through ASRock WiFi Connector Utility.

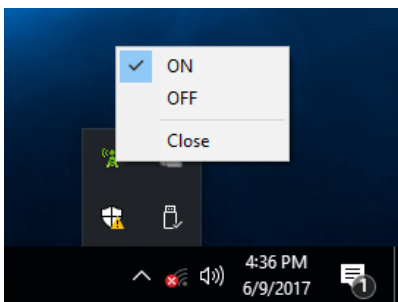

*For **i7-7820X and above** users, please click "ON" manually.