



Laptops & tablets Desktops Printers Ink & toner Displays & accessories Business solutions

Support



## Welcome to HP Customer Support

[Product Home](#)

### HP PageWide Pro 750, MFP 772, 777 - Replace cartridges

## Replace cartridges

The product uses four colors and has a different cartridge for each color: yellow (Y), magenta (M), cyan (C), and black (K).

#### **NOTE:**


- To prevent print-quality problems, HP recommends replacing any missing cartridges with genuine HP cartridges as soon as possible. For more information, see ***Order cartridges***.
- Never turn off the printer if any cartridges are missing.

1. Open the cartridge door.




2. Push the old cartridge inward to unlock and release it.

Country:  **United States** ▲

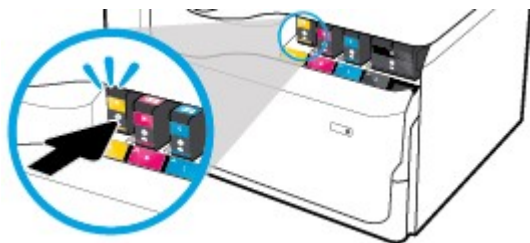


3. Grasp the edge of the old cartridge and then pull the cartridge straight out to remove it.

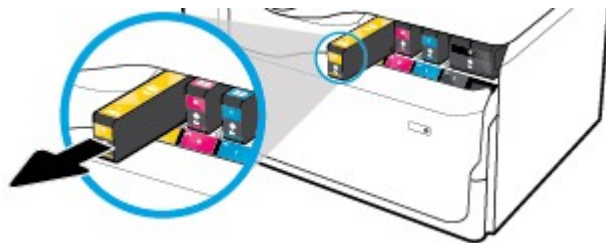


4. Do not touch the metal contacts on the cartridge. Fingerprints on the contacts can cause connection errors.



5. Insert the new cartridge into its slot.

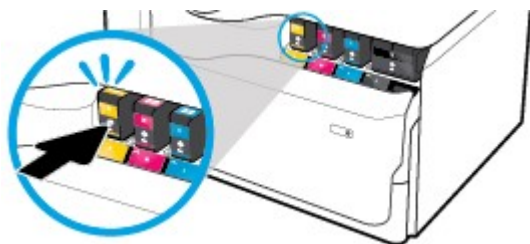

6. Close the cartridge door.

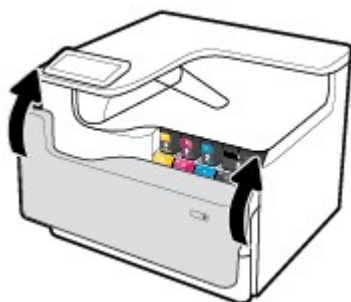

#### About us

Contact HP  
Careers  
Investor relations  
Sustainability  
Newsroom  
Accessibility

#### Ways to buy

Shop online  
Store locator  
Call an HP rep  
Find a reseller  
Enterprise store  
Public sector  
purchasing

#### Support

Download drivers  
Support &  
troubleshooting  
Forums  
Register your  
product  
Authorized service  
providers  
Check repair status  
Training &  
certification

#### HP Partners

HP Partner First  
program  
HP Partner First  
Portal  
Developers

#### Stay connected



Sign up for news &  
offers

Submit

---

Recalls | Product recycling | CA Supply Chains Act | Site map | Privacy | Cookies & ad choices |  
Terms of Use | Limited warranty statement | Terms & conditions of sales & service

© Copyright 2017 HP Development Company, L.P.