



# NannyCam H32



INSTRUCTIONS FOR USE

 
---

## PACKAGE CONTENTS:

- Parent Unit (with display) + power adapter
- Baby Unit (camera) + power adapter
- Instructions for Use


## BABY UNIT OVERVIEW:

1. Light Sensor
2. Camera Lens
3. Blue LED Power Indicator
4. Microphone
5. Infrared LED for night vision
6. Power Key – turn camera on/off
7. Power Adapter Connector
8. Thermal Sensor
9. Reset Button for pairing
10. Speaker

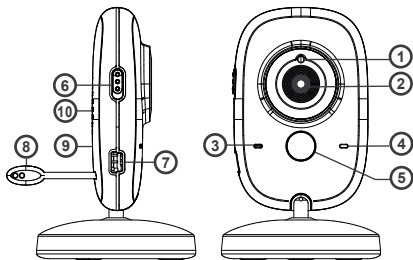

## PARENT UNIT OVERVIEW:

 1. Power Switch (screen on/off)
2. Power Input / Battery Charging
3. LCD Display
4. Microphone
5. Blue LED - indicates device is on
6. Red LED - indicates connection with camera
7. VOX Mode (on/off)
8. Melody (on/off)
9. PTT Key (push-to-talk)
10. Speaker
11. OK / Menu Key
12. Return / Back Key
13. Volume +
14. Volume -

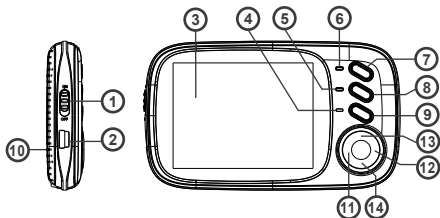


---

## GETTING STARTED:
 
### A) Baby Unit (camera)

1. Connect the small plug of the power adapter to the baby unit and the other end to the mains socket.
2. Next slide the power switch to the "ON" position.
3. The blue LED indicates the camera is functioning correctly.


**Note:** *Baby Unit requires a constant connection to the mains.*

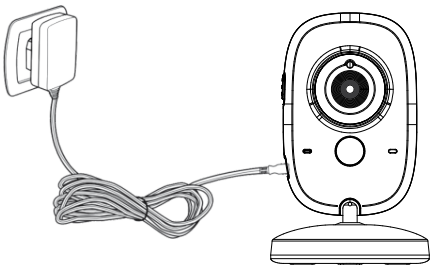

### B) Parent Unit (display)

1. Connect the small plug of the power adapter to the parent unit and the other end to the mains socket.
2. The blue LED will illuminate, indicating the battery is charging.
3. Press the "ON / Menu" to switch on the display.

 **Note:** *For optimal capacity and battery life, fully charge the device before using for the first time.*

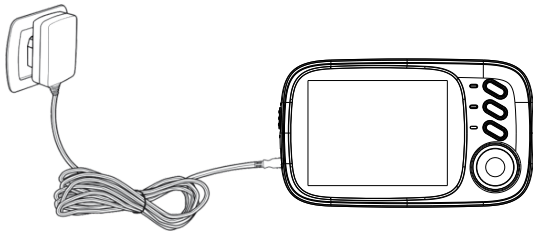

---


## SETUP AND FUNCTIONS:

 - When the parent and baby units are switched on and within range, a live image from the camera will appear within a few seconds.
- Place the camera in a suitable location and adjust the camera lens until you are satisfied with the image on the parent unit.

**Note:** *Do not place the baby unit within baby's reach. If there is interference on the picture or sound, try moving the units to different locations, and ensure they are not close to other electrical equipment that may interfere with the transmission.*

### Monitoring Screen Icons

1. Signal strength indicator
2. Temperature in baby's room\*
3. Melody is playing (adjust volume using the "up" and "down" keys next to the display)
4. VOX function activated
5. Alarm activated
6. Battery indicator
7. Microphone activated (push to talk)
8. Date and time

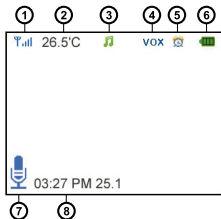

**Note:** *\*The baby monitor thermometer is not certified and the temperature data should only be used as a general guideline.*

### Range

When the distance between the baby and parent unit is too far, the signal may be interrupted and the image and sound may become frozen. If there is a connection loss due to the units being out of range, a black screen is displayed and the message "Connecting...". The parent unit will try to reconnect to the camera.

**Note:** *If the they do not reconnect even after the units have been brought within range, try to pair the units again, see the following section "Camera – Pairing".*

## MENU:

 
 
- Press the “OK / Menu” key on the parent unit to access the menu. Navigate using the “up” and “down” arrow keys. The “Back” key takes you back one page or to the monitoring screen.
- The menu contains 6 icons:
  1. Camera – Pairing\*
  2. Alarm – Alarm settings
  3. Settings – Basic settings
  4. VOX – VOX mode settings
  5. Languages – Language settings menu
  6. System Info



**Note:** \*The parent and baby units are already paired, it is not necessary to do this again. Only select if you want to re-pair the units, e.g. when the signal has been lost.



### • 1 – Camera – Pairing

To re-pair, press the “OK / Menu” key twice. Next press and hold the “Reset” key on the back of the baby unit for 10 seconds. When successfully paired, the message “Register Successful” is displayed.

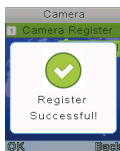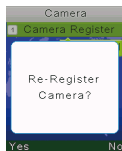

### • 2 – Alarm – Alarm settings

  Press the “PTT” key (microphone symbol) to move the cursor. Press the “up” and “down” arrow keys to change value and press OK to set the time.

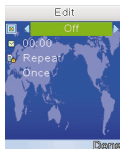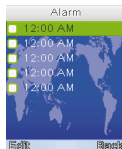

### • 3 – Settings – Basic settings

Here you can set the time and date, the time/date format, the unit of temperature, the frequency and the LCD backlight. Press the “PTT” key (microphone symbol) to move to the sub-menu.

---

#### • 4 – VOX – VOX mode settings

Here you can activate or deactivate VOX mode and adjust its sensitivity. When VOX mode is activated, after a short period of silence the display turns off and audio transmission is stopped to save battery. This setting is perfect for a night of babysitting. Crying or any other noise immediately activates the camera and monitoring begins. As a result, you are always aware of the situation and can see what is happening straight away. The VOX sensitivity can also be adjusted to suit normal background noise levels.

#### • 5 – Languages – Language settings menu

Choose your language from the list.

### **SPECIFICATIONS:**

- Frequency: 2.4 GHz
- Operating Temperature: -10 ~ 45°C
- Operating Humidity: <85%
- Range: up to 300 metres (in an open space)

#### **Display:**

- LCD Size: 3.2" TFT LCD
- LCD Resolution: 320x240@20fps
- Battery: Li-Polymer 750 mAh
- Dimensions (W x H x D): 120 x 70 x 17 mm

#### **Camera:**

- Sensor: 0.3 MP CMOS
- Night Vision Range: 5 metres
- Light Sensor and Thermal Sensor
- Dimensions (W x H x D): 67 x 106 x 25 mm

### **USING THE DEVICE SAFELY:**

1. Read the enclosed Safety Instructions.
2. When using the device, read the latest version of the manual which is available for download at: [www.truelifecare.eu](http://www.truelifecare.eu).
3. Printing errors reserved.