

User's Guide

Multimedia Projector

EB-L1505U EB-L1500U EB-L1405U EB-L1300U EB-L1200U EB-L1100U



Notations Used in This Guide

• Safety indications

The documentation and the projector use graphical symbols to show how to use the projector safely. The indications and their meaning are as follows. Make sure you understand them properly before reading the guide.

🔥 Warning	This symbol indicates information that, if ignored, could possibly result in personal injury or even death due to incorrect handling.
🕂 Caution	This symbol indicates information that, if ignored, could possibly result in personal injury or physical damage due to incorrect handling.

• General information indications

Attention	Indicates procedures which may result in damage or injury if sufficient care is not taken.	
	Indicates additional information and points which may be useful to know regarding a topic.	
(Indicates a page where detailed information regarding a topic can be found.	
>>	Indicates that an explanation of the underlined word or words in front of this symbol appears in the glossary of terms. See the "Glossary" section of the "Appendix".	
[Name]	Indicates the name of the buttons on the remote control or the control panel. Example: [Esc] button	
Menu Name	Indicates Configuration menu items. Example: Select Brightness from Image . Image - Brightness	



Make sure you read the following before you use the projector.

Safety Instructions

Warning and Cautions on Installation

An optional ceiling mount is required when suspending the projector from a ceiling.

♥ "Optional Accessories" p.211

🔥 Warning

- Do not use or install the projector where it may be subject to water or rain, or high humidity, such as outdoors, in a bathroom, or shower room, and so on. Otherwise, it could cause a fire or electric shock.
- A special method of installation is required when suspending the projector from a ceiling (ceiling mount). If installation work is not carried out correctly, the projector could fall down. This may result in injury or accidents. Contact your local dealer or the nearest address provided in the Epson Projector Contact List.
 - Epson Projector Contact List
- If you use adhesives on the ceiling mount fixing points to prevent the screws from loosening, or if you use things such as lubricants or oils on the projector, the projector case may crack causing it to fall from its ceiling mount. This could cause an accident or injury to anyone under the ceiling mount.

When installing or adjusting the ceiling mount, do not use adhesives to prevent the screws from loosening and do not use oils or lubricants and so on.

- Do not cover the projector's air intake vent or air exhaust vent. If either of the vents are covered, the internal temperature could rise and cause a fire.
- Do not place flammable objects in front of the lens. If you set the schedule to turn on the projector automatically, any flammable objects placed in front of the lens could cause a fire.
- Do not tie the power cord and other connection cables together. Otherwise, it could cause a fire.
- Only use the specified power-supply voltage. Otherwise, it could cause a fire or electric shock.



📐 Warning

• Be careful when handling the power cord. Otherwise, it could cause a fire or electric shock. Note the following when handling the power cord.

- Do not plug multiple power cords in a single electric outlet.
- Do not plug in the power cord if there are any foreign substances, such as dust, stuck to it.
- Make sure you insert the power cord all the way in.
- Do not plug in or unplug the power cord with wet hands.
- Do not pull the cord when unplugging the power cord. Make sure you hold it by the plug.
- Do not use a damaged power cord. Otherwise, it could cause a fire or electric shock. Note the following when handling the power cord.
 - Do not alter the power cord.
 - Do not place any heavy objects on the power cord.
 - Do not bend, twist, or pull the power cord forcibly.
 - Do not layout the power cord near a heating device.

🕂 Caution

Do not place the projector on an unstable surface, such as on an unstable table or tilted surface. When projecting vertically, install the projector appropriately to prevent the projector from falling.


Otherwise it may cause an injury.

Attention

- Do not install the projector in a location that is subject to vibration or shock.
- Do not install the projector near a high-voltage line or object that generates magnetism. Otherwise the projector may not work correctly.
- Do not use or store the projector in a location that is subject to extreme temperatures. Also, avoid sudden temperature changes.

Make sure you use or store the projector in a place that is within the following operating or storage temperature ranges.

- Operating temperature range
 - 0 to +45°C (Altitude of 0 to 1,500 m, no condensation)
 - 0 to +40°C (Altitude of 1,501 to 3,048 m, no condensation)
- Storage temperature range: -10 to +60°C (No condensation)
- When using at an altitude that exceeds 1,500 m, set **High Altitude Mode** to **On**.
- Extended Operation High Altitude Mode p.133
- The projector can be installed at any angle. There is no vertical or horizontal limit to how the projector can be installed.

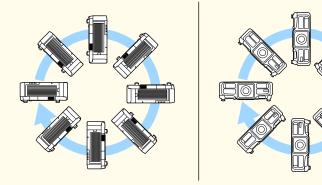


- You may need dedicated installation mounts to tilt and install the projector. Contact a professional and prepare the mount.
- Plan so that the mount does not fall.




5

Attention

• Make sure you secure the following space around the projector so as not to block the air exhaust vent and the air intake vent.

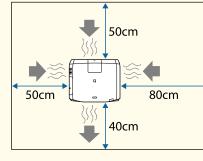

 
• When setting up multiple projectors, make sure there is a gap of at least 50 cm between the projectors. Also, make sure that the heat from the air exhaust vent does not go into the air intake vent.




• Do not use two projectors at the same time when stacking two projectors directly on top of each other. Install the projector so that there is no danger that it will fall.

Attention

• Use commercially available M6 screws (up to a depth of 12 mm) to fix the projector's ceiling mount fixing points and the mount at four points.

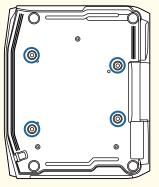

• When installing the projector with the air intake vent facing down, make sure there is a gap of at least 10 cm between the projector and the floor and so on. Make sure there is a gap of 500 x 200 mm for the base so that the air intake vent is not blocked.

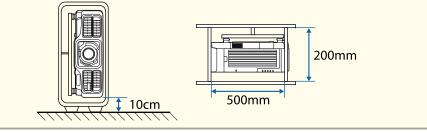

- We recommend setting the focus, zoom, and lens shift at least 20 minutes after you start the projection, because images are not stable right after turning on the projector.
 - When adjusting the image height with the vertical lens shift, adjust by moving the image from the bottom to the top. If it is adjusted from the top to the bottom, the image position may move down slightly after adjusting.



Warning and Cautions on Usage

<u> (</u>Warning

- Do not cover the projector's air intake vent or air exhaust vent. If either of the vents is covered, the internal temperature could rise and cause a fire.
- Do not look into the lens while projecting. The powerful light emitted could cause damage to eyesight. Take particular care when there are children present. When turning on the projector at a distance using the remote control, make sure there is no one looking into the lens.
- During projection, do not block the light from the projector with the lens cover (removable) or a book and so on.

If the light from the projector is blocked, the area on which the light shines becomes hot which could cause it to melt, burn, or start a fire. Also, the lens may get hot due to the reflected light which could cause the projector to malfunction. To stop projection, use the A/V Mute function, or turn off the projector.

- Do not open the projector's case. Never disassemble or remodel the projector. There are high-voltage components inside the projector that could cause fire, electric shock, or an accident.
- If an error occurs, disconnect the power cord from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List. If you continue using the projector as it is, it could cause an electric shock, fire, or even damage to eyesight.
- Epson Projector Contact List

1 Caution

Do not place objects that may become warped or otherwise affected by heat near the air exhaust vent and do not put your face or hands near the vent while projection is in progress.

Attention

- Only remove the lens unit when necessary. If dust or dirt enter the projector, projection quality deteriorates and it could cause a malfunction.
- Try not to touch the lens section with your hand or fingers. If fingerprints or oils are left on the surface of the lens, projection quality deteriorates.
- Store the projector with the lens unit installed. If the projector is stored without the lens unit, dust and dirt may get inside the projector and cause malfunctions or lower the quality of projection.
- When storing, make sure you remove the batteries from the remote control. If the batteries are left in the remote control for an extended period of time, they may leak.



• About the LCD panel

- The LCD panel may contain pixels that are missing or appear bright all the time. This is not a sign of an error.
- When a high-powered laser beams through the surface of the projection lens even when it is not being used, it can cause a malfunction in the LCD panel. Attach the lens cover when storing the projector.
- About the light source

The projector uses a laser as the light source. The laser has the following characteristics.

- Depending on the surroundings, the brightness of the light source may decline. The brightness declines a lot when the temperature gets too high.
- The brightness of the light source declines the longer it is used. You can change the relationship between usage time and decline in brightness in **Brightness Settings**.
- ☞ "Relationship between Brightness Level and usage time" p.76
- About light source calibration
 - Whenever the usage time reaches 100 hours, calibration starts automatically for the light source when the projector is turned off. However, this does not start automatically when the projector is used continuously for more than 24 hours, or when direct shutdown is used regularly. Set **Light Source Calibration** in the scheduling function.
 - "Scheduling Function" p.113
 - When performing light source calibration, the difference between the white balance and the brightness level for the light source is corrected.

Warning and Cautions on the Laser

🔥 Warning

• Laser warning labels are attached inside the projector and on the side of the projector.

Inside

	▲ CAUTION / DANGER
CAUTION / DANGER:	CLASS 4 LASER RADIATION WHEN OPEN AVOID EYE OR SKIN EXPOSURE TO DIRECT OR SCATTERED RADIATION
ATTENTION / DANGER:	EN CAS D'OUVERTURE RAYONNEMENT LASER DE CLASSE 4 ÉVITER L'EXPOSITION DES YEUX OU DE LA PEAU AUX RAYONNEMENTS DIRECTS OU DIFFUÉS
PRECAUCIÓN / PELIGRO	: RADIACIÓN LÁSER DE CLASE 4 CUANDO ESTÁ ABIERTO EVITAR LA EXPOSICIÓN DE OJOS O PIEL A LA RADIACIÓN DIRECTA O DISPERSA
ACHTUNG / GEFAHR:	LASERSTRAHLUNG KLASSE 4 WENN GEÖFFNET BESTRAHLUNG VON AUGE ODER HAUT DURCH DIREKTE ODER STREUSTRAHLUNG VERMEIDEN
注意/危険:	打开时有4类激光辐射 避免眼或皮肤受到直射或散射辐射的照射
注意/危険:	打開時具有第4級(CLASS 4)雷射 避免眼睛或皮膚暴露於直射或散射的輻射
주의/위험:	개방시 4 등급 레이저 제품 직접 혹은 분사 방사에 대한 눈 또는 피부 노출을 피하시오
注意/危険:	ここを開くとクラス4のレーザ放射が出る ビームや散乱光の目又は皮膚への被ばくを避けること

Side



- Do not open the projector's case. The projector contains a high-powered laser.
- Possibly hazardous optical radiation emitted from this product. Do not look at operating light source. Eye injury may result.



Caution

- This projector is a Class 1 laser product that complies with the IEC60825-1 international standard for lasers.
- Do not disassemble the projector when disposing of it. Dispose according to your local or national laws and regulations.

Notes on Transporting

There are many glass parts and precision components inside the projector. To prevent damage due to impacts when transporting, handle the projector as follows.

🕂 Caution

The projector should not be carried by one person. At least two people are needed to unpack or carry the projector.

Attention

- Moving Nearby
 - Turn off the power to the projector and disconnect all cables.
 - Attach the cover to the lens.
- When Transporting

After checking the points in "Moving Nearby", prepare the following and then pack up the projector.

- Remove the lens unit if an option lens is installed.
- If the projector does not have a lens, attach the cover that was on the lens mount when you purchased the projector.
- Attach the lens if the projector has a built-in lens. Upon purchase, attach the protective pad that is attached around the lens unit.
- Move the lens position to the home position.
 - "Adjusting the Position of the Projected Image (Lens Shift)"p.33
- Enclose the projector securely in packaging material to protect it from shock, and place it into a strong cardboard container. Be sure to notify the carrier company that it is precision equipment.

Contents

Notations	Used in	This Guide		2
-----------	---------	------------	--	---

Introduction

Part Names and Functions 15
Front/Top
Rear
Interface
Base
Control Panel
Remote Control
Handy remote control operations 23
Replacing the remote control batteries 23
Remote control operating range 24
Connecting a cable to the remote control

Preparing the Projector

Installing the Projector 2	27
Removing and Attaching the Projector Lens Unit	27
Attaching	27
Lens Calibration	28
Removing	29
Installation Settings	29
Changing the direction of the image (projection mode)	29
Screen Settings	30
Adjusting the position of the image on the projected screen	31
Displaying a Test Pattern	31
Adjusting the Position of the Projected Image (Lens Shift)	
EB-L1505U/EB-L1500U	33
EB-L1405U/EB-L1300U/EB-L1200U/EB-L1100U	34
Adjusting the Image Size	35
Correcting the Focus	36
Correcting Distortion (Image Warping)	37
Registering and Loading Lens Adjustment Values	38

Adjusting the Height of the Projected Image (for Normal Installment)	39
Adjusting the Horizontal Tilt (for Normal Installment)	40
ID Settings	40
Set the projector ID	40
Checking the projector ID	41
Setting the remote control ID	41
Setting the Time	41
Other Settings	43
Settings related to basic operations	43
Settings related to display	43
Connecting Equipment	45
Connecting a Computer	45
Connecting a Computer	45 47
Connecting a Computer Connecting Image Sources Connecting External Equipment Connecting External Equipment	45 47 49
Connecting a Computer Connecting Image Sources Connecting External Equipment Connecting a LAN Cable	45 47 49 50
Connecting a Computer Connecting Image Sources Connecting External Equipment Connecting External Equipment	45 47 49 50 51
Connecting a Computer Connecting Image Sources Connecting External Equipment Connecting a LAN Cable Connecting an HDBaseT Transmitter	45 47 49 50 51 52
Connecting a Computer Connecting Image Sources Connecting External Equipment Connecting a LAN Cable Connecting an HDBaseT Transmitter Installing the Wireless LAN Unit	45 47 50 51 52 53

Basic Usage

Turning On the Projector 56 Home Screen 56
Turning Off the Projector58
Projecting Images 59 Automatically Detecting Input Signals and Changing the Projected Image (Source Search) 59 Switching to the Target Image by Remote Control 60 Adjusting the Volume 60
Adjusting Projected Images 62 Correcting Distortion in the Projected Image 62 H/V-Keystone 63

Quick Corner
Curved Surface
Corner Wall
Point Correction
Selecting the Projection Quality (Selecting Color Mode)
Setting the Brightness
Guide to Estimated Remains
Relationship between Brightness Level and usage time
Setting the Amount of Light of the Projected Image
Changing the Aspect Ratio of the Projected Image
Changing methods
Adjusting the Image
Hue, Saturation, and Brightness adjustment
Gamma adjustment
Frame Interpolation
Adjusting Image Resolution (Image Enhancement)
4K Enhancement
Image Preset Mode
Noise Reduction
MPEG Noise Reduction
Super-resolution
Detail Enhancement
Projecting 3D Images

Useful Functions

Aulti-Projection Function
Adjustment Procedure
Adjusting automatically online
Adjusting manually offline
Tiling
Performing tiling automatically
Performing tiling manually
Edge Blending
Black Level
Screen Matching
Operating conditions for auto adjustment functions

100 100 102
104
104 104 105 107 107 108 108 109
111
111
113 113 113 114 115
117
117 117 117 118 119 119 120 120 121
•



Configuration Menu

Using the Configuration Menu 124
List of Functions 125
Configuration Menu Table
Network menu
Image Menu
Signal Menu
Settings Menu
Extended Menu
Network Menu
Notes on operating the Network menu
Soft keyboard operations 139
Basic menu
Wireless LAN menu 140
Wired LAN menu
Notifications menu 143
Others menu
Reset menu
Info Menu (Display Only)
Reset Menu
Batch Setup 147
Setup Using a USB Flash Drive
Saving settings to the USB flash drive 147
Reflecting saved settings to other projectors
Setup by Connecting the Computer and Projector with a USB Cable
Saving settings to a computer 15
Reflecting saved settings to other projectors
When Setup Fails 153

Troubleshooting

Using the Help 155
Reading the Indicators 157
Reading the Status Display
Problem Solving
Problems Relating to Images171No images appear171Moving images are not displayed171Projection stops automatically172Not supported. is displayed172No Signal. is displayed172Images are fuzzy, out of focus, or distorted173Interference or distortion appear in images173The image is truncated (large) or small, the aspect is not suitable, or the image has been reversed174Images appear dark175Automatic adjustments are not performed correctly176Problems when Projection Starts177The projector does not turn on177Other Problems178No sound can be heard or the sound is faint178The remote control does not work178Nothing appears on the external monitor179I want to change the language for messages and menus180Email is not received even if a problem occurs in the projector180The battery that saves your clock settings is running low, is displayed180
About Event ID



Maintenance

Cleaning	183
Cleaning the Projector's Surface	
Cleaning the Lens	
Cleaning the Air Filter	
Cleaning the air filter	
Replacing Consumables	186
Replacing the Air Filter	
Air filter replacement period	
How to replace the air filter	
Image Maintenance	188
Color Calibration	
Panel Alignment	
Color Uniformity	

Appendix

Monitoring and Controlling 1	94
About EasyMP Monitor	194
About Message Broadcasting	194
Changing Settings Using a Web Browser (Epson Web Control)	194
Displaying the Epson Web Control Screen	194
Basic Control Screen	195
OSD Control Pad Screen	196
Lens Control Screen	196
Status Information Screen	198
Using the Mail Notification Function to Report Problems	199
Reading error notification mail	199
Management Using SNMP	200
ESC/VP21 Commands	200
Command list	200
Cable layouts	201
About PJLink	201

About Crestron RoomView [®]	
About Art-Net (EB-L1505U/EB-L1500U/EB-L1405U only)	
Optional Accessories and Consumables	211
Optional Accessories	211
Consumables	211
Screen Size and Projection Distance	212
Projection Distance for EB-L1505U/EB-L1500U	212
ELPLM09/ELPLS04	
ELPLU03	213
ELPLU04/ELPLU02	213
ELPLW05	214
ELPLW06/ELPLW04	215
ELPLM10/ELPLM06	216
ELPLM11/ELPLM07	217
ELPLL08/ELPLL07	
ELPLR04	
Projection Distances for EB-L1405U/EB-L1300U/EB-L1200U/EB-L1100U	
ELPLM08	
ELPLX01	
ELPLU03	
ELPLU04/ELPLU02	
ELPLW05	
ELPLM09/ELPLS04	
ELPLM10/ELPLM06	
ELPLM11/ELPLM07	
ELPLE08/ELPLE07	
Polarizer (ELPPL01) Installation Distance	
EB-L1505U/EB-L1500U	
EB-L1405U/EB-L1300U/EB-L1200U/EB-L1100U	
Adjustment Pange for Projected Images	220
Adjustment Range for Projected Images	
H/V-Keystone	
EB-L1505U/EB-L1500U	229

EB-L1405U/EB-L1300U/EB-L1200U/EB-L1100U	
Curved Surface	. 229
Corner Wall	. 234
Supported Monitor Displays	239
Supported Resolutions	. 239
Computer signals (analog RGB)	. 239
Component video	. 239
Input signals from the DVI-D port, HDMI port, and HDBaseT port	
Input signals from SDI input port [*]	. 240
Specifications	241
Projector General Specifications	. 241
Appearance	245
Glossary	246
General Notes	248
About Notations	
Trademarks and Copyrights	
List of Safety Symbols Compliant with IEC60950-1 A2	250
Index	252






Introduction

This chapter explains the names for each part.



The illustrations in this guide show the lens unit attached to the projector.

Front/Top

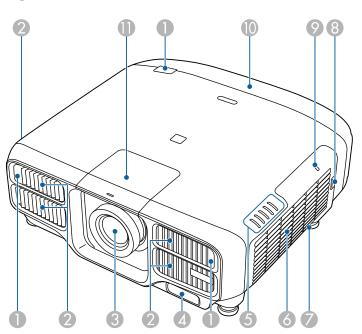

	Name	Function
0	Remote receiver	Receives signals from the remote control.
2	Air intake vent	Takes in air to cool the projector internally.


Name		Function
3	Projection lens	Images are projected through here.
		Warning Do not look into the lens while projecting. This could cause damage to eyesight due to the powerful light emitted.
		Caution When shifting the lens, do not put your hands near the lens unit. Your fingers may get caught between the lens unit and the projector, and cause an injury.
4	Built-in camera	This camera scans the image when correcting the projected image automatically.
		Attention Exposing the camera to bright light may cause a malfunction to occur.
5	Status indicators	The color of the indicators and whether they are flashing or lit indicate the status of the projector. The reading the Indicators'' p.157
6	Air intake vent (air filter)	Takes in air to cool the projector internally. Takes in air to cool the projector internally. Takes in air to cool the projector internally.
0	Speaker (EB-L1300U/EB- L1200U/EB-L1100U only)	Outputs audio.
8	Air filter cover tab	Use this knob to open the air filter cover. Treplacing the Air Filter" p.186



TOP	16

	Name	Function
9	Wireless LAN indicator	Indicates the access status to the optional wireless LAN unit. Toptional Accessories" p.211
0	Cable cover	Cover for the rear interface cable connection section. The "Attaching the Cable Cover" p.54
0	Lens replacement cover	Remove when attaching or removing the lens. Therefore "Removing and Attaching the Projector Lens Unit" p.27 Caution
		When moving the projector, do not hold the lens replacement cover. The lens replacement cover may be removed and the projector may fall, which could cause an injury.


Rear

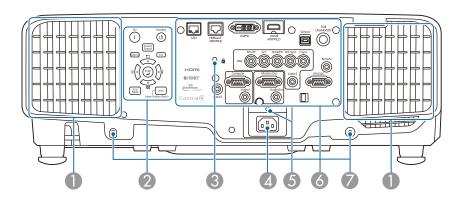

	Name	Function
0	Air exhaust vent	Exhaust vent for air used to cool the projector internally.
		Caution While projecting, do not put your face or hands near the air exhaust vent, and do not place objects that may become warped or damaged by heat near the vent. Hot air from the air exhaust vent could cause burns, warping, or accidents to occur.
2	Control panel	Control Panel" p.19
3	Security slot	The security slot is compatible with the Microsaver Security System manufactured by Kensington. Theft Lock" p.121
4	Power inlet	Connects the power cord to the projector.

	Name	Function
5	Cable holder	Insert the supplied cable clamp (only supplied with EB- L1505U/EB-L1500U/EB-L1405U) here to prevent the cord from falling out due to its own weight.
6	Interface	☞ "Interface" p.17
7	Screw holes to fix the cable cover	Screw holes to fix the cable cover in place. The second s

Interface

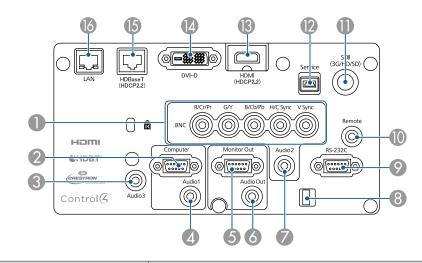


Name		Function
0	BNC port	For analog RGB signals from a computer and component video signals from other video sources.
2	Computer port	For analog RGB signals from a computer and component video signals from other video sources.
6	Audio3 port	Inputs audio from equipment connected to the HDMI port or the DVI-D port.
4	Audio1 port	Inputs audio from equipment connected to the Computer port.
5	Monitor Out port	Outputs to an external monitor the analog signal from the computer connected to the Computer port or the BNC port. You cannot output signals input from other ports or component video signals.
6	Audio Out port	Outputs audio from the currently projected image to an external speaker.
0	Audio2 port	Inputs audio from equipment connected to the BNC port.
8	Cable holder	Run a commercially available cable tie to secure cables.

ŏŏ.	
TOD	
TOP	

18

	Name	Function
0	RS-232C port	When controlling the projector from a computer, connect it to the computer with an RS-232C cable. This port is for control use and should not normally be used. TESC/VP21 Commands" p.200
0	Remote port	Connects the optional remote control cable set and inputs signals from the remote control. When the remote control cable is plugged into the Remote port, the remote receiver on the projector is disabled.
0	SDI input port (EB-L1505U/EB- L1500U/EB-L1405U only)	Inputs SDI signals from video equipment.
12	Service port	This is used for batch settings. This port is for control use and should not normally be used. This port is for control use and should not normally be used.
(3	HDMI port	Inputs video signals from HDMI compatible video equipment and computers.
(2)	DVI-D port	Inputs the computer DVI-D signals.
(5	HDBaseT port	Connects a LAN cable to the optional HDBaseT Transmitter. Tonnecting an HDBaseT Transmitter" p.51 Connecting an HDBaseT Transmitter" p.51
6	LAN port	Connects a LAN cable to connect to a network. When using EB-L1505U/EB-L1500U/EB-L1405U, Art- Net is supported. TAbout Art-Net (EB-L1505U/EB-L1500U/EB- L1405U only)" p.206

Base

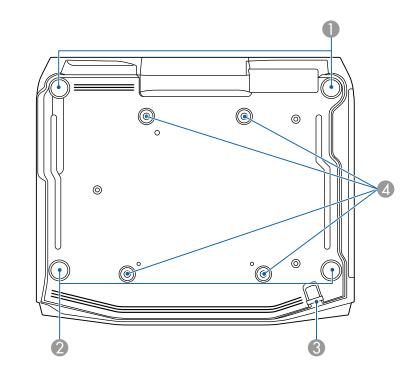


	Name	Function
0	Front adjustable feet	When setup on a surface such as a desk, extend and retract the feet to adjust the projector's vertical and horizontal tilt.
		"Adjusting the Height of the Projected Image (for Normal Installment)" p.39
		 "Adjusting the Horizontal Tilt (for Normal Installment)" p.40
2	Rear feet	When setup on a surface such as a desk, turn to extend and retract to adjust the horizontal tilt.
		 "Adjusting the Horizontal Tilt (for Normal Installment)" p.40



	Name	Function
3	Security cable installation point	Pass a commercially available wire lock through here and lock it in place. The "Installing the wire lock" p.121
4	Ceiling mount fixing points (four points)	 Attach the optional ceiling mount here when suspending the projector from a ceiling. "Installing the Projector" p.27 "Optional Accessories" p.211

Control Panel

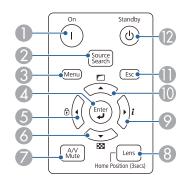


	Name	Function
0	[()] button	Turns the projector on.
2	[Source Search] button	Changes to the next input source that is sending an image.
3	[Menu] button	Displays and closes the Configuration menu. Tusing the Configuration Menu" p.124

	Name	Function
4	[لب] button	 When the Configuration menu or the Help screen is displayed, it accepts and enters the current selection and moves to the next level. If pressed while projecting analog RGB signals from the Computer port or the BNC port, you can automatically optimize Tracking, Sync., and Position.
6	[◀]/[⊕] buttons	 Displays the Control Panel Lock screen allowing you to make settings to lock the control panel buttons. "Restricting Operation" p.119 If pressed when the Configuration menu or the Help screen is displayed, this button selects menu items and
		 setting values. "Using the Configuration Menu" p.124 "Using the Help" p.155
6	[▼]/[⊠] buttons	 Displays a test pattern. "Displaying a Test Pattern" p.31 If pressed when the Configuration menu or the Help screen is displayed, this button selects menu items and setting values. "Using the Configuration Menu" p.124 "Using the Help" p.155
7	[A/V Mute] button	Turns the video and audio on or off. Turns the lmage and Sound Temporarily (A/V Mute)" p.107
8	[Lens] button	Displays the adjustment screens for lens shift, zoom, focus, and distortion in that order each time the button is pressed.If pressed for more than three seconds, the lens position moves to the home position.

TOP		
TOP		
TOP	ŏŏ, d	
	TOP	

	Name	Function
9	[▶]/[<i>i</i>] buttons	 Displays the Info menu from the Configuration menu. Tinfo Menu (Display Only)" p.145 If pressed when the Configuration menu or the Help
		screen is displayed, this button selects menu items and setting values.
		 "Using the Configuration Menu" p.124 "Using the Help" p.155
0	[▲]/[🗖] buttons	 Performs screen adjustments using the settings in Geometry Correction from the Configuration menu. Settings - Geometry Correction p.131
		 If pressed when the Configuration menu or the Help screen is displayed, this button selects menu items and setting values. "Using the Configuration Menu" p.124 "Using the Help" p.155
0	[Esc] button	• Stops the current function.
		 If pressed when the Configuration menu is displayed, it moves to the previous menu level. "Using the Configuration Menu" p.124
12	[ْْْْ)] button	Turns the projector off.

Remote Control

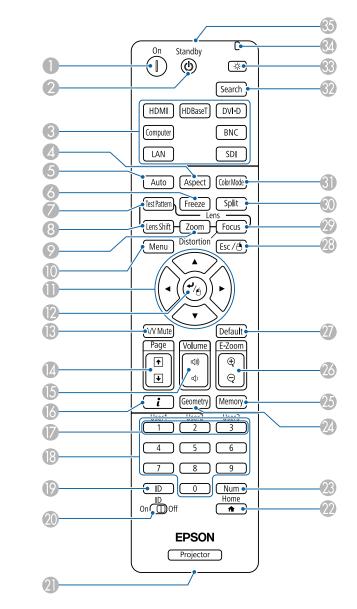

20



	Name	Function
0	[()] button	Turns the projector on.
2	[也] button	Turns the projector off.
3	Change input buttons	Changes to images from each input port. "Switching to the Target Image by Remote Control" p.60 The [SDI] button only functions for EB-L1505U/EB- L1500U/EB-L1405U.
4	[Aspect] button	Each time the button is pressed, the aspect mode changes. Changing the Aspect Ratio of the Projected Image " p.78
5	[Auto] button	If pressed while projecting analog RGB signals from the Computer port or the BNC port, you can automatically optimize Tracking, Sync., and Position.
6	[Freeze] button	Images are paused or unpaused. ☞ "Freezing the Image (Freeze)" p.108
0	[Test Pattern] button	Displays a test pattern. Tisplaying a Test Pattern" p.31
8	[Lens Shift] button	Press to adjust the lens shift. TAdjusting the Position of the Projected Image (Lens Shift)" p.33 If pressed for more than three seconds, the lens position moves to the home position.
9	[Zoom] button	Press to adjust the zoom. The state of the
0	[Menu] button	Displays and closes the Configuration menu. Tusing the Configuration Menu" p.124

	Name	Function
•	[▲][▼][◀][▶] buttons	 Press to adjust focus, zoom, distortion, and lens shift. "Adjusting the Position of the Projected Image (Lens Shift)" p.33 "Adjusting the Image Size" p.35 "Correcting the Focus" p.36 When the Configuration menu or the Help screen is displayed, pressing these buttons selects menu items and setting values. "Using the Configuration Menu" p.124 When using the optional wireless mouse receiver, pressing these buttons moves the pointer. "Optional Accessories" p.211
(2)	[لب] button	 When the Configuration menu or the Help screen is displayed, it accepts and enters the current selection and moves to the next level. "Using the Configuration Menu" p.124 Acts as a mouse's left button when using the optional wireless mouse receiver. "Optional Accessories" p.211
B	[A/V Mute] button	Turns the video and audio on or off. Turns the Image and Sound Temporarily (A/V Mute)" p.107
(4)	[Page] buttons [↑][♥]	 Moves to the previous or next image file when projecting images from a computer connected via a network. When using the optional wireless mouse receiver, you can change the PowerPoint file page during projection by pressing the page up/page down buttons.
(5	[Volume] buttons [ଐ][ଐ]]	 [Φ] Decreases the volume. [Φ] Increases the volume. (Φ) "Adjusting the Volume" p.60
6	[i] button	Displays the Info menu from the Configuration menu. ☞ "Info Menu (Display Only)" p.145

21



	Name	Function
	[User1] button [User2] button [User3] button	Select any frequently used item from the Configuration menu items, and assign it to any of these buttons. By pressing the button, the assigned menu item selection/ adjustment screen is displayed, allowing you to make one- touch settings/adjustments.
13	Numeric buttons	 Enter the Password. "Setting Password Protection" p.117 Use this button to enter numbers in Network settings from the Configuration menu.
0	[ID] button	Hold down this button and press the numeric buttons to select the ID for the projector you want to operate using the remote control.
20	[ID] switch	Use this switch to enable (On)/disable (Off) ID settings for the remote control. TID Settings" p.40
2	Remote port	Connects the optional remote control cable set and outputs signals from the remote control. Toptional Accessories" p.211 When the remote control cable is plugged into this remote port, the remote control light-emitting is disabled.
2	[合] button	Displays and closes the Home screen. Thome Screen" p.56
23	[Num] button	Hold down this button and press the numeric buttons to enter passwords and numbers. © "Setting Password Protection" p.117
24	[Geometry] button	Corrects distortion in the projected image. Correcting Distortion in the Projected Image" p.62
25	[Memory] button	Performs operations and makes settings for the memory function.

	Name	Function
26	[E-Zoom] buttons [⊕][♀]	Enlarges or reduces the image without changing the projection size.
2)	[Default] button	Enabled when [Default]: Reset is displayed on the configuration menu guide. The settings being adjusted are returned to their default values.
28	[Esc] button	• Stops the current function.
		 If pressed when the Configuration menu is displayed, it moves to the previous level. "Using the Configuration Menu" p.124 Acts as a mouse's right button when using the optional wireless mouse receiver. "Optional Accessories" p.211
29	[Focus] button	Each time the button is pressed, the adjustment screens for focus and distortion are displayed in that order. Torrecting the Focus" p.36
30	[Split] button	Each time the button is pressed, the image changes between projecting two images simultaneously by splitting the projected screen, or projecting one image as normal. The "Projecting Two Images Simultaneously (Split Screen)" p.104
3)	[Color Mode] button	Each time the button is pressed, the Color Mode changes. © "Selecting the Projection Quality (Selecting Color Mode)" p.74
32	[Search] button	Changes to the next input source that is sending an image. The "Automatically Detecting Input Signals and Changing the Projected Image (Source Search)" p.59
(3)	[·츳] button	Illuminates the buttons on the remote control for approximately 15 seconds. This is useful when using the remote control in the dark.
34	Indicator	A light is emitted when outputting remote control signals.



Name	Function
Remote control light- emitting area	Outputs remote control signals.

Handy remote control operations

You can perform the following operations by simply pressing one of the buttons on the remote control.

Operation	Set
Reverse the projected image vertically. (Switch the Projection between Front and Front/Ceiling) The "Changing the direction of the image (projection mode)" p.29	Hold down the [A/V Mute] button for more than five seconds.
Selecting the password security settings. The "Managing Users (Password Protection)" p.117	Hold down the [Freeze] button for more than five seconds. The Password Protection screen is displayed, and you can select various settings.
Locking or unlocking some of the operation of the buttons on the remote control. The "Remote control button lock" p.120	Hold down the [] button for more than five seconds.
Initializing the settings for the Remote Receiver in the Configuration menu. (Enables all Remote receiver for this projector.)	Hold down the [Menu] button for more than 15 seconds.

Operation	Set
Displaying frequently used Configuration menu items.	Press the [User1], [User2], or [User3] button. You can set the menu item you want to assign to each button in User Button .
	Settings - User Button p.131
	The following items can be assigned.
	Light Source Mode, Multi-Projection, Resolution, Image Processing, On-Screen Display, Display the QR Code, Image
	Enhancement, Frame Interpolation, Screen Matching, Color Calibration
	When you press the button for which On-Screen Display is assigned, menus or messages are not displayed on the screen. When the same button is pressed, they are displayed again. If On-Screen Display is enabled, you cannot operate the Configuration menu (except switching the color mode and input source).

Replacing the remote control batteries

If delays in the responsiveness of the remote control occur or if it does not operate after it has been used for some time, it probably means that the batteries are becoming flat. When this happens, replace them with new batteries. Have two AA size alkaline or manganese batteries ready. You cannot use other batteries except for the AA size alkaline or manganese.

Attention

Make sure you read the following manual before handling the batteries.


Safety Instructions

23




Remove the battery cover.

While pushing the battery compartment cover catch, lift the cover up.

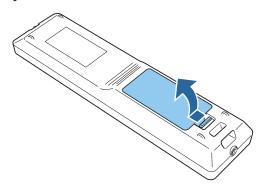



Replace the old batteries with new batteries.

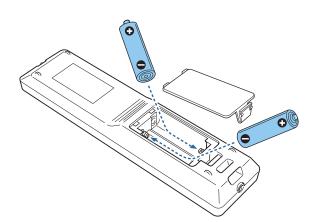

A Caution


Check the positions of the (+) and (-) marks inside the battery holder to ensure the batteries are inserted the correct way.

If the batteries are not used correctly, they could explode or leak causing a fire, injury, or damage to the product.




Replace the battery cover.


Press the battery compartment cover until it clicks into place.

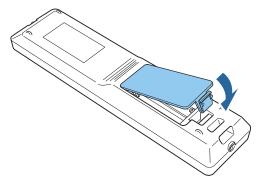

Remote control operating range

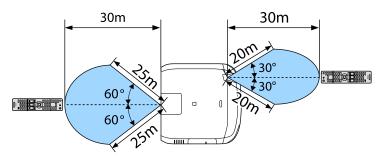

.....

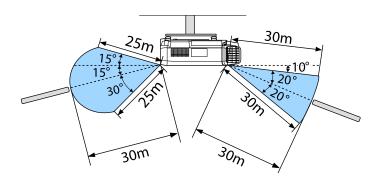



25




To restrict reception of the operation signals from the remote control, set **Remote Receiver**.

Settings - Remote Receiver p.131

Connecting a cable to the remote control

You can make operations securely with the optional remote control cable set when you use multiple units of this projector in the same place or when there are obstacles around the remote receiver.

☞ "Optional Accessories" p.211

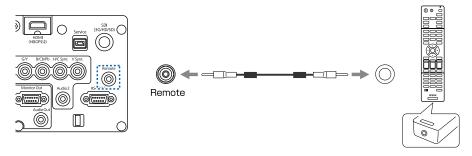

- When the remote control cable is plugged into the Remote port, the remote receiver on the projector is disabled.
 - You can also connect the optional HDBaseT transmitter and remote control with the cable to control the projector.
 - ☞ "Connecting an HDBaseT Transmitter" p.51



Preparing the Projector

This chapter explains how to install the projector and connect projection sources.

Installing the Projector

Removing and Attaching the Projector Lens Unit

Attaching

Attention

- When attaching the lens unit, remove the power plug from the electrical outlet first.
- Do not attach the lens unit when the projector's lens insertion section is facing up. Dust or dirt could enter the projector.
- Try not to touch the lens section with your hand or fingers. If fingerprints or oils are left on the surface of the lens, projection quality deteriorates.




• The projector supports lens with the following model numbers. ELPLM08 (not available for EB-L1505U/EB-L1500U), ELPLX01 (not available for EB-L1505U/EB-L1500U), ELPLU03, ELPLU04, ELPLW05, ELPLW06, ELPLM09, ELPLM10, ELPLM11, ELPLL08, ELPLS04, ELPLU02, ELPLR04, ELPLW04, ELPLM06, ELPLM07, ELPLL07

When using the following lens, set the Lens Type in the Configuration menu according to the lens you are using so that distortion correction is performed correctly.

ELPLS04, ELPLU02, ELPLR04, ELPLW04, ELPLM06, ELPLM07, ELPLL07


- Extended Operation Advanced Lens Type p.133
- In a normal installation, the image may be tilted depending on your lens. Adjust the tilt of the image using the front and rear feet.
- ☞ "Adjusting the Horizontal Tilt (for Normal Installment)" p.40

Pull the lens replacement cover straight out.

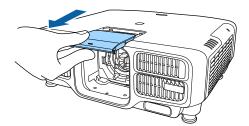



Hold the lock lever and turn it counterclockwise.

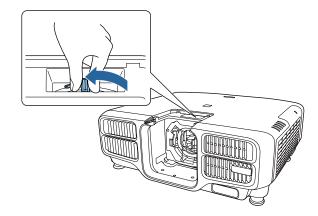




When using the following lens, attach the supplied lens connector cap to protect the port.

ELPLS04, ELPLU02, ELPLR04, ELPLW04, ELPLM06, ELPLM07, ELPLL07






Insert the lens unit straight into the lens insertion section with the white circle on the lens on top.

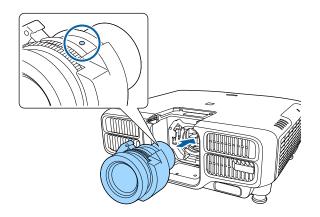

4

While holding the lens unit firmly, hold the lock lever and turn it clockwise to lock the lens unit.

Check that the lens cannot be detached.

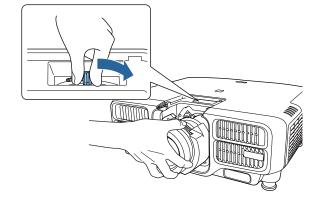



Attach the lens replacement cover.



TOP

Lens Calibration

After replacing the lens unit, calibrate the lens so that the projector can correctly acquire the lens position and adjustment range.

After attaching a lens unit that differs from the previous one, a message is displayed when the projector is turned on.

Select Yes to calibrate the lens.

Lens calibration takes up to about 100 seconds until it is complete. When it is complete, the lens position returns to the position before the calibration (ELPLX01 returns to the standard position).

Attention

If the message "Lens Calibration failed." is displayed, stop using the projector, remove the power plug from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.

Epson Projector Contact List

• You can also calibrate the lens from the Configuration menu.

- Extended Operation Lens Calibration p.133
- If you attach a lens unit that is the same as the previous one, calibrate the lens from the Configuration menu.
- If you do not calibrate the lens, the following functions may not operate correctly.

Lens Shift, Memory (Lens Position)

Removing

Attention

When replacing the lens unit, remove the power plug from the electrical outlet first. If the lens shift has been done, move the lens position to the home position before replacing the lens unit.

☞ "Adjusting the Position of the Projected Image (Lens Shift)" p.33



1


The projector uses a laser as the light source. As a safety measure, the light source turns off when the lens is removed. Attach the lens, and then press the [(1)] button to turn it back on.

Pull the lens replacement cover straight out.



2 While holding the lens unit firmly, hold the lock lever and turn it counterclockwise to unlock the lens unit.

Pull the lens unit straight out as it is released.

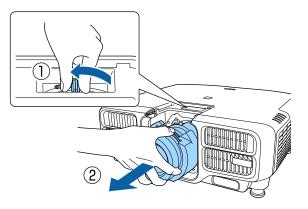

Installation Settings

Changing the direction of the image (projection mode)

You can change the direction of the image using **Projection** mode from the Configuration menu.

Extended - Projection p.133



When Front is the standard, the image directions for each projection mode are as follows.

Front (default)



Rear





 You can change the setting as follows by pressing down the [A/V Mute] button on the remote control for about five seconds.
 Front↔Front/Ceiling

 $Rear { \leftrightarrow } Rear / Ceiling$

- To rotate the menu display, set **OSD Rotation** in the Configuration menu.
- Extended Display OSD Rotation p.133
- When suspending the projector from a ceiling, set the Inv Direction Button to On so that the [▲], [▼], [◀], and [▶] buttons on the control panel operate in the correct direction.

Extended - Operation - Advanced - Inv Direction Button p.133

Front/Ceiling



Rear/Ceiling

Screen Settings

Set the Screen Type according to the aspect ratio of the screen being used. The area where the image is displayed matches the shape of the screen.



The setting for the Screen Type at the time of purchase is 16:10.



- Press the [Menu] button while projecting. • "Using the Configuration Menu" p.124
- Select **Display** from **Extended**.




4



- Select Screen Type from Screen.
- Select the screen's aspect ratio.

The shape of the background test pattern changes depending on the setting.

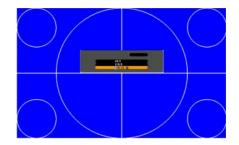



Press the [Menu] button to finish making settings.

Installing the Projector

31



- When you change the Screen Type, adjust the aspect ratio for the projected image as well.
 - Changing the Aspect Ratio of the Projected Image " p.78
- This function does not support Message Broadcasting (an EasyMP Monitor plugin).

 
Adjusting the position of the image on the projected screen

You can adjust the position of the image if there are margins between the edge of the image and the projected screen frame due to the Screen Type setting.

Example: When the Screen Type is set to 4:3 for the WUXGA/WXGA projector



You can move the image to the left and right.



Select **Display** from **Extended**.


3

Select Screen Position from Screen.



Use the $[\blacktriangle]$, $[\checkmark]$, $[\triangleleft]$, and $[\triangleright]$ buttons to adjust the position of the image.

You can check the current display position by using the background test pattern.

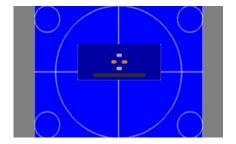

5 Pr

Press the [Menu] button to finish making settings.



When the Screen Type is set to 16:10, the Screen Position cannot be adjusted.

Displaying a Test Pattern

A test pattern can be displayed to adjust the projection status without connecting video equipment.

The shape of a test pattern is according to the setting of Screen Type. Set Screen Type first.

☞ "Screen Settings" p.30

 


 
Press the [Test Pattern] button of the remote control or the [E] button on the control panel while projecting.






Press the [4][b] buttons on the remote control or the [4] button on the control panel to change the test pattern.





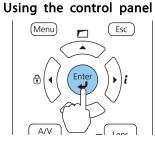

Standard	Cross-hatching	Color Bars V	Color Bars H
Grayscale	Gray Bars V	Gray Bars H	Checkerboard
Checkerboard	White	Black	16:10Aspect
2			Frame
16:9Aspect	4:3Aspect		
Frame	Frame		

In addition to lens operations, the following image adjustments can be made while the test pattern is being displayed.

Top Menu Name	Sub Menu/Items
Image	Color Mode 🖝 p.74
	White Balance

Top Menu Name	Sub Menu/Items
	Advanced - Gamma ^{*1} 🖝 p.81 - RGBCMY 🖝 p.80
	Reset
Set	Geometry Correction • p.62 Brightness Settings
Extended	Display ^{*2} Color Calibration Multi-Projection ^{*3} 🖝 p.90

- *1 Except for custom settings of gamma
- *2 Except for Screen, Panel Alignment, and Color Uniformity
- *3 Except for Black Level, Scale, Color Uniformity, and Color Adjustment
 - To set menu items that cannot be set while the test pattern is being displayed or to fine-tune the projected image, project an image from the connected device.
 - During image adjustment, press the [1][1] [Page] buttons on the remote control to change the test pattern.
 - You can also select a test pattern from the Configuration menu.
 - ✓ Settings Test Pattern p.131
- Press the [Esc] button to close the test pattern. З

Installing the Projector


Adjusting the Position of the Projected Image (Lens Shift)

The lens can be shifted to adjust the position of the projected image, for example, when the projector cannot be installed directly in front of the screen.

The ranges within which the image can be moved are shown below. The position of the projected image cannot be moved to both the horizontal and vertical maximum values.

EB-L1505U/EB-L1500U


When using the ELPLU03/ELPLW05

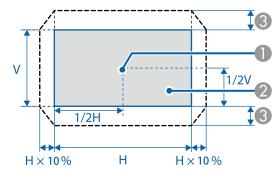

- Center of lens
- Projected image when the lens position is moved to the home position
- 3 Maximum motion range: V x 24%*
- * When performing screen matching: V x 11% (ELPLU03)


* When the horizontal direction is at the maximum value, the image cannot be moved vertically.


When using the ELPLU04/ELPLW06/ELPLM09/ELPLM10/ELPLM11/ ELPLL08

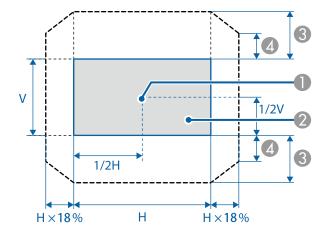


- Center of lens
- Projected image when the lens position is moved to the home position
- 3 Maximum motion range: V x 60%*
- When the horizontal direction is at the maximum value: V×31%
- * When performing screen matching: V x 40% (ELPLU04)

 EB-L1405U/EB-L1300U/EB-L1200U/EB-L1100U



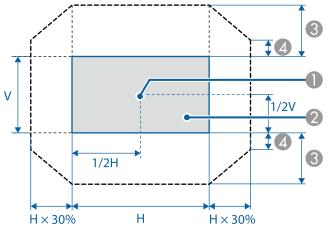

- Center of lens
- Projected image when the lens position is moved to the home position
- 3 Maximum motion range: V x 67%*
- When the horizontal direction is at the maximum value: V x 19%
- * When performing screen matching: V x 44% (ELPLU03), V x 51% (ELPLM09)
- * When performing color calibration: V x 64% (ELPLU03)

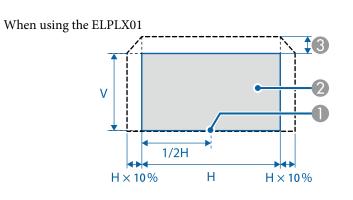

- Center of lens
- Projected image when the lens position is moved to the home position
- 3 Maximum motion range: V x 17%*

* When the horizontal direction is at the maximum value, the image cannot be moved upward.

 
- When adjusting the image height with the vertical lens shift, adjust by moving the image from the bottom to the top. If it is adjusted from the top to the bottom, the image position may move down slightly after adjusting.
- We recommend setting the focus, zoom, and lens shift at least 20 minutes after you start the projection, After projecting videos, we recommend waiting for more than 20 minutes to make settings for the Focus/Zoom/Lens Shift.
- The image will be clearest when the lens position is moved to the home position.
- If you hold down the [Lens Shift] button on the remote control or the [Lens] button on the control panel for at least three seconds, the lens position moves to the home position.
- If you set A/V Output to Always On, you can move the lens position to the home position even if the projector is in standby mode.
- Extended A/V Settings A/V Output p.133
- ELPLR04 does not support lens shift.

Press the [Lens Shift] button on the remote control or the [Lens] button on the control panel.

Repeatedly press the [Lens] button on the control panel until the lens shift adjustment screen is displayed.

Using the remote control


Using the control panel







Press the $[\blacktriangle][\checkmark][\checkmark][\checkmark][\blacktriangleright]$ buttons to adjust the position of the projected image.

Using the remote control

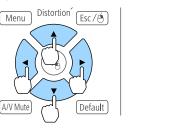

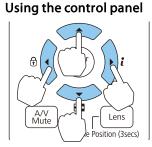

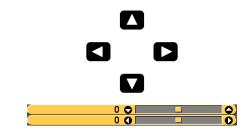

The displayed screen may differ depending on your lens.

B Press the [Esc] button to finish the adjustment.

Adjusting the Image Size

This is not available for ELPLX01 and ELPLR04.



 


2

Press the [Zoom] button on the remote control or the [Lens] button on the control panel.

Repeatedly press the [Lens] button on the control panel until the zoom adjustment screen is displayed.

Using the remote control



100

Home Position


Lens


(3secs)

A/V Mute

Using the control panel

Press the $[\blacktriangleleft][\blacktriangleright]$ buttons to adjust.

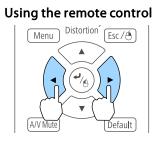


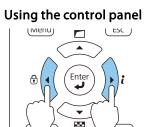

The displayed screen may differ depending on your lens.

 $\overline{}$

  $\overline{}$




Correcting the Focus

Press the [Focus] button or the [Lens] button on the control panel.

Repeatedly press the [Lens] button on the control panel until the focus adjustment screen is displayed.

Using the remote control

Using the control panel

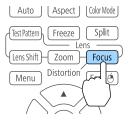


A/V Mute Home Position 3secs)



Press the $[\P][\bullet]$ buttons to adjust.

 Using the remote control







The displayed screen may differ depending on your lens.

Installing the Projector



When using the following lens, a message prompting you to adjust the distortion (image warping) is displayed. After adjusting the focus, adjust the distortion.

ELPLX01, ELPLU03, ELPLU04, ELPLW05, ELPLU02

☞ "Correcting Distortion (Image Warping)" p.37



Press the [Esc] button to finish the adjustment.

Correcting Distortion (Image Warping)

When using a short throw zoom lens and focusing at the center of the screen, the surrounding image may warp and be out of focus. Follow the steps below to correct the warping.




2

Press the [Focus] button on the remote control or the [Lens] button on the control panel.

Repeatedly press the [Lens] button on the control panel until the focus adjustment screen is displayed.

Press the [◀][▶] buttons to focus the image around the center of the lens.

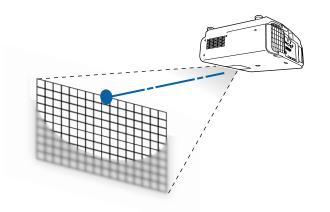




Press the [Focus] button on the remote control or the [Lens] button on the control panel again.

Repeatedly press the [Lens] button on the control panel until the distortion adjustment screen is displayed.



Press the $[\P][P]$ button to adjust the focus of the surrounding area.

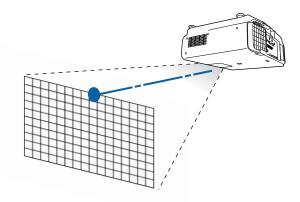


TOP






When using the ELPLU02, a message prompting you to manually adjust the distortion is displayed. Turn the distortion ring counterclockwise, and then adjust the focus. After adjusting the focus, manually turn the distortion ring to correct the image warping.

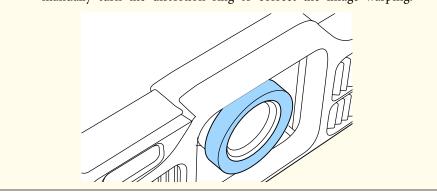

Registering and Loading Lens Adjustment Values

 You can register a lens position whose lens shift, zoom, focus, and distortion was adjusted in memory, and load it when necessary. You can register up to 10 values.



- If you did not calibrate your lens, a message is displayed when you save a memory. Select **Yes** to calibrate the lens.
- The lens position when a memory is loaded may not completely match the lens position when the memory was saved.
- If there is a large discrepancy between the lens position when a memory is loaded and the lens position when the memory was saved, calibrate the lens.
- Extended Operation Lens Calibration p.133



Press the [Memory] button while projecting.





You can also operate from the Configuration menu. Settings - Memory p.131


2 Sele

Select Lens Position, and then press the [+] button.

Image	[Memory]			Return
Signal	Memory Lens Posit	ion	()	
Settings G		Correction	Q	
Extended				
Network				
Info				
Reset				
	-			
[Esc] :Return	[�]:Select	[•]:Enter		[Menu]:Exit



Select the function you want to perform, then press the [+] button.

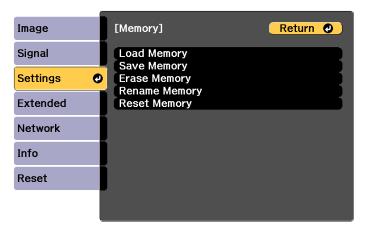

[Menu]:Exit


Function	Explanation
Load Memory	Loads the saved memory. When you select a memory name and press the [] button, the lens is automatically adjusted according to the settings of the selected memory.
Save Memory	Registers current settings in the memory. When you select a memory name and press the [] button, the settings are saved.
Erase Memory	Erases the registered memory. When you select a memory name and press the [] button, a message is displayed. Select Yes , and then press the [] button to erase the selected memory.
Rename Memory	 Changes the memory name. Select the memory name you want to change, and then press the [↓] button. Enter the memory name using the soft keyboard. "Soft keyboard operations" p.139 When you have finished, move the cursor over Finish, and then press the [↓] button.

Function	Explanation
Reset Memory	Resets the name and settings of a saved memory.

If the mark on the left of the memory name is turned blue, it means the memory has already been registered. When you select a registered memory, a message is displayed asking you to confirm that you want to overwrite the memory. If you select **Yes**, the previous settings are deleted and the current settings are registered.

Adjusting the Height of the Projected Image (for Normal Installment)

Extend or retract the front feet to make adjustments. You can adjust the position of the image by tilting the projector up to 10 degrees.

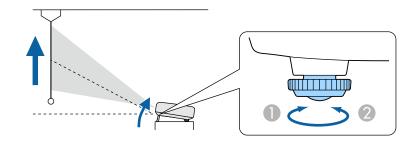

Extend the front feet.

2 Retract the front feet.

The larger the angle of tilt, the harder it becomes to focus. Install the projector so that it only needs to be tilted at a small angle.


39

Installing the Projector



Adjusting the Horizontal Tilt (for Normal Installment)


Extend and retract the front and rear feet to adjust the projector's horizontal tilt.

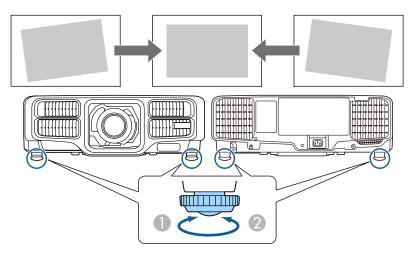

- Extend the front and rear feet.
- 2 Retract the front and rear feet.

ID Settings

 When an ID is set for the projector and the remote control, you can use the remote control to operate only the projector with a matching ID. This is very useful when managing multiple projectors. You can set up to 30 IDs.



- ☞ "Remote control operating range" p.24
- When **Remote Control Type** is set to **Simple** in the configuration menu, you cannot set the remote control ID.

Extended - Operation - Advanced - Remote Control Type p.133

- IDs are ignored when the projector ID is set to **Off** or the remote control ID is set to **0**.
- If you use Epson Web Control, you can operate a specific projector from a mobile device.


"Changing Settings Using a Web Browser (Epson Web Control)"
 p.194

Set the projector ID

- 1 Pr
 - Press the [Menu] button while projecting.
 - ☞ "Using the Configuration Menu" p.124



- Select Multi-Projection from Extended.
- Select **Projector ID**, and then press the [+] button.
- Press the [◀][▶] buttons to select an ID number.

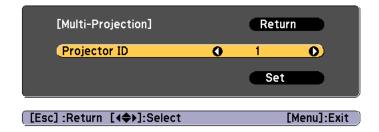




Select Set, and then press the [+] button.



Press the [Menu] button to close the Configuration menu.

Checking the projector ID

During projection, press the $[\uparrow]$ button while holding down the [ID] button.

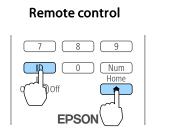


When you press the buttons, the current Projector ID is displayed on the projection screen. It disappears in about three seconds.

Setting the remote control ID



Set the remote control [ID] switch to On.

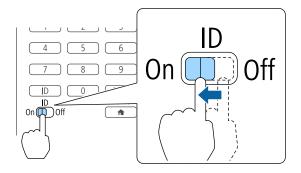




While holding the [ID] button, press a number button to select a number to match the ID of the projector you want to operate.

☞ "Checking the projector ID" p.41

Enter a two digit number (Example: 01 when the ID is 1).

Remote control

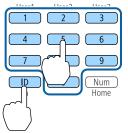

Once this setting has been made, the projector that can be operated by the remote control is limited.



The remote control ID setting is saved in the remote control. Even if the remote control batteries are removed to replace them and so on, the stored ID setting is retained. However, if the batteries are left out for a long time, it is reset to the default value (ID0).

Setting the Time

You can set the time for the projector. The set time is used for the schedule function.

☞ "Scheduling Function" p.113

TOP





1

• When you turn on the projector for the first time, the message "Do you want to set the time?" is displayed. When you select Yes, the screen from step 4 is displayed.

- When Schedule Protection is set to On in Password Protection, settings related to the date and time cannot be changed. You can make changes after setting Schedule Protection to Off.

Press the [Menu] button while projecting.

- Select Operation from Extended. 2
- 3
 - Select Date & Time, and then press the [+] button.
- Make settings for the date and time. 4 Use the soft keyboard to enter the date and time.
 - ☞ "Soft keyboard operations" p.139



Date & Time

Submenu	Function
Date	Set today's date.
Time	Set the current time.

Submenu	Function
Time Difference (UTC)	Set the time difference from Coordinated Universal Time.
Set	The settings made in Date & Time are applied.

Daylight Saving Time

Submenu	Function
Daylight Saving Time	Set whether or not (On/Off) to activate the daylight saving time. DST Adjustment (min) adjusts the time difference between the standard time and daylight saving time.
DST Start	Set the date and time to start the daylight saving time.
DST End	Set the date and time to end the daylight saving time.
Set	The settings made in Daylight Saving Time are applied.

Internet Time

Submenu	Function
Internet Time	Set to On to update the time automatically through an Internet time server.
Internet Time Server	Input the IP address for an Internet time server.
Set	The settings made in Internet Time are applied.



When changing settings, make sure you select Set, and then press the [] button.

Press the [Menu] button to finish making settings. 5

43

Other Settings

Settings related to basic operations

Purpose	Setting Methods
To start/stop projection by turning on/off the main power or plugging in or unplugging the power plug of the projector.	Set Direct Power On to On. (Default value: Off) Extended - Operation - Direct Power On p.133 The projector can be powered off directly by the breaker because it supports the direct shutdown function.
To disable the automatic shutdown function.	Set Sleep Mode to Off. (Default value: On) Extended - Operation - Sleep Mode p.133 Set A/V Mute Timer to Off. Extended - Operation - A/V Mute Settings - A/V Mute Timer p.133
To disable buzzer beeps generated when the projector is powered on/ off.	Set Beep to Off. (Default value: On) Extended - Operation - Advanced - Beep p.133
To operate the projector by communication command even when the power of the projector is off.	Set Standby Mode to Communication On. (Default value: Communication Off) Extended - Standby Mode p.133
To operate the projector by communication command while executing A/V Mute.	Set A/V Mute Release to A/V Mute. Extended - Operation - A/V Mute Settings - A/V Mute Release p.133 The default value is Any Button. If you operate the projector while A/V Mute is on, A/V Mute is released.
To turn off the power by pressing the [也] button once.	Set Standby Confirmation to Off. (Default value: On) Confirmation Display - Standby Confirmation p.133

Settings related to display

Purpose	Setting Methods
To change the menu position.	Change the settings of Menu Position. Extended - Display - Menu Position p.133
To change the menu direction.	Change the settings of OSD Rotation. Extended - Display - OSD Rotation p.133
To prevent the display of menus, messages, or warnings on the screen.	Use User Button to set On-Screen Display to User Button 1, User Button 2, or User Button 3. Settings - User Button p.131 When you press the button for which On-Screen Display is assigned, menus or messages are not displayed on the screen. When the same button is pressed, they are displayed again. If On-Screen Display is enabled, you cannot operate the Configuration menu (except switching the color mode and input source).
To disable the display of the message on the projection screen when switching the source.	 Set Messages to Off. (Default value: On) Extended - Display - Messages p.133 You can confirm warning by the display of the indicator. "Reading the Indicators" p.157 Dialogs related to operations and behaviors, laser warnings, termination of Message Broadcasting, and projector ID are displayed.
To reduce the display delay of the image.	Set Image Processing to Fast 1 or Fast 2. Signal - Advanced - Image Processing p.129

Installing the Projector

OP		
OP		
OP	• •	
	OP	

44

Purpose	Setting Methods
To register and save the settings of	Set Memory.
the projected image.	"Memory Function" p.111
	You can save the following settings.
	• Memory: Some settings in the Configuration menu
	 Lens Position: Adjustment values of the lens shift, zoom, focus, and distortion Geometry Correction: Adjustment value of the geometry correction
To change the screen displayed on the background.	Change from Display . You can select from blue, black, and logo. If no logo is registered, the EPSON logo is displayed.
	Display Background : Set the screen display with no image signal input. (Default value: Blue)
	Extended - Display - Display Background p.133
	Startup Screen : Set whether or not (On/Off) to display the user logo when the projector is turned on. (Default value: On)
	Extended - Display - Startup Screen p.133



The port name, location, and connector orientation differ depending on the source being connected.

Connecting a Computer

To project images from a computer, connect the computer using one of the following methods.

() When using the supplied computer cable

Connect the computer's display output port to the projector's Computer port.

You can output audio from the projector's speaker or Audio Out port by connecting the audio output port on the computer to the projector's Audio1 port using a commercially available audio cable.

When using a commercially available 5BNC cable

Connect the computer's display output port to the projector's BNC port.

You can output audio from the projector's speaker or Audio Out port by connecting the audio output port on the computer to the projector's Audio2 port using a commercially available audio cable.

3 When using a commercially available HDMI cable


Connect the HDMI port on the computer to the projector's HDMI port. You can send the computer's audio with the projected image.

When using a commercially available DVI-D cable

Connect the DVI-D port on the computer to the projector's DVI-D port.

You can output audio from the projector's speaker or Audio Out port by connecting the audio output port on the computer to the projector's Audio3 port using a commercially available audio cable.



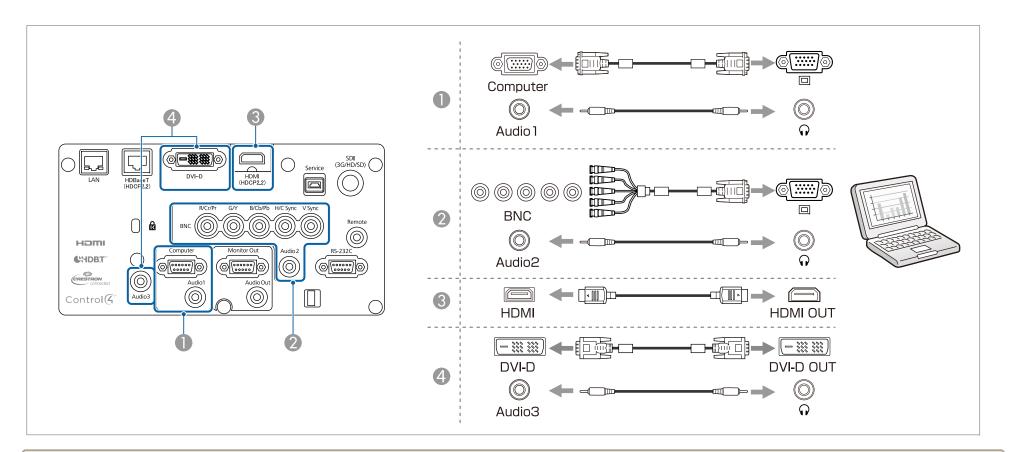

• Change the audio output from Audio Settings.

- Extended A/V Settings Audio Settings p.133
- If audio is not sent using an HDMI cable, connect a commercially available audio cable to the Audio3 port to send the audio. Set HDMI Audio Output to Audio3.

Extended - A/V Settings - Audio Settings - HDMI Audio Output p.133



Connecting Image Sources

To project video images, connect to the projector using one of the following methods.

- When using an optional component video cable (D-sub/component converter)
 - Optional Accessories" p.211

Connect the component output port on the image source to the projector's Computer port.

You can output audio from the projector's speaker or Audio Out port by connecting the audio output port on the video equipment to the projector's Audio1 port using a commercially available audio cable.

When using a commercially available component video cable (RCA) and a BNC/RCA adapter

Connect the component output port on the video equipment to the projector's BNC port (R/Cr/Pr, G/Y, B/Cb/Pb).

You can output audio from the projector's speaker or Audio Out port by connecting the audio output port on the video equipment to the projector's Audio2 port using a commercially available audio cable.

When using a commercially available BNC video cable (SDI input, EB-L1505U/EB-L1500U/EB-L1405U only)


Connect the SDI port on the image source to the projector's SDI input port.

When using a commercially available HDMI cable

Connect the HDMI port on the image source to the projector's HDMI port.

You can send the image source's audio with the projected image.



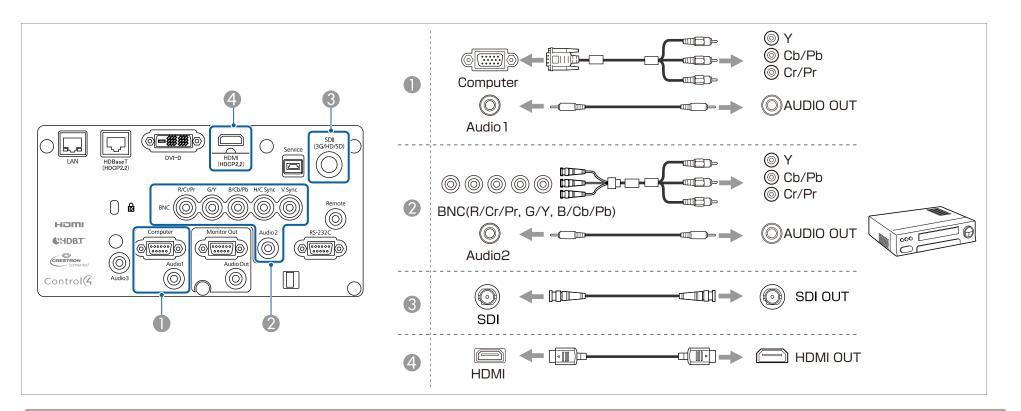

Attention

- If the input source is on when you connect it to the projector, it could cause a malfunction.
- If the orientation or shape of the plug differs, do not try to force it in. The device could be damaged or could malfunction.

• Change the audio output from Audio Settings.

- Extended A/V Settings Audio Settings p.133
- If audio is not sent using an HDMI cable, connect a commercially available audio cable to the Audio3 port to send the audio. Set HDMI Audio Output to Audio3.

Extended - A/V Settings - Audio Settings - HDMI Audio Output p.133

• If the source you want to connect to has an unusually shaped port, use the cable supplied with the device or an optional cable to connect to the projector.

Connecting Equipment



Connecting External Equipment


You can output images and audio by connecting an external monitor or speaker.

() When outputting images to an external monitor

Connect the external monitor to the projector's Monitor Out port using the cable supplied with the external monitor.

When outputting audio to an external speaker

Connect the external speaker to the projector's Audio Out port using a commercially available audio cable.

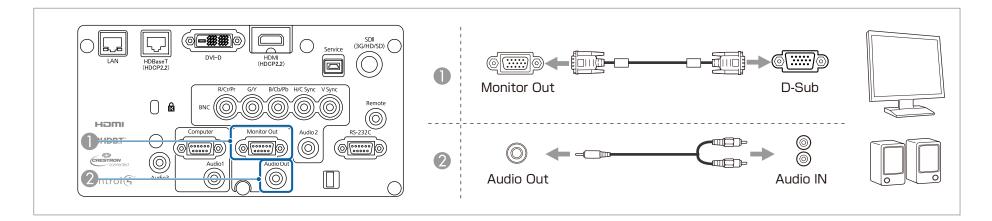

• Set A/V Output to Always On to output image even when the projector is in standby mode.

Extended - A/V Settings - A/V Output p.133


- Only analog RGB signals from the Computer port or BNC port can be output to an external monitor. You can set which signals to output in Monitor Out.
- Extended A/V Settings Monitor Out p.133
- When the audio cable jack is inserted into the Audio Out port, audio stops being output from the projector's built-in speakers and switches to external output.

 


Connecting a LAN Cable

Connect a LAN port on network hubs or other equipment to the projector's LAN port with a commercially available 100BASE-TX or 10BASE-T LAN cable.

By connecting a computer to the projector over a network, you can project images and check the status of the projector.

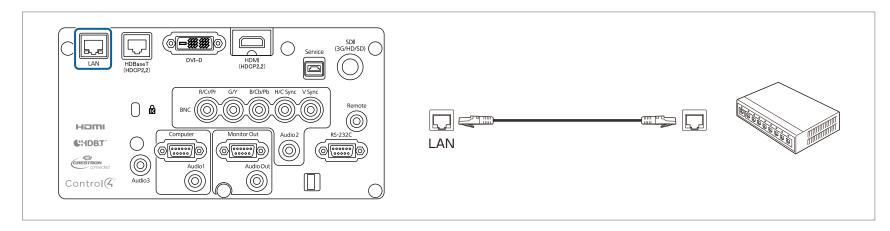






Connecting an HDBaseT Transmitter

Connect the optional HDBaseT Transmitter with a commercially available 100BASE-TX LAN cable.

☞ "Optional Accessories" p.211

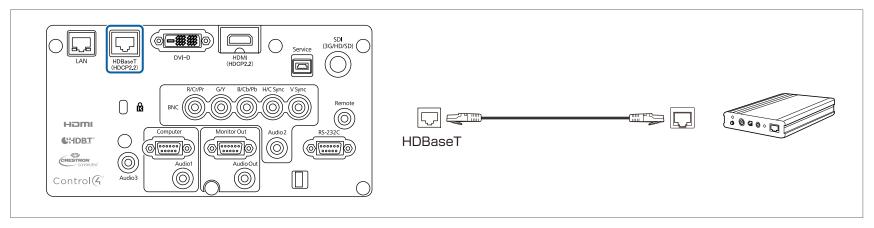

- Make sure you read the User's Guide supplied with the HDBaseT Transmitter carefully before use.
- For the LAN cable, use an HDBaseT Alliance-recommended STP cable (straight) of category 5e or higher. However, operation is not guaranteed for all input/output devices and environments.
- When connecting or disconnecting the LAN cable, make sure you turn off the power for the projector and the HDBaseT Transmitter.
- When performing Ethernet communication or serial communication, or when using the wired remote control via HDBaseT port, set Control Communications to On from the Configuration menu.
- Extended HDBaseT Control Communications p.133

Note that when Control Communications is set to On, the projector's LAN port, RS-232C port, and Remote port are disabled.

- When using the Extron XTP transmitter or switcher, connect to the projector's HDBaseT port. Set Extron XTP to On (Standby Mode and Control Communications are automatically set to On).
- Extended HDBaseT Extron XTP p.133

Connecting Equipment




Installing the Wireless LAN Unit




Remove the air filter cover.


Grip the air filter cover tab between your fingers, and pull up and remove the cover while pressing the tab.

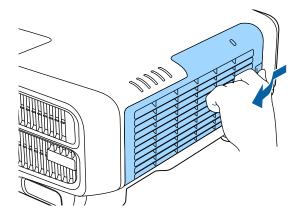




Remove the stopper for the Wireless LAN unit.

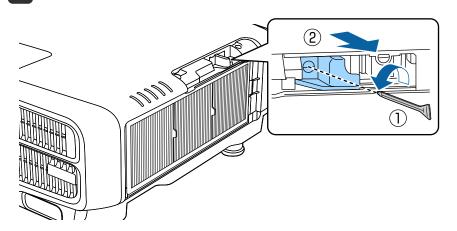

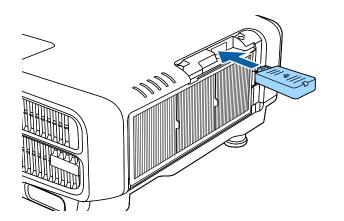



Secure the stopper with a screw.

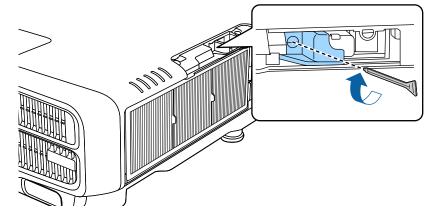




Attach the air filter cover.



Install the Wireless LAN unit.

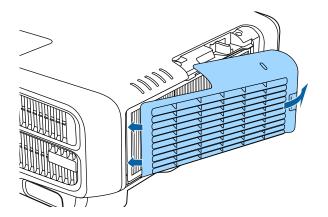

Using the Quick Wireless Connection USB Key

Connect the optional Quick Wireless Connection USB Key to the wireless LAN unit installation section. Check the following points when connecting a computer to the projector using wireless LAN.

- The wireless LAN unit (ELPAP10) is connected to the projector.
- The projector is setup to connect to the network using wireless LAN.
 "Wireless LAN menu" p.140
 - Turn on the projector, and then press the [LAN] button on the remote control.

The following screen is displayed.


1





Check that the SSID and IP address information are displayed, and then remove the wireless LAN unit.

- ☞ "Installing the Wireless LAN Unit" p.52
- **3** Insert the Quick Wireless Connection USB Key in the wireless LAN unit installation section.

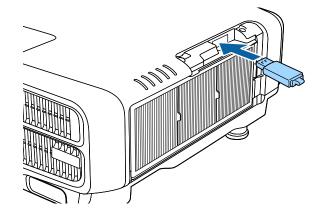

When "Network information update complete. Remove the Quick Wireless Connection USB Key Adapter."is displayed, remove the Quick Wireless Connection USB Key Adapter.

After removing the Quick Wireless Connection USB Key, reattach the wireless LAN unit.

TOP

Connecting Equipment



Connect the Quick Wireless Connection USB Key to the computer. From this point on, see the user's guide supplied with the Quick Wireless Connection USB Key.

Attaching the Cable Cover

By attaching the cable cover, you can hide the connected cables giving a nice, clean finish to the projector installation. (The illustrations are of a projector installed on a ceiling.)



Warning


Do not tie the power cord and other connection cables together. Otherwise, it could cause a fire.

Attaching




2

Run a commercially available cable tie through the cable holder and tie the cables together.

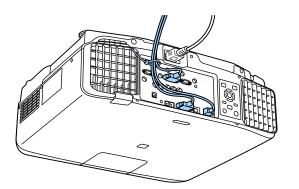


Insert the tabs on the cable cover into the two slots on the back of the projector.

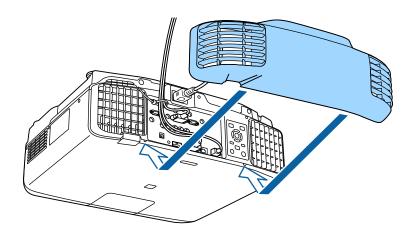

3

Tighten the two screws on the cable cover. (You can tighten the screws with your fingers.)

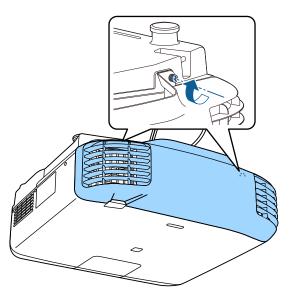



TOP



Basic Usage

This chapter explains how to project and adjust images.




Before turning on the projector, connect your computer or video equipment to the projector.

Connecting Equipment" p.45



Connect the projector to an electrical outlet with the power cord.

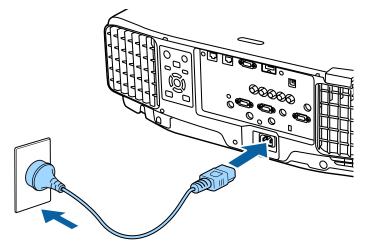

The projector's power indicator turns blue (it is in standby mode). This indicates that the projector is receiving power, but is not yet turned on.

Press the [1] button on the control panel or remote control to turn on the projector.

The confirmation buzzer beeps and the status indicator flashes blue as the projector warms up. Once the projector is warmed up, the status indicator stops flashing and turns blue.

If the image is not projected, try the following.

- Turn on the connected computer or video equipment.
- When using a laptop computer, change the screen output of the computer.
- Insert media such as a DVD and play it back.

- Press the [Search] button on the control panel or the remote control to detect the input source.
- Press the button for the input source that you want to project by using the remote control.
- If the Home screen is displayed, select the input source that you want to project.

🕂 Warning

- Do not look into the projector's lens during projection. Doing so may damage your eyes. Be especially careful if children are present.
- During projection, do not block the light from the projector with a book and so on. If the light from the projector is blocked for a long time, the area on which the light shines becomes hot which could cause it to melt, burn, or start a fire. Also, the lens may get hot due to the reflected light which could cause the projector to malfunction. To stop projection, use the A/V Mute function or turn off the projector.
 - If **Direct Power On** is set to **On** in the **Extended** menu, the projector automatically turns on when the power cord is connected to it. When the power cord is plugged in, note that the projector turns on automatically in cases such as recovery from a power outage.
 - Extended Operation Direct Power On p.133
 - If an image signal from the source selected in Auto Power On is input, the projector automatically turns on.
 - Extended Operation Auto Power On p.133

Home Screen

You can use the Home screen to easily select input sources or frequently used functions. The Home screen is displayed in the following situations.

 \bullet When the $[\clubsuit]$ button on the remote control is pressed

Turning On the Projector

- When the projector is turned on while Home Screen Auto Disp. is set to On
 - Extended Home Screen Home Screen Auto Disp. p.133
- When there is no signal from the selected input source when the projector is turned on

When the Home screen is displayed, use the $[\blacktriangle][\checkmark][\checkmark][\checkmark][\blacktriangleright]$ buttons on the control panel or remote control to select an item, and then press the $[\checkmark]$ button.

To hide the Home screen, press the $[\uparrow]$ button on the remote control again.

- Executes the function assigned to Custom Function 1 or Custom Function 2 in the Extended menu.
 - Extended Home Screen Custom Function 1, Custom Function 2 p.133
- **6** Select Light Source Mode.
 - ☞ "Setting the Brightness" p.74
- Select Color Mode.
 - ☞ "Selecting the Projection Quality (Selecting Color Mode)" p.74



The Home screen disappears after 10 minutes of inactivity.



0	Select the input source that you want to project.
2	Displays the QR code and projects the data of a smartphone or tablet.
8	Displays the Help screen. The screen is the Help " p.155 is the screen is the scr
4	Displays the Configuration menu.

 
TOP

Turning Off the Projector



- To ensure a long projector service life, turn off the projector when you are not using it. The light source's operating life varies depending on the Configuration menu settings, environmental conditions, and usage conditions. The brightness of the projected image drops as projection time elapses.
 - The projector can be powered off directly by the breaker because it supports the direct shutdown function.
 - When the projector is used continuously for more than 24 hours, or when direct shutdown is used regularly, set **Light Source Calibration** using the scheduling function to adjust the light source periodically.
 - ☞ "Scheduling Function" p.113

Press the [也] button on the control panel or the remote control. The shutdown confirmation screen is displayed.






1

Press the [0] button again. (To cancel, press any other button.) After the buzzer beeps twice, the projected image disappears, and the status indicator turns off.

3 Disconnect the power cord.

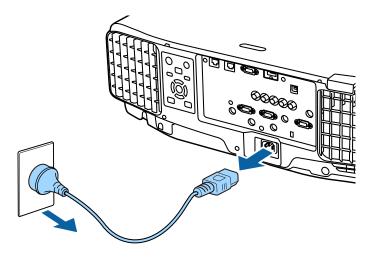


Projecting Images



Automatically Detecting Input Signals and Changing the Projected Image (Source Search)


Press the [Search] button to project images from the port currently receiving an image.

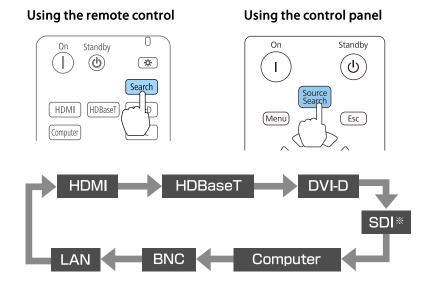

* EB-L1505U/EB-L1500U/EB-L1405U only

When two or more image sources are connected, repeatedly press the [Search] button until the target image is projected.

 When your video equipment is connected, start playback before beginning this operation.



- Extended Operation Auto Source Search p.133
- The following screen is displayed while no image signals are input.

[Source Search]	Cianal Ct	-+
	Signal St	atus
	Off	
HDBaseT	Off	
🛛 📴 🛥 DVI-D	Off	
SDI SDI	Off	
🛛 🖬 🔤 🛶 Computer	Off	
BNC	Off	
(<u>())</u> LAN	Off	
 Input an image signal. 		
 Press to select the 	source.	
1:Select [@]:Enter		[Esc] :Exit


Projecting Images



Switching to the Target Image by Remote Control


• Press the button of the input source that you want to project. The input ports for the buttons are shown below.

Remote control

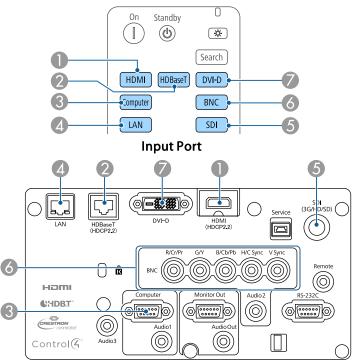

- Changes to images from a computer connected via the network.
- **(5)** For EB-L1505U/EB-L1500U/EB-L1405U only

• Press the [1] button.

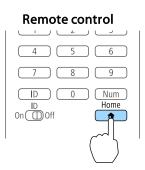

Select the input source to be projected, and then press the $[\checkmark]$ button.


ft		EPSO
ources : Searching all sources	Useful Functions :	
De HDMI		*
100 HDBaseT	Color Mode	Light Source Mod
DVI-D		-Pr
ND SDI	Image Enhancement	Frame Interpolatio
De Computer		
DO- BNC	(=)	(?)
한류 LAN	Menu	Help
반드 Projector Name : SSID : 'I ¹ IP : , 나 IP	Keyword :	Display the QR Code
witch the source.		[Home] :E:

Adjusting the Volume

You can adjust the volume using one of the following methods.

- Press the [Volume] buttons on the remote control to adjust the volume.
- [⊲»] Increases the volume.
- $[\diamondsuit]$ Decreases the volume.

 Remote control



- Adjust the volume from the Configuration menu.
- Settings Volume p.131



Do not start at high volume.

A sudden excessive volume may cause loss of hearing. Always lower the volume before powering off, so that you can power on and then gradually increase the volume.

Adjusting Projected Images

62


Correcting Distortion in the Projected Image

You can correct keystone distortion in projected images using one of the following methods.

• H/V-Keystone

This allows you to correct distortion in the horizontal and vertical directions independently.


☞ "H/V-Keystone" p.63

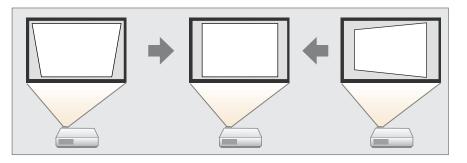

• Quick Corner

Correct the four corners independently.


☞ "Quick Corner" p.64

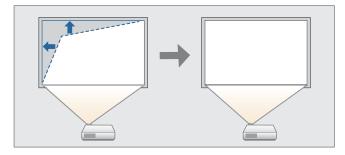

• Curved Surface


Correct distortion that occurs when projecting on a curved surface, and adjust the amount of expansion and contraction.

☞ "Curved Surface" p.65

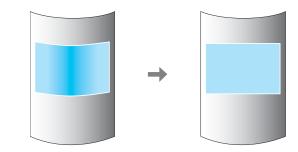

• Corner Wall

 
This allows you to correct distortion that occurs when projecting on a surface with right angles, such as a square pillar or the corner of a room, and adjust the amount of expansion and contraction.



• Point Correction

Corrects slight distortion which occurs partially, or adjusts the image position in an overlapping area when projecting from multiple projectors.

 ☞ "Point Correction" p.72







- By pressing the [Geometry] button on the remote control or the [1] button on the control panel, you can perform the selected adjustment method directly.
- When you want to re-adjust the projection position and so on, if you want to release the correction status temporarily, set the **Geometry Correction** to **Off**. Even when it is set to **Off**, the correction values are saved.
- ☞ Settings Geometry Correction p.131
- You can save the geometry correction settings using **Memory** in **Geometry Correction**, and load them when needed.
- ☞ "Memory Function" p.111

H/V-Keystone

This allows you to correct distortion in the horizontal and vertical directions independently.

Use the following to check the adjustment range for the image. • "H/V-Keystone" p.229




Press the [Menu] button while projecting.



3

Select Geometry Correction from Settings.

Select H/V-Keystone, and then press the [+] button.

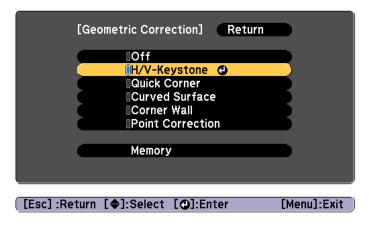


"If this setting is changed, the image may be distorted." is displayed, press the [] button again.

Use the [▲][▼] buttons to select the correction method, and then use the [◀][▶] buttons to make the corrections.


(Return
0 0	0
0 0	Ō
0 0	0
0 0	
[♠]:Adjust	[Menu]:Exit
	0 () 0 () 0 () 0 () 0 () 0 () 0 ()



Correct the keystone distortion by using V-Keystone and H-Keystone.

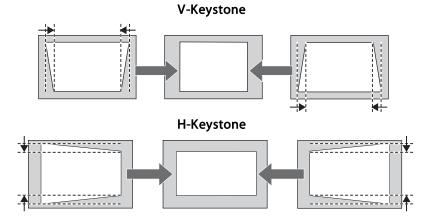

If the image aspect is incorrect, adjust the image balance by using **V-Balance** and **H-Balance**.

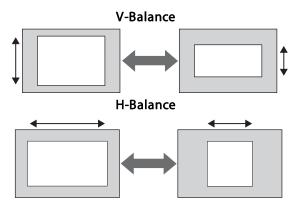

When you correct keystone distortion, the projected image may be reduced.

5



You cannot combine with other correction methods.

Quick Corner

This allows you to correct each of the four corners of the projected image independently.



Press the [Menu] button while projecting.



Select Geometry Correction from Settings.


Select Quick Corner, and then press the [] button.

[Geometric Correction] Return	
Off OH/V-Keystone	}
Quick Corner O Curved Surface Corner Wall	
Point Correction	5
Memory)
[Esc]:Return [�]:Select [@]:Enter [N	4enu]:Exit

"If this setting is changed, the image may be distorted." is displayed, press the $[\checkmark]$ button again.

Use the $[\blacktriangle]$, $[\checkmark]$, $[\triangleleft]$, and $[\triangleright]$ buttons to select the corner you want to adjust, and then press the $[\checkmark]$ button.

64

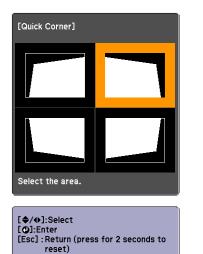

If the [Esc] button is pressed for approximately two seconds, the confirm default reset screen is displayed.


Select Yes to reset the result of Quick Corner corrections.

5

Use the $[\blacktriangle]$, $[\checkmark]$, $[\checkmark]$, and $[\blacktriangleright]$ buttons to correct the position of the corner.

When you press the $[\checkmark]$ button, the screen shown in step 4 that allows you to select the area to be corrected is displayed.

If the message "Cannot adjust any further." is displayed while adjusting, you cannot adjust the shape any further in the direction indicated by the gray triangle.

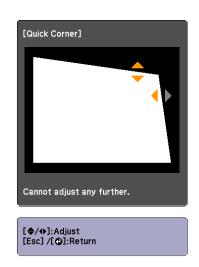



Repeat steps 4 and 5 as needed to adjust any remaining corners.

7 To complete the corrections, press the [Menu] button.

Curved Surface

This allows you to correct distortion that occurs when projecting on a curved surface, and adjust the amount of expansion and contraction.

Face the projector directly opposing the screen with the lens position moved to the home position.

☞ "Adjusting the Position of the Projected Image (Lens Shift)" p.33



- Project onto an arc surface with the same radius.
- If a large amount of adjustment is performed, the focus may not be uniform even after making adjustments.
- If **4K Enhancement** is enabled, a message is displayed. Select **Yes** to disable **4K Enhancement**.

☞ Image - Image Enhancement - 4K Enhancement p.127

TOP

Adjusting Projected Images



Use the following to check the adjustment range for the image. • "Curved Surface" p.229




Press the [Menu] button while projecting.



Select Geometry Correction from Settings.




Select Curved Surface, and then press the [+] button.

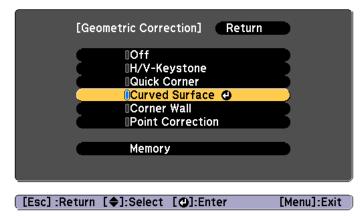

"If this setting is changed, the image may be distorted." is displayed, press the $[\checkmark]$ button again.



Select Curved Surface, and then press the [+] button.

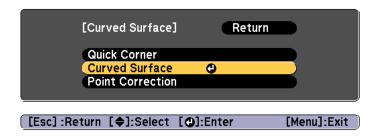




Select Correct Shape, and then press the [] button.

[Curved Surface]	Return
Correct Shape Horizontal Linearity Vertical Linearity	
	:Enter [Menu]:Exit





Use the $[\blacktriangle]$, $[\checkmark]$, $[\triangleleft]$, and $[\triangleright]$ buttons to select the area you want to adjust, and then press the $[\checkmark]$ button.

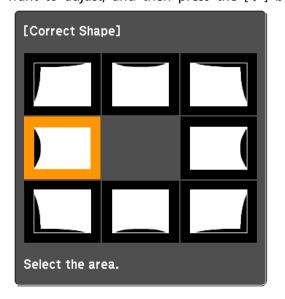

When selecting a corner, you can adjust the two sides next to the corner.




If the [Esc] button is pressed for approximately two seconds, the confirm default reset screen is displayed.


Select Yes to reset the result of Curved Surface.



Use the $[\blacktriangle]$, $[\blacktriangledown]$, $[\triangleleft]$, and $[\blacktriangleright]$ buttons to adjust the shape.

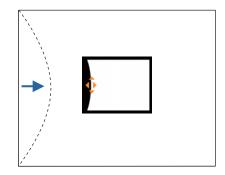

If the triangle in the direction you are adjusting the shape turns gray, as shown in the screenshot below, you cannot adjust the shape any further in that direction.

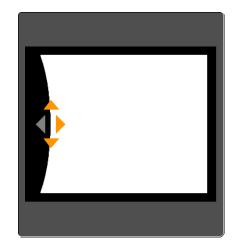



Press the [Esc] button to return to the previous screen.



Repeat steps from 6 to 8 as needed to adjust any remaining parts.

If the image expands or contracts, go to the next step and adjust the linearity.





Press the [Esc] button to display the screen from step 5. Select **Horizontal Linearity** or **Vertical Linearity**, and then press the [**J**] button.

[Curved Surface] Return	
Correct Shape Horizontal Linearity Vertical Linearity	
[Esc] :Return [�]:Select [O]:Enter	[Menu]:Exit

Select **Horizontal Linearity** to adjust the horizontal expansion or contraction, and select **Vertical Linearity** to adjust the vertical expansion or contraction.

11

Select the standard line for the adjustments, and then press the $[\checkmark]$ button.

Press the $[\blacktriangleleft][\blacktriangleright]$ buttons when selecting Horizontal Linearity, and the $[\blacktriangle][\checkmark]$ buttons when selecting Vertical Linearity, and then press $[\checkmark]$.

The selected standard line is displayed in flashing orange and white.




Adjust the linearity.

Correct it so that the distance between lines is equal.

When pressing the $[\blacktriangleleft]$ button


When Horizontal Linearity is selected When Vertical Linearity is selected

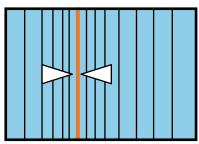


-V $-$
$-\Lambda$

When pressing the [] button

When Horizontal Linearity is selected When Vertical Linearity is selected

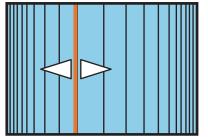

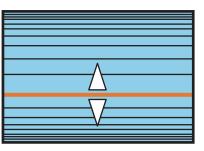



To complete the corrections, press the [Menu] button.



You can fine tune the corrected results. Use **Quick Corner** to adjust the tilt of the image, and then use **Point Correction** for fine tuning. Select **Quick Corner** or **Point Correction** on the screen from step 4.

- ☞ "Quick Corner" p.64
- The "Point Correction" p.72

Corner Wall

This allows you to correct distortion that occurs when projecting on a surface with right angles, such as a square pillar or the corner of a room, and adjust the amount of expansion and contraction.

Face the projector directly opposing the screen with the lens position moved to the home position.

- ☞ "Adjusting the Position of the Projected Image (Lens Shift)" p.33
 - Project onto a surface with a right angle.
 - If a large amount of adjustment is performed, the focus may not be uniform even after making adjustments.
 - If **4K Enhancement** is enabled, a message is displayed. Select **Yes** to disable **4K Enhancement**.
 - ☞ Image Image Enhancement 4K Enhancement p.127
 - This is not available for ELPLX01.

Use the following to check the adjustment range for the image. • "Corner Wall" p.234



3

Press the [Menu] button while projecting.

- Select Geometry Correction from Settings.
- Select Corner Wall, and then press the [+] button.


[Geometric Correction] Return	
Off H/V-Keystone Quick Corner Curved Surface Corner Wall	
Point Correction	
Memory	
[Esc]:Return [�]:Select [O]:Enter	[Menu]:Exit

"If this setting is changed, the image may be distorted." is displayed, press the $[\checkmark]$ button again.



Select Corner Wall, and then press the [+] button.

[Corner Wall]	Retu	rn
Quick Corner		
Corner Wall	0)
Point Correctio	n	
		Endermal Fraint ()
[Esc]:Return [�]:Select	LOJ:Enter	[Menu]:Exit
Select Corner Type, and		

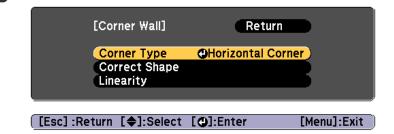

TOP







According to the projection area, select **Horizontal Corner** or **Vertical Corner**, and then press the [] button.

When the surfaces line up horizontally:

Select Horizontal Corner.

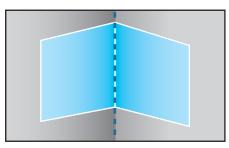

When the surfaces line up vertically: Select **Vertical Corner**.

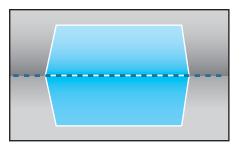


From here on, steps are explained using Horizontal Corner as an example.


Press the [Esc] button to display the screen from step 5. Select **Correct Shape**, and then press the [+] button.

8

Adjust the position of the projector and the lens shift so that the line in the center of the screen matches the corner (the point where the two surfaces meet).

 "Adjusting the Position of the Projected Image (Lens Shift)"
 p.33

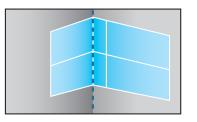






Each time you press the $[\checkmark]$ button, you can show or hide the image and the grid.



71



Use the $[\blacktriangle]$, $[\checkmark]$, $[\triangleleft]$, and $[\blacktriangleright]$ buttons to select the area you want to adjust, and then press the $[\triangleleft]$ button.

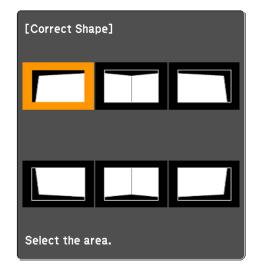


Adjustment tips

When Horizontal Corner is selected:

Adjust the upper area based on the lowest point (indicated by the **Q** arrow).

Adjust the lower area based on the highest point (indicated by the ③ arrow).

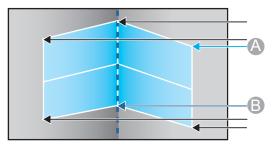

When Vertical Corner is selected:

Adjust the left and right based on the point nearest to the vertical line in the center of the screen.



If the [Esc] button is pressed for approximately two seconds, the confirm default reset screen is displayed.

Select Yes to reset the result of Corner Wall.



Press the $[\blacktriangle][\checkmark][\checkmark][\checkmark]$ buttons to adjust the shape.


If the message "Cannot adjust any further." is displayed while adjusting, you cannot adjust the shape any further in the direction indicated by the gray triangle.



Repeat steps 9 and 10 as needed to adjust any remaining parts. If the image expands or contracts, go to the next step and adjust the linearity.



Press the [Esc] button to display the screen from step 4. Select **Linearity**, and then press the [] button.

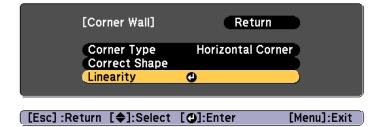






Press the [4][b] buttons to adjust the linearity.

Correct it so that the distance between lines is equal. When pressing the [] button


When Horizontal Corner is selected When Vertical Corner is selected

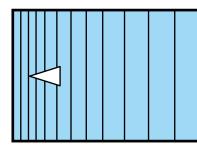

Δ

When pressing the [] button

When Horizontal Corner is selected When Vertical Corner is selected

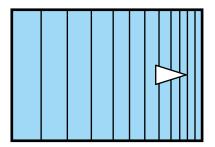

$\neg \neg$
V



To complete the corrections, press the [Menu] button.



You can fine tune the corrected results. Use Quick Corner to adjust the tilt of the image, and then use Point Correction for fine tuning. Select Quick Corner or Point Correction on the screen from step 4.

Corner" p.64

Point Correction p.72

Point Correction

Divides the projected image by the grid and corrects the distortion by moving the point of intersection from side to side and up and down.





3

- You can make corrections by 0.5 pixels in each direction up to a maximum of 32 pixels.
- If 4K Enhancement is enabled, a message is displayed. Select Yes to disable 4K Enhancement.
 - ☞ Image Image Enhancement 4K Enhancement p.127
- Press the [Menu] button while projecting.
- Select Geometry Correction from Settings.
 - Select **Point Correction**, and then press the [+] button.

[Geo	ometric Correction]	Return
	IOff IH/V-Keystone IQuick Corner ICurved Surface ICorner Wall	
	Point Correction Memory	
[Esc] :Return	[�]:Select [@]:Ente	er [Menu]:Exit

 
"If this setting is changed, the image may be distorted." is displayed, press the $[\checkmark]$ button again.



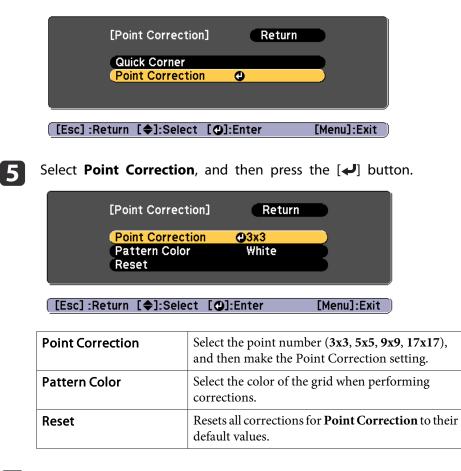


Select the point number (**3x3**, **5x5**, **9x9**, or **17x17**), and then press the [] button.

Use the $[\blacktriangle], [\checkmark], [\triangleleft], and [\rbrace]$ buttons to move to the point you want to correct, and then press the $[\checkmark]$ button.

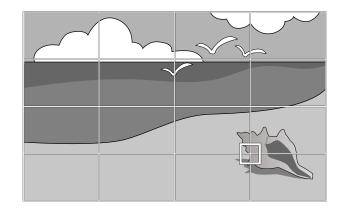

8

 Use the $[\blacktriangle]$, $[\blacktriangledown]$, $[\clubsuit]$, and $[\blacktriangleright]$ buttons to correct distortion.





To continue to correct another point, press the [Esc] button to return to the previous screen, then repeat the steps 7 and 8.



Each time you press the $[\checkmark]$ button, you can show or hide the image and the grid.



To complete the corrections, press the [Menu] button.





You can fine tune the corrected results. Select **Quick Corner** on the screen from step 4 to adjust the tilt of the image.

"Quick Corner" p.64


Selecting the Projection Quality (Selecting Color Mode)

You can easily obtain the optimum image quality simply by selecting the setting that best corresponds to your surroundings when projecting. The brightness of the image varies depending on the mode selected.

Mode	Application	
Dynamic	This is the brightest mode. Ideal for use in a bright room.	
Presentation	The images are vivid and brought to life. Ideal for making presentations or watching a TV program in a bright room.	
Cinema	Gives images a natural tone. Ideal for watching films in a dark room.	
sRGB	This produces the images that conform to the <u>sRGB</u> color standard and the colors are reproduced faithfully. Ideal for projecting still pictures such as photos.	
DICOM SIM	This produces images with clear shadows. Ideal for projecting X-ray photographs and other medical images. The projector is not a medical device and cannot be used for medical diagnosis.	
Multi-Projection	Minimize the color tone difference between each projected image. Ideal for projecting from multiple projectors.	

Each time you press the [Color Mode] button, the Color Mode name is displayed on the screen and the Color Mode changes.

Remote control

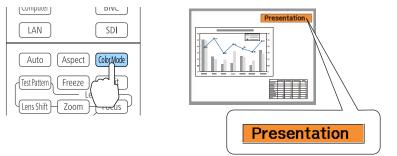

You can set Color Mode from the Configuration menu. • Image - Color Mode p.127

Setting the Brightness

Set the brightness for the light source.



Press the [Menu] button while projecting.



Select Brightness Settings from Settings.

Image		Return
Signal	Geometry Correction Split Screen Volume	H/V-Keystone
Settings	Lock Setting Brightness Settings	0
Extended	Remote Receiver	Front/Rear
Network	 User Button Test Pattern Memory 	
Info	Reset	
Reset		
	-	
[Esc] :Return	[�]:Select [@]:Enter	[Menu]:Exit

Select Light Source Mode, and then press the [] button.

Image	[Brightness Settings]	Return
Signal	Light Source Mode Brightness Level	<mark>∂Quiet</mark> 0 %
Settings	Constant Brightness	Off
Extended	Estimated Remains	0 H or Less
Network		
Info		
Reset		
[Esc] :Return	[♦]:Select [@]:Enter	[Menu]:Exit

4

Select the item you want to set, and then press the $[\checkmark]$ button.

Normal: Select this if you do not want to decrease the brightness. This makes the target usage time approximately 20,000 hours.

Quiet: Select this if you are concerned about the noise made by the fan, This sets the brightness at 70%. This makes the target usage time approximately 20,000 hours.

Extended: Select this to extend the life expectancy of the light source. This sets the brightness at 70%. This makes the target usage time approximately 30,000 hours.

Custom: Select this to set the Brightness Level manually. When Custom is selected, Constant Brightness is available.

5

When **Light Source Mode** is set to **Custom**, select **Brightness Level**, and then use the $[\triangleleft][\triangleright]$ buttons to set the brightness.

6

To maintain a fixed brightness, select **Constant Brightness**, and set it to **On**.

• When **Constant Brightness** is set to **On**, you cannot change the settings for **Light Source Mode** and **Brightness Level**. When you want to change these settings, set **Constant Brightness** to **Off**.

- When **Constant Brightness** is set to **Off**, the value for **Brightness Level** changes depending on the current status of the light source.
- There may be a margin of error in the Brightness Level.
- When the projector is used continuously for more than 24 hours, or when direct shutdown is used regularly, set Light Source Calibration using the scheduling function. If this is not set, the Constant Brightness function does not work.
 - ☞ "Scheduling Function" p.113

Guide to Estimated Remains

When **Constant Brightness** is set to **On**, the Estimated Remains is displayed. Estimated Remains indicates the amount of time for which constant brightness can be maintained.

Image	[Brightness Settings]	Return
Signal	Light Source Mode Brightness Level	Quiet
Settings		
	Estimated Remains	ОН []]]]
Extended		or Less
Network	j	
Info		
Reset		

[Esc] :Return [�]:Select [@]:Enter

Display Level	Estimated Remains
	10,000 hours or more
	8,000 to 9,999 hours
	6,000 to 7,999 hours
	4,000 to 5,999 hours
	2,000 to 3,999 hours
	0 to 1,999 hours



The time displayed on the screen is just a guide. 30,000 hours or more is displayed in units of 10,000; 2,000 to 29,999 hours is displayed in units of 1,000; and up to 1,999 hours is displayed in units of 100.

[Menu]:Exit

Relationship between Brightness Level and usage time

The following shows the relationship between Brightness Level and usage time.

Make settings according to your desired usage time and the brightness of the projected image.

When Constant Brightness is set to Off

1: Brightness Level

2: Approximate time until light source brightness is reduced by half

0	2	Illustration
100%	20,000 hours	
90%	21,000 hours	
80%	24,000 hours	
70%	30,000 hours	1×1/2
60%	37,000 hours	
50%	47,000 hours	2
40%	61,000 hours	
30%	71,000 hours	

When Constant Brightness is set to On

1: Brightness Level

O : Approximate time for which constant brightness of the light source can be maintained



0	2	Illustration	
90%	6,000 hours		
80%	10,000 hours		
70%	19,000 hours		
60%	29,000 hours		
50%	41,000 hours	2	
40%	56,000 hours		
30%	78,000 hours		

• This is an approximate guide only and may change depending on usage and surroundings.

- The times above are the target hours when using the projector continuously without changing the **Brightness Level** or **Constant Brightness** settings and are not guaranteed.
- When the usage time exceeds 20,000 hours, you may need to replace parts inside the projector.
- When **Constant Brightness** is set to **On**, and the approximate constant time has been exceeded, you may not be able to set a high value for **Brightness Level**.

Setting the Amount of Light of the Projected Image

By automatically setting the luminance according to the brightness of the displayed image, it lets you enjoy deep and rich images.



Dynamic Contrast can only be set when the Color Mode is set to Dynamic or Cinema.



Press the [Menu] button while projecting.



Select **Dynamic Contrast** from **Image**, and then press the [+] button.

Image (Return
Signal	Color Mode Brightness Contrast	Photo 0 0
Settings	Color Saturation	0
Extended	Sharpness White Balance	Ŭ
Network	Frame Interpolation	Off
Info	Advanced Dynamic Contrast	OOff
Reset	Reset	
		Ft annul a Fasit
[Esc] :Return	[�]:Select [@]:Enter	[Menu]:Exit



Select **Normal** or **High Speed**, and then press the [] button. The setting is stored for each color mode.



Press the [Menu] button to finish making settings.

 
Adjusting Projected Images



Changing the Aspect Ratio of the Projected Image

You can change the <u>Aspect Ratio</u> of the projected image to suit the type, the ratio of height and width, and the resolution of the input signals.


Available aspect modes vary depending on the Screen Type currently set.




Changing methods

Each time you press the [Aspect] button on the remote control, the aspect mode name is displayed on the screen and the aspect ratio changes.

Remote control

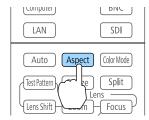

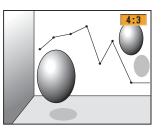

Aspect Mode	Explanation
Auto	Projects in an appropriate aspect ratio based on information from the signal being input.
Normal	Projects while retaining the aspect ratio of the input image.
4:3	Projects at an aspect ratio of 4:3.
16:9	Projects at an aspect ratio of 16:9.
Full	Projects at the full size of the projected screen.

Aspect Mode	Explanation
H-Zoom	Projects by enlarging the input image to the full width of the projected screen while retaining the aspect ratio. Areas that exceed the edges of the projected screen are not projected.
V-Zoom	Projects by enlarging the input image to the full height of the projected screen while retaining the aspect ratio. Areas that exceed the edges of the projected screen are not projected.
Native	Projects to the center of the projected screen at the resolution of the input image. Areas that exceed the edges of the projected screen are not projected.



 \bullet You can also set the aspect ratio from the Configuration menu.

- Signal Aspect p.129
- If parts of the computer image are missing, set the **Resolution** setting to **Wide** or **Normal** from the Configuration menu, according to the resolution of the computer.
- ☞ Signal Resolution p.129

The aspect mode changes as shown in the tables below.

The following colors in screen images in the tables indicate areas that are not displayed.

The area where the image is not displayed depending on the screen type setting.

The area where the image is not displayed depending on the aspect mode setting.

Screen type setting: 16:10



	Aspect Ratio of Input Signal		
	16:10	16:9	4:3
Auto or Normal			
16:9			
Full			
H-Zoom			
V-Zoom			
Native*			

* The image may differ depending on the resolution of the input signal.

Screen type setting: 16:9

	Aspect Ratio of Input Signal		
	16:10	16:9	4:3
Auto or Normal		$\begin{array}{c} 0 \\ 0 \end{array} $ $\begin{array}{c} 0 \end{array} $ $\begin{array}{c} 0 \\ 0 \end{array} $ $\begin{array}{c} 0 \end{array} \end{array}$ \\ \end{array} $\begin{array}{c} 0 \end{array} $ $\begin{array}{c} 0 \end{array} \end{array}$ \\ \end{array} $\begin{array}{c} 0 \end{array} $ \\ \end{array} $\begin{array}{c} 0 \end{array} $ \\ \end{array} $\begin{array}{c} 0 \end{array} \end{array}$ \\ \end{array} $\begin{array}{c} 0 \end{array} $ \\ \end{array} $\begin{array}{c} 0 \end{array} \end{array}$ \\ \end{array} $\begin{array}{c} 0 \end{array} \end{array}$ \\ \end{array} $\begin{array}{c} 0 \end{array} $ \\ \end{array} $\begin{array}{c} 0 \end{array} $ \\ \end{array} $\begin{array}{c} 0 \end{array} \end{array}$ \\ \end{array} \\ \end{array} \\ $\begin{array}{c} 0 \end{array} \end{array}$ \\ \end{array} $\begin{array}{c} 0 \end{array} \end{array}$ \\ \end{array} \\ \end{array} $\begin{array}{c} 0 \end{array} \end{array}$ \\ \end{array} \\ $\begin{array}{c} 0 \end{array}$ \\ \end{array} \\ \end{array} $\begin{array}{c} 0 \end{array}$ \\ \end{array} \\ $\begin{array}{c} 0 \end{array} \end{array}$ \\ \\ \end{array} \\ $\begin{array}{c} 0 \end{array}$ \end{array} \\ $\begin{array}{c} 0 \end{array}$ \\ \end{array} \\ $\begin{array}{c} 0 \end{array}$ \end{array} \\ $\begin{array}{c} 0 \end{array}$ \end{array} \\ \end{array} \\ $\begin{array}{c} 0 \end{array}$ \end{array} \\ \\ \end{array} \\ \end{array} \\ \\ \end{array} \\ \end{array} \\ \\ \end{array} \\ \\ \end{array} \\ \\ \end{array} \\ \\ \end{array} \\ \end{array} \\ \\ \end{array} \\ \\ \end{array} \\ \\ \\ \end{array} \\ \end{array} \\ \\ \end{array} \\ \end{array} \\ \\ \\ \end{array} \\ \\	

	Aspe	Aspect Ratio of Input Signal		
	16:10	16:9	4:3	
Full		$\begin{array}{c} 0 \\ 0 \end{array} \begin{array}{c} 0 \\ 0 \end{array} \begin{array}{c} 0 \\ 0 \end{array}$		
H-Zoom				
V-Zoom				
Native*				

* The image may differ depending on the resolution of the input signal.

Screen type setting: 4:3

	Aspect Ratio of Input Signal		
	16:10	16:9	4:3
Auto or Normal			
4:3		$\begin{array}{c} 0 \\ 0 \end{array} \begin{array}{c} 0 \\ 0 \end{array} \begin{array}{c} 0 \\ 0 \end{array}$	
16:9			

	Aspect Ratio of Input Signal		
	16:10	16:9	4:3
H-Zoom			
V-Zoom			
Native*			

* Only computer images and images from the HDMI port/HDBaseT port. The image may differ depending on the resolution of the input signal.

Adjusting the Image

Hue, Saturation, and Brightness adjustment

You can adjust the **Hue** (tint), **Saturation** (vividness), and **Brightness** of the six axes R (red), G (green), B (blue), C (cyan), M (magenta), and Y (yellow) according to your preferences.



Press the [Menu] button while projecting.

 _	

Select Advanced from Image, and then press the [+] button.


lmage 🔇		Return	
Signal	Color Mode	Photo 0	R
Signal	Brightness Contrast	0	K
Settings	Color Saturation	Ő	5
Extended	Tint Sharpness White Balance	0	3
Network	Frame Interpolation	Off	R
Info	Advanced	0	
Reset	Dynamic Contrast Reset	Off	B
[Fsc] :Return	[♦]:Select [@]:Enter	[Menu]:E	xit


3 Se

Select **RGBCMY**, and then press the [+] button.

Use the $[\blacktriangle][\neg]$ buttons to select the color you want to adjust, and then press the $[\checkmark]$ button.

[RGB	CMY]		Return
_	Hue	Saturation	Brightness
R 🦲	0 🗖 🔤) (0 🖂 🖂	
G	0		
в	0		
С	0	0	
м	0	0	
Ŷ			
<u>`</u>			
[Esc]		Select [@]:Enter	[Menu]:Exit

 

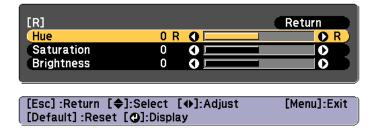

Each time you press the $[\checkmark]$ button, the adjustment screen changes.



To complete the corrections, press the [Menu] button.

Gamma adjustment

You can adjust differences in the halftone brightness that occurs depending on the connected device.

You can set it by using one of the following three methods.

- Select and adjust the correction value
- Adjust while viewing the image
- Adjust using the gamma adjustment graph

Adjust by projecting a still picture. Gamma cannot be adjusted correctly by using movies.

Select and adjust the correction value



2

Press the [Menu] button while projecting.


Select Advanced from Image, and then press the [+] button.

Image	<mark>9</mark>	Return
Signal	Color Mode Brightness	Photo 0
Settings	Contrast Color Saturation Tint	0
Extended	Sharpness White Balance	
Network	Frame Interpolation	Off
Info	Advanced	0
Reset	Dynamic Contrast Reset	Off
[Esc] :Return	[�]:Select [@]:Enter	[Menu]:Exit



Select Gamma, and then press the [+] button.

Use the [▲][▼] buttons to select the correction value, and then use the [✔] button to confirm the selection.

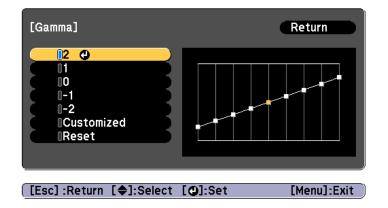

When a larger value is selected, the dark areas of images become brighter, but the color saturation for lighter areas may become weaker.

When a smaller value is selected, you can reduce the overall brightness of the image to make the image sharper.



If you select DICOM SIM from Color Mode on the Image menu, select the adjustment value according to the projection size.

EB-L1505U/EB-L1500U

- If the projection size is 150 inches or less, select a small value.
- If the projection size is 150 inches or more, select a large value. EB-L1405U/EB-L1300U/EB-L1200U/EB-L1100U
- If the projection size is 120 inches or less, select a small value.
- If the projection size is 120 inches or more, select a large value.

Medical images may not be reproduced correctly according to your installation environment and screen specifications.

Adjust while viewing the image

Select a point on the image where you want to adjust the brightness, and adjust only the selected tone.



Press the [Menu] button while projecting.



Select Advanced from Image, and then press the [+] button.

Image	0	Return
	Color Mode	Photo
Signal	Brightness	0
0	Contrast	0
Settings	Color Saturation	0
Extended	Tint Sharpness White Balance	
Network	Frame Interpolation	
Info	Advanced	0
Reset	Dynamic Contrast Reset	Off
Esc] :Retu	urn [�]:Select [🕑]:Ente	er [Menu]:Exit



5

Select Gamma, and then press the [+] button.


Select **Customized**, and confirm using the [↓] button.




Select Adjust it from the image, and confirm using the [+] button.

Move the cursor on the projected image to the part where you 6 want to change the brightness, and then press the $[\checkmark]$ button. If you press $[\checkmark]$, the image flashes and you can check the tone area of the adjustment target.



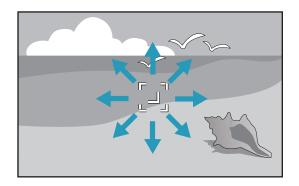

Use the $[\blacktriangle]$ buttons to make adjustments, and then confirm using the $[\checkmark]$ button.

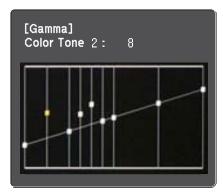



When Do you want to continue adjusting the setting? is displayed, select Yes or No.

To adjust another location, select Yes, and repeat the procedure from step 6.

Adjust using the gamma adjustment graph

Select a tone point on the graph and make adjustments.



Press the [Menu] button while projecting.



Select **Advanced** from **Image**, and then press the [+] button.

Image	0		Return	
Signal		Color Mode Brightness	Photo 0	
Settings		Contrast Color Saturation	0 0 0	Ę
Extended		Tint Sharpness White Balance	0-	
Network		Frame Interpolation Image Enhancement	Off	Ę
Info		Advanced	0	
Reset		Dynamic Contrast Reset	Off	B

[Esc] :Return [+]:Select []:Enter

- [Menu]:Exit
- Select Gamma, and then press the [+] button.

5

Select **Customized**, and confirm using the [↓] button.

- Select Adjust it from the graph, and confirm using the [+] button.
- Use the [4][b] buttons to select the tone that you want to 6 change, and then use the $[\blacktriangle][\checkmark]$ buttons to make the adjustments. When you have finished making changes, confirm by using the $[\checkmark]$ button.

If you use the $[\triangleleft][\triangleright]$ buttons to select the tone that you want to change, the image flashes and you can check the tone area of the adjustment target.




7

 
When Do you want to continue adjusting the setting? is displayed, select Yes or No.

To adjust another tone, select Yes, and repeat the procedure from step 6.

Frame Interpolation

The current and previous frames are used to create intermediate frames, interpolating to produce smooth-moving images. You can resolve clumsymoving images, such as frame skipping when projecting a fast moving image.

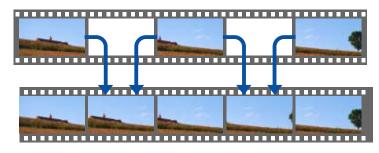



2

Select Frame Interpolation from Image, and then press the [+] button.

Image	0	Return
Signal	Color Mode Brightness	Photo 0
Settings	Contrast Color Saturation Tint	
Extended	Sharpness White Balance	
Network	Frame Interpolation	O Off
Info	Image Enhancement Advanced Dynamic Contrast	Off
Reset	Reset	
[Esc] :Retu	rn [�]:Select [@]:Enter	[Menu]:Exit

[Esc] :Return []:Select []:Enter



Select the level of interpolation from Low, Normal or High. Set to Off if noise occurs after setting them.



Press the [Menu] button to finish making settings.

Adjusting Image Resolution (Image Enhancement)


You can adjust the resolution of the image using Image Enhancement to reproduce a clear image with an emphatic texture and material feel.



Press the [Menu] button while projecting.

Select **Image Enhancement** from **Image**, and then press the [] button.

The following screen is displayed.

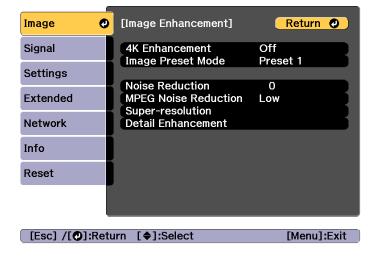

4K Enhancement

4K Enhancement is a function that projects an image at a doubled resolution by diagonally shifting 1 pixel in increments of 0.5 pixels.

A high-resolution image signal is projected in fine detail.

1		
	_	

Select **4K Enhancement** from **Image Enhancement**, and then press the [+] button.



 
Select one of the following, and then press the $[\checkmark]$ button.

Off: Disables 4K Enhancement. If a signal that exceeds the panel resolution of this projector is input, the image is displayed according to the panel resolution of this projector.

Full HD: If a signal with a resolution of 1080i/1080p/WUXGA or higher is input, 4K Enhancement is enabled.

WUXGA+: If a signal with a resolution that exceeds WUXGA is input, 4K Enhancement is enabled. To project a high-resolution movie, you can project a high-definition image by using this setting with Image Preset Mode.





- Off is ideal for projecting presentation materials from computers and so on.
- If set to Full HD or WUXGA+, the status corrected using the following function is canceled.
 Edge Blending, Scale, Curved Surface, Point Correction, Corner Wall
 When AK Enhancement is set to Off the settings return to

When **4K Enhancement** is set to **Off**, the settings return to their previous state.

 


Image Preset Mode

Select the optimal setting according to the projected image from five presets prepared in advance.

The following settings are saved in the presets.

Noise Reduction, MPEG Noise Reduction, Super-resolution, Detail Enhancement




Select **Image Preset Mode** from **Image Enhancement**, and then press the [+] button.



Select one of the following, and then press the [] button.

Preset 1 to **Preset 5**: The settings saved in advance are applied to the image.


Off: Select this to turn off presets.

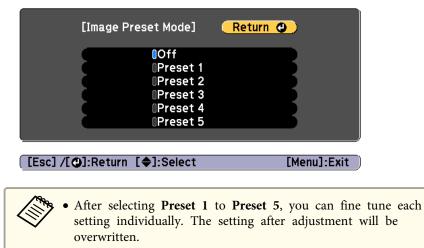

• The setting after adjustment will be overwritten separately when **4K Enhancement** is enabled and disabled.


Noise Reduction

 
You can smooth out rough images for softer image quality when inputting progressive signals or progressive interlace signals.



- When Image Processing is set to Fast 2
- When 4K Enhancement is enabled
- When a signal with a resolution that exceeds WUXGA is input

  Select **Noise Reduction** from **Image Enhancement**, and then press the [4] button.






B Press the [Esc] button to return to the previous screen.

MPEG Noise Reduction

 You can reduce dot and block noise that occurs in outlines when projecting MPEG movies.



- When 4K Enhancement is enabled
- When a signal with a resolution that exceeds WUXGA is input

86




Select **MPEG Noise Reduction** from **Image Enhancement**, and then press the [] button.



Select a level to reduce noise from Low, Normal, or High, and then press the [] button.

If Off is selected, MPEG Noise Reduction is disabled.

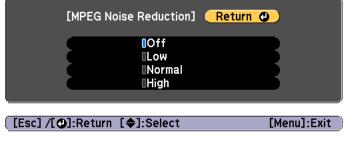

Press the [Esc] button to return to the previous screen.

Super-resolution

3

1

To display a crisp image, you can reduce the blurring that is created on the edge when the resolution of the image signal is scaled up and projected.

Select Super-resolution	from	Image	Enhancement,	and	then
press the [🖌] button.					



Use the $[\blacktriangle][\checkmark]$ buttons to select the item, and then use the $[\triangleleft][\blacktriangleright]$ buttons to make the adjustments.

Fine Line Adjust: If this parameter is set to a positive value, details such as hair or fabric patterns will be enhanced.

Soft Focus Detail: If this parameter is set to a positive value, the outline, background, and the other main parts of the objects in the image will be enhanced to show them clearly.

[Super-resolution]		Return 🙂
Fine Line Adjust	0 🔿 🗔 🔤	
Soft Focus Detail	0 🔿 📖	
([Faal / M]. Datum		Ebd a mulle Easter ()
([Esc]/[O]:Return	L⇒]:Select	[Menu]:Exit

Press the [Esc] button to return to the previous screen.

Detail Enhancement

You can enhance the contrast in detailed areas of an image to create a more emphatic texture and material feel.



3

Select **Detail Enhancement** from **Image Enhancement**, and then press the [] button.



Use the $[\blacktriangle][\checkmark]$ buttons to select the item, and then use the $[\triangleleft][\triangleright]$ buttons to make the adjustments.

Strength: The larger the value, the more the contrast is enhanced. **Range**: The larger the value, the wider the range of detail enhancement becomes.

[Detail Enhancement]		Return 🕘
Strength	0 🕢 🗖	
Range	0 0	
([Esc]/[@]:Return [4	◆]:Select	[Menu]:Exit

Depending on the image, a highlight may be noticeable at the border between colors. If this bothers you, set a smaller value.

	í
-	

Press the [Esc] button to return to the previous screen.

Projecting 3D Images

By using two projectors, you can project passive 3D images. The following are required to project and view 3D images.

- Polarizer
- Passive 3D glasses
- Mount for stacking
- Silver screen for passive 3D



This projector arranges the direction of polarizing projection for R (red), G (green), and B (blue). It is not necessary to inverse left and right eye G (green) image signals.

88



Useful Functions

This section describes the Multi-Projection, Split Screen, Memory, Schedule, and Security functions.

You can setup multiple projectors to project one large and wide image. You can adjust the difference of brightness and color tone between each projected image to create a seamless screen.

• Set 4K Enhancement to Off.

- We recommend setting the focus, zoom, and lens shift at least 20 minutes after you start the projection, because images are not stable right after turning on the projector.
- If the values for **Geometry Correction** are large, the image position adjustment for overlapping images becomes difficult.
- The Test Pattern can be displayed to adjust the projection status without connecting video equipment.
- Tisplaying a Test Pattern" p.31
- If you project a dot by dot image that can be projected without being enlarged or reduced, you can make adjustments precisely.

Adjustment Procedure

Adjusting automatically online

Images from multiple projectors can be automatically adjusted to match the image from the projector set as the master projector (Screen Matching).

Before selecting the master projector, set **Light Source Mode** to **Custom** for all projectors, and set **Brightness Level** to the maximum. Set the projector with the darkest projected image as the master projector.

Settings - Brightness Settings - Light Source Mode - Brightness Level p.131

Advance preparation

- (1) Connect all projectors to a network hub using LAN cables.
- (2) Turning on the master projector.

- (3) Set an ID for the master projector and the remote control.
 - ☞ "Set the projector ID" p.40
- (4) Turn on all projectors.
- (5) Set the **DHCP** to **On** for all projectors, or check that IP addresses have been assigned.

Network - Network Configuration - Wired LAN - IP Settings p.142

(6) Make sure that **Sleep Mode** is set to **Off** so that it does not turn off while adjusting.

Adjusting the projected position

- (1) Adjust the position (angle) of the projector.
 - ☞ "Installation Settings" p.29
- (2) Adjust the arrangement of the images.
 - Performing tiling automatically "p.91

Adjusting the projected images

- (1) Adjust the aspect ratio of the images.
 - ☞ "Screen Settings" p.30
 - "Changing the Aspect Ratio of the Projected Image" p.78
- (2) Adjust the lens shift.
 - "Adjusting the Position of the Projected Image (Lens Shift)" p.33
- (3) Adjust the zoom and focus.
 - "Adjusting the Image Size" p.35
 - Correcting the Focus" p.36
- (4) Adjust small differences in the images.
 - Termination Point Correction p.72
- (5) Adjust the edges of the images.
 - "Edge Blending" p.93
 - The "Black Level" p.95
- (6) Adjust the brightness and tint of the images.
 - **•** "Screen Matching" p.99

90

- (7) Select the sections of the images.
 - "Displaying a Scaled Image" p.102

Adjusting manually offline

Adjust the images from all projectors manually.

Advance preparation

- (1) Turn on all projectors.
- (2) Set an ID for all projectors and the remote controls.
 - "Set the projector ID" p.40

Adjusting the projected position


- (1) Adjust the position (angle) of the projector.
 - ☞ "Installation Settings" p.29
- (2) Adjust the arrangement of the images.
 - ☞ "Performing tiling manually" p.93

Adjusting the projected images

☞ "Adjusting the projected images" p.90

Tiling

Project the same image from multiple projectors to create one large image. You can project by using up to nine projectors.

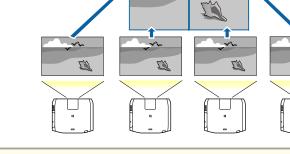



Before performing tiling, adjust the projected image so that it is a rectangle. Also, adjust the size and focus of the images.

B

Performing tiling automatically

This section explains how to select the projector being used in **Projector** Grouping, and then automatically configure the images being projected.



 
Location Setup is performed using the camera built into the front of the projector. Do not block the camera or the projected images.



Press the [Menu] button while projecting.



Select **Multi-Projection** from **Extended**, and then press the [+] button.





Select the projectors that will be used for tiling, and then press the [] button.

[Projector Grouping]	Return	
Projector Name	IP Address	Model	
EBXXXXXX	XXX.XXX.XXX.XXX	XXXXXXXXX	
EBXXXXXX	XXX.XXX.XXX.XXX		
EBXXXXXX	XXX.XXX.XXX.XXX	XXXXXXXXX	
EBXXXXXX	XXX.XXX.XXX.XXX	XXXXXXXXX	
EBXXXXXX	XXX.XXX.XXX.XXX	XXXXXXXXX	\triangleright
EBXXXXXX	XXX.XXX.XXX.XXX	XXXXXXXXX	
Sort	Refresh	Set	
[Esc] :Return [�]:Se	elect [@]:Set	[Menu]:Exi	it


- Select the projectors you want to use to enter a checkmark.
 Select **Refresh** to update the list. Select **Sort** to sort the projector order.
- (2) Select **Set**, and then press the $[\checkmark]$ button.



Select **Tiling**, and then press the $[\checkmark]$ button.



Select Tiling. Select Auto, and then press the [Esc] button.

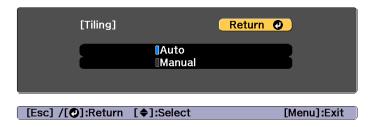



Select Location Setup, and then press the $[\clubsuit]$ button.

The image is positioned automatically.

When the message "Assign IDs to projectors that have been located. Do you want to continue?" is displayed, select **Yes**.

When setup is complete, the following screen is displayed.

[Location Info]				
EBXXXXXX	EBXXXXXX	EBXXXXXX		
XXXXXXXX	XXXXXXXX	XXXXXXXX		
ID: XX	ID: XX	ID: XX		
EBXXXXXX	EBXXXXXX	EBXXXXXX		
XXXXXXXX	XXXXXXXX	XXXXXXXX		
ID: XX	ID: XX	ID: XX		

[Esc] :Return [**∢**♦▶]:Move

[Menu]:Exit



8

If the image is not located correctly, select **Manual** in step 6, and then follow the steps below to locate the image manually.

- (1) Set **Row** and **Column** in **Layout**.
- (2) Select **Set**, and then press the $[\checkmark]$ button.
- (3) Select the location in Location Setup, and then press the [↓] button.
- (4) Repeat step (3) to reposition the location of all projectors.
- (5) Select **Set**, and then press the $[\checkmark]$ button.

Input the image signal to display the image.

☞ "Automatically Detecting Input Signals and Changing the Projected Image (Source Search)" p.59



When tiling is complete, adjust any positional gaps and the tint of the projected images.

- ☞ "Adjusting the projected images" p.90
 - After tiling is complete, do not change the IP addresses or projector names of the projectors. Otherwise the image will not be adjusted automatically.
 - After tiling is complete, you can set each projector with one remote control. Select the projector ID for the projector you want to set with the remote control. You can check the projector ID in **Tiling Location Info**.
 - ☞ "Setting the remote control ID" p.41

 
Performing tiling manually

This section explains how to perform location settings for the image manually without performing **Projector Grouping**.



4

- Press the [Menu] button while projecting.
- 2 Select Multi-Projection from Extended, and then press the [+] button.
- **B** Select **Tiling**, and then press the [**4**] button.
 - Select Layout, and then press the [+] button.
 - (1) Set the number of projectors in **Row** and **Column**.
 - (2) Select **Set**, and then press the $[\checkmark]$ button.





Select Location Setup, and then press the [+] button.

(1) Set the positions of the projected images in **Row Order** and **Column Order**.

Row Order: Place screens from top to bottom in the order of **1**, **2**, **3**. **Column Order**: Place screens from left to right in the order of **A**, **B**, **C**.



(2) Select **Set**, and then press the [] button.



Repeat step 6 for each projector.



Input the image signal to display the image.

☞ "Automatically Detecting Input Signals and Changing the Projected Image (Source Search)" p.59

 
When tiling is complete, adjust any positional gaps and the tint of the projected images.

☞ "Adjusting the projected images" p.90

Edge Blending

You can fine tune the overlapping areas to make seamless screen.





Before performing edge blending to raise the precision of adjustments, press the [Color Mode] button on the remote control, and then set **Color Mode** to **Multi-Projection**.



2

3

Press the [Menu] button while projecting.

Select Multi-Projection from Extended.

Select **Edge Blending**, and then press the [**↓**] button. The following screen is displayed.

Image	[Edge Blending]	Return 🥑	
Signal	Edge Blending	Off	
Settings	Top Edge Bottom Edge	Off Off Off	
Extended 🥹	Left Edge Right Edge Blend Curve	Off 0	
Network	Guide Display Pattern Guide	Off Off	
Info	Guide Colors	Pattern 1	
Reset			
[Esc] /[@]:Ret	urn [♦1:Select	[Menu]:Exit	

Submenu	Function
Edge Blending	Set to On to activate Edge Blending. Set to Off when not projecting from multiple projectors.

Submenu	Function
Top Edge/Bottom Edge/Left Edge/Right Edge	Blending : Set to On to activate Edge Blending towards your settings, and the blend range will be shaded.
	Blend Start Position : Displays blending start position as a red line, and adjusts at the level of one pixel.
	Blend Range : Adjusts the range to be shaded. Adjustment is possible at the level of one pixel. The maximum range is 45% of the resolution.
Blend Curve	You can select from three ways of shading.
Guide Display	Set to On to display a guide on the Edge Blending setting range.
Pattern Guide	Set to On to display a guide to match the position of the Edge Blending setting range.
Guide Colors	Select a combination of guide colors from the three provided.



5

Turn on Edge Blending.

- (1) Select **Edge Blending**, and then press the [] button.
- (2) Select **On**, and then press the $[\checkmark]$ button.
- (3) Press the [Esc] button.

Set Guide Display to On.

- (1) Select **Guide Display**, and then press the $[\checkmark]$ button.
- (2) Select **On**, and then press the $[\checkmark]$ button.
- (3) Press the [Esc] button.



If the guide is not clear, you can change the color of the guide on **Guide Colors**.




Set Pattern Guide to On.

- (1) Select **Pattern Guide**, and then press the $[\checkmark]$ button.
- (2) Select **On**, and then press the [] button.
- (3) Press the [Esc] button.



Set **Top Edge**, **Bottom Edge**, **Left Edge**, or **Right Edge** according to the parts of the image that are overlapped.


The following shows how to set screen (1) as an example.

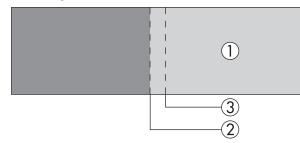


In the example above, you need to adjust the **Left Edge** because you can see the overlapping areas on the left side of the image (1).

- (1) Select Left Edge, and then press the [] button.
- (2) Select **Blending**, and then press the [] button.
- (3) Select **On**, and then press the $[\checkmark]$ button.
- (4) Press the [Esc] button.
- (5) In **Blend Start Position**, align the blending start position with the edge (2) of the image.
- (6) Press the [Esc] button.

  (7) In **Blend Range**, adjust the range (3) to be shaded.The value for when the overlapped range and the guide are in the same position is the best.






- (8) Press the [Esc] button.
- 8 Se

Set Blend Curve.

- (1) Select **Blend Curve**, and then press the $[\checkmark]$ button.
- (2) Select the amount of shading from 1 to 3, and then press the $[\checkmark]$ button.
- (3) Press the [Esc] button.
- After the settings are complete, set **Guide Display** and **Pattern Guide** to **Off** to finish.

Black Level

When a black image is displayed, only areas where the images overlap stands out. The black level function allows you to match the brightness and tone for areas where the images do not overlap with areas where the images overlap, to make the difference less noticeable.

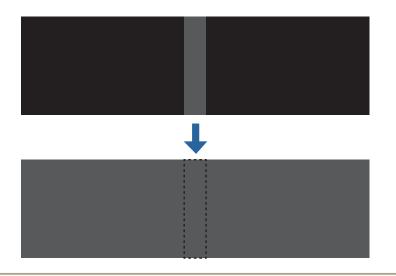

• You cannot adjust the Black Level when a test pattern is displayed.

- If the **Geometry Correction** value is large, you may not be able to adjust correctly.
- The brightness and tone may differ in areas where the images overlap as well as in other areas even after performing black level adjustment.
- If you change the **Top Edge/Bottom Edge/Right Edge/Left Edge** setting, the Black Level is returned to its default value.
- ☞ "Edge Blending" p.93
- When auto adjustment starts for Screen Matching, the settings for Color Adjustment are automatically adjusted.
- ☞ "Automatically correct the brightness and tint for multiple projectors" p.100

1

Select **Black Level** from **Multi-Projection**, and then press the [

Image		[Multi-Projection]	Return
Signal		Projector ID	Off
Settings		Projector Grouping Tiling	
Extended	0	Geometry Correction Edge Blending	H/V-Keystone
Network		Black Level Scale	0
Info		Screen Matching Reset	
Reset		Reset	
[Esc] :Retu	Irn [♦1:Select [●]:Enter	[Menu]:Exit



Select Color Adjustment, and then press the [] button.

Image	[Black Lev	vel]	Return
Signal	Color Ad Area Cor		9
Settings	Reset	rection	
Extended (
Network			
Info			
Reset			
[Esc] :Return	[�]:Select	[🕗]:Enter	[Menu]:Exit

The areas are displayed based on the settings for Top Edge/Bottom Edge/Right Edge/Left Edge.




Select the area you want to adjust, and then press the [] button.

The selected area is displayed in orange.



When multiple screens are overlapping, adjust based on the area with the most overlap (the brightest area). In the illustration below, first align (2) with (1), and then adjust so that (3) aligns with (2).

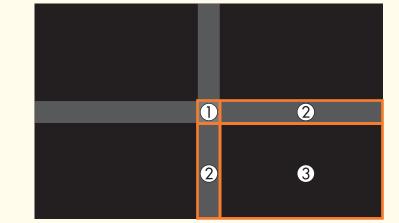



Adjust the black tone and brightness.


[Color Adjustment] Red Green Blue Brightness		Return D D + D
[Esc] :Return [�]:Select	[♠]:Adjust [Menu]:Exit



After this, if the tone for some areas do not match, adjust them by **Area Correction**.



 Press the [Esc] button, to return to the screen displayed in step 2.




Color Adj Area Corr Reset		0	_	
	rection	9		
]:Select	[@]:Ent	er	[Menu]:Exi	t
]:Select]:Select [@]:Ent]:Select []:Enter]:Select [@]:Enter [Menu]:Exi



Select Start Adjustments, and then press the [] button.



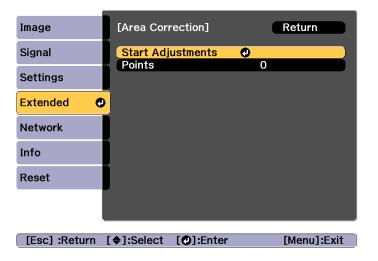

Boundary lines that indicate areas where images overlap are displayed.

The boundary lines are displayed based on the settings for Top Edge/Bottom Edge/Right Edge/Left Edge.

9

Use the $[\blacktriangle][\checkmark][\checkmark][\bigstar]$ buttons to select a boundary line of the area you want to adjust.

The selected line is displayed in orange.






Press the $[\checkmark]$ button to confirm the selection.

The points where you want to set the range for adjustment are displayed.

You can change the number of points displayed on one side in **Points** on the screen from step 8.

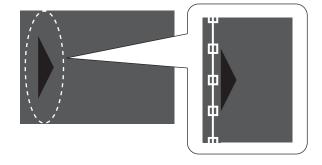

11

Use the $[\blacktriangle][\checkmark][\checkmark][\bigstar]$ buttons to adjust the boundary line positions, and then press the $[\checkmark]$ button.



Press the $[\blacktriangle][\checkmark][\checkmark][\checkmark][\blacktriangleright]$ buttons to select the point you want to move, and then press the $[\checkmark]$ button.

The selected point is displayed in orange.



13

Press the $[\blacktriangle][\checkmark][\checkmark][\checkmark]$ buttons to move the point.





To continue to move another point, press the [Esc] button to return to step 12, and then repeat steps 12 and 13.

To adjust another boundary line, press the [Esc] button until the screen for selecting a boundary line from step 9 is displayed.

To return **Black Level** to its default value, press the [Esc] button to return to the screen from step 7, select [Reset], and then press the [] button.



To complete the adjustment, press the [Menu] button.

Screen Matching

Adjust the tint and brightness for multiple projectors.

When projectors are connected to a network, the tint and brightness for multiple projectors are auto adjusted based on the master projector's adjustment values.

When projectors are not connected to a network, or if auto adjustment does not work, you can adjust the tint and brightness for all projectors manually.



• We recommend performing Screen Matching 20 minutes after turning on the projector or canceling A/V mute.

- To increase the accuracy of adjustments, we recommend darkening the room while projecting images and then making adjustments.
- Perform the following on the master projector before starting adjustments.
- Set the **Color Mode** to **Multi-Projection** with the remote control's [Color Mode] button.
- Press the $\left[\text{A/V Mute}\right]$ button on the remote control to cancel A/V Mute.

- Adjust the following items on the Image menu as necessary. Brightness, Contrast, Color Saturation, Tint, White Balance, Advanced

- ☞ "Image Menu" p.127
- Set the brightness of the projected image.
- ☞ "Setting the Brightness" p.74
- When there are large differences in the brightness for each projector due to aging light sources, perform Screen Matching again.
- By using the scheduling function, you can automatically adjust the tint and brightness at the time you set.
- ☞ "Scheduling Function" p.113
- See the following if Screen Matching does not work correctly.
 - The "Automatic adjustments are not performed correctly" p.176

Operating conditions for auto adjustment functions

The auto adjustment functions for Screen Matching are enabled when the following conditions are met.

- The screen surface is not uneven
- Using a matte white diffusion screen
- The projection size is 80 to 200 inches
- The projected image after tiling is rectangular

99

Multi-Projection Function





- Auto adjustment is not available when using the following lenses.
 - EB-L1505U/EB-L1500U: ELPLR04, ELPLL08, ELPLL07
 - EB-L1405U/EB-L1300U/EB-L1200U/EB-L1100U: ELPLX01, ELPLR04, ELPLM11, ELPLM07, ELPLL08, ELPLL07
- After auto adjustment, the movement range for lens shift is reduced for some lenses.
- "Adjusting the Position of the Projected Image (Lens Shift)"
 p.33

Automatically correct the brightness and tint for multiple projectors

Automatically correct the brightness and tint for the projectors selected in **Projector Grouping** based on the brightness and tint on the master projector.

- Check the following before starting auto adjustment.
 - The projector is connected to the network
 - The Location Setup for the projector has already been set
- Auto adjustment is performed using the camera built into the front of the projector. Do not block the camera or the projected images.
- The time necessary for auto adjustment varies according to the location and number of projectors and can take up to approximately seven minutes.
- Settings are auto adjusted for Brightness Settings and Black Level (Color Adjustment only).
- After making automatic adjustments, Color Uniformity and Color Matching are returned to their defaults.

Select **Screen Matching** from **Multi-Projection**, and then press the [**J**] button.



Select Start Auto Adjustment, and then press the [] button.

Image	[Screen Matching]	Return
Signal	Start Auto Adjustment	0
Settings	Undo Redo	
Extended		Photo
Network	Brightness Settings Color Matching	
Info	Color Uniformity Color Adjustment Reset	
Reset	Reset	
[Esc] :Return	[♦]:Select [@]:Enter	[Menu]:Exit

The adjustment pattern is displayed, and adjustment starts. If the projected image is displayed before the adjusting, the procedure is complete.



• See the following if an error occurs.

- The "Automatic adjustments are not performed correctly" p.176
- To return to the status before auto adjustment, select **Undo**. When you select **Redo** after selecting **Undo**, it returns the image to the status after auto adjustment.
- To return Screen Matching to its default value, select Reset.

Color Matching

You can fine tune the color balance and brightness from black to white for each color tone.

When the projectors are not connected to a network, or if you want to adjust manually after the automatic adjustments, perform the following steps on all projectors.






Select **Screen Matching** from **Multi-Projection**, and then press the [] button.




Select Color Matching, and then press the $[\checkmark]$ button.

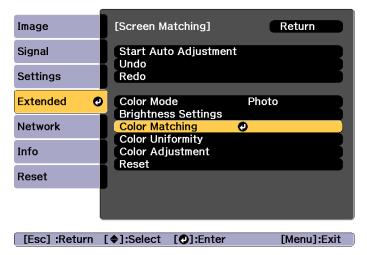

The following screen is displayed.

[Color Matching]		Return
Adjustment Level	0 🔾 📃	_
Red	0 0	
Green	0 0	- 0
Blue	0 0	- 0
Brightness	O	
[Esc] :Return [�]:Sele	ect [�]:Adjust	[Menu]:Exit

 Half of the overlapped area is displayed in black so that it is easy to check the edge of the image.



Adjustment Level: There are eight levels from white, through gray, and up to black. You can adjust each level individually.

Red, Green, Blue: Adjusts the tone for each color.

Brightness: Adjusts the image brightness.



Whenever the $[\checkmark]$ button is pressed, the screen changes between the projected image and the adjustment screen.



Select **Adjustment Level**, and then use the $[\triangleleft][\triangleright]$ buttons to set the adjustment level.



Select **Red**, **Green**, or **Blue**, and then press the $[\blacktriangleleft][\blacktriangleright]$ buttons to adjust the color tone.

Multi-Projection Function





Select **Brightness**, and then use the $[\triangleleft][\triangleright]$ buttons to adjust the brightness.




Return to step 2 and adjust each level.



Press the [Esc] button to return to the previous screen.

Displaying a Scaled Image

A section of the image is cropped and displayed. This allows you to create one large image by combining images projected from multiple projectors.

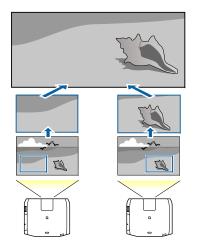




2

Project the image, and then press the [Menu] button.

 Select Multi-Projection from Extended.





Select Scale, and then press the [] button.

Turn on **Scale**.

- (1) Select **Scale**, and then press the $[\checkmark]$ button.
- (2) Select Auto or Manual, and then press the [] button.
 Auto: Automatically adjusts the clipped area according to the adjustment values in Edge Blending and Tiling. You do not need to perform any steps after step 6.

Manual: Allows you to adjust the clipped area manually.

(3) Press the [Esc] button to return to the previous screen.

If auto adjustment does not work for the clipped image, adjust the aspect ratio, and then select **Auto**.

 
 "Changing the Aspect Ratio of the Projected Image " p.78

Set Scale Mode.

(1) Select **Scale Mode**, and then press the [] button.




(2) Select Zoom Display or Full Display, and then press the [] button.
 Zoom Display: Adjusts according to the image currently displayed.
 Enlarge





Move

 

Full Display: Adjusts according to the projector's panel size (the maximum area in which an image can be displayed).

Enlarge





Move



(3) Press the [Esc] button to return to the previous screen.



Adjust the scale.

Select the adjustment method with the $[\blacktriangle][\checkmark]$ buttons, then adjust using the $[\triangleleft][\triangleright]$ buttons.

-+: Enlarges or reduces an image horizontally and vertically at the same time.

Scale Vertically: Enlarges or reduces an image vertically.

Scale Horizontally: Enlarges or reduces an image horizontally.



- The image is clipped and adjusted.
- Select Clip Adjustment, and then press the [↓] button.
 If you select Clip Range, the range and coordinates of the image that the projector will project is displayed.
- Use the [▲], [▼], [◀], and [▶] buttons to scroll the image.
 Adjust the coordinates and size of each image while viewing the screen.
- (3) Press the [Menu] button to finish making settings.




You can check the displayed area after clipping for the entire image from Clip Range.

Projection Functions



Projecting Two Images Simultaneously (Split Screen)

You can simultaneously project images from two sources on the right and left of the screen.

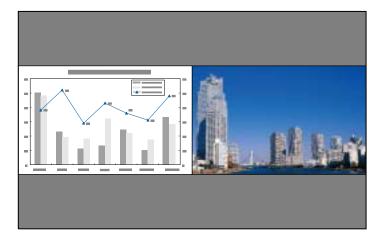

Input Sources for Split Screen Projection

The combinations of input sources that can be projected on a split screen are listed below.

Left	Right Screen						
Screen	HDMI	HDBa- seT	DVI-D	SDI*	Com- puter	BNC	LAN
HDMI	-						
HDBaseT		-					
DVI-D			-	1			
SDI*				-	-	-	-
Computer				-	-	-	-
BNC				-	-	-	-
LAN				-	-	-	-

* EB-L1505U/EB-L1500U/EB-L1405U only

• Signals that exceed WUXGA are not supported.

- If **4K Enhancement** is enabled, a message is displayed. Select **Yes** to disable **4K Enhancement**.
 - ☞ Image Image Enhancement 4K Enhancement p.127

 
Operating procedures

 
Projecting on a split screen



Press the [Split] button on the remote control while projecting. The currently selected input source is projected on the left of the screen.

Remote control





☞ Settings - Split Screen p.131

2

Press the [Menu] button.


The Split Screen Setup screen is displayed.

[Split Screen Setup]		
Screen Size	Cequal	
Source Swap Screens		B
Audio Source	Auto	
[Network]		
Display the QR Code		
Exit Split Screen		
[�]:Select [❹]:Enter		[Menu]:Exit




Select **Source**, and then press the [↓] button.

Select each input source for Left and Right.

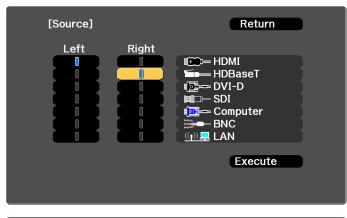

 [Esc] :Return [**4**♦**▶**]:Select [**②**]:Set [Menu]:Exit



☞ "Automatically Detecting Input Signals and Changing the Projected Image (Source Search)" p.59

☞ "Switching to the Target Image by Remote Control" p.60



Select **Execute**, and then press the [] button.

To switch the source during split screen projection, start the procedure from step 2.

Switching the left and right screens

Use the following procedure to switch the projected images displayed on the left and right screens.

 


 
Press the [Menu] button during split screen projection.





Select **Swap Screens**, and then press the [] button. The projected images on the left and right are swapped.





Switching the left and right image sizes




Press the [Menu] button during split screen projection.


- 2 Select Screen Size, and then press the $[\downarrow]$ button.
- Select the screen size you want to display, and then press the [] button.




The projected images will appear as shown below after setting the screen size.

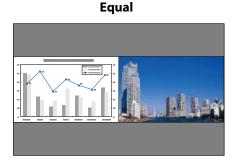

Larger Left

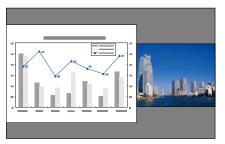

Larger Right

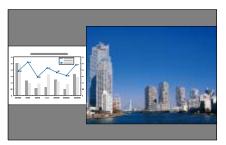



• You cannot enlarge both the left screen and right screen images at the same time.

- When one image is enlarged, the other image is reduced.
- Depending on the video signals that are input, the images on the left and right may not appear to be the same size even if **Equal** is set.

Changing the audio



Press the [Menu] button during split screen projection.



Select Audio Source, and then press the [] button.



Select the audio you want to output, and then press the $[\downarrow]$ button.

When you select Auto, audio is output for the enlarged screen. If the screen sizes are Equal, audio is output for the screen on the left.

[Audio So	ource]	Return 🔮	
	OAuto Screen Left Screen Right		8
[Esc]/[@]:Return	[�]:Select	[Menu]:Exit

Ending the split screen

Press the [Esc] button to end split screen.

The following steps can also be used to end the split screen.

- Press the [Split] button on the remote control.
- Select Exit Split Screen on the Split Screen Setup screen. 🖝 p.105

Restrictions during split screen projection

Operating restrictions

The following operations cannot be performed during split screen projection.


- Setting the configuration menu
- E-Zoom
- Changing the aspect mode
- Using the [User1], [User2], or [User3] button on the remote control
- Help can be displayed only when image signals are not input or when an error or warning notification is displayed.
- The user's logo is not displayed.

Restriction relating to images

- For the image on the right screen, the default values for the **Image** menu are applied. However, the settings for the image projected on the left screen are applied to the image on the right screen for **Color Mode**, **Color Temp.**, and **Super-resolution**.
- Dynamic Contrast and Frame Interpolation are not available.


Hiding the Image and Sound Temporarily (A/V Mute)

You can use this when you want to focus the audience's attention on what you are saying, or if you do not want to show details such as when you are changing between files during presentations from a computer.

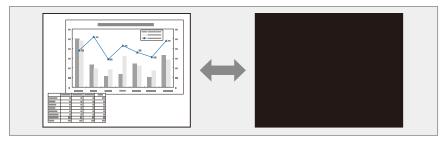

Each time you press the [A/V Mute] button, A/V Mute turns on or off.

 Remote control



- If you want to fade out or fade in when turning the video on or off, set the desired number of seconds in Fade-out and Fade-in.
 - Extended Operation A/V Mute Settings Fade-out, Fade-in p.133
- When A/V mute is activated and no operations are performed for about 2 hours, the projector turns off automatically. If you do not want to turn off the power, set A/V Mute Timer to Off.
- Extended Operation A/V Mute Settings A/V Mute Timer p.133
- When A/V Mute Release is set to A/V Mute from the configuration menu, the following operations can still be performed without releasing A/V mute.
- Change the source with the change input buttons on the remote control.
- Control the projector from a computer using communication commands.
- Extended Operation A/V Mute Settings A/V Mute Release p.133

A/V mute is only released by pressing the [A/V Mute] button, or by sending an A/V mute Off command.

• When projecting moving images, the images and sound continue to be played back while A/V Mute is on. It is not possible to resume projection from the point where A/V Mute was activated.

Freezing the Image (Freeze)

When Freeze is activated on moving images, the frozen image continues to project on the screen, so you can project a moving image one frame at a time like a still photo. Also, you can perform operations such as changing between files during presentations from a computer without projecting any images if the Freeze function is activated beforehand. Each time you press the [Freeze] button, Freeze turns on or off.

Remote control




• Audio does not stop.

- When projecting moving images, the images continue to be played back while the screen is frozen. It is not possible to resume projection from the point where the screen was frozen.
- If the [Freeze] button is pressed while the Configuration menu or the Help screen is displayed, the menu or the Help screen that is displayed is closed.
- Freeze still works while E-Zoom is being used.

Enlarging Part of the Image (E-Zoom)

This is useful when you want to expand images to see them in greater detail, such as graphs and tables.

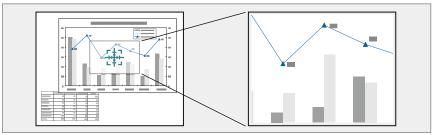


Projection Functions



Start E-Zoom.


Press the $[\oplus]$ button to display the Cross $(\frac{1}{12})$.

Remote control

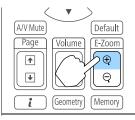

Move the Cross $\left(\frac{r+r}{r+r}\right)$ to the area of the image that you want to 2 enlarge.


Remote control

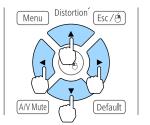

3

Enlarge.

 
Remote control



 $[\oplus]$ button: Expands the area each time it is pressed. You can expand quickly by holding the button down.

 $[\bigcirc]$ button: Reduces images that have been enlarged.

[Esc] button: Cancels E-Zoom.

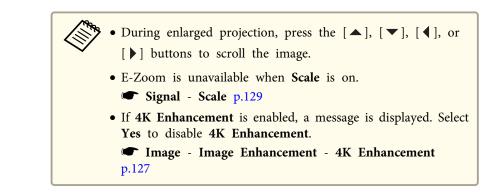

Saving a User's Logo

You can save the image that is currently being projected as a User's Logo.



Once a User's Logo has been saved, the logo cannot be returned to the factory default.



2

Project the image you want to save as the User's Logo, and then press the [Menu] button.

Select User's Logo from Extended.

- When User's Logo Protection from Password Protection is set to On, a message is displayed and the User's Logo cannot be changed. Perform operations after setting User's Logo Protection to Off.
 - ☞ "Managing Users (Password Protection)" p.117
 - If User's Logo is selected when Geometry Correction, E-Zoom or Aspect are being performed, the function currently being performed is temporarily cancelled.





When the message "Choose this image as the User's Logo?" is displayed, select **Yes**.




When you press the $[\checkmark]$ button, the screen size may change depending on the signal to match the actual resolution of the image signal.



Move the box to select the part of the image to use as the User's Logo.

You can perform the same operations from the projector's control panel.

Remote control

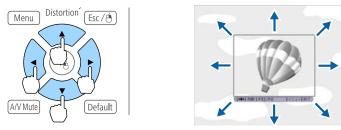

You can save at 400x300 dots in size.



When you press the [] button and the message "Select this image?" is displayed, select **Yes**.



Select the zoom factor from the zoom setting screen.

When the message "Save this image as the User's Logo?" is displayed, select **Yes**.

The image is saved. After the image has been saved, the message "Completed." is displayed.



When a User's Logo is saved, the previous User's Logo is erased.


Memory Function

The settings for the image currently displayed and values for geometry correction are saved as a memory, allowing you to load them when necessary.

Saving/Loading/Erasing/Resetting the Memory



Press the [Memory] button while projecting.

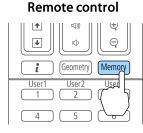

	You can also operate from the Configuration menu. Settings - Memory p.131
	Settings - Memory p.131



Select a memory type, and then press the [+] button.

Image	[Memory]	Return 🕗
Signal	Memory Lens Position	
Settings 🥥	Geometry Correction	
Extended		
Network		
Info		
Reset		
[Esc] /[@]:Retu	urn [�]:Select	[Menu]:Exit

Memory: Settings for the following menu items are saved in the memory. You can register up to 10 values.

Top Menu	Submenu
Image	All setting items
Signal	Scale
Extended	Edge Blending Black Level Color Matching

Lens Position: Registers the position of the lens adjusted using lens shift, zoom, focus, and distortion. You can register up to 10 values.

☞ "Registering and Loading Lens Adjustment Values" p.38

Geometry Correction: Adjustment value of the geometry correction is saved. You can register up to 3 values.



Select the function you want to perform, then press the [] button.

1
T

Image	[Memory]	Return 🕑
Signal	Load Memory	
Settings	Save Memory Erase Memory Rename Memory	
Extended	Reset Memory	
Network		
Info		
Reset		

[Esc] /[@]:Return [+]:Select

[Menu]:Exit

Function	Explanation
Load Memory	Loads the saved memory. When you select a memory and press the [] button, the settings applied to the current image are replaced with the settings from the memory.
Save Memory	Registers current settings in the memory. When you select a memory name and press the [] button, the settings are saved.
Erase Memory	Erases the registered memory. When you select a memory name and press the [] button, a message is displayed. Select Yes , and then press the [] button to erase the selected memory.
Rename Memory	 Changes the memory name. Select the memory name you want to change, and then press the [] button. Enter the memory name using the soft keyboard. "Soft keyboard operations" p.139 When you have finished, move the cursor over Finish, and then press the [] button.

Function	Explanation
Reset Memory	 Resets the name and settings of a saved memory. To reset all memories saved in Memory, Lens Position, and Geometry Correction, use Reset All Memories. Reset - Reset All Memories p.146

If the mark on the left of the memory name is turned blue, it means the memory has already been registered. When you select a registered memory, a message is displayed asking you to confirm that you want to overwrite the memory. If you select **Yes**, the previous settings are deleted and the current settings are registered.

Scheduling Function

You can schedule turning the projector power on/off and switching the input source, as events in the schedule. Registered events are executed automatically at the specified time on the specified dates or weekly. You can register up to 30 events in **Schedule**, and one event in **Extended Schedule**.

Saving an Event

Setting an Event



- Select Schedule Settings from Extended.







Set the schedule.

Submenu Name	Function
Event Settings	Select an operation of the projector when the event is executed. Select No Change for items that you do not want to change when the event occurs.
	You can set the following item operations. Schedule
	 Power Source Light Source Mode A/V Mute Volume Light Source Calibration Extended Schedule Color Calibration
Date / Time Settings	 Screen Matching Set the date, day of the week, and time to execute the event. Use the soft keyboard to enter the date and time. Soft keyboard operations" p.139



6

Select **Save**, and then press the [+] button.

To register additional events, repeat steps 3 to 5.

Select Setup complete, and then select Yes to finish saving.







• Light source calibration does not start automatically when the projector is used continuously for more than 24 hours, or when direct shutdown is used regularly. Set **Light Source Calibration** to enable this function after every 100 hours of usage.

- You cannot register a schedule in which Schedule events conflict with an Extended Schedule event.
- You cannot set other events before the following times.
- Five minutes before or after executing a Color Calibration event.
- Five minutes before and 30 minutes after executing a Screen Matching event.

Checking an Event

This section explains how to check a Schedule event.



Press the [Menu] button while projecting.



Select Schedule Settings from Extended.

The indicator turns on when an event is saved.


					50	edule Setting	21			
ſ	Schedule O]							Return	
U	Schedule		-	-	Add Nev munication O					
	Schedule Reset	10			ight Source M		>			
	Setuo complete	1		Source (LAA	0					
	Selab comprese		22:00 /	Power On						
			02-15	02-16	02-17	02-18	02-19	02-20	02-21	
		04:00 08:00	in the second	100	-			-		
		12:00	-	-	-	-	-	-	-	
		15.00 20:00								
		_							_	_
	Done .									

- (Aqua): Single event
- (Orange): Regular event
- (Green): Communication monitoring On/Off
- Gray): Disabled event





Press the $[\blacktriangleleft][\blacktriangleright]$ buttons to highlight the date you want to check. The details of the events registered on the selected date are displayed.

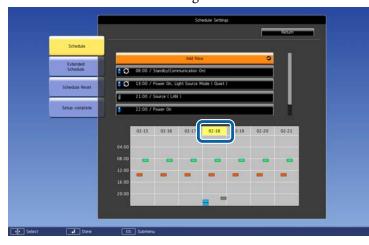

(Blue): Enabled event
(Gray): Disabled event
Regular event

Editing an Event

Press the [Menu] button while projecting. Tusing the Configuration Menu" p.124



Select Schedule Settings from Extended.

Use the []] buttons to highlight the date containing the event you want to edit.

					Sch	edule Setting	5			
									1293500	
	Schedule									
	Extended				Add Net	·		0		
	Schedule	10	08:00 /	Standby(Com	munication C	n)				
	Schedule Reset	10	13:00 /	Power On, Li	ght Source N	lode (Quiet				
		1	21:00 /	Source (LAN	,					
	Setup complete		22:00 /	Power On						
		1 a k			6		2			
			02-15	02-16	02-17	02-18	2-19	02-20	02-21	
		04:00								
		08:00	-		-	-	-	-	-	
		12:00	-	-	-	-	-	-	-	
		16:00	-	-	-		-	1000		
		20:00								
		9								
• Select	J Done	[m	Submen	-						



Highlight the event you want to edit, and then press the [Esc] button.

	Schedule Settings
14 <u>1</u>	
Schedule	
Extended	Add New
Schedule	Citi. 00 / Standby/Communication On)
Schedule Rev	13:00 / Power On, Light Source Mode (Quiet)
_	31.00 / Source (1.0) 1
Setur complet	
-	
	02-15 02-16 02-17 02-1
	04:00
	0100
	12.00
	15:00
	29:00
	and the second se
Der	t EX Return



Edit the event.

Submenu Name	Function
On/Disabled	Enable or disable the selected event.

Scheduling Function



Submenu Name	Function
Edit	Edits the content of the selected event. Select Save , and then press the [] button to complete the editing.
Clear	Deletes the selected event.
Add New	Saves a new event. Select Save , and then press the [↓] button to complete the registration.



Select Setup complete, and then select Yes to finish editing.



To delete all registered events, select Schedule Reset, and then select Yes. Select Setup complete, and then select Yes to delete the events.

Security Functions



The projector has the following enhanced security functions.

- Password protect You can limit who can use the projector.
- Control Panel Lock/Remote Control Button Lock You can prevent people changing the settings on the projector without permission.
- Anti-Theft Lock

The projector is equipped with the following anti-theft security device.

☞ "Anti-Theft Lock" p.121

Managing Users (Password Protection)

When Password Protection is activated, people who do not know the password cannot use the projector to project images even if the projector power is on. Furthermore, the user's logo that is displayed when you turn on the projector cannot be changed. This acts as an anti-theft function as the projector cannot be used even if it is stolen. At the time of purchase, Password Protection is not activated.

Kinds of Password Protection

The following four kinds of Password Protect settings can be made according to how the projector is being used.

• Power On Protection

When **Power On Protection** is **On**, you need to enter a preset password after the projector is plugged in and turned on (this also applies to Direct Power On). If the correct password is not entered, projection does not start.

• User's Logo Protection

Even if someone tries to change the User's Logo set by the owner of the projector, it cannot be changed. When **User's Logo Protection** is set to **On**, the following setting changes for the User's Logo are prohibited.

- Capturing a User's Logo
- Setting Display Background or Startup Screen from Display
- Extended Display p.133

• Network Protection

When Network Protection is set to On, changing the settings for Network is prohibited.

- ☞ "Network Menu" p.137
- Schedule Protection

When **Schedule Protection** is set to **On**, changing settings for the projector's system time or schedules is prohibited.

Setting Password Protection

 
Use the following procedure to set Password Protect.



During projection, hold down the [Freeze] button for about five seconds.

The Password Protection setting menu is displayed.

Remote control



Security Functions





J If Password Protection is already activated, you must enter the password.

If the password is entered correctly, the Password Protection setting menu is displayed.

■ "Entering the password" p.118



Select the type of Password Protect you want to set, and then press the $[\checkmark]$ button.


[Password Protection]	
(Power On Protection @Off)	
User's Logo Protection Off	
Network Protection Off	
Schedule Protection Off	
Password	
[�]:Select [❹]:Enter [Menu]:Exit 🔵



Select **On**, and then press the [] button.

Press the [Esc] button to return to the screen in step 2.

- A Set the password.
 - (1) Select **Password**, and then press the [] button.
 - (2) When the message "Change the password?" is displayed, select **Yes** and then press the [] button. The default password is set to "0000". Change this to your own desired password. If you select **No**, the screen displayed in step 2 is displayed again.
 - (3) While holding down the [Num] button, enter a four digit number using the numeric buttons. The number entered is displayed as "* * * *". When you enter the fourth digit, the confirmation screen is displayed.

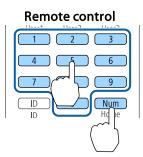

(4) Re-enter the password.
"Password accepted." is displayed.
If you enter the password incorrectly, a message is displayed prompting you to re-enter the password.

Entering the password

When the password entry screen is displayed, enter the password using the remote control.

While holding down the [Num] button, enter the password by pressing the numeric buttons.



When you enter the correct password, Password Protect is temporarily released.



Attention

- If an incorrect password is entered three times in succession, the message "The projector's operation will be locked." is displayed for approximately five minutes, and then the projector switches to standby mode. If this happens, disconnect the power plug from the electrical outlet and then reinsert it and turn the projector's power back on. The projector displays the password entry screen again so that you can enter the correct password.
- If you have forgotten the password, make a note of the "**Request Code**: xxxxx" number that appears on the screen and contact the nearest address provided in the Epson Projector Contact List.
- Epson Projector Contact List
- If you continue to repeat the above operation and input the wrong password thirty times in succession, the following message is displayed and the projector does not accept any more password entries. "The projector's operation will be locked. Contact Epson as described in your documentation."
 - Epson Projector Contact List

Restricting Operation

The following three kinds of operation restriction functions are available with the projector.

• Control Panel Lock

This is useful at events or shows when you want to deactivate all buttons during projection or at schools when you want to limit button operation.

• Lens Lock

This function deactivates all buttons on the remote control related to the lens operation to prevent improper lens adjustment after it is properly adjusted.

• Remote control button lock

This function deactivates buttons except for main buttons needed for basic remote control operation, to prevent mistakes in operations.

Control Panel Lock

Perform one of the following to lock the operation buttons on the control panel. Even if the control panel is locked, you can still use the remote control as usual.

• Full Lock

All of the buttons on the control panel are locked. You cannot perform any operations from the control panel, including turning the power on or off.

• Partial Lock

All of the buttons on the control panel, except for the $\left[\boldsymbol{\boldsymbol{\varTheta}} \right]$ button, are locked.

Press the [c] button on the control panel during projection to display the Control Panel Lock screen.




You can also make settings in **Control Panel Lock** from the configuration menu.

☞ Settings - Lock Setting - Control Panel Lock p.131



Select either Full Lock or Partial Lock according to your purpose.

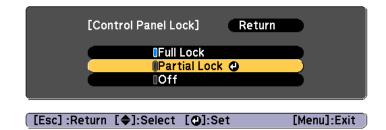



Select Yes when the confirmation message is displayed.

The control panel buttons are locked according to the setting you chose.





You can release the control panel lock by one of the following two methods.

- Use the remote control to set **Control Panel Lock** to **Off** from the configuration menu.
- ✓ Settings Lock Setting Control Panel Lock p.131
- Press and hold down the [] button on the control panel for about seven seconds, a message is displayed and the lock is released.

Lens Lock

This function locks the following buttons on the remote control related to the lens operation.




Set the Lens Lock to On in the Configuration menu.

☞ Settings - Lock Setting - Lens Lock p.131

Remote control button lock


This function locks the following buttons on the remote control.



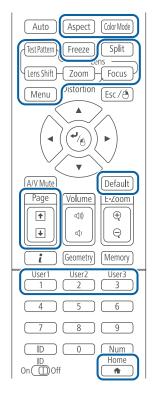

Each time the $[\uparrow]$ button is pressed for approximately 5 seconds, the remote control button lock turns on or off.

Remote control

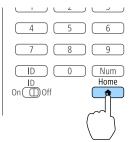



Even if the remote control button lock is on, the following operations are possible.

- Resetting default for the Remote Receiver setting
- Releasing the remote control button lock

Anti-Theft Lock

The projector is equipped with the following types of anti-theft security devices.

• Security slot

The security slot is compatible with the Microsaver Security System manufactured by Kensington.

See the following for more details on the Microsaver Security System.

http://www.kensington.com/

• Security cable installation point


A commercially available theft-prevention wire lock can be passed through the installation point to secure the projector to a desk or pillar.

Installing the wire lock

Pass an anti-theft wire lock through the installation point.

See the documentation supplied with the wire lock for locking instructions.



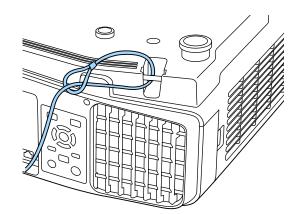

Attention

Do not pass drop-prevention wires through the security cable installation point.



Configuration Menu

This chapter explains how to use the Configuration menu and its functions.

Using the Configuration Menu



This section explains how to use the Configuration menu.

Although steps are explained using the remote control as an example, you can perform the same operations from the control panel. Check the guide under the menu for the available buttons and their operations.




Lens Shift

Meny


Zoom

Display the Configuration menu screen.

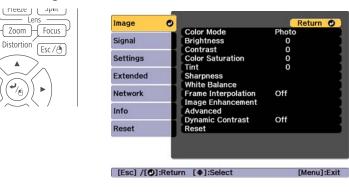



Select a top menu item.

 

Menu Distortion Esc / (


Default

A/V Mute

Classel.	Geometry Correction	H/V-Keystone
Signal	Split Screen Volume	0
Settings	 Lock Setting Brightness Settings 	5
Extended	Remote Receiver User Button	Front/Rear
Network	Test Pattern Memory	
Info	Reset	
Reset		




 
Select a submenu item.



Change settings.

Menu

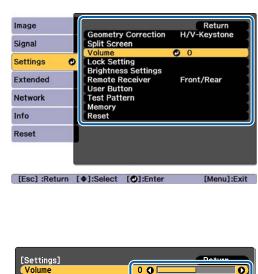

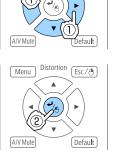

Distortion Esc / 🗐





5

When "[Default]: Reset" is displayed on the guide under the menu, pressing the [Default] button on the remote control returns the settings being adjusted to their default values.

Volume

Press the [Menu] button to finish making settings.



Configuration Menu Table

Settable items vary depending on the model being used and the image signal and source being projected.

Top Menu Name	Submenu Name	Items or Setting Values
Image menu p.127	Color Mode	Dynamic, Presentation, Cinema, sRGB, DICOM SIM, Multi- Projection
	Brightness	0 - 100
	Contrast	0 - 100
	Color Saturation	0 - 100
	Tint	0 - 100
	Sharpness	Standard, Thin Line Enhancement, Thick Line Enhancement
	White Balance	Color Temp., G-M Correction, Customized
	Frame Interpolation	Off, Low, Normal, and High
	Image Enhancement	4K Enhancement, Image Preset Mode, Noise Reduction, MPEG Noise Reduction, Super- resolution, Detail Enhancement
	Advanced	Gamma, RGBCMY, Deinterlacing
	Dynamic Contrast	Off, Normal, and High Speed
Signal menu	Resolution	Auto, Wide, Normal, and Manual
• p.129	Aspect	Auto, Normal, 4:3, 16:9, Full, H- Zoom, V-Zoom, Native
	Tracking	-
	Sync.	0 - 31
	Position	-128 - 127
	Auto Setup	On, Off

Top Menu Name	Submenu Name	Items or Setting Values
	Overscan	Auto, Off, 4%, and 8%
	Blanking	Top, Bottom, Left, and Right
	Advanced	Video Range, Input Signal, Image Processing
	Scale	Scale, Scale Mode, Scale Vertically, Scale Horizontally, Clip Adjustment, Clip Range
Settings menu p.131	Geometry Correction	Off, H/V-Keystone, Quick Corner, Curved Surface, Corner Wall, Point Correction, Memory
	Split Screen	-
	Volume	0 - 20
	Lock Setting	Control Panel Lock, Lens Lock
	Brightness Settings	Light Source Mode, Brightness Level, Constant Brightness, Estimated Remains
	Remote Receiver	Front/Rear, Front, Rear, and Off
	User Button	User Button 1, User Button 2, and User Button 3
	Test Pattern	Standard, Cross-hatching, Color Bars V, Color Bars H, Grayscale, Gray Bars V, Gray Bars H, Checkerboard 1, Checkerboard 2, White, Black, Aspect Frame
	Memory	Memory, Lens Position, Geometry Correction
Extended menu • p.133	Home Screen	Home Screen Auto Disp., Custom Function 1, Custom Function 2



Top Menu Name	Submenu Name	Items or Setting Values
	Display	Menu Position, Message Position, Messages, Display Background, Startup Screen, Standby Confirmation, Air Filter Notice, Screen, Panel Alignment, Color Uniformity, OSD Rotation
	User's Logo	-
	Projection	Front, Front/Ceiling, Rear, and Rear/Ceiling
	Operation	Direct Power On, Sleep Mode, Sleep Mode Timer, High Altitude Mode, Auto Source Search, Auto Power On, A/V Mute Settings, Advanced, Date & Time, Lens Calibration
	A/V Settings	A/V Output, Monitor Out, and Audio Settings
	Standby Mode	Communication On and Communication Off
	HDBaseT	Control Communications, Extron XTP
	Color Calibration	Start Auto Adjustment, Undo, Redo, Color Uniformity
	Multi-Projection	Projector ID, Projector Grouping, Tiling, Geometry Correction, Edge Blending, Black Level, Scale, Screen Matching
	Schedule Settings	-
	Language	27 languages

Top Menu Name	Submenu Name	Items or Setting Values
Info menu p.145	Projector Info	Total Op. Time, Operation Hours, Sources, Input Signal, Resolution, Refresh Rate, Sync Info, Status, Serial Number, Lens Type, Event ID, HDBaseT Signal Level
	Light Source Info	Light Source Hours, Estimated Remains
	Version	Main, Video2
	Status Information	Status Information, Source, Signal Information, Network Wired, Network Wireless, Maintenance, Version
Reset Menu	Reset All Memories	-
☞ p.146	Reset All Config	-

Network menu

Top Menu Name	Submenu Name	Items or Setting Values
Basic menu 🖝 p.139	Projector Name	-
	PJLink Password	-
	Remote Password	-
	Web Control Password	-
	Projector Keyword	On, Off
	Display LAN Info.	Text & QR Code, Text
Wireless LAN menu 🖝	Connection Mode	Quick, Advanced
p.140	Search Access Point	-
	SSID	-
	Security	Open, WPA2-PSK, WPA/WPA2-PSK

	127
TOP	

Top Menu Name	Submenu Name	Items or Setting Values
	Passphrase	-
	Channel	1ch, 6ch, and 11ch
	IP Settings	DHCP, IP Address, Subnet Mask, Gateway Address
	SSID Display	On, Off
	IP Address Display	On, Off
Wired LAN menu 🖝 p.142	IP Settings	DHCP, IP Address, Subnet Mask, Gateway Address
	IP Address Display	On, Off
Notifications menu	Mail Notification	On, Off
☞ p.144	SMTP Server	-
	Port Number	-
	From	-
	Address 1 Setting, Address 2 Setting, Address 3 Setting	Email Address, No Signal, System Error, Laser Error, High Temp Error, Air Filter Error, Laser Warning, High Temp Warning, Air Filter Warning, Air Filter Notice
	SNMP	On, Off
	Trap IP Address 1, Trap IP Address 2	-
	Community Name	-
Others menu 🖝 p.144	Priority Gateway	Wired LAN, Wireless LAN
	AMX Device Discovery	On, Off
		1

Top Menu Name	Submenu Name	Items or Setting Values
	Control4 SDDP	On, Off
	Art-Net	Art-Net, Net, Sub-Net, Universe, Start Channel
	Message Broadcasting	On, Off

Image Menu

Settable items vary depending on the image signal and source currently being projected. Setting details are saved for each color mode.

☞ "Automatically Detecting Input Signals and Changing the Projected Image (Source Search)" p.59

Image	0	Return 🔮
Signal	Color Mode Brightness	Photo 0
Settings	Contrast Color Saturation	0 0
Extended	Tint Sharpness	0
Network	White Balance Frame Interpolation	Off
Info	Image Enhancement Advanced	
Reset	Dynamic Contrast Reset	Off

[Esc] /[@]:Return [\$]:Select

[Menu]:Exit

Submenu	Function
Color Mode	You can select the quality of the image to suit your surroundings. ☞ "Selecting the Projection Quality (Selecting Color Mode)" p.74



Submenu	Function
Brightness	Adjusts the image brightness.
Contrast	Adjusts the difference between light and shade in the images.
Color Saturation	Adjusts the color saturation for the images.
Tint	You can adjust the image tint.
Sharpness	 Standard: You can adjust the image sharpness. Thin Line Enhancement: If this parameter is set to a positive value, details such as hair or fabric patterns will be enhanced. Thick Line Enhancement: If this parameter is set to a positive value, the outline, background, and the other main parts of the objects in the image will be enhanced to show them clearly.
White Balance	You can adjust the overall tint of the image. Color Temp. : You can adjust the overall tint of the image. When the Color Mode is set to sRGB or DICOM SIM , adjust to 11 steps in 3200K, 5000K to 10000K. When the Color Mode is set to anything other than sRGB and DICOM SIM , you can adjust it in a range of 0 to 10. The image is tinted blue when a high value is selected and tinted red when a low value is selected. G-M Correction : The color tone is tinted red when set to a negative value, and tinted green when set to a positive value. Customized : You can adjust the offset and gain of each color R (red), G (green), and B (blue) individually.
Frame Interpo- la- tion *1, 2, 3, 4, 5, 6, 7	You can play fast moving images smoothly by producing intermediate frames between the original frames.

Submenu	Function
Image Enhance- ment	You can adjust the image resolution. TAdjusting Image Resolution (Image Enhancement)" p.84
	4K Enhancement : You can project at a doubled resolution.
	Image Preset Mode : You can select the optimal setting according to the projected image from five presets prepared in advance.
	Noise Reduction ^{*2, 3, 7} : You can smooth out the roughness in progressive images.
	MPEG Noise Reduction ^{*2, 3} : You can reduce dot and block noise that occurs in outlines when projecting MPEG movies.
	Super-resolution : To display a crisp image, you can reduce the blurring that is created on the edge when the resolution of the image signal is scaled up and projected.
	Detail Enhancement : You can enhance the contrast of details in an image.
Advanced	You can make adjustments by choosing the following items. Gamma : You can adjust the coloring by selecting one of the gamma correction values, or referring to the projected image or a gamma graph.
	RGBCMY : You can adjust the hue, saturation, and brightness of each color R (red), G (green), B (blue), C (cyan), M (magenta), Y (yellow) individually.
	Deinterlacing ^{*7, 9} : You can convert interlace signals into progressive signals. (IP conversion)
	Off is ideal for images with a large amount of movement, Video for general video images, and Film/Auto for movie films, computer graphics, and animation.
Dynamic Con- trast ^{*8}	Set to Normal or High Speed to adjust the iris to obtain the optimum light for images being projected. Select High Speed to make faster iris corrections to match the speed of the scene.



Submenu	Function
Reset	You can reset all adjustment values for the Image menu to their default settings. See the following to return all menu items to their default settings. Therefore the test test test test test test test

- *1 This cannot be set when E-Zoom is used.
- *2 This cannot be set when the signal input exceeds WUXGA.
- *3 This cannot be set when 4K Enhancement is enabled.
- *4 This cannot be set when Edge Blending is On.
- *5 This cannot be set when Scale is enabled.
- *6 This cannot be set when Image Processing is set to Fast 1.
- *7 This cannot be set when Image Processing is set to Fast 2.
- *8 This can be set only if Color Mode is set to Dynamic or Cinema.
- *9 This can be set only when the input signal is 480i, 576i, or 1080i.

Signal Menu

Settable items vary depending on the image signal and source currently being projected. Setting details are saved for each image signal.

Image			Return 🥑
Signal	0	Resolution Aspect	Auto 4:3
Settings		Tracking Sync.	0
-		Position	-
Extended		Auto Setup Blanking	Off
Network		Advanced Scale	
Info		Reset	
Reset			

[Esc] /[@]:Return [�]:Select

[Menu]:Exit

Submenu	Function
Resolution	(Only available when an analog RGB computer signal is being input.)
	Set to Auto to automatically identify the resolution of the input signal. If images are not projected correctly when set to Auto , for example if some of the image is missing, set to Wide for wide screens, or set to Normal for 4:3 or 5:4 screens depending on the connected computer.
	Manual allows you to specify the resolution. This is ideal when connected computer is fixed.
Aspect	You can set the <u>Aspect Ratio</u> for projected images.
	"Changing the Aspect Ratio of the Projected Image" p.78
Tracking	(Only available when an analog RGB computer signal is being input.)
	You can adjust computer images when vertical stripes appear in the images.
Sync.	(Only available when an analog RGB computer signal is being input.)
	You can adjust computer images when flickering, fuzziness, or interference appear in the images.



Submenu	Function
Position	You can adjust the display position up, down, left, and right when a part of the image is missing so that the whole image is projected.
Auto Setup	(Only available when an analog RGB computer signal is being input.)Set to On to automatically adjust Tracking, Sync., and Position to the optimum state when the input signal changes.
Overscan	Changes the output image ratio (the range of the projected image). You can set the cropping range to 4% or 8% . When set to Auto , this is automatically adjusted according to the input signal.
Blanking	You can hide images in the set area. Use the [◀][▶] buttons to adjust the area. You can adjust by using a combination of Top , Bottom , Left , and Right .
Advanced	 You can set by choosing the following items. Video Range: Select the video range for the input signal from the HDMI port, DVI-D port, HDBaseT port, or SDI. Set to Expanded if you are concerned about misadjusted black levels or blown out highlights in the image. Input Signal: Select an input signal from the Computer port or BNC port. If set to Auto, the input signal is set automatically according to the connected equipment. If colors do not appear correctly when set to Auto, select the appropriate signal according to the connected equipment. Image Processing: Changes settings for image processing. Fine: When Frame Interpolation is On, Frame Interpolation is enabled. Fast 1: Images are displayed quicker without any loss in image
	quality.Fast 2: Images are displayed quicker than Fast 1.
Scale	When using multiple projectors to project one image, adjust the range of the image displayed by each projector. To "Displaying a Scaled Image" p.102

Submenu	Function
Reset	You can reset all adjustment values on the Signal menu to their default settings, except for Input Signal . See the following to return all menu items to their default settings.



Settings Menu

Image		Return 🕗
Signal	Geometry Correction Split Screen Volume	H/V-Keystone
Settings	Ock Setting Brightness Settings	
Extended	Remote Receiver	Front/Rear
Network	Test Pattern Memory	1
Info	Reset	
Reset		
[Esc] /[②]:R	eturn [�]:Select	[Menu]:Exit

Submenu	Function
Geometry Cor- rection	 You can correct distortion. "Correcting Distortion in the Projected Image" p.62 Off: Temporarily cancels the geometry correction. H/V-Keystone: Adjust V-Keystone, V-Balance, H-Keystone, and H-Balance to correct vertical and horizontal keystone distortion. Quick Corner: Select and correct the four corners of the projected image. Curved Surface: Corrects distortion that occurs when projecting on a curved surface. Corner Wall: Corrects distortion that occurs when projecting on a surface with right angles. Point Correction: Divides the projected image into a grid and corrects the distortion by moving the selected point of intersection from side to side and up and down. Memory: You can save the adjustment value of the geometry correction and load it when needed. "Memory Function" p.111
Split Screen	You can split the screen into two screens. Trojecting Two Images Simultaneously (Split Screen)" p.104
Volume	You can adjust the volume. Setting values are saved for each source.




Submenu	Function
Lock Setting	Control Panel Lock: You can use this to restrict operation of the projector's control panel.
	Lens Lock: When set to On, [Lens Shift], [Zoom], and [Focus] button operations on the remote control are disabled.
Brightness Set- tings	 Light Source Mode: Set the brightness for the light source. Normal: Select this if you do not want to decrease the brightness. This makes the target usage time approximately 20,000 hours. Quiet: Select this if you are concerned about the noise made by the fan, This sets the brightness at 70%. This makes the target usage time 20,000 hours. Extended: Select this to extend the life expectancy of the light source. This sets the brightness at 70%. This makes the target usage time approximately 30,000 hours. Custom: Select this to set the brightness level within a range of 30 to 100%. Brightness Level: (Only available when Light Source Mode is set to Custom) Sets the brightness for the light source. Constant Brightness: (Only available when Light Source Mode is set to Custom) When set to On, the brightness of the light source set in Brightness Level is maintained as it is. When Constant Brightness is set to On, you cannot change the settings
	for Light Source Mode and Brightness Level . The "Setting the Brightness" p.74
	Estimated Remains : When Constant Brightness is set to On , this indicates the amount of time for which constant brightness can be maintained.

☞ "Guide to Estimated Remains" p.76

Submenu	Function
Remote Receiver	You can limit the reception of the operation signal from the remote control. When set to Off , you cannot perform any operations from the remote control. If you want to make operations from the remote control, hold down the [Menu] button on the remote control for at least 15 seconds to reset the setting to its default value.
User Button	Select the items in the Configuration menu that you want to assign to the [User1], [User2], and [User3] buttons on the remote control. The following items can be assigned. Light Source Mode, Multi-Projection, Resolution, Image Processing, On-Screen Display, Display the QR Code, Image Enhancement, Frame Interpolation, Screen Matching, Color Calibration
Test Pattern	You can display a test pattern to adjust the projection without connecting other equipment when you set up the projector.
Memory	Perform operations and make settings for the memory function. The memory Function p.111
Reset	You can reset all adjustment values on the Settings menu to their default settings, except for User Button and Memory . See the following to return all menu items to their default settings.



Extended Menu

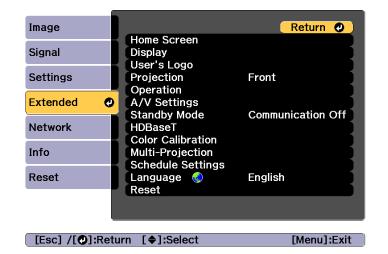

Submenu	Function
Home Screen	Home Screen Auto Disp.: When set to On, the Home screen is displayed when the projector turns on. The Home screen is not displayed when the selected source has an image signal when the projector turns on. Custom Function 1, Custom Function 2: Select functions to be assigned to the Home screen from the following five functions. Network Settings, Info, Image Enhancement, Frame Interpolation, Split Screen

Submenu	Function	
Display	You can make settings related to the projector's display. Menu Position : Select the position to display the menu on the projected screen.	
	Message Position : Select the position to display the message on the projected screen.	
	Messages: When set to Off, the following items will not be displayed.	
	Item names when the Source, Color Mode, or Aspect is changed, messages when no signal is being input, and warnings such as High Temp Warning.	
	Display Background *: You can set the screen background to Black , Blue , or Logo when no image signal is available.	
	Startup Screen *: Set to On to display the User's Logo when you turn on the projector.	
	Standby Confirmation : (This is unavailable when the Remote Control Type is set to Simple .) If it is set to Off , you can turn off the power simply by pressing the $[\bigcirc]$ button once.	
	Air Filter Notice: You can set whether or not (On/Off) to enable Air Filter Notice. When this is set to On and a clog in the air filter is detected, the message is displayed on the screen.	
	Screen: (This is unavailable when projecting images from a computer over a network.) Set the aspect ratio and position of the projected screen according to the screen being used. ● "Screen Settings" p.30	
	Panel Alignment: Correct color misalignments (red and blue) in the screen.	
	"Panel Alignment" p.189	
	Color Uniformity : Adjusts the color tone balance for the whole screen.	
	Color Uniformity" p.191	
	OSD Rotation: Rotates the menu direction by 90 degrees.	



Submenu	Function
User's Logo *	You can change the user's logo that is displayed as a background during Display Background, A/V Mute, and so on.
	"Saving a User's Logo" p.109
Projection	Select from one of the following projection methods depending on how the projector is installed.
	Front, Front/Ceiling, Rear, and Rear/Ceiling
	You can change the setting as follows by pressing down the [A/V Mute] button for about five seconds.
	Front↔Front/Ceiling
	Rear ↔ Rear/Ceiling

Submenu	Function	
Operation	Direct Power On : Set to On to turn on the projector simply by plugging it in.	
	When the power cord is plugged in, note that the projector turns on automatically in cases such as a power outage being restored.	
	Sleep Mode : When set to On , this automatically stops projection when no image signal is being input and no operations are carried out.	
	Sleep Mode Timer: When Sleep Mode is set to On, you can set the time before the projector automatically turns off within a range of 1 to 30 minutes.	
	High Altitude Mode: Set to On when using the projector above an altitude of 1,500 m.	
	Auto Source Search: Set to On to automatically detect an image signal from another source and project the image when there is no image signal from the current source.	
	Auto Power On: If it is set to Computer or BNC, the projector is turned on when the signals are received from the Computer port or BNC port, even when the projector is in standby status.	
	 A/V Mute Settings: Perform settings related to A/V mute. Fade-in: Specify the number of seconds for fade-in when displaying an image. 	
	• Fade-out: Specify the number of seconds for fade-out when hiding an image.	
	• A/V Mute Timer: When it is set to On, if no operations are performed for about 2 hours after A/V mute is activated, the projector turns off automatically.	
	• A/V Mute Release: When it is set to A/V Mute, you can release A/V mute only by pressing the [A/V Mute] button (or by sending an A/V mute Off command). When set to Any Button, A/V mute is released when any operation is performed on the projector.	



Submenu	Function	Submenu	Function
Submenu	 (Image and Sound Temporarily (A/V Mute)" p.107 Advanced: The following items can be set. BNC Sync Termination: Set the termination for the signal from the BNC port. This should usually be set to Off. Set to On when analog (75Ω) termination such as for switchers is necessary. Remote Control Type: You can select Normal or Simple depending on the type of remote control. Set this item to Normal to use the remote control provided with this projector. When Simple is selected, you can use the remote control provided with other Epson projectors to operate this projector. This is useful if you want to use a remote control that you are already familiar with to operate the projector. 	Submenu	 to Disabled, the projector goes into standby status in approximately 75 seconds after power off. Inv Direction Button: Set this to On when the projector is installed on a ceiling. HDMI DDC Buffer: If the image from a device connected using an HDMI extension cable is not displayed correctly, turning this On may improve the image. DVI-D DDC Buffer: If the image from a device connected using a DVI extension cable is not displayed correctly, turning this On may improve the image. Lens Type: When using the following lens, select the model number of the lens. ELPLS04, ELPLU02, ELPLR04, ELPLW04, ELPLM06,
	 want to use a remote control that you are already familiar with to operate the projector. However, you cannot use the remote control provided with this projector if this is set to Simple. Make sure that the setting is correct because, if the projector is mounted on the ceiling or somewhere hard to reach, changing it back to Normal may be difficult. Additionally, you cannot use the functions that are not equipped with this projector or the remote control which you use. 		model number of the lens.
	 Beep: When this is set to On, the confirmation buzzer beeps to notify you that the power turns on or off, or cooling down is finished. Indicators: When set to Off, the projector's indicators are 		
	 Indicators: when set to On, the projector's indicators are turned off, except for abnormality or warning. Instant Off: When set to Enabled, the projector goes into standby status in approximately three seconds after Power 		
	Off. If you turn the power on immediately after turning it off, command communication may be cut off. To stabilize command communication, set this to Disabled . When set		



Submenu	Function	Submenu	Function
A/V Settings	 Settings A/V Output: Set this to Always On if you want to output audio and images to an external device even when the projector is in standby status. Monitor Out: Select the image source output to an external monitor when the projector is in standby status. When set to Auto, analog RGB signals from the Computer port or the BNC port are output depending on which source was selected when the projector was turned off. Audio Settings: Performs the following audio related settings. Audio Output: Select the audio to be output when projecting images from the Computer port, BNC port, or DVI-D port. When set to Auto, audio is output from the audio input port corresponding to each image input port. Tenceting Equipment" p.45 HDMI Audio Output: Select the audio source when projecting images from the HDMI port. If you select HDMI, audio for the image is output as it is. If you select Audio3, audio is output from the Audio3 port.		 Control Communications (This cannot be set when Extron XTP is set to On.) When set to On, Ethernet communication, serial communication, and the wired remote control through the HDBaseT Transmitter connected to the HDBaseT port are all enabled. Extron XTP: Set to On when you connect the Extron XTP transmitter or switcher to the HDBaseT port. See the following Extron Web site for more details on the XTP system. http://www.extron.com/ When Control Communications or Extron XTP is set to On, Standby Mode is automatically set to Communication On. When Control Communications or Extron XTP is On, the projector's LAN port, RS-232 port, and Remote port are disabled. When Extron XTP is set to On, the fan
Standby Mode	 If you set Communication On, you can perform the following operations even if the projector is in standby mode. Monitor and control the projector over a network. Output audio and images to an external device. (Only when A/V Output is set to Always On.) Communication from the HDBaseT port is enabled. (Only when Control Communications is set to On.) When monitoring or controlling the projector using wireless LAN, set Connection Mode to Advanced. Metwork - Wireless LAN - Connection Mode p.140 	Color Calibra- tion	 may rotate in standby mode but this is not abnormal. Start Auto Adjustment: Automatically adjusts the color tone for the whole screen. Color Calibration" p.188 Undo: Undoes the auto adjustment. Redo: Redoes the auto adjustment. Color Uniformity: Adjusts the color tone balance for the whole screen. Color Uniformity" p.191 Reset: You can reset all adjustment values for Color Calibration to their default values.



Submenu Function		
Multi-Projection	Make settings when projecting from multiple projectors.	
-	"Multi-Projection Function" p.90	
	Projector ID : Set the ID from 1 to 30. Off indicates that no ID is set.	
	TID Settings" p.40	
	Projector Grouping : When using multiple projectors to project one image, select the projectors being used.	
	Tiling : Set the number of split screens and positions of each projected image.	
	Tiling" p.91	
	Geometry Correction: Corrects distortion in the projected image.	
	Correcting Distortion in the Projected Image" p.62	
	Edge Blending : Corrects a border between multiple imate to create a seamless screen.	
	"Edge Blending" p.93	
	Black Level : Adjusts the differences in brightness and tone for areas where images overlap and areas where the images do not overlap.	
	Image: Straight of the str	
	Scale: When using multiple projectors to project one image, adjust the range of the image displayed by each projector. ☞ "Displaying a Scaled Image" p.102	
	Screen Matching: Adjusts the tint and brightness for each projector.	
	"Screen Matching" p.99	
	Reset: You can reset all adjustment values for the Multi-Projection menu to their default settings.	
Schedule Set- tings	You can set the projector's schedule so that it performs a specific operation at a pre-scheduled time.	
	☞ "Scheduling Function" p.113	
Language	You can set the language for messages and menus.	

Submenu	Function
Reset	You can reset all adjustment values for the Extended menu to their default settings. However, the following items are not reset.
	Screen Type, Screen Position, Projection, High Altitude
	Mode, Auto Source Search, A/V Mute Release, Remote
	Control Type, Inv Direction Button, Lens Type, Date &
	Time, Lens Calibration, A/V Output, Monitor Out,
	Standby Mode, Control Communications, Extron XTP,
	Projector ID, Color Calibration, Projector Grouping,
	Screen Matching, Color Matching, and Language
	See the following to return all menu items to their default settings.
	☞ "Reset Menu" p.146

* When User's Logo Protection is set to On in Password Protection, you cannot change settings related to user's logo. You can make changes after setting User's Logo Protection to Off.


☞ "Managing Users (Password Protection)" p.117

Network Menu

When Network Protection is set to On in Password Protection, a message is displayed and the network settings cannot be changed. Set Network Protection to Off and then configure the network.



☞ "Setting Password Protection" p.117

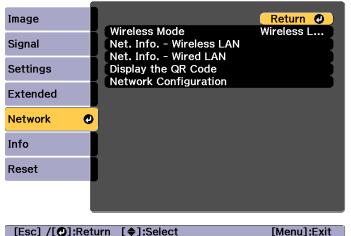

[Esc] /[@]:Return [\$]:Select

Submenu	Function
Wireless Mode	Set this to Wireless LAN On when connecting the projector and a computer via a wireless LAN. If you do not want to connect via wireless LAN, turn it Off to prevent unauthorized access by others.
Net. Info Wire- less LAN	Displays the following network setting status information. Connection Mode Wireless LAN Sys. Antenna Level Projector Name SSID DHCP IP Address Subnet Mask Gateway Address MAC Address Region Code

Submenu	Function	
Net. Info Wired LAN	Displays the following network setting status information. • Projector Name • DHCP • IP Address • Subnet Mask • Gateway Address • MAC Address	
Display the QR Code	Displays the QR code.	
Network Config- uration	The following menus are available for setting Network items. Basic, Wireless LAN, Wired LAN, Notifications, Others, Reset	

Notes on operating the Network menu

Selecting from the top menu and sub menus, and changing selected items is the same as making operations from the Configuration menu.

When done, make sure you go to the Complete menu, and select Yes, No, or Cancel. When you select Yes or No, you are returned to the Configuration menu.

Basic Save network settings.	
Wireless LAN	
Wired LAN	
Notifications	[Setup complete]
Others	Save the network settings?
Reset	Yes O No Cancel
Complete 🛛 🔿	
	[Esc] :Return [+]:Select [O]:Execute
[+]:Select [@]:Enter	


Yes: Saves the settings and exits the Network menu.

No: Does not save the settings and exits the Network menu.

Cancel: Continues displaying the Network menu.

Soft keyboard operations

The Network menu contains items that require input of alphanumerics during setup. In this case, the following software keyboard is displayed. Use $[\blacktriangle][\checkmark][\checkmark][\checkmark][\blacktriangleright]$ buttons to move the cursor to the desired key, and then press the $[\checkmark]$ button to enter the selected character. Enter figures by holding down the [Num] button on the remote control, and pressing the numeric buttons. After inputting, press **Finish** on the keyboard to confirm your input. Press **Cancel** on the keyboard to cancel your input.

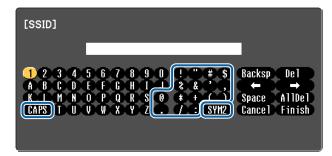


- Each time the CAPS key is selected and the [] button is pressed, it sets and changes between upper case and lower case letters.
- Each time the SYM1/2 key is selected and the [] button is pressed, it sets and changes the symbol keys for the section enclosed by the frame.

The following types of character can be entered.

Numbers	0123456789
Letters	ABCDEFGHIJKLMNOPQRSTUVWXYZ
	abcdefghijklmnopqrstuvwxyz
Symbols	$!" # $ % & '() * +, /:; < = > ? @ [] ^_ ` {] } ~$

Basic menu

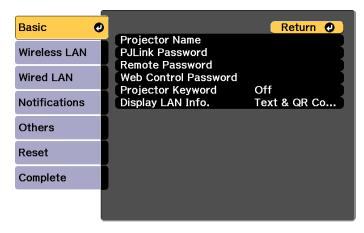

[Esc] /[@]:Return [\$]:Select

Submenu	Function	
Projector Name	The projector's name is displayed when using the supplied application EasyMP Multi PC Projection.	
	When editing, you can enter up to 16 single-byte alphanumeric characters.(" * + , / : ; < = > ? [\] ` and spaces cannot be used.)	
PJLink Password	Set a password to use when you access the projector using compatible PJLink software.	
	You can enter up to 32 single-byte alphanumeric characters. (Spaces and symbols other than @ cannot be used.) The "About PJLink" p.201	
Remote Pass- word	Set a password to use Remote in Epson Web Control. You can enter up to 8 single-byte alphanumeric characters. (* : and spaces cannot be used.) The default user name is "EPSONREMOTE" and the default password is "guest". The "Changing Settings Using a Web Browser (Epson Web Control)" p.194	


TOP

Submenu	Function
Web Control Password	Set a password for authentication to use when making settings and controlling the projector using Web Control in Epson Web Control. You can enter up to eight single-byte alphanumeric characters (* : and spaces cannot be used). The default user name is "EPSONWEB" and the default password is "admin". The the the the the the the the the the t
Projector Key- word	When set to On , you have to enter the keyword when you try to connect the projector to a computer via a network. As a result, you can prevent presentations from being interrupted by connections from other computers. Normally this should be set to On .
Display LAN Info.	Set the display format for the projector's network information. If you display the QR code, you can connect to a network just by reading the QR code in Epson iProjection. Text & QR Code is set by default.

Wireless LAN menu

To connect the projector to a computer using a wireless LAN, install the Wireless LAN unit (ELPAP10).

☞ "Installing the Wireless LAN Unit" p.52

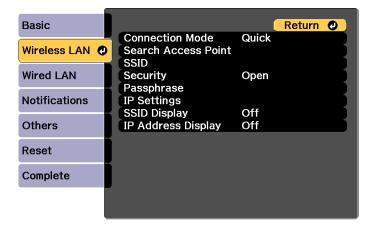

[Esc] /[•]:Return [+]:Select

Submenu	Function	
Connection Mode	Set the connection mode to use when connecting the projector and a computer via a wireless LAN.	
	Quick : Lets you directly connect to a smartphone, tablet, or computer via a wireless LAN.	
	Advanced : Lets you connect to a smartphone, tablet, or computer over a wireless LAN access point. The connection is established in infrastructure mode.	
Search Access Point	When Connection Mode is set to Advanced , you can search for surrounding access points, and set the SSID to be connected from those access points. Depending on the access point settings, they may not be displayed in the list.	
	☞ "Search Access Point screen" p.142	
SSID	Enter an SSID. When an SSID is provided for the wireless LAN system in which the projector participates, enter the SSID.	
	You can enter up to 32 single-byte alphanumeric characters.	

тор



Submenu	Function		
Security	Select the security type according to the wireless LAN settings. When setting security, follow the instructions of your network administrator.	11	
Passphrase	Enter a passphrase used to connect to the network when Security is set to WPA2-PSK or WPA/WPA2-PSK .		
	You can enter at least 8 and up to 63 single-byte alphanumeric characters.		
	You can enter up to 32 characters on the Configuration menu. When entering more than 32 characters, use your Web browser to enter the text.		
	"Changing Settings Using a Web Browser (Epson Web Control)" p.194		
	When Connection Mode is set to Quick , the initial passphrase is set.		
Channel	You can select the channels used to connect in Quick mode. If interference from other signals occurs, use a different channel.		

Submenu	Function	
IP Settings	(This can only be set if Connection Mode is set to Advanced .) Configure the network.	
	DHCP : Set to On to configure the network using <u>DHCP</u> . If this is set to On , you cannot set any more addresses.	
	IP Address: You can enter the <u>IP address</u> assigned to the projector. You can enter a number from 0 to 255 in each field of the address. However, the following IP addresses cannot be used.	
	0.0.0.0, 127.x.x.x, 224.0.0.0 to 255.255.255.255 (where x is a number from 0 to 255)	
	Subnet Mask : You can enter the <u>Subnet Mask</u> for the projector. You can enter a number from 0 to 255 in each field of the address. However, the following subnet masks cannot be used.	
	0.0.0.0, 255.255.255.255	
	Gateway Address : You can enter the IP address for the gateway for the projector. You can enter a number from 0 to 255 in each field of the address. However, the following <u>Gateway Address</u> cannot be used.	
	0.0.0.0, 127.x.x.x, 224.0.0.0 to 255.255.255.255 (where x is a number from 0 to 255)	
SSID Display	To prevent the SSID from being displayed on the LAN Standby screen, set this to Off .	
IP Address Dis- play	To prevent the IP address from being displayed on the LAN Standby screen, set this to Off .	

Type of security

When the optional wireless LAN unit is attached and being used in Advanced connection mode, it is strongly recommended that you set security.

WPA is an encryption standard that improves the security for wireless networks. The projector supports TKIP and AES encryption methods.

WPA also includes user authentication functions. WPA authentication provides two methods: using an authentication server, or authenticating


142 TOP

between a computer and an access point without using a server. This projector supports the latter method, without a server.

For setting details, follow the instructions from your network administrator.

Search Access Point screen


Detected access points are displayed in a list.

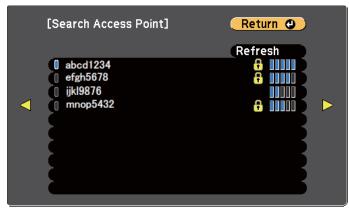

[Esc] /[@]:Return [\$]:Select

Submenu	Function	
Refresh	Searches for the access point again.	
	Indicates an already set access point.	
G	Indicates the access points where security is set. If you select an access point where security has not been set, the Wireless LAN menu is displayed. If you select an access point where security has been set, the Security menu is displayed. Select a type of security according to the security settings for the access point.	

Wired LAN menu

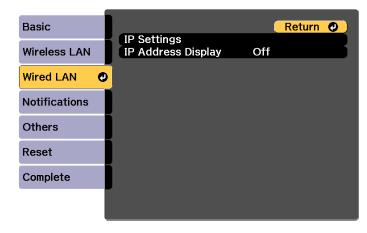

[Esc] /[@]:Return [\$]:Select

Submenu	Function
IP Settings	You can make settings related to the following addresses. DHCP : Set to On to configure the network using <u>DHCP</u> . If this is set to On , you cannot set any more addresses. IP Address : You can enter the <u>IP address</u> assigned to the projector. You can enter a number from 0 to 255 in each field of the address. However, the following IP addresses cannot be used 0.0.0.0, 127.x.x.x, 224.0.0.0 to 255.255.255.255 (where x is a
	 number from 0 to 255) Subnet Mask: You can enter the Subnet Mask You can enter a number from 0 to 255 in each field of the address. However, the following subnet masks cannot be used. 0.0.0.0, 255.255.255.255
	Gateway Address: You can enter the IP address for the gateway for the projector. You can enter a number from 0 to 255 in each field of the address. However, the following <u>Gateway Address</u> cannot be used. 0.0.0.0, 127.x.x.x, 224.0.0.0 to 255.255.255.255 (where x is a number from 0 to 255)



Submenu	Function	
IP Address Dis- play	To prevent the IP address from being displayed on the LAN Standby screen, set this to Off .	

Notifications menu

When this is set, you receive an email notification if a problem or warning occurs in the projector.

☞ "Reading error notification mail" p.199

Basic		(Ret	urn	0
Wireless LAN	Mail Notification SMTP Server	Off 0.	0.	0.	0
Wired LAN	Port Number From Address 1 Setting)		Ę
Notifications 🥥	Address 2 Setting Address 3 Setting				
Others	SNMP	Off	0	0	N
Reset	Trap IP Address 1 Trap IP Address 2 Community Name	0. 0.		0. 0.	0) 0)
Complete					


[Esc] /[@]:Return [�]:Select

Submenu	Function
Mail Notification	Set to On to send an email to the preset addresses when a problem or warning occurs with a projector.
SMTP Server	You can input the <u>IP Address</u> for the SMTP server for the projector. You can enter a number from 0 to 255 in each field of the address. However, the following IP addresses cannot be used. 127.x.x.x, 224.0.0.0 to 255.255.255.255 (where x is a number from 0 to 255)

Submenu	Function	
Port Number	You can input the port number for the SMTP server. The default value is 25. You can input numbers between 1 to 65535.	
From	Enter the email address of the sender.	
Address 1 Set- ting/Address 2 Setting/Address 3 Setting	Set the destination email addresses for the notification email, and the notification content. You can register up to three destinations. You can enter up to 32 single-byte alphanumeric characters for the email addresses.("(),:;<>[\] and spaces cannot be used.)	
SNMP	Set to On to monitor the projector using <u>SNMP</u> . To monitor the projector, you need to install the SNMP manager program on your computer. SNMP should be managed by a network administrator. The default value is Off .	
Trap IP Address 1/Trap IP Ad- dress 2	You can register up to two IP addresses for the SNMP trap notification destination. You can enter a number from 0 to 255 in each field of the address. However, the following IP addresses cannot be used. 127.x.x.x, 224.0.0.0 to 255.255.255 (where x is a number from 0 to 255)	
Community Name	Set the community name of SNMP. You can enter up to 32 single- byte alphanumeric characters. (Spaces and symbols other than @ cannot be used.)	



Others menu

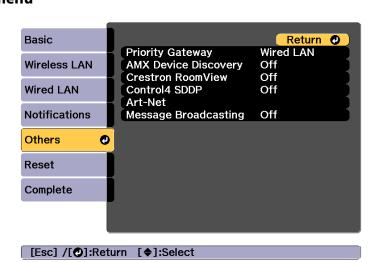


Submenu	Function
Priority Gate- way	For the priority gateway, select either Wired or Wireless.
AMX Device Dis- covery	When you want to allow the projector to be detected by <u>AMX Device Discovery</u> , set this to On . Set this to Off if you are not connected to an environment controlled by a controller from AMX or AMX Device Discovery.
Crestron Room- View	 Set this to On only when monitoring or controlling the projector over the network using Crestron RoomView[®]. Otherwise, set this to Off. "About Crestron RoomView[®]" p.202 Changes in projector settings take effect upon restarting. When this is set to On, the following functions are not available. Epson Web Control Message Broadcasting (EasyMP Monitor plugin)
Control4 SDDP	Set to On if you want to enable the acquisition of the device information by <u>Control4®Simple Device Discovery</u> <u>Protocol (SDDP)</u> .

Submenu	Function
Art-Net*	Art-Net: Set this to On to control the projector using Art-Net.
	 "About Art-Net (EB-L1505U/EB-L1500U/EB-L1405U only)" p.206
	Net/Sub-Net/Universe : Sets the projector's Net/Sub-Net/ Universe.
	Start Channel : Sets the start channel that handles Art-Net.
	"Channel definitions" p.206
Message Broad- casting	You can switch the Message Broadcasting function to enable or disable.
	You can download Message Broadcasting and its Operation Guide from the following Web site. http://www.epson.com

* EB-L1505U/EB-L1500U/EB-L1405U only

Reset menu

Resets all of the network settings.

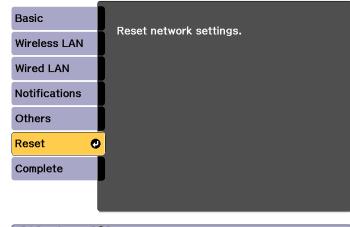


[�]:Select [@]:Enter

Submenu	Function
Reset network settings.	To reset all of the Network settings, select Yes .

Info Menu (Display Only)

Lets you check the status of the image signals being projected and the status of the projector. Items that can be displayed vary depending on the source currently being projected.

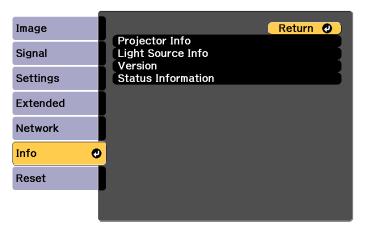

[Esc] /[@]:Return [+]:Select

[Menu]:Exit

Sub	menu	Function
Projector Info	Total Op. Time*	Displays the projector's cumulative operating time.
	Operation Hours	Displays the operation time after turning on the projector.
	Source	You can display the source name for the connected equipment currently being projected.
	Input Signal	You can display the content of Input Signal set in the Signal menu according to the source.
	Resolution	You can display the resolution.
	Refresh Rate	You can display the <u>Refresh Rate</u> .
	Sync Info	You can display the image signal information. This information may be needed if service is required.

TOP


List of Functions



Submenu		Function
	Status	This is information about errors that have occurred on the projector. This information may be needed if service is required.
	Serial Number	Displays the projector's serial number.
	Lens Type	Displays the model number of your lens.
	Event ID	When problems occur when the projector and computer are connected through the network, information on the problem is displayed using an Event ID. See the following page for information on interpreting the Event ID. The "About Event ID" p.181
	HDBaseT Sig- nal Level	You can display the image signal information from the HDBaseT port.
Light Source Info	Light Source Hours	Displays the operating time for each Light Source Mode.
	Estimated Re- mains	When Constant Brightness is set to On , this displays the amount of time for which the brightness of the light source can be maintained.
Version	Main Video2	Displays the projector's firmware version information.
Status Information		Displays the projector's status. Treading the Status Display" p.163

* The cumulative operating time is displayed as "0H" for the first 10 hours. 10 hours and above is displayed as "10H", "11H", and so on.

Reset Menu

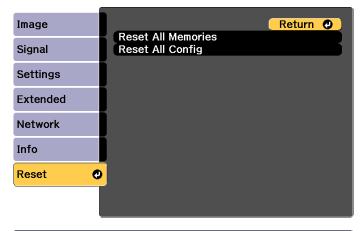

[Esc] /[@]:Return [�]:Select

[Menu]:Exit

Submenu	Function
Reset All Memo- ries	Resets all names and settings saved in Memory , Lens Position , and Geometry Correction .
	"Memory Function" p.111
Reset All Config	You can reset all items in the Configuration menu to their default settings.
	The following items are not reset to their defaults: Input Signal, Memory, User's Logo, all items for Network menus, Language, Date & Time, Panel Alignment, Color Uniformity, Lens Calibration, Color Calibration, Projector Grouping, Screen Matching, and Color Matching.



Once the Configuration menu content has been set for one projector, you can use it to perform batch setup for multiple projectors (batch setup function). The batch setup function is only for projectors with the same model number.

Use one of the following methods.

- Setup using a USB flash drive.
- Setup by connecting the computer and projector with a USB cable.
- Setup using EasyMP Network Updater.

This manual explains the USB flash drive and the USB cable methods.

- The following content is not reflected by the batch setup function.
 The Network menu settings (except for the Notifications menu and the Others menu)
 - Status and Light Source Info in the Info menu
- Perform batch setup before adjusting the projected image. Adjustment values for the projected image, such as Geometry Correction are reflected by the batch setup function. If batch setup is performed after adjusting the projected image, the adjustments you made may change.
- By using the batch setup function, the registered User's Logo is set for the other projectors. Do not register confidential information and so on as the User's Logo.

<u> C</u>aution

Performing batch setup is the customers responsibility. If batch setup fails due to a power failure, communication error, and so on, the customer is responsible for any repair costs incurred.

Setup Using a USB Flash Drive

This section explains how to perform batch setup using a USB flash drive.

- Use a FAT format USB flash drive.
- The batch setup function cannot be used by USB flash drives that incorporate security functions. Use a USB flash drive that does not incorporate security functions.
- The batch setup function cannot be used by USB card readers or USB hard disks.


Saving settings to the USB flash drive



Disconnect the power cord from the projector, and check that all of the projector's indicators have turned off.

Connect the USB flash drive to the projector's wireless LAN unit port.

☞ "Installing the Wireless LAN Unit" p.52

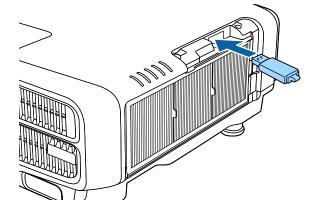


Batch Setup


3




- Connect the USB flash drive directly to the projector. If the USB flash drive is connected to the projector through a USB hub, the settings may not be saved correctly.
- Connect an empty USB flash drive. If the USB flash drive contains data other than the batch setup file, the settings may not be saved correctly.
- If you have saved a batch setup file from another projector to the USB flash drive, delete the file or change the file name. The batch setup function cannot overwrite a batch setup file.
- The file name for the batch setup file is PJCONFDATA.bin. If you need to change the file name, add text after PJCONFDATA. If you change the file name in any other way, the projector may not be able to recognize the file correctly.
- You can only use single-byte characters for the file name.

  While holding down the [Esc] button on the remote control or the control panel, connect the power cord to the projector.





When the projector's indicators turn on as follows, release the [Esc] button.

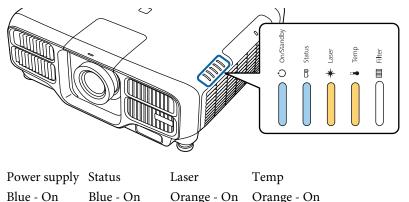


When all of the indicators start flashing, the batch setup file is being written.

🕂 Caution

- Do not disconnect the power cord from the projector while the file is being written. If the power cord is disconnected, the projector may not start correctly.
- Do not disconnect the USB flash drive from the projector while the file is being written. If the USB flash drive is disconnected, the projector may not start correctly.



When writing completes normally, the projector enters standby status.

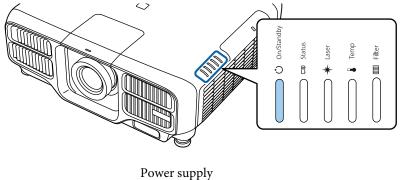

Blue - On

When the projector is in standby status, remove the USB flash drive.


Reflecting saved settings to other projectors



Disconnect the power cord from the projector, and check that all of the projector's indicators have turned off.



Connect the USB flash drive containing the saved batch setup file to the projector's wireless LAN unit port.

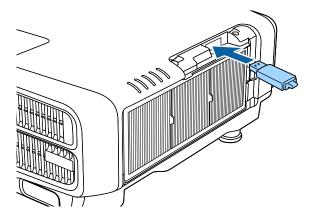


- When the USB flash drive contains 1 to 3 types of batch setup files, the file is reflected to the projector with the same model number. If there are multiple files for a projector with the same model number, the settings may not be reflected correctly.
- When there are four or more types of batch setup files on the USB flash drive, the settings may not be reflected correctly.
- Do not store any data except for the batch setup file on the USB flash drive. If the USB flash drive contains data other than the batch setup file, the settings may not be reflected correctly.






 While holding down the [Menu] on the remote control or the control panel, connect the power cord to the projector.



When the projector's indicators turn on as follows, release the [Menu] button.

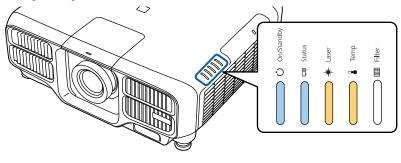

Power supplyStatusLaserTempBlue - OnBlue - OnOrange - OnOrange - On

The indicators remain on for about 75 seconds.


When all of the indicators start flashing, the settings are being written.

🕂 Caution

- Do not disconnect the power cord from the projector while the settings are being written. If the power cord is disconnected, the projector may not start correctly.
- Do not disconnect the USB flash drive from the projector while the settings are being written. If the USB flash drive is disconnected, the projector may not start correctly.



When writing completes normally, the projector enters standby status.

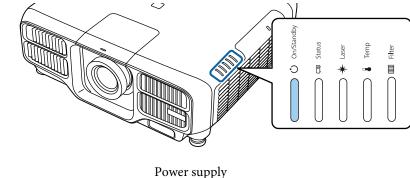

Blue - On

When the projector is in standby status, remove the USB flash drive.



Setup by Connecting the Computer and Projector with a USB Cable

The following operating systems support the batch setup function.

- Windows Vista or later
- Mac OS X 10.5.3 or later


Saving settings to a computer



2


Disconnect the power cord from the projector, and check that all of the projector's indicators have turned off.

Connect the computer's USB port to the projector's Service port with a USB cable.

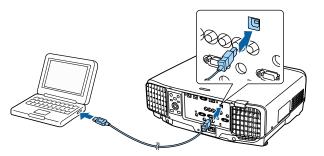




 While holding down the [Esc] button on the remote control or the control panel, connect the power cord to the projector.



When the projector's indicators turn on as follows, release the [Esc] button.

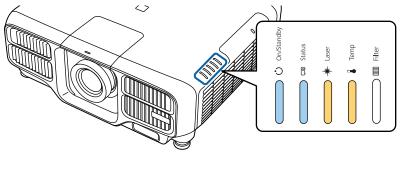

Power supply	Status	Laser	Temp
Blue - On	Blue - On	Orange - On	Orange - On

The projector is recognized as a removable disk by the computer.



Open the removable disk, and save the batch setup file (PJCONFDATA.bin) to the computer.

If you need to change the name of the batch setup file, add text after PJCONFDATA. If you change the file name, the projector may not be able to recognize the file correctly.



Perform "Remove USB device" on your computer, and then disconnect the USB cable.



When using OS X, perform "Remove EPSON_PJ".

The projector enters standby status.

Batch Setup




Reflecting saved settings to other projectors



Disconnect the power cord from the projector, and check that all of the projector's indicators have turned off.




Connect the computer's USB port to the projector's Service port with a USB cable.

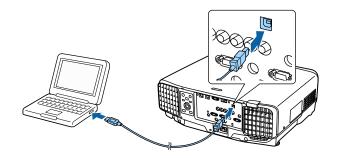




 While holding down the [Menu] on the remote control or the control panel, connect the power cord to the projector.



When the projector's indicators turn on as follows, release the [Menu] button.

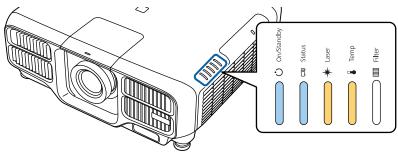

Power supply	Status	Laser	Temp
Blue - On	Blue - On	Orange - On	Orange - On

The projector is recognized as a removable disk by the computer.



Copy the batch setup file (PJCONFDATA.bin) that you saved to your computer to the top level folder of the removable disk.

Do not copy any files or folders other than the batch setup file to the removable disk.



Perform "Remove USB device" on your computer, and then disconnect the USB cable.

Batch Setup





When using OS X, perform "Remove EPSON_PJ".

When all of the indicators start flashing, the settings are being written.

A Caution

Do not disconnect the power cord from the projector while the settings are being written. If the power cord is disconnected, the projector may not start correctly.

When writing completes normally, the projector enters standby status.

When Setup Fails

The Indicators notify you if an error occurs. Check the status of the indicators.

Status of the Indicators	Remedy
— Ů	The batch setup file may be corrupt, or the USB flash drive may not be connected correctly.
	Disconnect the USB flash drive, unplug and then plug in the projector's power cord, and then try
÷=*	again.
Laser: Orange - flashing fast	
Temp: Orange - flashing fast	
···· ••• •••	Writing the settings may have failed and an error may have occurred in the projector's firmware.
	Stop using the projector, remove the power plug from the electrical outlet, and contact your local
* - *	dealer or the nearest address provided in the Epson Projector Contact List.
	Epson Projector Contact List
Power: Blue - flashing fast Status: Blue - flashing fast Laser: Orange - flashing fast Temp: Orange - flashing fast	



Troubleshooting

This chapter explains how to identify problems and what to do if a problem is found.

Using the Help




If a problem occurs with the projector, you can display the Help screen to assist you. You can also set the projector to an appropriate state by answering the questions.



Press the $[\uparrow]$ button.

The Home screen is displayed.

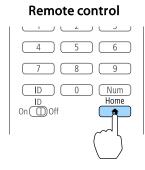




Select Help, and then press the [+] button.

ft .		EPSON
Sources : Searching all sources	Useful Functions :	
De HDMI		*
HDBaseT	Color Mode	Light Source Mode
OVI-D	11 <u>1.</u>	j⊋c
NID- SDI	Image Enhancement	Frame Interpolation
De Computer		
DO- BNC	a	?
반문 LAN	Menu	Help
I만드 Projector Name : SSID : '안 IP : 소 IP :	Keyword :	Display the QR Code
Switch the source.		[Home] :Ex

The Help screen is displayed.


	[Help] The image is small. The image is distorted. The color tone is unusual. There is no audio or it is too low. []]:Select []:Enter	[Menu]:Exit
3	Select a menu item.	
	Remote control	
	A/V Mute Defau	
4	Confirm the selection.	
	Remote control	
	Menu Distortion Esc /u	
	Questions and solutions are displayed as	shown on the screen below.
	Press the [Menu] button to exit Help.	



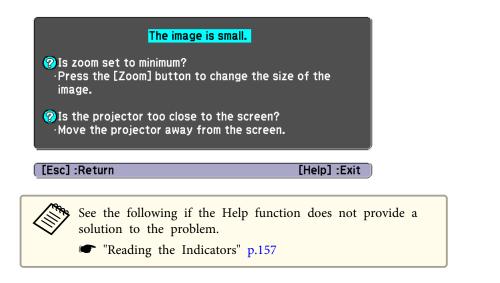



This projector has the following five indicators to indicate the projector's status.

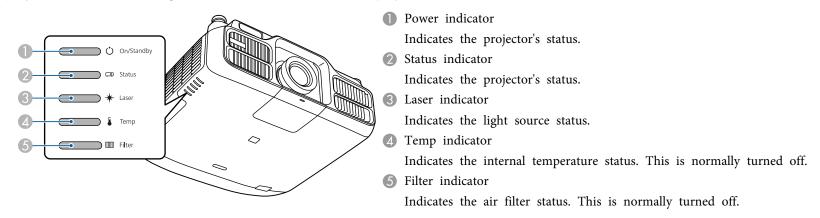

The following indicator status are used during regular operation.

	Indicator		Projector's Sta-	Explanation		
Power supply	Status	Laser	Temp	Filter	tus	
0	0	0	0	0	Standby condition	Power is being supplied to the projector. In this status, you can start projecting by pressing the $[(1)]$ button on the remote control or control panel.
Blue - On	Off	Off	Off	Off		(Sometimes, when the power cord is unplugged, the power indicator remains lit for a short period, but this is not a fault.)
					Network monitor- ing status	The projector is being monitored and controlled over a network (when Standby Mode is set to Communication On).
						If the power cord is disconnected and then reconnected in this status, the power indicator flashes blue.
	->0(-	0	0	0	Warm-up status	This is the status immediately after turning on the projector. Warm-up takes approximately 30 seconds after the light source turns on.
Blue - On	Blue - Flashing	Status varies	Off	Off		The [也] button is disabled during warm-up.



	Indicator				Projector's Sta-	Explanation
Power supply	Status	Laser	Temp	Filter	tus	
0	0	0	0	0	Projecting	The projector is projecting.
Blue - On	Blue - On	Status varies	Off	Off		
0	->0(-	[]	0	0	Cool down status	This is the status immediately after turning off the power. In this status, all buttons are disabled.
Blue - On	Blue - Flashing	Off	Off	Off		
->0(-	0	0	0	0	Preparing Network monitoring	Preparing to monitor and control this projector over a network. During network monitoring preparation, all button operations are disabled.
Blue - Flashing	Off	Off	Off	Off		
0	0	->0(-	0	0	A/V Mute activa- ted	A/V Mute is active.
Blue - On	Blue - On	Blue - Flashing	Off	Off		



When an error has occurred in the projector, the error status is indicated by the indicator's color and combination of flashing or lit.

Refer to the following table to see what the indicators mean and how to remedy problems that they indicate.

	Indicator				Cause	Remedy or Status
Power supply	Status	Laser	Temp	Filter	_	
0	-20(-	->0(-	0		Internal Error	Stop using the projector, remove the power plug from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.
Off	Blue - Flashing	Orange - Flashing	Off	Off		Epson Projector Contact List
0	-20(-	0	-:0(-		Fan Error Sensor Error	Stop using the projector, remove the power plug from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.
Off	Blue - Flashing	Off	Orange - Flashing	Off		Epson Projector Contact List
0	-20(-	0	0	0	High Temp Error (Overheating)	The light source turns off automatically and projection stops. Wait for about five minutes. After about five minutes the projector switches to standby mode, so check the following two points.
Off	Blue - Flashing	Off	Orange - On	Off		• Check that the air filter and air exhaust vents are clear, and that the projector is not positioned against a wall.
						 If the air filter are clogged, remove the power cord from the electrical outlet, and then clean or replace them. Cleaning the Air Filter" p.183 Replacing the Air Filter" p.186
						If the error continues after checking the points above, stop using the projector, remove the power plug from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.
						When using at an altitude of 1500 m or more, set High Altitude Mode to On . The Extended - Operation - High Altitude Mode p.133
0	-)[[(-	0	0		Laser Error Retardation Plate	Stop using the projector, remove the power plug from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.
Off	Blue - Flashing	Orange - On	Off	Off	Error	Epson Projector Contact List



		Indicator			Cause Remedy or Status	Remedy or Status
Power supply	Status	Laser	Temp	Filter	-	
Off	∹Û∹ Blue - Flashing	[] Off	[] Off	Orange - On	Filter Airflow Error	 Check the following two points. Check that the air filter and air exhaust vents are clear, and that the projector is not positioned against a wall. If the air filter is clogged, turn off the power, remove the power cord from the electrical outlet, and then clean or replace them. Cleaning the Air Filter" p.183 "Replacing the Air Filter" p.186 After checking, connect the power cord to the electrical outlet. If the error continues after checking the points above, stop using the projector, remove the power plug from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.
[] Off	->[](- Blue - Flashing	Orange - On	Orange - On	[] Off	Lens Shift Error	 <i>Epson Projector Contact List</i> Stop using the projector, remove the power plug from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List. <i>Epson Projector Contact List</i>
->0<- Blue - Flashing	Status varies] Status varies	-;[];- Orange - Flashing] Status varies	High Temp Warn- ing	 This is not an error. However, if the temperature rises too high again, projection stops automatically. Check the following two points. Check that the air filter and air exhaust vents are clear, and that the projector is not positioned against a wall. If the air filter is clogged, turn off the power, remove the power cord from the electrical outlet, and then clean or replace them. Cleaning the Air Filter" p.183 "Replacing the Air Filter" p.186
→ [] (- Blue - Flashing	C Status varies	->[](- Orange - Flashing] Status varies] Status varies	Laser Warning	Stop using the projector, remove the power plug from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.



	Indicator				Cause Remedy or Status	Remedy or Status
Power supply	Status	Laser	Temp	Filter		
->0(-	0	÷04	0	0	Lens Warning (EB- L1505U/EB-	An unsupported lens is attached. Use a supported lens. Toptional Accessories and Consumables" p.211
Blue - Flashing	Status varies	Orange - Flashing	Status varies	Status varies	L1500U only)	
-> ∁ ,- Blue - Flashing	C Status varies	C Status varies	C Status varies	Orange - On	Low Air Flow	 This is not an error. However, projection stops automatically if the airflow falls any further. "The air filter is clogged. Clean or replace the air filter." is displayed. Check the following points. Check that the air filter and air exhaust vents are clear, and that the projector is not positioned against a wall. If the air filter is clogged, turn off the power, remove the power cord from the electrical outlet, and then clean or replace them. Cleaning the Air Filter" p.183 "Replacing the Air Filter" p.186 If the error continues after checking the points above, stop using the projector, remove the power plug from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List. <i>Epson Projector Contact List</i>
0	0	0	0	-:0:-	Air Filter Notice	"Time to clean the air filter. Clean or replace the air filter." is displayed. Turn off the projector's power, unplug the power cord from the electrical outlet, and then clean the air
Status varies	Status varies	Status varies	Status varies	Orange - Flashing		 filter. "Cleaning the Air Filter" p.183 The indicators or messages regarding air filter notice are displayed only when Air Filter Notice is set to On in the Configuration menu. Extended - Display - Air Filter Notice p.133

Reading the Indicators




- **N** • See the following if the projector is not operating properly, even though the indicators are all showing normal.
 - "Problem Solving" p.170
 - If the indicators are in a state not shown in this table, stop using the projector, remove the power plug from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.
 - Epson Projector Contact List

 


You can display the operating status of the projector on the projected image. You can check the detailed status of the projector by using button operations.



Press the [i] button while projecting.

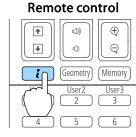




RØ

⊤ ∠ens

A/V Mute

2

Select Status Information, and then press the [+] button.

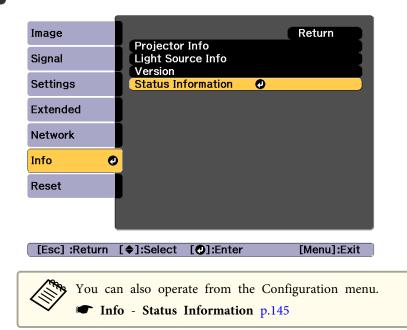

3

Use the $[\blacktriangleleft][\blacktriangleright]$ buttons or the $[\blacktriangle][\checkmark]$ buttons to select a category.

Image	[Status Information]] Return 🥑
Signal	[Status	Information]
Settings	System Source	Computer
Extended	On-ScreenDisplay A/V Mute	On On
Network	Air Temp Temp Level	
Info 🗨		0n
Reset		
[Esc] /[@]·Ret	turn [∢ ♦▶]:Select	[Menu]:Exit

Each display category contains the following information.

Status Information	:	Operating status of the projector
Source	:	Input signal information
Signal Information	:	Input digital signal information
Network Wired	:	Wired LAN settings
Network Wireless	:	Wireless LAN settings
Maintenance	:	Operating time for the projector and light source
Version	:	Projector's firmware version



Explanations of the Display Content

Category	ltem	Status Display	Explanation							
Status Information	System	Displays the projector's	status. See the following for more information on how to remedy the errors and warnings. ttors" p.157							
		ОК	The projector is in normal status.							
		Warm-Up	The projector is warming up.							
		Standby	The projector is in standby status.							
		Cool Down	The projector is in cool down status.							
		Temp Error	A high temp error has occurred.							
		Fan Error	A fan error has occurred.							
		Sensor Error	A sensor error has occurred.							
		Power Error	A power error (Ballast) has occurred.							
			Internal Error	An internal error has occurred.						
		Airflow Error	A filter airflow error has occurred.							
		Temp Warning	A high temp warning has occurred.							
			Internal Warning	A warning about the internal system has occurred.						
									Airflow Decline	A low air flow error has occurred.
										Power Warning
		Clean Filter	An air filter notice has occurred.							
		Lens Error	A lens error has occurred.							
		Laser Error	A laser error has occurred.							
			Laser Warning	A laser warning has occurred.						



Category	ltem	Status Display	Explanation
Status Information	Source	HDMI	Displays the source name for the connected equipment currently being projected.
		HDBaseT	
		DVI-D	
		SDI	
		Computer	
		BNC	
		LAN	
	On-Screen Display	On	Displays the settings for the On-Screen Display. When set to Off, the menus or messages are
		Off	not displayed on the projected images.
	A/V Mute	On	Displays the operating status of A/V mute.
		Off	
	Air Temp	- Displays the usage environment temperature.	Displays the usage environment temperature.
	Temp Level	-	
	Laser Status	On	Displays the operating status of the light source.
		Off	
Source	Source	HDMI	Displays the source name for the connected equipment currently being projected.
		HDBaseT	
		DVI-D	
		SDI	
		Computer	
		BNC	
		LAN	
	Resolution	-	Displays the resolution of the current input signal.
			No Signal: No signals are being input.
			Not Supported: The projector does not support the current input signal.



Category	ltem	Status Display	Explanation
Source	Video Signal	-	Displays the current input video signal.
	Color Space	RGB	Displays the color space of the current input signal.
		- Displays the current input video signal.	
		YPbPr	
	H-Frequency	-	Displays the horizontal frequency of the current input signal.
	V-Frequency	-	Displays the vertical frequency of the current input signal.
	Sync Polarity	H:Posi / V:Posi	Displays the Sync polarity.
		RGB Displays the color space of the current input signal. YCbCr YPbPr - Displays the horizontal frequency of the current input signal. - Displays the vertical frequency of the current input signal. H:Posi / V:Posi Displays the Sync polarity. H:Posi / V:Nega Displays the sync polarity. H:Nega / V:Nega Displays the sync type. Separate Sync Sync On Green - Displays the discriminant resolution of the current input signal. Auto (Normal) Displays the video level of the projector.	
		H:Nega / V:Nega	
	Sync Mode	Composite Sync	Displays the sync type.
		Separate Sync	
		Sync On Green	
	Detected Mode	-	Displays the discriminant resolution of the current input signal.
	Video Level	Auto (Normal)	Displays the video level of the projector.
		Auto (Expanded)	
		Normal	
		Expanded	



Items displayed for source vary depending on the model being used and the image signal and source being projected.



Category	ltem	Status Display	Explanation
Signal Information	5V Detection	Detected	Displays the detection results of 5V signals.
		Not Detect	
	TMDS Clock	-	Displays the TMDS frequency of the current input signal.
	TMDS H-Frequency	-	Displays the horizontal frequency of the current input signal.
	TMDS V-Frequency	-	Displays the vertical frequency of the current input signal.
	DetChg 5CFHMP123	-	Displays the factors of signal changes.
	Stable Time	-	Displays the operating time since the input source is determined.
	HDCP Status	Non-HDCP	Displays the HDCP status.
		Passed	
		Failed	
	HDCP Ver	-	Displays the HDCP version.
	AVI Info VIC	-	Displays the VIC information (AVI) of the current input signal.
	AVI InfoChecksum	ОК	Displays the checksum result for AVI.
		NG	
	Signal Mode	HDMI	Displays the signal mode.
		DVI	
	Pixel Encoding	RGB	Displays the color space information (AVI) of the current input signal.
		YUV4:4:4	
		YUV4:2:2	
		YUV4:2:0	
	HDBaseT Level	-	You can display the image signal information from the HDBaseT port.



Items displayed for Signal Information vary depending on the model being used and the image signal and source being projected.



Category	ltem	Status Display	Explanation
Network Wired	Projector Name	-	Displays the projector name used to identify the projector when connected to a network.
	Connection Mode	HDBaseT	Displays the connection path for LAN.
		LAN	
	DHCP	On	Displays the DHCP settings.
		Off	
	IP Display	On	Displays the IP address display settings.
		Off	
	IP Address	-	Displays the IP address.
	MAC Address	-	Displays the MAC address.
Network Wireless	Projector Name	-	Displays the projector name used to identify the projector when connected to a network.
	Connection Mode	Quick	Displays the connection mode to use when connecting the projector and a computer over a
	Advanced	Advanced	wireless LAN.
	SSID Display	On	Displays the SSID display settings.
		Off	
	IP Display	On	Displays the IP address display settings.
		Off	
	SSID	-	Displays the SSID.
	IP Address	-	Displays the IP address.
	DHCP	On	Displays the DHCP settings.
		Off	
	MAC Address	-	Displays the MAC address.
	Security	No	Displays the security settings.
		WPA2-PSK	
		WPA/WPA2-PSK	
	Antenna Level	LEVEL 0-5	Displays the reception status for Wi-Fi.



Category	ltem	Status Display	Explanation
Maintenance	Operation Time	-	Displays the total operation time of the projector.
	Laser Op.Time	-	Displays the laser operating time for each setting in Light Source Mode.
Version	Serial No.	-	Displays the projector's serial number.
	Main	-	Displays the projector's firmware version information.
	Video2	-	
	Sub	-	
	Sub2	-	
	HDBaseT	-	

Problem Solving



If any of the following problems occur and the indicators do not offer a solution, refer to the pages given for each problem.

Problems Relating to Images

• No images appear Projection does not start, the projection area is completely black, or the projection area is completely blue.	● p.171
• Moving images are not displayed Videos played back on a computer are black or no image is projected, or the video is not played back on the computer.	• p.171
Projection stops automatically	• p.172
• The message "Not supported" is displayed	🖝 p.172
• The message "No Signal" is displayed	• p.172
Images are fuzzy, out of focus, or distorted	• p.173
Interference or distortion appear in images	• p.173
• The image is truncated (large) or small, the aspect ratio is not suitable, or the image has been reversed Only part of the image is displayed, the height and width ratios of the image are not correct, or the image may appear reversed from top to bottom or left to right.	☞ p.174
• Image colors are not right The whole image appears purplish or greenish, images are black & white, or colors appear dull.	☞ p.175
• Images appear dark	• p.175
Automatic adjustments are not performed correctly	🖝 p.176
	·

Problems when Projection Starts

Other Problems

• The remote control does not work	🖝 p.178
• Nothing appears on the external monitor	• p.179
• I want to change the language for messages and menus	• p.180
• Email is not received even if a problem occurs in the projector	• p.180
• "The battery that saves your clock settings is running low." is displayed	• p.180



Problems Relating to Images

No images appear

Check	Remedy
Did you press the [()] button on the remote control or control panel?	Press the [()] button to turn on the power.
Are the indicators switched off?	The power cord is not connected correctly or power is not being supplied.
	Connect the projector's power cord correctly.
	Check that your electrical outlet or power source is functioning correctly.
Is A/V Mute active?	Press the [A/V Mute] button to release A/V Mute.
	"Hiding the Image and Sound Temporarily (A/V Mute)" p.107
Are the Configuration menu settings correct?	Reset all of the settings.
	Reset - Reset All Config p.146
Is the image to be projected completely black?	Some input images, such as screen savers, may be completely black.
(Only when projecting computer images)	
Is Windows Media Center displayed in full screen?	When Windows Media Center is displayed at full screen, you cannot project using a network connection. Reduce the
(Only during network connection)	screen size.
Is an application using the Windows DirectX function displayed?	Applications using the Windows DirectX function may not display images correctly.
(Only during network connection)	

Moving images are not displayed

Check	Remedy
Is the computer's image signal being output to the LCD and the monitor?	Change the image signal from the computer to external output only. Check your computer's documentation, or contact the computer's manufacturer.
(Only when projecting images from a laptop computer or a computer with a built-in LCD screen)	
Are the contents of the moving image you are trying to project copyright protected?	The projector may not be able to project copyright protected moving images that are being played back on a computer. For more details, see the user's guide supplied with the player.



Projection stops automatically

Check	Remedy
Is Sleep Mode set to On?	Press the $[(1)]$ button to turn on the power. If you do not want to use Sleep Mode, change the setting to Off .
	Extended - Operation - Sleep Mode p.133

"Not supported." is displayed

Check	Remedy
	Refer to the computer's documentation for how to change the image signal resolution and the refresh rate output from
mode?	the computer.
(Only when projecting computer images)	"Supported Monitor Displays" p.239

"No Signal." is displayed

Check	Remedy
Are the cables connected correctly?	Check that all the cables required for projection are securely connected.
	Check that no cables are disconnected and that there are no poor contacts in the cables.
Is the correct port selected?	Change the image by pressing the [Search] button.
	☞ "Automatically Detecting Input Signals and Changing the Projected Image (Source Search)" p.59
Is the power for the computer or video source turned on?	Turn the power on for the equipment.
Are the image signals being output to the projector? (Only when projecting images from a laptop computer or a computer with a built-in LCD screen)	If the image signals are only being output to the computer's LCD monitor or to the accessory monitor, you need to change the output to an external destination as well as the computer's own monitor. For some computer models, when the image signals are output externally, they no longer appear on the LCD monitor or accessory monitor.
	If the connection is made while the power of the projector or computer is already turned on, the Fn key (Function key) that changes the computer's image signal to external output may not work. Turn the power for the computer and the projector off and then back on again.
	Computer's documentation



Images are fuzzy, out of focus, or distorted

Check	Remedy
Is the focus adjusted correctly?	Make sure that at least 20 minutes has passed after the projection starts, and press the [Focus] button on the remote control to adjust the focus. The "Correcting the Focus" p.36
Is the projector at the correct distance?	Is it projecting outside of the recommended projection distance range? Setup within the recommended range. The "Screen Size and Projection Distance" p.212
Has condensation formed on the lens?	If the projector is suddenly taken from a cold environment to a warm environment, or if sudden ambient temperature changes occur, condensation may form on the surface of the lens, and this may cause the images to appear fuzzy. Set the projector up in the room about one hour before it is used. If condensation forms on the lens, turn the projector off and wait for the condensation to disappear.

Interference or distortion appear in images

Check	Remedy
Are the cables connected correctly?	Check that all the cables required for projection are securely connected.
	Connecting Equipment" p.45
Is an extension cable being used?	If an extension cable is used, electrical interference may affect the signals. Use the cables supplied with the projector to check if the cables you are using may be causing the problem.
Is the correct resolution selected?	Set the computer so that the signals being output are compatible with the projector.
(Only when projecting computer images)	"Supported Monitor Displays" p.239
	Computer's documentation
Are the <u>Sync.</u> and <u>Tracking</u> settings adjusted correctly?	Press the [Auto] button on the Remote Control or the [] button on the Control panel to perform automatic
(Only when projecting computer images)	adjustment. If the images are not adjusted correctly even after performing automatic adjustment, you can also make adjustments from the Configuration menu.
	🖝 Signal - Tracking, Sync. p.129
Is the Resolution set to anything other than Auto ?	The image may be collapsed if the Resolution on the Configuration menu and the resolution of the projected image are
(Only when projecting on a split screen)	not the same.
	If the image is collapsed, set the Resolution to Auto .
	Signal - Resolution p.129



The image is truncated (large) or small, the aspect is not suitable, or the image has been reversed

Check	Remedy
Have the Screen been set correctly?	Make the appropriate Screen for the screen being used.
	"Screen Settings" p.30
Is the aspect adjusted correctly?	Press the [Aspect] button to select an aspect suitable for the input source.
	"Changing the Aspect Ratio of the Projected Image" p.78
Is a wide panel computer image being projected?	Change the setting according to the signal for the connected equipment.
(Only when projecting computer images)	Signal - Resolution p.129
Is the image still being enlarged by E-Zoom?	Press the [Esc] button on the remote control to cancel E-Zoom.
	"Enlarging Part of the Image (E-Zoom)" p.108
Is Scale turned on?	Set Scale to Off on the configuration menu.
	Signal - Scale Scale p.129
Is the display range restricted by Blanking ?	Appropriately set Blanking in the configuration menu.
	Signal - Blanking p.129
Is the image position adjusted correctly?	(Only when projecting analog RGB signals input from the Computer port)
	Press the [Auto] button on the remote control or the [] button on the control panel to adjust the position.
	You can also adjust the position from the Configuration menu.
	Signal - Position p.129
Is the computer set for dual display?	If dual display is activated in the Display Properties of the computer's Control Panel, only about half of the image on the
(Only when projecting computer images)	computer screen is projected. To display the entire image on the computer screen, turn off the dual display setting.
	Computer video driver documentation
Is the correct resolution selected?	Set the computer so that the signals being output are compatible with the projector.
(Only when projecting computer images)	"Supported Monitor Displays" p.239
	Computer's documentation
Is the image direction correct?	Make the correct settings in Projection from the Configuration menu.
	"Installation Settings" p.29



Image colors are not right

Check	Remedy
Do the input signal settings match the signals from the connected	Change the setting according to the signal for the connected equipment.
device?	Signal - Advanced - Input Signal p.129
Is the image brightness adjusted correctly?	Adjust the Brightness setting from the Configuration menu.
	Image - Brightness p.127
Are the cables connected correctly?	Check that all the cables required for projection are securely connected.
	Check that no cables are disconnected and that there are no poor contacts in the cables.
	"Connecting Equipment" p.45
Is the <u>Contrast</u> adjusted correctly?	Adjust the Contrast setting from the Configuration menu.
	Image - Contrast p.127
Is the color adjustment set correctly?	Adjust the Gamma or RGBCMY setting from the Configuration menu.
	Image - Advanced p.127
	"Adjusting the Image" p.80
Are the color saturation and tint adjusted correctly?	Adjust the Color Saturation and Tint settings from the Configuration menu.
	☞ Image - Color Saturation, Tint p.127
Is the brightness of the room appropriate?	If the room is darker than when the auto adjustment was performed, the tint of the projected images may not be displayed correctly. Make the room darker and then perform auto adjustment again.
	☞ "Screen Matching" p.99
	Color Calibration" p.188

Images appear dark

Check	Remedy
Is the image brightness set correctly?	Check the Brightness and Brightness Settings values from the Configuration menu.
	Timage - Brightness p.127
	Settings - Brightness Settings p.131
Is the Contrast adjusted correctly?	Adjust the Contrast setting from the Configuration menu.
	Timage - Contrast p.127



Check	Remedy
Is only one projector being used?	Check if the following item is set to dark.
	Extended - Multi-Projection - Screen Matching - Brightness Settings p.133

Automatic adjustments are not performed correctly

Check	Remedy
Have at least 20 minutes passed since the power was turned on?	Auto adjustment does not work correctly until the temperature of the projector is stable. Perform auto adjustment 20 minutes after turning on the projector or canceling A/V Mute.
Do the Lens Type and the lens being used match?	When using the following lenses, check that the Lens Type and the lens being used match. If a different lens is selected, auto adjustment does not work correctly. ELPLS04, ELPLU02, ELPLW04, ELPLM06, ELPLM07
	Extended - Operation - Advanced - Lens Type p.133
Is the cover of the built-in camera clean?	Make sure that the cover of the built-in camera is clean. Clean the cover if it is dirty.
Is an analog signal being input?	When inputting an analog signal, the color and brightness of the input image changes, and the results of adjustment may not be applied correctly.
Has the image been corrected using Geometry Correction?	Auto adjustment may not work for images corrected using Geometry Correction. Set Geometry Correction to Off or reduce the correction range. Settings - Geometry Correction p.131
Is the brightness of the surroundings appropriate?	If a powerful spotlight or natural light shines into the area during auto adjustment, the brightness of the surroundings changes and auto adjustment does not operate correctly. Make sure the brightness of the surroundings does not change.
Is the blending width 15 to 45%?	If the blending width in Edge Blending is 15% or less, or 45% or more, the Screen Matching function may not operate correctly. Check the blending width.
	Extended - Multi-Projection - Edge Blending p.133



Problems when Projection Starts

The projector does not turn on

Check	Remedy
Did you press the $[(1)]$ button on the remote control or control panel?	Press the $[(1)]$ button to turn on the power.
Are the indicators switched off?	The power cord is not connected correctly or power is not being supplied. Disconnect and then reconnect the power cord. Check that your electrical outlet or power source is functioning correctly.
Do the indicators turn on and off when the power cord is touched?	There is probably a poor contact in the power cable, or the power cable may be defective. Reinsert the power cable. If this does not solve the problem, stop using the projector, disconnect the power cable from the electrical outlet, and contact your local dealer or the nearest address provided in the Epson Projector Contact List.
Is the Control Panel Lock set to Full Lock?	Press the [(1)] button on the remote control. If you do not want to use Control Panel Lock , change the setting to Off .
Is the correct setting for the remote receiver selected?	Check the Remote Receiver from the Configuration menu. Settings - Remote Receiver p.131
Was the power cord plugged back in or was the breaker turned on immediately after direct power off?	If one of these is performed when Direct Power On is set to On , the power may not turn back on. Press the [()] button to turn on the power.
Is the [ID] switch on the remote control set to On?	When the switch is set to On, you can use the remote control to operate only a projector with a matching ID. Set the [ID] switch to Off. The "Setting the remote control ID" p.41



Other Problems

No sound can be heard or the sound is faint

Check	Remedy
Check that the audio/video cable is securely attached to both the projector and audio source.	Disconnect the cable from the Audio port, and then reconnect the cable.
Is the projector volume set to the minimum?	Adjust the volume so that sound can be heard.
	Settings - Volume p.131
	"Adjusting the Volume" p.60
Is the volume for the computer or from the image source set to the minimum?	Adjust the volume so that sound can be heard.
Is A/V Mute active?	Press the [A/V Mute] button to release A/V Mute.
	☞ "Hiding the Image and Sound Temporarily (A/V Mute)" p.107
Is the audio cable's specification "No resistance"?	When using a commercially available audio cable, make sure it is labeled "No resistance".
Is it connected with an HDMI cable?	If no audio is output when connecting via an HDMI cable, set the connected equipment to PCM output.
Is the correct audio input selected?	Check the Audio Settings from the configuration menu.
	Extended - A/V Settings - Audio Settings p.133

The remote control does not work

Check	Remedy
Is the remote control light-emitting area pointing towards the remote receiver on the projector during operation?	Point the remote control towards the remote receiver. Therefore the remote control operating range p.24
Is the remote control too far from the projector?	Check the operating range. There is a state of the state
Is direct sunlight or strong light from fluorescent lamps shining onto the remote receiver?	Set the projector up in a location where strong light does not shine onto the remote receiver.
Is the correct setting for the Remote Receiver selected?	Check the Remote Receiver from the Configuration menu. • Settings - Remote Receiver p.131

Problem Solving



Check	Remedy
Are the batteries dead or have the batteries been inserted correctly?	Make sure the batteries are inserted correctly or replace the batteries with new ones if necessary.
	"Replacing the remote control batteries" p.23
Are the remote control ID and the projector ID matched?	Make sure the ID for the projector you want to operate and the ID for the remote control match. To operate all projectors by remote control regardless of the ID setting, set the [ID] switch on the remote control to Off.
	ID Settings" p.40
Does Remote Control Type match the remote control that you are	Check the Remote Control Type on the configuration menu.
using?	Extended - Operation - Advanced - Remote Control Type p.133
Is the optional remote control cable connected to the projector's Remote port?	When the remote control cable is connected, the projector's remote receiver is disabled. When not using the remote control cable set, disconnect it from the Remote port.
Is Control Communications or Extron XTP set to On?	The Remote port is disabled. When using the optional remote control cable set, set Control Communications or Extron XTP to Off .
	Extended - HDBaseT p.133
Is the remote control button lock set?	When the remote control button lock is set, buttons except for those needed for basic remote control operations are
	deactivated. Hold down the [1] button to cancel the remote control button lock.
	"Remote control button lock" p.120

Nothing appears on the external monitor

Check	Remedy
Are images input from a port other than the Computer port or BNC port?	Only RGB signals from the Computer port or the BNC port can be displayed on an external monitor.
Are you projecting a split screen?	Only RGB signals projected on the left screen from the Computer port or the BNC port can be displayed on an external monitor. The "Projecting Two Images Simultaneously (Split Screen)" p.104
Is the projector in standby status?	Check that Standby Mode, A/V Output, and Monitor Out from the Configuration menu are set correctly. Extended - Standby Mode, A/V Settings p.133



I want to change the language for messages and menus

Check	Remedy
Change the Language setting.	Adjust the Language setting from the Configuration menu.
	Extended - Language p.133

Email is not received even if a problem occurs in the projector

Check	Remedy
Is Standby Mode set to Communication On?	To use the Mail Notification function when the projector is in standby, set Communication On in Standby Mode from the Configuration menu. Extended - Standby Mode p.133
Is power being supplied to the projector?	Check that your electrical outlet or power source is functioning correctly.
Is the Mail Notification function set correctly in the Configuration menu?	An error notification email is sent according to the Notifications settings in the Configuration menu. Check if it is set correctly. The "Notifications menu" p.143

"The battery that saves your clock settings is running low." is displayed

Check	Remedy
The internal power supply that saves your clock settings is	Contact your local dealer or the nearest address provided in the Epson Projector Contact List.
running low.	🖝 Epson Projector Contact List



Check the numbers and then apply the following countermeasures. If you cannot resolve the problem, contact your network administrator, or contact your local dealer or the nearest address provided in the Epson Projector Contact List.

Epson Projector Contact List

Event ID	Cause	Remedy
0432 0435	Failed to start the network software.	Restart the projector.
0434 0482 0484 0485	Network communication is unstable.	Check the network communication status, and reconnect after waiting for a while.
0433	Cannot play transferred images.	Restart the network software.
0481	Communication was disconnected from the computer.	
0483 04FE	The network software ended unexpectedly.	Check the status of network communications. Restart the projector.
0479 04FF	A system error occurred in the projector.	Restart the projector.
0891	Cannot find an access point with the same SSID.	Set the computer, the access point, and the projector to the same SSID.
0892	The WPA/WPA2 authentication type does not match.	Check that the wireless LAN security settings are correct.
0893	The TKIP/AES encryption types do not match.	Network - Wireless LAN p.140
0894	Communication was disconnected because the projector connected to an unauthorized access point.	Contact your network administrator for more information.
0898	Failed to acquire DHCP.	Check that the DHCP server is operating correctly. If you are not using DHCP, turn off the DHCP setting.
0899	Other communication errors	If restarting the projector or network software does not solve the problem, contact your local dealer or the nearest address provided in the Epson Projector Contact List.



Maintenance

This chapter provides information on maintenance procedures to ensure the best level of performance from the projector for a long time to come.



You should clean the projector if it becomes dirty or if the quality of projected images starts to deteriorate.

1 Caution

When cleaning, unplug the power cable from the electric outlet. Otherwise, it could cause an electric shock.

Cleaning the Projector's Surface

Clean the projector's surface by wiping it gently with a soft cloth.

If the projector is particularly dirty, moisten the cloth with water containing a small amount of neutral detergent, and then firmly wring the cloth dry before using it to wipe the projector's surface.

Attention

Do not use volatile substances such as wax, alcohol, or thinner to clean the projector's surface. The quality of the case may change or become discolored.

Cleaning the Lens

Use a commercially available cloth for cleaning glasses to gently wipe the lens.

🕂 Warning

Do not use sprays that contain flammable gas to remove dust and lint from the lens. The projector may catch fire due to the high internal temperature.

Attention

Do not rub the lens with harsh materials or subject the lens to shocks, as it can easily become damaged.

Cleaning the Air Filter

When the following message is displayed and the filter indicator flashes orange, clean the air filter and the air intake vent.

"Time to clean the air filter. Clean or replace the air filter."

"The projector is overheating. Make sure nothing is blocking the air vent, and clean or replace the air filter."

"The air filter is clogged. Clean or replace the air filter."

Attention

- If dust collects on the air filter, it can cause the internal temperature of the projector to rise, and this can lead to problems with operation and shorten the optical engine's service life. Clean the air filter immediately when the message is displayed.
- Do not rinse the air filter in water. Do not use detergents or solvents.
- When using a brush for cleaning, use one with long soft bristles, and brush it lightly. If it is brushed too strongly, dust will be ground into the air filter and cannot be removed.

Cleaning the air filter

The air filter can be replaced even when the projector is suspended from a ceiling.



After you turn off the projector's power and the confirmation buzzer beeps, disconnect the power cord.


Cleaning





Remove the air filter cover.


Grip the air filter cover tab between your fingers, and pull up and remove the cover while pressing the tab.

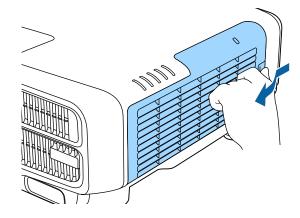




Remove the air filter.

Grip the tab of the air filter, and pull it straight out.

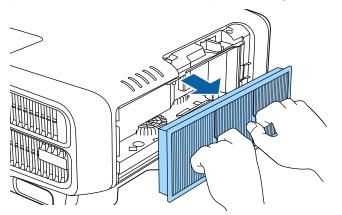



With the front (the side with tabs) of the air filter facing down, tap the air filter four or five times to shake off the dust. Turn it over and tap the other side in the same way.

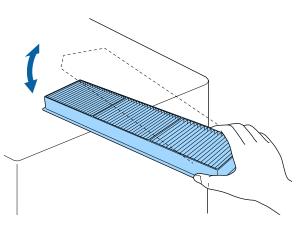


Attention

If the air filter is hit too hard, it may become unusable due to deformities and cracks.




Remove any dust remaining on the air filter by using a vacuum cleaner from the front side.

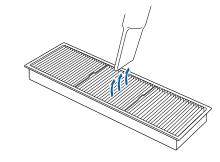




Replace the air filter. Press until it clicks into place.



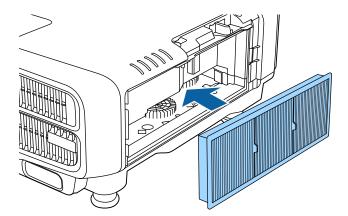

7 Attach the air filter cover.

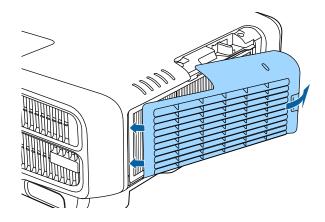

- If a message is frequently displayed, even after cleaning, it is time to replace the air filter. Replace it with a new air filter.
 - ☞ "Replacing the Air Filter" p.186

No.

- It is recommended that you clean the air filter every 20,000 hours. Clean it more often than this if using the projector in a particularly dusty environment.
- The indicators or messages regarding Air Filter Notice are displayed only when Air Filter Notice is set to On from the Configuration menu.

Extended - Display - Air Filter Notice p.133

This section explains how to replace the air filter.

Replacing the Air Filter

Air filter replacement period

If the message is displayed frequently even though the air filter has been cleaned, replace the air filter.

How to replace the air filter


The air filter can be replaced even when the projector is suspended from a ceiling.

After you turn off the projector's power and the confirmation buzzer beeps, disconnect the power cord.



Remove the air filter cover.


Grip the air filter cover tab between your fingers, and pull up and remove the cover while pressing the tab.

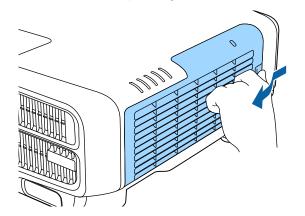




Remove the air filter.

Grip the tab of the air filter, and pull it straight out.

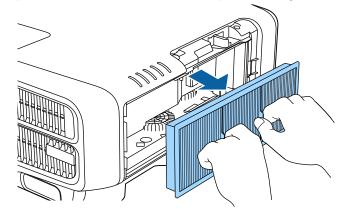




Install the new air filter. Press until it clicks into place.

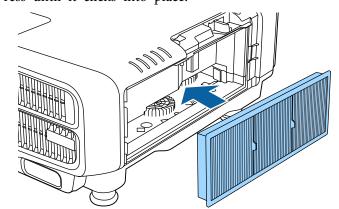

Attach the air filter cover.

TOP



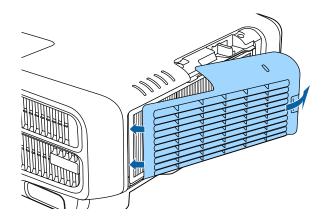

Dispose of used air filters properly in accordance with your local regulations. Material of the frame part: Polypropylene Material of the filter part: Polypropylene



Color Calibration

Automatically adjusts aging deterioration of the color tone for the whole screen based on the default color settings.

Operating conditions for auto adjustment functions

The auto adjustment function for Color Calibration works under the following conditions:

- The screen surface is not uneven
- Using a matte white diffusion screen
- The projection size is 80 to 200 inches

Auto adjustment is not available when using the following lenses.
 EB-L1505U/EB-L1500U: ELPLR04, ELPLL08, ELPLL07

- EB-L1405U/EB-L1300U/EB-L1200U/EB-L1100U: ELPLX01, ELPLR04, ELPLM11, ELPLM07, ELPLL08, ELPLL07
- After auto adjustment, the movement range for lens shift is reduced for some lenses.
- "Adjusting the Position of the Projected Image (Lens Shift)"
 p.33
- We recommend performing Color Calibration 20 minutes after turning on the projector or canceling A/V mute.
- To increase the accuracy of adjustments, we recommend darkening the room while projecting images and then making adjustments.
- Auto adjustment is performed using the camera built into the front of the projector. Do not block the camera or the projected images.
- Auto adjustment takes approximately one minute and 30 seconds.
- After making automatic adjustments, Color Uniformity and Color Calibration are returned to their defaults.
- By using the scheduling function, you can automatically adjust the color for the whole screen at the time you set.
 - ☞ "Scheduling Function" p.113
- See the following if Color Calibration does not work correctly.
 - The "Automatic adjustments are not performed correctly" p.176
- Press the [Menu] button while projecting.
- Select Color Calibration from Extended.


3

Select Start Auto Adjustment, and then press the [+] button.



Image	[Color Calibration]	Return
Signal	Start Auto Adjustment Undo	0
Settings	Redo	
Extended		
Network	Reset	
Info		
Reset		
[Esc] :Return	[♦]:Select [♥]:Enter	[Menu]:Exit

 The adjustment pattern is displayed, and adjustment starts. If the projected image is displayed before the adjusting, the procedure is complete.



• To return Color Calibration to its default value, select Reset.

Panel Alignment

Adjusts the pixel color shift for the LCD panel. You can adjust the pixels horizontally and vertically by 0.25 pixel within a range of ±1 pixel.

- Image quality may decline after performing LCD alignment. • Images for pixels that extend beyond the edge of the projected
- screen are not displayed.
- Press the [Menu] button while projecting.
- Select Display from Extended.

3

Select Panel Alignment, and then press the [+] button.

Image	[Display]	Return
Signal	Menu Position	
Settings	 Message Position Messages 	Top Off
Extended C	Display Background Startup Screen Standby Confirmation	Off Off Off
Network	Air Filter Notice	Off
Info	Panel Alignment	0
Reset	Color Uniformity OSD Rotation	Off
[Esc] :Return	[�]:Select [@]:Enter	[Menu]:Exit





Image	[Panel Alignment]	Return
Signal	Panel Alignment	⊘ On
Settings	Select Color Pattern Color Start Adjustments	R R/G/B
Extended (Reset	
Network	J	
Info		
Reset		
	-	
[Esc] :Return	[♦]:Select [@]:Ente	r [Menu]:Exit

- (1) Select **Panel Alignment**, and then press the [] button.
- (2) Select **On**, and then press the [] button.
- (3) Press the [Esc] button to return to the previous screen.

5

Select the color you want to adjust.

- (1) Select **Select Color**, and then press the $[\checkmark]$ button.
- (2) Select **R** (red) or **B** (blue), and then press the $[\checkmark]$ button.
- (3) Press the [Esc] button to return to the previous screen.
- 6
- Select the grid color displayed when making adjustments from **Pattern Color**.
- (1) Select **Pattern Color**, and then press the $[\checkmark]$ button.

Select a combination of R (red), G (green), and B (blue) for the grid color.
 R/G/B: Displays a combination all three colors; red, green and blue. The actual color of the grid is white.

R/**G**: This is available when **R** is selected from **Select Color**. Displays a combination of two colors; red and green. The actual color of the grid is yellow.

G/B: This is available when **B** is selected from **Select Color**. Displays a combination of two colors; green and blue. The actual color of the grid is cyan.

- (3) Press the [Esc] button to return to the previous screen.
- **7**

Select **Start Adjustments**, and then press the [] button. When the message is displayed, press the [] button again.

Adjustment starts. All four corners are adjusted in order starting at the top left.




The image may become distorted while adjusting. The image is restored once adjustments are complete.

8 U

Use the $[\blacktriangle]$, $[\checkmark]$, $[\triangleleft]$, and $[\triangleright]$ buttons to make adjustments, and then press the $[\triangleleft]$ button to move to the next adjustment point.

9	۷
	r

When you have adjusted all four corners, select **Exit**, and then press the [] button.

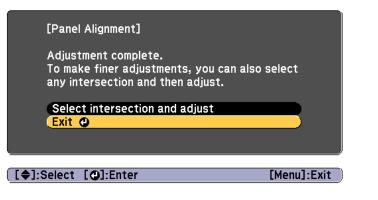

If you feel you still need to make adjustments after correcting all four points, select Select intersection and adjust and then continue making adjustments.

Color Uniformity

Adjusts the color tone for the whole screen.



The color tone may not be uniform even after performing color uniformity.

- Press the [Menu] button while projecting.
- Select **Display** from **Extended**.



2

Select Color Uniformity, and then press the [] button. The following screen is displayed.


Image	[Color Uniformity]	Return 🥥
Signal	Color Uniformity	Off
Settings	Adjustment Level Start Adjustments Reset	
Extended		
Network		
Info		
Reset		
[Esc] /[•]	:Return [�]:Select	[Menu]:Exit

Color Uniformity: Turns color uniformity on or off.

Adjustment Level: There are eight levels from white, through gray, and up to black. You can adjust each level individually.

Start Adjustments: Starts adjusting color uniformity.

 Reset: Resets all adjustments and settings for Color Uniformity to their default values.



The image may become distorted while adjusting Color Uniformity. The image is restored once adjustments are

- Select Color Uniformity, and then press the [+] button.
- Set to **On**, and then press the [Esc] button.



- Select Adjustment Level, and then press the [] button.
- Use the $[\triangleleft][\flat]$ buttons to set the adjustment level.

TOP






Press the [Esc] button to return to the previous screen.



- Select Start Adjustments, and then press the [+] button.
- Select the area you want to adjust, and then press the [+] button.

Adjust the outer areas first, and then adjust the whole screen.

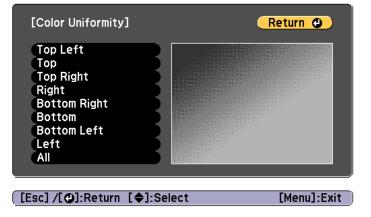

11

Use the $[\blacktriangle][\checkmark]$ buttons to select the color you want to adjust, and then use the $[\triangleleft][\triangleright]$ buttons to adjust.

Press the $[\blacktriangleleft]$ button to weaken the color tone. Press the $[\blacktriangleright]$ button to strengthen the color tone.

[Color Uniformity] Adjustment Level	All	Return
Red	0 🔾 🗔	
Green	0 •	
Blue	0 🔾 📖	
[Esc]:Return [�] [Default]:Reset [:Select [�]:Adjust ❹]:Display	[Menu]:Exit





To complete the adjustment, press the [Menu] button.



Appendix



About EasyMP Monitor

EasyMP Monitor lets you carry out operations such as checking the status of multiple Epson projectors that are connected to a network at a computer monitor, and controlling the projectors from the computer.

You can download EasyMP Monitor from the following Web site.

http://www.epson.com

About Message Broadcasting

Message Broadcasting is plugin software for EasyMP Monitor.

Message Broadcasting can be used to send a message (JPEG file) to project on all Epson projectors or specified projectors connected on the network.

The data can be sent manually, or sent automatically using Timer Settings of EasyMP Monitor.

Download the Message Broadcasting software from the following website.

http://www.epson.com

Changing Settings Using a Web Browser (Epson Web Control)

By using a Web browser of a computer or mobile device connected to the projector on a network, you can set functions and control the projector. This function allows you to perform setup and control operations remotely. Also, you can operate a specific projector when using multiple projectors.

Use Internet Explorer 9.0 or later as the Web browser. Use Safari for OS Х.



If you set Standby Mode to Communication On, you can use the Web browser to make settings and perform control even if the projector is in standby mode (when the power is off).

Extended - Standby Mode p.133

Displaying the Epson Web Control Screen

Use the following procedure to display the Epson Web Control screen.

Make sure your device and projector are ready for the network connection.

If your Web browser is set up to connect via a proxy server, the Epson Web Control screen cannot be displayed. To display Web Control, you need to make settings so that a proxy server is not used for a connection.

Connect your device to the same network as the connected projector.


The connection method varies depending on the device. See the manual supplied with your device for details. When using a tablet, check the Wi-Fi settings.

Start the Web browser on your device.

Connect by entering the address of the connected projector in the 3 URL field of the Web browser.

The Home screen is displayed.



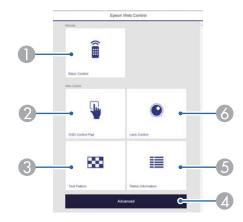

- Basic Control
 - "Basic Control Screen" p.195
- OSD Control Pad
 - ♥ "OSD Control Pad Screen" p.196
- Itest Pattern

☞ "Test Pattern Operation Screen" p.198

Advanced

You are moved to the Advanced screen.

6 Status Information

"Status Information Screen" p.198

- 6 Lens Control
 - "Lens Control Screen" p.196



• When performing the functions from the Home screen, you may be prompted to enter the user name and password. The following two types of user names and passwords are available.

Remote: The user name is "EPSONREMOTE" and the default password is "guest".

Web Control: The user name is "EPSONWEB" and the default password is "admin".


• You cannot change the user name. You can change the password in the Network menu from the Configuration menu.

Network - Basic - Remote Password, Web Control Password p.139

• You must enter the user name for Web Control Password even when the password is disabled.

Basic Control Screen

You can perform basic projector operations.

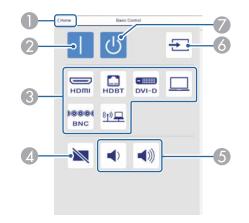


- Moves to the Home screen.
- 2 Turns the projector on.
- 3 Switches to the target image.

- Turns the video and audio on or off. 4
- You can adjust the volume. 5
- Automatically detects the input signal. 6
- Turns the projector off.

OSD Control Pad Screen

You can operate the Configuration menu of the projector.

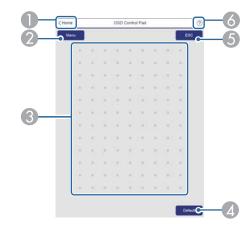

- Moves to the Home screen.
- Displays and closes the Configuration menu.
- 3 You can operate the Configuration menu using your finger or mouse. Flick to select an item, and tap to confirm the selection.
- When "[Default] :Reset" is displayed on the Configuration menu guide, selecting this icon returns the settings to their default values.
- Returns to the previous menu level in the Configuration menu. 5
- Displays information on using the OSD Control Pad. 6



Items in the Configuration menu that cannot be set in Epson Web Control are listed below.

- Settings Menu User Button
- Extended menu Display Message Position
- Extended Menu User's Logo
- Extended menu Operation Advanced BNC Sync Termination, HDMI DDC Buffer, DVI-D DDC Buffer, Lens Type
- Extended menu Operation Lens Calibration
- Extended Menu Language


The settings for items on each menu are the same as the projector's Configuration menu.

Configuration Menu" p.123

Lens Control Screen

You can operate the lens of the projector.

Focus/Distortion Operation Screen

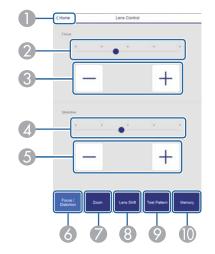




Moves to the Home screen.

- 2 Move the slider to adjust the focus.
- ③ Press the buttons to adjust the focus.
- Move the slider to adjust image warping.*
- 5 Press the buttons to adjust image warping.*
- **6** Displays the Focus / Distortion operation screen.
- Displays the Zoom operation screen.
- 8 Displays the Lens Shift operation screen.
- Ø Displays the Test Pattern operation screen.
- 1 Displays the Memory operation screen.
- * This is not available for ELPLU02.


Zoom Operation Screen

This is not available for ELPLX01 and ELPLR04.

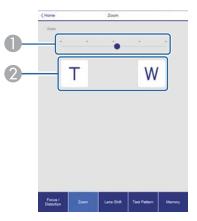

- 1 Move the slider to adjust the zoom.
- 2 Press the buttons to adjust the zoom.

Lens Shift Operation Screen

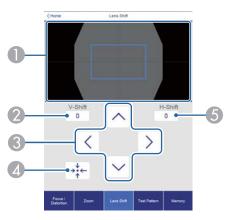


- Displays the position of the image as a blue square. When you move the image position, a red square is displayed at the destination.
- ② Displays the vertical image position. You can directly specify the position by tapping it and entering a number.
- 3 Moves the image position up, down, left, or right.
- Moves the lens position to the home position if you press the **OK** button in the confirmation screen.
- **(5)** Displays the horizontal image position. You can directly specify the position by tapping it and entering a number.

TOP



Test Pattern Operation Screen

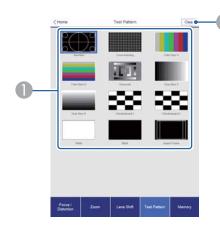


- Displays a test pattern.
- ② Closes the test pattern.

Memory Operation Screen

See the following for memory function details.

☞ "Memory Function" p.111

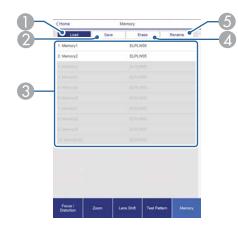


- 2 Saves a memory.
- 3 Displays a list of memories.
- 4 Erases a memory.
- 5 Changes a memory name.

Status Information Screen

You can check the projector's status. See the following for display details.

☞ "Reading the Status Display" p.163

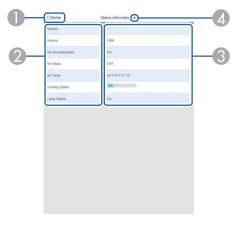

- Moves to the Home screen.
- ② Displays the item name.
- 3 Displays the status of each item.
- Selects a category from the following. Status Information, Source, Signal Information, Network Wired, Network Wireless, Maintenance, Version



Using the Mail Notification Function to Report Problems

When you set Mail Notification, notification messages are sent to the preset email addresses when a problem or warning occurs with a projector. This will enable the operator to be notified of problems with projectors even at locations away from the projectors.

- Network Notifications Mail Notification p.143
 - Up to a maximum of three notification destinations (addresses) can be registered, and notification messages can be sent to all three destinations at once.
 - If a projector develops a critical problem and suddenly stops working, it may not be able to send a message notifying an operator of the problem.
 - If you set **Standby Mode** to **Communication On**, you can control the projector even if it is in standby mode (when the power is off).
 - Extended Standby Mode p.133

Reading error notification mail

When the Mail Notification function is set to On and a problem or warning occurs in the projector, the following email will be sent.

Sender: The email address set in From

Subject: EPSON Projector

Line 1: The projector name where the problem has occurred

Line 2: The IP address set for the projector where the problem has occurred.

Line 3 and on: Details of the problem

The details of the problem are listed line by line. The main message contents are listed below.

- Clean Air Filter
- Internal error
- Fan related error
- Sensor error
- Laser error
- Laser warning
- Retardation Plate Error
- Internal temperature error
- High-speed cooling in progress
- Low Air Flow
- Low Air Flow Error
- No-signal

No Signal is input to the projector. Check the connection status or check that the power for the signal source is turned on.

- Lens shift error
- No lens
- Peltier Device error

See the following to deal with problems or warnings.

☞ "Reading the Indicators" p.157

Management Using SNMP

By setting **SNMP** to **On** in the Configuration menu, notification messages are sent to the specified computer when a problem or warning occurs. This allows you to check for problems with projectors even at locations away from the projectors.

Network - Notifications - SNMP p.143

• SNMP should be managed by a network administrator or someone who is familiar with the network.

- To use the SNMP function to monitor the projector, you need to install the SNMP manager program on your computer.
- The SNMP Agent for this projector complies with version 1 (SNMPv1).
- The managing function using SNMP cannot be used over wireless LAN in Quick connection mode.
- Up to two destination IP addresses can be saved.

ESC/VP21 Commands

You can control the projector from an external device using ESC/VP21.

Command list

When the power ON command is transmitted to the projector, the power turns on and it enters warm-up mode. When the projector's power has turned on, a colon ":" (3Ah) is returned.

When a command is input, the projector executes the command and returns a ":", and then accepts the next command.

If the command being processed terminates abnormally, an error message is output and a ":" is returned.

The main contents are listed below.

ltem Comm			Command
Power ON/OFF	On		PWR ON
	Off		PWR OFF
Signal selection	Computer	Auto	SOURCE 1F
		RGB	SOURCE 11
		Component	SOURCE 14
	BNC	Auto	SOURCE BF
		RGB	SOURCE B1
		Component	SOURCE B4
	HDMI		SOURCE 30
	LAN		SOURCE 53
	SDI (EB-L1505U/EB-L1500U/EB- L1405U only) DVI-D		SOURCE 60
			SOURCE A0
	HDBaseT		SOURCE 80
A/V Mute On/Off	On		MUTE ON
	Off		MUTE OFF

Add a Carriage Return (CR) code (0Dh) to the end of each command and transmit.


For more details, contact your local dealer or the nearest address provided in the Epson Projector Contact List.

Epson Projector Contact List

Cable layouts

Serial connection

- Connector shape: D-Sub 9-pin (male)
- Projector input port name: RS-232C <At the projector>

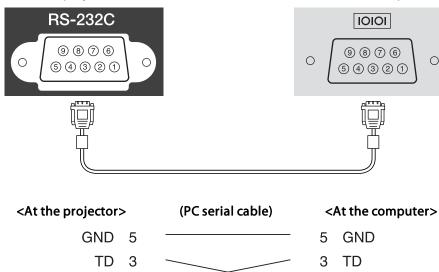

Signal Name	Function
GND	Signal wire ground
TD	Transmit data
RD	Receive data

Communications protocol

• Default baud rate setting: 9600 bps

RD

2

• Data length: 8 bit

- Parity: None
- Stop-bit: 1 bit
- Flow control: None

About PJLink

<At the computer>

2

RD

0

PJLink Class1 was established by the JBMIA (Japan Business Machine and Information System Industries Association) as a standard protocol for controlling network-compatible projector's as part of their efforts to standardize projector control protocols.

The projector complies with the PJLink Class1 standard established by the JBMIA.

You need to make network settings before you can use PJLink. See the following for more information on network settings.

☞ "Network Menu" p.137

It complies with all commands except for the following commands defined by PJLink Class1, and agreement was confirmed by the PJLink standard adaptability verification.

URL: http://pjlink.jbmia.or.jp/english/

• Non-compatible commands

Function		PJLink Command
Mute settings	Image muting set	AVMT 11
	Audio muting set	AVMT 21

• Input names defined by PJLink and corresponding projector sources

Source	PJLink Command
Computer	INPT 11
BNC	INPT 13





Source	PJLink Command
DVI-D	INPT 31
HDMI	INPT 32
SDI (EB-L1505U/EB-L1500U/EB- L1405U only)	INPT 34
LAN	INPT 52
HDBaseT	INPT 56

- Manufacturer name displayed for "Manufacture name information query" **EPSON**
- Model name displayed for "Product name information query" EPSON L1505U/L1500U EPSON L1405U EPSON L1300U EPSON L1200U EPSON L1100U

About Crestron RoomView®

Crestron RoomView[®] is an integrated control system provided by Crestron[®]. It can be used to monitor and control multiple devices connected on a network.

The projector supports the control protocol, and can therefore be used in a system built with Crestron RoomView[®].

Visit the Crestron[®] Web site for details on Crestron RoomView[®]. (Only English-language displays are supported.)

http://www.crestron.com

The following provides an overview of Crestron RoomView®.

• Remote operation using a Web browser

You can operate a projector from your computer just like using a remote control.

• Monitoring and control with application software

You can use Crestron RoomView[®] Express or Crestron RoomView[®] Server Edition provided by Crestron[®] to monitor devices in the system, to communicate with the help desk, and to send emergency messages. See the following Web site for details.

http://www.crestron.com/getroomview

This manual describes how to perform operations on your computer using a Web browser.

- You can only enter single-byte alphanumeric characters and symbols.
 - The following functions cannot be used while using Crestron RoomView[®].
 - "Changing Settings Using a Web Browser (Epson Web Control)" p.194

Message Broadcasting (EasyMP Monitor plug-in)

- If you set **Standby Mode** to **Communication On**, you can control the projector even if it is in standby mode (when the power is off).
 - Extended Standby Mode p.133

Operating a projector from your computer

Displaying the operation window

Check the following before carrying out any operations.


- Make sure the computer and projector are connected to the network.
- Set Crestron RoomView to On from the Network menu.
- In the second secon



- 1
- Start the Web browser on the computer.
- 2

Enter the IP address of the projector in the address field of the Web browser, and press the Enter key on the keyboard. The operation window is displayed.

Using the operation window

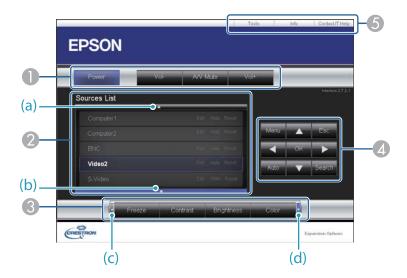

1 You can perform the following operations when you click the buttons.

Button	Function				
Power Turns the projector power on or off.					
Vol-/Vol+	Adjusts the volume.				

Button	Function					
A/V Mute	Turns the video and audio on or off. ☞ "Hiding the Image and Sound Temporarily (A/V Mute)" p.107					

- Switch to the image from the selected input source. To display input sources that are not shown in Source List, click (a) or (b) to scroll up or down. The current video signal input source is displayed in blue. You can change the source name if necessary.
- You can perform the following operations when you click the buttons. To display buttons that are not shown in Source List, click (c) or (d) to scroll left or right.

Button	Function			
Freeze	Images are paused or unpaused.			
	"Freezing the Image (Freeze)" p.108			
Contrast	Adjusts the difference between light and shade in the images.			
Brightness	Adjusts the image brightness.			
Color	Adjusts the color saturation for the images.			
Sharpness	Adjusts the image sharpness.			
Zoom	Click the $[\oplus]$ button to enlarge the image without changing the projection size. Click the $[\bigcirc]$ button to reduce an image that was enlarged with the $[\oplus]$ button. Click the $[\blacktriangle] [\checkmark] [\checkmark] [\checkmark]$ buttons to change the position of an enlarged image.			
	"Enlarging Part of the Image (E-Zoom)" p.108			

d The [▲] [▼] [↓] buttons perform the same operations as the [▲] [▼]
 [↓] [▶] buttons on the remote control. You can perform the following operations when you click the other buttons.

204 TOP


Button	Function
ОК	Performs the same operation as the [↓] button on the remote control. ("Remote Control" p.20
Menu	Displays and closes the Configuration menu.
Auto	If clicked while projecting analog RGB signals from the Computer port, you can automatically optimize Tracking, Sync., and Position.
Search	Changes to the next input source that is sending an image. TAUTOMATICALLY DETECTING INPUT Signals and Changing the Projected Image (Source Search)" p.59
Esc	Performs the same operation as the [Esc] button on the remote control.

(5) You can perform the following operations when you click the tabs.

Tab	Function					
Contact IT Help	Displays the Help Desk window. Used to send messages to, and receive messages from, the administrator using Crestron RoomView [®] Express.					
Info	Displays information on the projector that is currently connected.					
Tools	Changes settings in the projector that is currently connected. See the next section.					

Using the tools window

The following window is displayed when you click the **Tools** tab on the operation window. You can use this window to change settings in the projector that is currently connected.

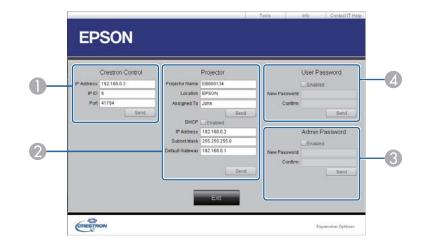

Crestron Control

Make settings for Crestron® central controllers.

Projector

The following items can be set.

ltem	Function
Projector Name	Enter a name to differentiate the projector that is currently connected from other projectors on the network. (The name can contain up to 15 single-byte alphanumeric characters.)
Location	Enter an installation location name for the projector that is currently connected on the network. (The name can contain up to 32 single-byte alphanumeric characters and symbols.)
Assigned To	Enter a user name for the projector. (The name can contain up to 32 single-byte alphanumeric characters and symbols.)



ltem	Function			
DHCP	Select the Enabled check box to use DHCP. You cannot enter an IP address if DHCP is enabled.			
IP Address	Enter the IP address to assign to the currently connected projector.			
Subnet Mask	Enter a subnet mask for the currently connected projector.			
Default Gateway	Enter the gateway address for the currently connected projector.			
Send	Click this button to confirm the changes made to the Projector .			

3 Admin Password

Select the **Enabled** check box to require a password to open the Tools window. The following items can be set.

ltem	Function
New Password	Enter the new password when changing the password to open the Tools window. (The name can contain up to 26 single-byte alphanumeric characters.)
Confirm	Enter the same password as you entered in New Password . If the passwords are not the same, an error is displayed.
Send	Click this button to confirm the changes made to the Admin Password .

4 User Password

Select the **Enabled** check box to require a password to open the operation window on the computer.

The following items can be set.

ltem	Function					
New Password	Enter the new password when changing the password to open the operation window. (The name can contain up to 26 single-byte alphanumeric characters.)					
Confirm	Enter the same password as you entered in New Password . If the passwords are not the same, an error is displayed.					
Send	Click this button to confirm the changes made to the User Password .					



About Art-Net (EB-L1505U/EB-L1500U/EB-L1405U only)

Art-Net is an Ethernet communication protocol based on the TCP/IP protocol.

You can control the projector by using a DMX controller or an application system.

Channel definitions

The following explains the channel definitions used when controlling the projector in Art-Net.

Chan- nel	Function	Operation		Parameters	Default	Operation Content
1	Adjusting light (Dimming)	0% - 100%	0% - 100%		0	Sets the image brightness.
2	Shutter control	Shutter	Closed	0 - 63	128	Enables/disables A/V Mute.
		Non-operational		64 - 191		
		Shutter	Open	192 - 255		
3	Switch source	Non-operational		0 - 7	0	Changes to the specified source.
		HDMI 8 -		8 - 15		
		Non-operational	erational 16 - 23			
		HDBaseT		24 - 31		
		DVI-D		32 - 39		
		Non-operational	Non-operational			
		SDI		48 - 55		
	Computer		56 - 63			
		Non-operational		64 - 71		
		BNC		72 - 79		
		LAN		80 - 87		
	Non-operational Non-operational		88 - 95			
			96 - 255			



Chan- nel	Function	Opera	Operation		Default	Operation Content
4	Lens position	Non-operational	Non-operational		0	Moves the lens shift to the home position.
		Move to home positio	n	32 - 63		
		Non-operational		64 - 255		
5	Horizontal lens shift	(+) lens adjustment	Movement - Large	0 - 31	128	Performs horizontal lens shift using the amount of
			Movement - Me- dium	32 - 63		movement specified.
			Movement - Small	64 - 95		
		Non-operational		96 -159		
		(-) lens adjustment	Movement - Small	160 - 191		
			Movement - Me- dium	192 - 223		
			Movement - Large	224 - 255		
6	Vertical lens shift	(+) lens adjustment	Movement - Large	0 - 31	128	Performs vertical lens shift using the amount of
	Movement - Me- dium	32 - 63		movement specified.		
			Movement - Small	64 - 95		
		Non-operational		96 -159		
		(-) lens adjustment	Movement - Small	160 - 191		
			Movement - Me- dium	192 - 223		
			Movement - Large	224 - 255		
7	Electronic zoom	(+) lens adjustment	Movement - Large	0 - 31	128	Performs electronic zoom using the amount of movement specified.
			Movement - Me- dium	32 - 63		
			Movement - Small	64 - 95		
		Non-operational	Non-operational			



Chan- nel	Function	Opera	ation	Parameters	Default	Operation Content
		(-) lens adjustment	Movement - Small	160 - 191		
			Movement - Me- dium	192 - 223		
			Movement - Large	224 - 255		
8	Electronic focus	(+) lens adjustment	Movement - Large	0 - 31	128	Performs electronic focus using the amount of movement
			Movement - Me- dium	32 - 63		specified.
			Movement - Small	64 - 95		
		Non-operational		96 -159		
		(-) lens adjustment	Movement - Small	160 - 191		
			Movement - Me- dium	192 - 223		
			Movement - Large	224 - 255		
9	Electronic distortion	(+) lens adjustment	Movement - Large	0 - 31	128	Performs electronic distortion using the amount of
			Movement - Me- dium	32 - 63		movement specified.
			Movement - Small	64 - 95		
		Non-operational		96 -159		
		(-) lens adjustment	Movement - Small	160 - 191		
			Movement - Me- dium	192 - 223		
			Movement - Large	224 - 255		
10	Load lens memory	Non-operational		0 - 15	0	Loads the specified lens memory.
		Load lens memory 1		16 - 31		
		Load lens memory 2		32 - 47		
		Load lens memory 3		48 - 63		



Chan- nel	Function	Operation	Parameters	Default	Operation Content
			64 - 79		
			80 - 95		
		Load lens memory 6	96 - 111		
		Load lens memory 7	112 - 127		
		Load lens memory 8	128 - 143		
		Load lens memory 9	144 - 159		
		Load lens memory 10	160 - 175		
		Non-operational	176 - 255		
11	Power control	l Power off 0 - 63 128	128	Turns the projector power on or off.	
		Non-operational	64 - 191		
		Power on	192 - 255		
12	Geometry correction	Off	0 - 15	255	Performs geometry correction.
		Horizontal/vertical distortion (Keystone)	16 - 31		
		Quick Corner	32 - 47		
		Point Correction	48 - 63		
		Curved Surface	64 - 79		
		Corner Wall	80 - 95		
		Load geometry correction memory 1	96 - 111		Loads a geometry correction memory.
		Load geometry correction memory 2	112 - 127		
		Load geometry correction memory 3	128 - 143		
		Non-operational	144 - 175		
13	Lock	Cannot control	0 - 127	0	Enables/disables Art-Net operations.
		Can control	128 - 255		





While controlling the projector using Art-Net and performing operations from the remote control or control panel, settings made by the DMX controller or application software may differ from the actual projector's status. When you want to apply all the channel controls to the projector, set Channel 13 to "Cannot control", then set it back to "Can control".

The following optional accessories and consumables are available. Please purchase these products as and when needed. The following list of optional accessories and consumables is current as of: April, 2016. Details of accessories are subject to change without notice and availability may vary depending on the country of purchase.

Optional Accessories

Lens unit

ELPLX01^{*1}, ELPLU03, ELPLU04, ELPLW05, ELPLW06, ELPLM08^{*1}, ELPLM09, ELPLM10, ELPLM11, ELPLL08

See the following for more information on the projection distance for each lens.

☞ "Screen Size and Projection Distance" p.212

Computer cable ELPKC02

(1.8 m - for mini D-Sub15-pin/mini D-Sub 15pin) This is the same as the computer cable supplied with the projector.

Computer cable ELPKC09

(3 m - for mini D-Sub15-pin/mini D-Sub 15pin)

Computer cable ELPKC10

(20 m - for mini D-Sub15-pin/mini D-Sub 15pin)

Use one of these longer cables if the computer cable supplied with the projector is too short.

Component video cable ELPKC19

(3 m - for mini D-Sub 15-pin/RCA male×3)

Use to connect a <u>Component Video</u> source.

Remote control cable set ELPKC28

(10 m 2 piece set)

Use this to guarantee operation from the remote control from a distance.

Wireless mouse receiver ELPST16

Use this to use the projector's remote control to control the mouse pointer on the computer or to page up and down.

HDBaseT Transmitter ELPHD01

This transmitter performs long distance transmissions for HDMI signals and control signals for 1 LAN cable. Based on the <u>HDBaseT</u> standard. (HDCP 2.2 is not supported.)

Wireless LAN unit ELPAP10

Use when connecting the projector to a computer wirelessly and projecting.

Quick Wireless Connection USB Key ELPAP09

Use when you want to quickly establish one-to-one connection between the projector and a computer with Windows installed.

Polarizer ELPPL01

Use this when stacking two projectors and projecting 3D images.

Passive 3D Glasses (standard five piece set) ELPGS02A

Passive 3D Glasses (five piece set for children) ELPGS02B

Passive polarized 3D glasses. Use these when viewing 3D images with two projectors.

Document Camera ELPDC13, ELPDC21

Use when projecting images such as books, OHP documents, or slides.

Low ceiling mount^{*2} ELPMB47 High ceiling mount^{*2} ELPMB48

Use when installing the projector on a ceiling.

- *1 Not available for EB-L1505U/EB-L1500U

Consumables

Air Filter ELPAF51


Use as a replacement for used air filters.





Unit: cm

Projection Distance for EB-L1505U/EB-L1500U

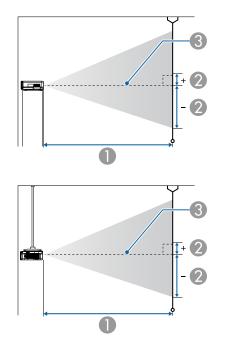

		0	2
4:3 Sc	reen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
53"	108x81	199 - 326	-89 - +8
60"	122x91	226 - 370	-101 - +9
80"	163x122	304 - 497	-134 - +12
100"	203x152	383 - 623	-168 - +15
120"	244x183	461 - 749	-201 - +18
150"	305x229	578 - 938	-252 - +23
200"	406x305	773 - 1253	-335 - +31
250"	508x381	969 - 1569	-419 - +38
441"	896x671	1715 - 2773	-740 - +68

Unit: cm

		0	2
16:9 S	creen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
59"	131x73	201 - 330	-86 - +12
60"	133x75	205 - 336	-87 - +13
80"	177x100	276 - 450	-116 - +17
100"	221x125	347 - 565	-145 - +21
120"	266x149	417 - 679	-174 - +25
150"	332x187	524 - 851	-218 - +31
200"	443x249	701 - 1137	-291 - +42
250"	553x311	879 - 1423	-363 - +52
486"	1076x605	1716 - 2775	-706 - +101

Projection distance

- is the distance from the center of the lens to the base of the screen. This changes depending on the setting for vertical lens shift.
- Center of lens

ELPLM09/ELPLS04

This section shows the projection distances for models equipped with standard lenses.

			Unit: cm
		0	2
16:10 Screen Size		Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
60"	130x81	199 - 326	-89 - +8
80"	172x108	268 - 438	-119 - +11
100"	215x135	337 - 549	-148 - +14
120"	258x162	406 - 661	-178 - +16
150"	323x202	509 - 828	-222 - +20
200"	431x269	682 - 1106	-296 - +27
250"	538x337	855 - 1385	-370 - +34
500"	1077x673	1717 - 2777	-741 - +68

ELPLU03

		0	2
4:3 Screen Size		Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
98"	199x149	113 - 136	-11139
100"	203x152	115 - 139	-11340
120"	244x183	139 - 168	-13547
150"	305x229	175 - 211	-16959
200"	406x305	234 - 282	-22679
250"	508x381	293 - 353	-28299
353"	717x538	416 - 500	-398140

0 2 16:9 Screen Size Minimum (Wide) to Vertical Lens Shift Maximum (Tele) Top to Bottom 108" 239x134 113 - 136 -103 - -31 120" 266x149 126 - 152 -115 - -35 150" 332x187 158 - 191 -143 - -43 200" 443x249 212 - 256 -191 - -58 250" 553x311 266 - 320 -239 - -72 389" 861x484 416 - 500 -372 - -113

Unit: cm

		0	2
16:10 S	creen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
110"	237x148	112 - 135	-11038
120"	258x162	122 - 148	-12042
150"	323x202	154 - 186	-15052
200"	431x269	206 - 249	-19970
250"	538x337	259 - 312	-24987
400"	862x539	416 - 500	-399140

ELPLU04/ELPLU02

Unit: cm

Unit: cm

	4:3 Screen Size		0	0
			Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
	53"	108x81	80 - 97	-89 - +8





		0	2
4:3 Sc	reen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
60"	122x91	91 - 110	-101 - +9
80"	163x122	123 - 149	-134 - +12
100"	203x152	155 - 188	-168 - +15
120"	244x183	187 - 226	-201 - +18
150"	305x229	236 - 284	-252 - +23
200"	406x305	316 - 381	-335 - +31
250"	508x381	396 - 478	-419 - +38
441"	896x672	703 - 847	-740 - +68

			Unit: cm
		0	2
16:10 S	creen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
60"	130x81	80 - 97	-89 - +8
80"	172x108	108 - 131	-119 - +11
100"	215x135	136 - 165	-148 - +14
120"	258x162	165 - 199	-178 - +16
150"	323x202	207 - 251	-222 - +20
200"	431x269	278 - 336	-296 - +27
250"	538x337	349 - 421	-370 - +34
500"	1077x673	704 - 848	-741 - +68

Unit: cm

		0	0
16:9 So	reen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
59"	131x73	80 - 98	-86 - +12
60"	133x75	82 - 100	-87 - +13
80"	177x100	111 - 135	-116 - +17
100"	221x125	140 - 170	-145 - +21
120"	266x149	170 - 205	-174 - +25
150"	332x187	213 - 258	-218 - +31
200"	443x249	286 - 346	-291 - +42
250"	553x311	359 - 433	-363 - +52
486"	1076x605	704 - 848	-706 - +101

ELPLW05

Unit: cm

4:3 Sci	reen Size	0	0
62"	126x94	112 - 159	-7025
80"	163x122	147 - 207	-9032
100"	203x152	185 - 260	-11340
120"	244x183	224 - 313	-13547
150"	305x229	282 - 393	-16959
200"	406x305	378 - 526	-22679
250"	508x381	475 - 659	-28299
353"	717x538	673 - 933	-398140

16:9 Sc	reen Size	0	2
69"	153x86	113 - 161	-6620



16:9 Sc	reen Size	0	2
80"	177x100	132 - 187	-7623
100"	221x125	167 - 236	-9629
120"	266x149	202 - 284	-11535
150"	332x187	255 - 357	-14343
200"	443x249	343 - 477	-19158
250"	553x311	430 - 598	-23972
389"	861x484	674 - 934	-372113

Unit: cm

16:10 S	creen Size	0	2
70"	151x94	111 - 159	-7024
80"	172x108	129 - 182	-8028
100"	215x135	163 - 229	-10035
120"	258x162	197 - 276	-12042
150"	323x202	248 - 347	-15052
200"	431x269	333 - 464	-19970
250"	538x337	418 - 582	-24987
400"	862x539	674 - 934	-399140

ELPLW06/ELPLW04

		0	2
4:3 Sc	reen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
53"	108x81	149 - 206	-89 - +8
60"	122x91	170 - 234	-101 - +9
80"	163x122	229 - 315	-134 - +12

		0	2
4:3 Screen Size		Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
100"	203x152	288 - 395	-168 - +15
120"	244x183	348 - 475	-201 - +18
150"	305x229	436 - 596	-252 - +23
200"	406x305	584 - 797	-335 - +31
250"	508x381	732 - 998	-419 - +38
441"	896x672	1298 - 1766	-740 - +68

Unit: cm

		0	2
16:9 Screen Size		Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
59"	131x73	151 - 208	-86 - +12
60"	133x75	154 - 212	-87 - +13
80"	177x100	207 - 285	-116 - +17
100"	221x125	261 - 358	-145 - +21
120"	266x149	315 - 431	-174 - +25
150"	332x187	395 - 540	-218 - +31
200"	443x249	530 - 723	-291 - +42
250"	553x311	664 - 905	-363 - +52
486"	1076x605	1298 - 1767	-706 - +101

		0	2
16:10 Screen Size		Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
60"	130x81	149 - 206	-89 - +8



		0	2
16:10 Screen Size		Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
80"	172x108	202 - 277	-119 - +11
100"	215x135	254 - 348	-148 - +14
120"	258x162	306 - 419	-178 - +16
150"	323x202	385 - 526	-222 - +20
200"	431x269	515 - 703	-296 - +27
250"	538x337	646 - 881	-370 - +34
500"	1077x673	1299 - 1769	-741 - +68

ELPLM10/ELPLM06

Unit: cm

		0	2
4:3 Screen Size		Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
53"	108x81	306 - 473	-89 - +8
60"	122x91	349 - 537	-101 - +9
80"	163x122	469 - 720	-134 - +12
100"	203x152	590 - 904	-168 - +15
120"	244x183	710 - 1087	-201 - +18
150"	305x229	891 - 1362	-252 - +23
200"	406x305	1193 - 1821	-335 - +31
250"	508x381	1494 - 2279	-419 - +38
441"	896x672	2646 - 4030	-740 - +68

		0	2
16:9 S	creen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
59"	131x73	310 - 478	-86 - +12
60"	133x75	315 - 486	-87 - +13
80"	177x100	425 - 653	-116 - +17
100"	221x125	534 - 819	-145 - +21
120"	266x149	664 - 986	-174 - +25
150"	332x187	808 - 1236	-218 - +31
200"	443x249	1082 - 1652	-291 - +42
250"	553x311	1355 - 2068	-363 - +52
486"	1076x605	2647 - 4032	-706 - +101

Unit: cm

		0	2
16:10 S	creen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
60"	130x81	306 - 473	-89 - +8
80"	172x108	413 - 635	-119 - +11
100"	215x135	519 - 797	-148 - +14
120"	258x162	626 - 959	-178 - +16
150"	323x202	786 - 1202	-222 - +20
200"	431x269	1052 - 1607	-296 - +27
250"	538x337	1318 - 2012	-370 - +34
500"	1077x673	2650 - 4036	-741 - +68

ELPLM11/ELPLM07

			Unit: cm
		0	0
4:3 Sci	reen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
53"	108x81	445 - 686	-89 - +8
60"	122x91	507 - 780	-101 - +9
80"	163x122	683 - 1048	-134 - +12
100"	203x152	860 - 1316	-168 - +15
120"	244x183	1037 - 1584	-201 - +18
150"	305x229	1302 - 1985	-252 - +23
200"	406x305	1744 - 2655	-335 - +31
250"	508x381	2186 - 3325	-419 - +38
441"	896x672	3875 - 5883	-740 - +68

		0	2
16:10 9	Screen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
60"	130x81	445 - 686	-89 - +8
80"	172x108	601 - 923	-119 - +11
100"	215x135	757 - 1160	-148 - +14
120"	258x162	913 - 1396	-178 - +16
150"	323x202	1147 - 1751	-222 - +20
200"	431x269	1538 - 2343	-296 - +27
250"	538x337	1928 - 2934	-370 - +34
500"	1077x673	3881 - 5892	-741 - +68

ELPLL08/ELPLL07

Unit: cm

		0	2
16:9 So	creen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
59"	131x73	450 - 694	-86 - +12
60"	133x75	458 - 706	-87 - +13
80"	177x100	618 - 949	-116 - +17
100"	221x125	779 - 1192	-145 - +21
120"	266x149	939 - 1436	-174 - +25
150"	332x187	1180 - 1800	-218 - +31
200"	443x249	1581 - 2408	-291 - +42
250"	553x311	1983 - 3016	-363 - +52
486"	1076x605	3877 - 5886	-706 - +101

Unit: cm

		0	2
4:3 Sc	reen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
53"	108x81	664 - 941	-89 - +8
60"	122x91	756 - 1069	-101 - +9
80"	163x122	1019 - 1436	-134 - +12
100"	203x152	1281 - 1803	-168 - +15
120"	244x183	1544 - 2170	-201 - +18
150"	305x229	1937 - 2720	-252 - +23
200"	406x305	2594 - 3637	-335 - +31
250"	508x381	3250 - 4555	-419 - +38
441"	896x672	5757 - 8059	-740 - +68

Unit: cm

TOP

217



			Unit: cm
		0	0
16:9 So	creen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
59"	131x73	672 - 951	-86 - +12
60"	133x75	683 - 968	-87 - +13
80"	177x100	922 - 1301	-116 - +17
100"	221x125	1160 - 1634	-145 - +21
120"	266x149	1398 - 1967	-174 - +25
150"	332x187	1756 - 2467	-218 - +31
200"	443x249	2352 - 3300	-291 - +42
250"	553x311	2948 - 4132	-363 - +52
486"	1076x605	5760 - 8063	-706 - +101

Unit: cm **ELPLR04**

Lens shift is not supported.

			Unit: cm
4:3 S	creen Size	0	2
53"	108x81	87	-40
60"	122x91	99	-46
80"	163x122	134	-61
100"	203x152	169	-76
120"	244x183	205	-91
150"	305x229	257	-114
200"	406x305	345	-152
250"	508x381	433	-191
441"	896x672	770	-336


Unit: cm


		0	0
16:10 S	creen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
60"	130x81	664 - 941	-89 - +8
80"	172x108	896 - 1265	-119 - +11
100"	215x135	1128 - 1589	-148 - +14
120"	258x162	1360 - 1913	-178 - +16
150"	323x202	1708 - 2399	-222 - +20
200"	431x269	2287 - 3209	-296 - +27
250"	538x337	2867 - 4020	-370 - +34
500"	1077x673	5765 - 8071	-741 - +68

16:9 9	Screen Size	0	0
59"	131x74	88	-37
60"	133x75	89	-37
80"	177x100	121	-50
100"	221x125	153	-62
120"	266x149	185	-75
150"	332x187	233	-93
200"	443x249	313	-125
250"	553x311	393	-156
486"	1076x605	770	-303

			Unit: cm
16:10	Screen Size	0	0
60"	130x81	87	-40
80"	172x108	118	-54
100"	215x135	149	-67
120"	258x162	180	-81
150"	323x202	227	-101
200"	431x269	304	-135
250"	538x337	382	-168
500"	1077x673	771	-337

Projection Distances for EB-L1405U/EB-L1300U/EB-L1200U/EB-L1100U

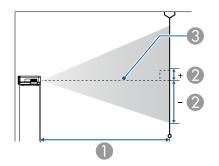

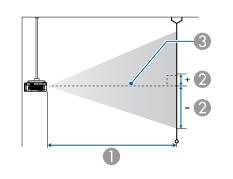

- Projection distance
- is the distance from the center of the lens to the base of the screen. This changes depending on the setting for vertical lens shift.
- 3 Center of lens

ELPLM08

This section shows the projection distances for models equipped with standard lenses.

Unit: cm

		0	2
4:3 Sc	reen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
45"	100x75	156 - 253	-81 - +12
50"	102x76	174 - 281	-90 - +13
60"	122x91	210 - 338	-108 - +16
80"	163x122	281 - 453	-143 - +22
100"	203x152	353 - 567	-179 - +27
120"	244x183	424 - 681	-215 - +32
150"	305x229	532 - 853	-269 - +40
200"	406x305	711 - 1139	-359 - +54

219

TOP



		0	2
4:3 Sc	reen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
250"	508x381	890 - 1424	-448 - +67
265"	539x404	943 - 1510	-475 - +71

			Unit: cm
		0	2
16:9 So	creen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
49"	108x61	154 - 250	-76 - +15
50"	111x62	157 - 255	-78 - +16
60"	133x75	190 - 307	-94 - +19
80"	177x100	255 - 411	-125 - +25
100"	221x125	320 - 514	-156 - +31
120"	266x149	385 - 618	-187 - +38
150"	332x187	482 - 774	-234 - +47
200"	443x249	645 - 1033	-312 - +63
250"	553x311	807 - 1293	-390 - +78
290"	642x361	937 - 1500	-452 - +91

U	nit:	cm

		0	2
16:10 S	creen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
50"	108x67	153 - 248	-79 - +12
60"	130x81	185 - 298	-95 - +14
80"	172x108	248 - 399	-127 - +19
100"	215x135	311 - 500	-158 - +24

		0	2
16:10 S	creen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
120"	258x162	374 - 601	-190 - +29
150"	323x202	469 - 753	-238 - +36
200"	431x269	627 - 1005	-317 - +48
250"	538x337	785 - 1258	-396 - +59
300"	646x404	943 - 1510	-475 - +71

ELPLX01

See the user's guide supplied with the lens unit.

ELPLU03

		0	2
4:3 Sci	reen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
71"	144x108	112 - 135	-127 - +19
80"	163x122	126 - 152	-143 - +22
100"	203x152	159 - 191	-179 - +27
120"	244x183	191 - 230	-215 - +32
150"	305x229	240 - 289	-269 - +40
200"	406x305	321 - 386	-359 - +54
250"	508x381	403 - 483	-448 - +67
265"	539x404	427 - 513	-475 - +71

		0	2
16:9 So	creen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
78"	173x97	111 - 134	-122 - +24
80"	177x100	114 - 138	-125 - +25
100"	221x125	144 - 173	-156 - +31
120"	266x149	173 - 209	-187 - +38
150"	332x187	218 - 262	-234 - +47
200"	443x249	291 - 350	-312 - +63
250"	553x311	365 - 439	-390 - +78
290"	642x361	424 - 509	-452 - +91

Unit: cm

|--|

Unit: cm

		0	2
4:3 Sci	reen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
45"	100x75	93 - 113	-81 - +12
50"	102x76	104 - 126	-90 - +13
60"	122x91	126 - 153	-108 - +16
80"	163x122	170 - 205	-143 - +22
100"	203x152	214 - 258	-179 - +27
120"	244x183	258 - 311	-215 - +32
150"	305x229	324 - 390	-269 - +40
200"	406x305	434 - 522	-359 - +54
250"	508x381	543 - 654	-448 - +67
265"	539x404	576 - 693	-475 - +71

Unit: cm

		0	0
16:9 Sc	creen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
49"	108x61	92 - 112	-76 - +15
50"	111x62	94 - 114	-78 - +16
60"	133x75	114 - 138	-94 - +19
80"	177x100	154 - 186	-125 - +25
100"	221x125	194 - 234	-156 - +31
120"	266x149	234 - 282	-187 - +38
150"	332x187	293 - 354	-234 - +47
200"	443x249	393 - 473	-312 - +63

		0	2
16:10 Screen Size		Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
80"	172x108	111 - 134	-127 - +19
100"	215x135	140 - 168	-158 - +24
120"	258x162	169 - 203	-190 - +29
150"	323x202	212 - 255	-238 - +36
200"	431x269	283 - 341	-317 - +48
250"	538x337	355 - 427	-396 - +59
300"	646x404	427 - 513	-475 - +71



		0	2
16:9 Screen Size		Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
250"	553x311	493 - 593	-390 - +78
290"	642x361	573 - 689	-452 - +91

			omit. em
		0	2
16:10 S	creen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
50"	108x67	91 - 111	-79 - +12
60"	130x81	111 - 134	-95 - +14
80"	172x108	149 - 181	-127 - +19
100"	215x135	188 - 227	-158 - +24
120"	258x162	227 - 274	-190 - +29
150"	323x202	285 - 344	-238 - +36
200"	431x269	382 - 460	-317 - +48
250"	538x337	479 - 577	-396 - +59
300"	646x404	576 - 693	-475 - +71

ELPLW05

Unit:	cm
-------	----

4:3 Sc	reen Size	0	2
45"	100x75	111 - 158	-81 - +12
50"	102x76	124 - 176	-90 - +13
60"	122x91	150 - 212	-108 - +16
80"	163x122	203 - 285	-143 - +22
100"	203x152	255 - 357	-179 - +27

4:3 Sc	reen Size	0	0
120"	244x183	308 - 430	-215 - +32
150"	305x229	387 - 539	-269 - +40
200"	406x305	519 - 720	-359 - +54
250"	508x381	650 - 902	-448 - +67
265"	539x404	690 - 956	-475 - +71

Unit: cm	Unit:	cm
----------	-------	----

16:9 Sc	creen Size	0	0
49"	108x61	109 - 156	-76 - +15
50"	111x62	112 - 159	-78 - +16
60"	133x75	136 - 192	-94 - +19
80"	177x100	183 - 258	-125 - +25
100"	221x125	231 - 324	-156 - +31
120"	266x149	279 - 390	-187 - +38
150"	332x187	351 - 489	-234 - +47
200"	443x249	470 - 653	-312 - +63
250"	553x311	590 - 818	-390 - +78
290"	642x361	685 - 950	-452 - +91

16:10 S	creen Size	0	2
50"	108x67	109 - 155	-79 - +12
60"	130x81	132 - 187	-95 - +14
80"	172x108	178 - 251	-127 - +19
100"	215x135	225 - 315	-158 - +24
120"	258x162	271 - 379	-190 - +29
150"	323x202	341 - 475	-238 - +36



16:10 S	creen Size	0	2
200"	431x269	457 - 636	-317 - +48
250"	538x337	573 - 796	-396 - +59
300"	646x404	690 - 956	-475 - +71

ELPLW06/ELPLW04

Unit: cm

		0	2
4:3 Sci	reen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
45"	97x61	175 - 240	-81 - +12
50"	102x76	195 - 267	-90 - +13
60"	122x91	236 - 322	-108 - +16
80"	163x122	317 - 432	-143 - +22
100"	203x152	398 - 543	-179 - +27
120"	244x183	479 - 653	-215 - +32
150"	305x229	600 - 818	-269 - +40
200"	406x305	803 - 1094	-359 - +54
250"	508x381	1005 - 1369	-448 - +67
265"	539x404	1066 - 1452	-475 - +71

Unit:	cm
om.	CIII

		0	2
16:9 Sc	reen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
49"	108x61	173 - 237	-76 - +15
50"	111x62	176 - 242	-78 - +16
60"	133x75	213 - 292	-94 - +19

		0	0
16:9 So	creen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
80"	177x100	287 - 392	-125 - +25
100"	221x125	360 - 492	-156 - +31
120"	266x149	434 - 592	-187 - +38
150"	332x187	544 - 742	-234 - +47
200"	443x249	728 - 992	-312 - +63
250"	553x311	912 - 1242	-390 - +78
290"	642x361	1059 - 1442	-452 - +91

		0	2
16:10 S	creen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
50"	108x67	172 - 235	-79 - +12
60"	130x81	207 - 284	-95 - +14
80"	172x108	279 - 381	-127 - +19
100"	215x135	350 - 478	-158 - +24
120"	258x162	422 - 576	-190 - +29
150"	323x202	529 - 722	-238 - +36
200"	431x269	708 - 965	-317 - +48
250"	538x337	887 - 1208	-396 - +59
300"	646x404	1066 - 1452	-475 - +71

ELPLM09/ELPLS04

			Unit: cm
		0	2
4:3 Sc	reen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
45"	100x75	233 - 379	-81 - +12
50"	102x76	260 - 422	-90 - +13
60"	122x91	313 - 508	-108 - +16
80"	163x122	420 - 679	-143 - +22
100"	203x152	527 - 851	-179 - +27
120"	244x183	635 - 1023	-215 - +32
150"	305x229	795 - 1281	-269 - +40
200"	406x305	1063 - 1711	-359 - +54
250"	508x381	1331 - 2140	-448 - +67
265"	539x404	1411 - 2269	-475 - +71

Unit: cm

		0	2
16:9 Sc	creen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
49"	108x61	230 - 374	-76 - +15
50"	111x62	235 - 382	-78 - +16
60"	133x75	284 - 460	-94 - +19
80"	177x100	381 - 616	-125 - +25
100"	221x125	478 - 772	-156 - +31
120"	266x149	575 - 928	-187 - +38
150"	332x187	721 - 1162	-234 - +47
200"	443x249	964 - 1552	-312 - +63

		0	2
16:9 Screen Size		Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
250"	553x311	1207 - 1942	-390 - +78
290"	642x361	1402 - 2254	-452 - +91

Unit: cm

		0	0
16:10 S	creen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
50"	108x67	229 - 372	-79 - +12
60"	130x81	276 - 447	-95 - +14
80"	172x108	370 - 599	-127 - +19
100"	215x135	465 - 751	-158 - +24
120"	258x162	560 - 903	-190 - +29
150"	323x202	702 - 1131	-238 - +36
200"	431x269	938 - 1510	-317 - +48
250"	538x337	1175 - 1890	-396 - +59
300"	646x404	1411 - 2269	-475 - +71

ELPLM10/ELPLM06

		0	2
4:3 Screen Size		Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
45"	100x75	359 - 549	-81 - +12
50"	102x76	400 - 611	-90 - +13
60"	122x91	483 - 736	-108 - +16





		0	2
4:3 Screen Size		Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
80"	163x122	648 - 986	-143 - +22
100"	203x152	813 - 1236	-179 - +27
120"	244x183	979 - 1485	-215 - +32
150"	305x229	1227 - 1860	-269 - +40
200"	406x305	1640 - 2484	-359 - +54
250"	508x381	2053 - 3109	-448 - +67
265"	539x404	2177 - 3296	-475 - +71

Unit:	cm
-------	----

		0	2
16:9 So	creen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
49"	108x61	355 - 542	-76 - +15
50"	111x62	362 - 554	-78 - +16
60"	133x75	437 - 667	-94 - +19
80"	177x100	587 - 894	-125 - +25
100"	221x125	737 - 1121	-156 - +31
120"	266x149	887 - 1347	-187 - +38
150"	332x187	1112 - 1687	-234 - +47
200"	443x249	1488 - 2254	-312 - +63
250"	553x311	1863 - 2821	-390 - +78
290"	642x361	2163 - 3275	-452 - +91

			Unit: cm
		0	2
16:10 S	creen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
50"	108x67	352 - 538	-79 - +12
60"	130x81	425 - 649	-95 - +14
80"	172x108	571 - 869	-127 - +19
100"	215x135	717 - 1090	-158 - +24
120"	258x162	863 - 1311	-190 - +29
150"	323x202	1082 - 1641	-238 - +36
200"	431x269	1447 - 2193	-317 - +48
250"	538x337	1812 - 2744	-396 - +59
300"	646x404	2177 - 3296	-475 - +71

ELPLM11/ELPLM07

			0	2
4	4:3 Screen Size		Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
45		100x75	521 - 799	-81 - +12
50	"	102x76	582 - 890	-90 - +13
60	,"	122x91	703 - 1073	-108 - +16
80	,"	163x122	945 - 1438	-143 - +22
100)"	203x152	1188 - 1804	-179 - +27
120)"	244x183	1430 - 2169	-215 - +32
150)"	305x229	1793 - 2717	-269 - +40
200)"	406x305	2399 - 3631	-359 - +54
250)"	508x381	3005 - 4544	-448 - +67



4:3 Screen Size		0	2
		Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
265"	539x404	3186 - 4819	-475 - +71

		0	2
16:9 Screen Size		Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
49"	108x61	515 - 789	-76 - +15
50"	111x62	526 - 806	-78 - +16
60"	133x75	636 - 972	-94 - +19
80"	177x100	856 - 1304	-125 - +25
100"	221x125	1076 - 1635	-156 - +31
120"	266x149	1296 - 1967	-187 - +38
150"	332x187	1626 - 2465	-234 - +47
200"	443x249	2176 - 3294	-312 - +63
250"	553x311	2726 - 4124	-390 - +78
290"	642x361	3166 - 4787	-452 - +91

Unit:	cm
-------	----

Unit: cm

		0	2
16:10 S	creen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
50"	108x67	511 - 784	-79 - +12
60"	130x81	618 - 945	-95 - +14
80"	172x108	832 - 1268	-127 - +19
100"	215x135	1046 - 1591	-158 - +24
120"	258x162	1260 - 1913	-190 - +29

		0	2
16:10 S	creen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
150"	323x202	1581 - 2398	-238 - +36
200"	431x269	2116 - 3205	-317 - +48
250"	538x337	2651 - 4012	-396 - +59
300"	646x404	3186 - 4819	-475 - +71

ELPLL08/ELPLL07

		0	2
4:3 Sci	reen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
45"	100x75	776 - 1095	-81 - +12
50"	102x76	866 - 1220	-90 - +13
60"	122x91	1046 - 1470	-108 - +16
80"	163x122	1405 - 1971	-143 - +22
100"	203x152	1764 - 2472	-179 - +27
120"	244x183	2124 - 2972	-215 - +32
150"	305x229	2662 - 3724	-269 - +40
200"	406x305	3561 - 4975	-359 - +54
250"	508x381	4459 - 6227	-448 - +67
265"	539x404	4728 - 6602	-475 - +71

		0	0
16:9 So	creen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
49"	108x61	767 - 1082	-76 - +15
50"	111x62	784 - 1105	-78 - +16
60"	133x75	947 - 1332	-94 - +19
80"	177x100	1273 - 1787	-125 - +25
100"	221x125	1599 - 2241	-156 - +31
120"	266x149	1925 - 2696	-187 - +38
150"	332x187	2414 - 3378	-234 - +47
200"	443x249	3230 - 4514	-312 - +63
250"	553x311	4045 - 5650	-390 - +78
290"	642x361	4697 - 6560	-452 - +91

Unit: cm **ELPLR04**

Lens shift is not supported.

			Unit: cm
4:3 S	creen Size	0	2
45"	91x69	102	-34
50"	102x76	114	-38
60"	122x91	138	-46
80"	163x122	186	-61
100"	203x152	234	-76
120"	244x183	282	-91
150"	305x229	354	-114
200"	406x305	473	-152
250"	508x381	593	-191
265"	538x404	629	-202

Unit: cm

16:9	Screen Size	0	0
49"	108x61	101	-30
50"	111x62	103	-31
60"	133x75	124	-37
80"	177x100	168	-50
100"	221x125	212	-62
120"	266x149	255	-75
150"	332x187	320	-93
200"	443x249	429	-125
250"	553x311	538	-156
290"	642x361	625	-181

		0	0
16:10 S	creen Size	Minimum (Wide) to Maximum (Tele)	Vertical Lens Shift Top to Bottom
50"	108x67	761 - 1074	-79 - +12
60"	130x81	920 - 1295	-95 - +14
80"	172x108	1237 - 1737	-127 - +19
100"	215x135	1555 - 2180	-158 - +24
120"	258x162	1872 - 2622	-190 - +29
150"	323x202	2348 - 3285	-238 - +36
200"	431x269	3141 - 4391	-317 - +48
250"	538x337	3935 - 5497	-396 - +59
300"	646x404	4728 - 6602	-475 - +71

HE TOP	228
TUP	

		Unit: cm
Screen Size	0	2
108x67	100	-33
130x81	121	-40
172x108	163	-54
215x135	206	-67
258x162	248	-81
323x202	312	-101
431x269	417	-135
538x337	523	-168
646x404	629	-202
	108x67 130x81 172x108 215x135 258x162 323x202 431x269 538x337	108x67 100 130x81 121 172x108 163 215x135 206 258x162 248 323x202 312 431x269 417 538x337 523

TT

Units: mm

	(
Lens type	2	3
ELPLW06/ELPLW04	90	100
ELPLM09/ELPLS04	140	150

The guaranteed operational environmental temperature is less than 35°C. *


EB-L1405U/EB-L1300U/EB-L1200U/EB-L1100U

EB-L1505U/EB-L1500U

Units: mm

Longtung	0	
Lens type	2	0
ELPLW06/ELPLW04	130	170
ELPLM08	160	170
ELPLM09/ELPLS04	200	240
ELPLM10/ELPLM06	310	340

 Polarizer (ELPPL01) Installation Distance



- **1** Possible installation range of the polarizer
- ② Shortest distance from the projection lens to the polarizer
- 3 Longest distance from the projection lens to the polarizer

4 Polarizer (ELPPL01)

H/V-Keystone

☞ "H/V-Keystone" p.63

For projectors with a built-in lens, the lens varies depending on the model. EB-L1505U/EB-L1500U: ELPLM09 EB-L1405U/EB-L1300U/EB-L1200U/EB-L1100U: ELPLM08

EB-L1505U/EB-L1500U

Lens type	Vertical	Horizontal
ELPLU03	-31° to 31°	-30° to 30°
ELPLU04/ELPLU02	-31° to 31°	-30° to 30°
ELPLR04	-31° to 31°	-30° to 30°
ELPLW05	-41° to 41°	-30° to 30°
ELPLW06/ELPLW04	-41° to 41°	-30° to 30°
ELPLM09/ELPLS04	-44° to 44°	-30° to 30°
ELPLM10/ELPLM06	-45° to 45°	-30° to 30°
ELPLM11/ELPLM07	-45° to 45°	-30° to 30°
ELPLL08/ELPLL07	-45° to 45°	-30° to 30°

EB-L1405U/EB-L1300U/EB-L1200U/EB-L1100U

Lens type	Vertical	Horizontal
ELPLX01	-16° to 16°	-16° to 16°
ELPLU03	-28° to 28°	-28° to 28°
ELPLU04/ELPLU02	-35° to 35°	-30° to 30°
ELPLR04	-34° to 34°	-30° to 30°
ELPLW05	-40° to 40°	-30° to 30°
ELPLW06/ELPLW04	-45° to 45°	-30° to 30°

Lens type	Vertical	Horizontal
ELPLM08	-45° to 45°	-30° to 30°
ELPLM09/ELPLS04	-45° to 45°	-30° to 30°
ELPLM10/ELPLM06	-45° to 45°	-30° to 30°
ELPLM11/ELPLM07	-45° to 45°	-30° to 30°
ELPLL08/ELPLL07	-45° to 45°	-30° to 30°

Curved Surface

☞ "Curved Surface" p.65

 
For projectors with a built-in lens, the lens varies depending on the model. EB-L1505U/EB-L1500U: ELPLM09 EB-L1405U/EB-L1300U/EB-L1200U/EB-L1100U: ELPLM08

The values in the table are the minimum values for R/L in the illustration. (Approximate value when projecting at maximum zoom. ELPLR04 does not support lens shift.)

TOP

EB-L1505U/EB-L1500U

Horizontally curved surface (concave)



Top view

Lens type Vertical lens shift: Vertical lens shift: Top Home position Side view Side view ELPLM09/ELPLS04 0.27 0.28 ELPLU03 0.95 0.98 ELPLU04/ELPLU02 0.45 0.53 ELPLR04 0.43 -ELPLW05 0.41 0.41 0.33 ELPLW06/ELPLW04 0.34 ELPLM10/ELPLM06 0.19 0.20 ELPLM11/ELPLM07 0.14 0.14 ELPLL08/ELPLL07 0.10 0.10


Screen

A

R

- 2 Center of the circle of which the curved surface is an arc
- L Projection distance
 - Radius of the circle of which the curved surface is an arc

Horizontally curved surface (convex)

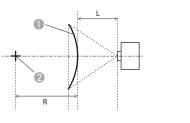

Screen

A

- 2 Center of the circle of which the curved surface is an arc
- L Projection distance
- R Radius of the circle of which the curved surface is an arc


Top view

Lens type	Vertical lens shift: Home position	Vertical lens shift: Top
	Side view	
ELPLM09/ELPLS04	0.52	0.54
ELPLU03	3.86	3.88
ELPLU04/ELPLU02	2.22	2.35
ELPLR04	1.89	-
ELPLW05	1.63	1.64
ELPLW06/ELPLW04	0.79	0.82
ELPLM10/ELPLM06	0.29	0.30
ELPLM11/ELPLM07	0.18	0.19
ELPLL08/ELPLL07	0.12	0.12





Vertically curved surface (concave)

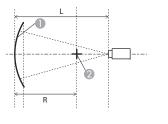


Side view

Screen

0

- 2 Center of the circle of which the curved surface is an arc
- L Projection distance
- R Radius of the circle of which the curved surface is an arc

 Vertically curved surface (convex)



1 Screen

- 2 Center of the circle of which the curved surface is an arc
- L Projection distance
- R Radius of the circle of which the curved surface is an arc


Side view

Lens type	Vertical lens shift: Home position	Vertical lens shift: Top
ELPLM09/ELPLS04	0.28	0.33
ELPLU03	1.87	1.93
ELPLU04/ELPLU02	1.10	1.29
ELPLR04	0.94	-
ELPLW05	0.82	0.85
ELPLW06/ELPLW04	0.41	0.48
ELPLM10/ELPLM06	0.16	0.19
ELPLM11/ELPLM07	0.11	0.12
ELPLL08/ELPLL07	0.08	0.08

Lens type	Vertical lens shift: Home position	Vertical lens shift: Top
ELPLM09/ELPLS04	0.19	0.22
ELPLU03	0.43	0.50
ELPLU04/ELPLU02	0.37	0.63
ELPLR04	0.35	-
ELPLW05	0.33	0.35
ELPLW06/ELPLW04	0.24	0.29
ELPLM10/ELPLM06	0.13	0.15
ELPLM11/ELPLM07	0.10	0.11
ELPLL08/ELPLL07	0.08	0.08

EB-L1405U/EB-L1300U/EB-L1200U/EB-L1100U

 Horizontally curved surface (concave)



Top view

Lens type	Vertical lens shift: Home position	Vertical lens shift: Top
ELPLM08	0.29	0.30
ELPLX01	-	2.74
ELPLU03	0.45	0.56
ELPLU04/ELPLU02	0.39	0.40
ELPLR04	0.37	-
ELPLW05	0.35	0.37
ELPLW06/ELPLW04	0.26	0.27
ELPLM09/ELPLS04	0.21	0.22
ELPLM10/ELPLM06	0.15	0.15
ELPLM11/ELPLM07	0.11	0.11
ELPLL08/ELPLL07	0.08	0.08

Screen

Center of the circle of which the

Radius of the circle of which the

curved surface is an arc

curved surface is an arc

Projection distance


0

2

L

R

Horizontally curved surface (convex)

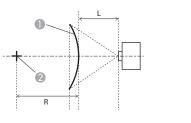

Screen

A

- 2 Center of the circle of which the curved surface is an arc
- L Projection distance
- R Radius of the circle of which the curved surface is an arc


Top view

Lens type	Vertical lens shift: Home position	Vertical lens shift: Top
ELPLM08	0.58	0.62
ELPLX01	-	8.45
ELPLU03	2.13	2.31
ELPLU04/ELPLU02	1.27	1.37
ELPLR04	1.10	-
ELPLW05	0.95	1.01
ELPLW06/ELPLW04	0.49	0.52
ELPLM09/ELPLS04	0.33	0.35
ELPLM10/ELPLM06	0.20	0.20
ELPLM11/ELPLM07	0.13	0.13
ELPLL08/ELPLL07	0.09	0.09





Vertically curved surface (concave)

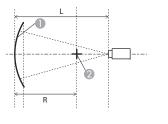


Side view

Screen

0

- 2 Center of the circle of which the curved surface is an arc
- L Projection distance
- R Radius of the circle of which the curved surface is an arc

Vertically curved surface (convex)

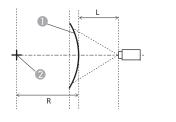

- 1 Screen
- 2 Center of the circle of which the curved surface is an arc
- L Projection distance
- R Radius of the circle of which the curved surface is an arc

Side view

Lens type	Vertical lens shift: Home position	Vertical lens shift: Top
ELPLM08	0.31	0.37
ELPLX01	-	4.16
ELPLU03	1.07	1.29
ELPLU04/ELPLU02	0.66	0.79
ELPLR04	0.57	-
ELPLW05	0.49	0.59
ELPLW06/ELPLW04	0.26	0.32
ELPLM09/ELPLS04	0.18	0.22
ELPLM10/ELPLM06	0.12	0.13
ELPLM11/ELPLM07	0.08	0.08
ELPLL08/ELPLL07	0.06	0.06

Lens type	Vertical lens shift: Home position	Vertical lens shift: Top
ELPLM08	Side view 0.21	0.25
ELPLX01	-	1.99
ELPLU03	0.37	0.68
ELPLU04/ELPLU02	0.31	0.44
ELPLR04	0.29	-
ELPLW05	0.27	0.35
ELPLW06/ELPLW04	0.19	0.22
ELPLM09/ELPLS04	0.15	0.17
ELPLM10/ELPLM06	0.11	0.11
ELPLM11/ELPLM07	0.08	0.08
ELPLL08/ELPLL07	0.06	0.06


Corner Wall

For projectors with a built-in lens, the lens varies depending on the model. EB-L1505U/EB-L1500U: ELPLM09 EB-L1405U/EB-L1300U/EB-L1200U/EB-L1100U: ELPLM08

The α in the figure is the maximum angle in which the projector can move. See the table below for detailed values. (Approximate value when projecting at maximum zoom. ELPLR04 does not support lens shift.)

EB-L1505U/EB-L1500U

Concave horizontal corner correction (correction to bilateral symmetry by using corners as the center line)

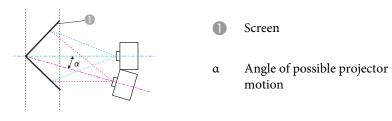


Top view

Lens type	Vertical lens shift: Home position	Vertical lens shift: Top
	Side view	
ELPLM09/ELPLS04	31°	25°
ELPLU03	24°	18°
ELPLU04/ELPLU02	29°	11°
ELPLR04	30°	-
ELPLW05	30°	24°
ELPLW06/ELPLW04	32°	21°
ELPLM10/ELPLM06	30°	30°
ELPLM11/ELPLM07	29°	29°
ELPLL08/ELPLL07	29°	28°



 Convex horizontal corner correction (correction to bilateral symmetry by using corners as the center line)




- Screen
- α Angle of possible projector motion



Lens type	Vertical lens shift: Home position	Vertical lens shift: Top
	Side view	Side view
ELPLM09/ELPLS04	15°	15°
ELPLU03	*	*
ELPLU04/ELPLU02	0°	*
ELPLR04	1°	-
ELPLW05	3°	3°
ELPLW06/ELPLW04	11°	11°
ELPLM10/ELPLM06	19°	19°
ELPLM11/ELPLM07	22°	21°
ELPLL08/ELPLL07	23°	23°

*Cannot be corrected accurately. Move the lens position to the home position.

 Concave vertical corner correction (correction to horizontal symmetry by using corners as the center line)




- Screen
- α Angle of possible projector motion

Side view

Lens type	Vertical lens shift: Home position	Vertical lens shift: Top
	Side view	Side view
ELPLM09/ELPLS04	29°	14°
ELPLU03	32°	16°
ELPLU04/ELPLU02	33°	2°
ELPLR04	32°	-
ELPLW05	32°	21°
ELPLW06/ELPLW04	31°	13°
ELPLM10/ELPLM06	25°	16°
ELPLM11/ELPLM07	24°	17°
ELPLL08/ELPLL07	23°	19°



 Convex vertical corner correction (correction to horizontal symmetry by using corners as the center line)



- Screen
- α Angle of possible projector motion


Side view

Lens type	Vertical lens shift: Home position	Vertical lens shift: Top
ELPLM09/ELPLS04	20°	8°
ELPLU03	3°	*
ELPLU04/ELPLU02	9°	*
ELPLR04	11°	-
ELPLW05	12°	3°
ELPLW06/ELPLW04	17°	3°
ELPLM10/ELPLM06	22°	13°
ELPLM11/ELPLM07	22°	16°
ELPLL08/ELPLL07	22°	17°

*Cannot be corrected accurately. Move the lens position to the home position.

EB-L1405U/EB-L1300U/EB-L1200U/EB-L1100U

 Concave horizontal corner correction (correction to bilateral symmetry by using corners as the center line)




α Angle of possible projector motion

Screen

Top view

Lens type	Vertical lens shift: Home position	Vertical lens shift: Top
ELPLM08	31°	23°
ELPLX01	-	-
ELPLU03	29°	9°
ELPLU04/ELPLU02	31°	14°
ELPLR04	32°	-
ELPLW05	33°	18°
ELPLW06/ELPLW04	31°	25°
ELPLM09/ELPLS04	30°	29°
ELPLM10/ELPLM06	29°	29°
ELPLM11/ELPLM07	29°	28°
ELPLL08/ELPLL07	28°	28°

 Convex horizontal corner correction (correction to bilateral symmetry by using corners as the center line)




- Screen
- α Angle of possible projector motion



Lens type	Vertical lens shift: Home position	Vertical lens shift: Top
ELPLM08	14°	13°
ELPLX01	-	-
ELPLU03	0°	*
ELPLU04/ELPLU02	6°	4°
ELPLR04	8°	-
ELPLW05	9°	8°
ELPLW06/ELPLW04	16°	15°
ELPLM09/ELPLS04	18°	18°
ELPLM10/ELPLM06	22°	21°
ELPLM11/ELPLM07	23°	23°
ELPLL08/ELPLL07	24°	24°

*Cannot be corrected accurately. Move the lens position to the home position.

 Concave vertical corner correction (correction to horizontal symmetry by using corners as the center line)




- Screen
- α Angle of possible projector motion

Side view

Lens type	Vertical lens shift: Home position	Vertical lens shift: Top
ELPLM08	30°	12°
ELPLX01	-	-
ELPLU03	33°	*
ELPLU04/ELPLU02	31°	6°
ELPLR04	31°	-
ELPLW05	31°	10°
ELPLW06/ELPLW04	28°	13°
ELPLM09/ELPLS04	26°	14°
ELPLM10/ELPLM06	24°	16°
ELPLM11/ELPLM07	23°	18°
ELPLL08/ELPLL07	23°	19°

*Cannot be corrected accurately. Move the lens position to the home position.

 Convex vertical corner correction (correction to horizontal symmetry by using corners as the center line)



- Screen
- α Angle of possible projector motion

Side view

Lens type	Vertical lens shift: Home position	Vertical lens shift: Top
ELPLM08	19°	5°
ELPLX01	-	-
ELPLU03	9°	*
ELPLU04/ELPLU02	14°	*
ELPLR04	15°	-
ELPLW05	16°	*
ELPLW06/ELPLW04	20°	7°
ELPLM09/ELPLS04	22°	12°
ELPLM10/ELPLM06	22°	15°
ELPLM11/ELPLM07	22°	17°
ELPLL08/ELPLL07	22°	18°

*Cannot be corrected accurately. Move the lens position to the home position.





Supported Resolutions

When the resolution of the input signals is larger than the projector's panel resolution, the image quality may decline.

Computer signals (analog RGB)

Signal	Refresh Rate (Hz)	Resolution (Dots)
VGA	60/72/75/85	640x480
SVGA	60/72/75/85	800x600
XGA	60/70/75/85	1024x768
WXGA	60	1280x768
	60	1366x768
	60/75/85	1280x800
WXGA+	60/75/85	1440x900
WXGA++	60	1600x900
SXGA	70/75/85	1152x864
	60/75/85	1280x1024
	60/75/85	1280x960
SXGA+	60/75	1400x1050
WSXGA+*1	60	1680x1050
UXGA	60	1600x1200
WUXGA*2	60	1920x1200

*1 Only compatible when **Wide** is selected as the **Resolution** from the Configuration menu.

*2 Only compatible when VESA CVT-RB (Reduced Blanking) signal is input.

Even when signals other than those mentioned above are input, it is likely that the image can be projected. However, not all functions may be supported.

Component video

Signal	Refresh Rate (Hz)	Resolution (Dots)
SDTV (480i)	60	720x480
SDTV (576i)	50	720x576
SDTV (480p)	60	720x480
SDTV (576p)	50	720x576
HDTV (720p)	50/60	1280x720
HDTV (1080i)	50/60	1920x1080
HDTV (1080p)*	50/60	1920x1080

* Only for the input signals from the Computer port.

Input signals from the DVI-D port, HDMI port, and HDBaseT port

Signal	Refresh Rate (Hz)	Resolution (Dots)
VGA	60	640x480
SVGA	60	800x600
XGA	60	1024x768
WXGA	60	1280x800
	60	1366x768
WXGA+	60	1440x900
WXGA++	60	1600x900
WSXGA+	60	1680x1050
SXGA	60	1280x960
SAGA	60	1280x1024
SXGA+	60	1400x1050
UXGA	60	1600x1200
WUXGA*1	60	1920x1200



Signal	Refresh Rate (Hz)	Resolution (Dots)
QXGA*2	60	2048x1536
WQHD*2	60	2560x1440
WQXGA*1,2	60	2560x1600
SDTV (480i/480p)	60	720x480
SDTV (576i/576p)	50	720x576
HDTV (720p)	50/60	1280x720
HDTV (1080i)	50/60	1920x1080
HDTV (1080p)	24/30/50/60	1920x1080
4Kx2K*2	24/25/30/50/60	3840x2160
4Kx2K (SMPTE)*2	24/50/60	4096x2160

*1 Only compatible when VESA CVT-RB (Reduced Blanking) signal is input.

*2 Only for HDMI input.

Input signals from SDI input port*

Signal	Refresh Rate (Hz)	Resolution (Dots)	Mode	Color differ- ence signals	Num- ber of Bits	Level
SDTV (480i)	59.94	720x480	SD-SDI	YPbPr 4:2:2	10 bits	-
SDTV (576i)	50	720x576				
HDTV (720p)	50/59.94/60	1280x720	HD-SDI			
HDTV (1080i)	50/59.94/60	1920x1080	-			
HDTV (1080p)	23.98/24/2 5/29.97/30	1920x1080				
HDTV (1080p)	50/59.94/60	1920x1080	3G-SDI			А

* EB-L1505U/EB-L1500U/EB-L1405U only.



Projector General Specifications

Product name	EB-L1505U	EB-L1500U	EB-L1405U	EB-L1300U	EB-L1200U	EB-L1100U
Dimensions		586 (W) x 185 (H) x 492 (D) mm (not including raised section)				
LCD panel size	1.03"	Wide		0.76	' Wide	
Display method	Polysilicon			T active matrix		
Resolution	2,304,000					
	WUXGA (1920 (W) x 1200 (H) dots) x 3					
Focus adjustment		Automatic				
Zoom adjustment	Automatic (1-1.6x)*1 Automatic (1-1.6x)*2					
Lens shift ^{*3}	Automatic (Maximum vertical direction of approx. 60%, Maximum horizontal direction of approx. 18%)*4Automatic (Maximum vertical direction of approx. 67%, Maximum horizontal dir approx. 30%)*5			orizontal direction o		
Light source		Laser diode				
Light source out- put power	252 W		162	2 W	144 W	108 W
Wavelength		450-460 nm				
Light source life	Approximately 20,000 hours (Light Source Mode: Normal, Quiet)					
expectancy ^{*6}		Approximately 30,000 hours (Light Source Mode: Extended)				
Max. audio output	- 10 W monaural					
Speaker	- 1					
Power supply	100-240V AC±10% 50/60Hz 9.6-4.2 A 100-240V AC±1		100 24037 4 6 1 100		100-240V AC±10%	100-240V AC±10%



Power con- sump- tion	100 to 120 V area	Rated power consumption: 955 W Standby power consumption (Communication On): 2.2 W Standby power consumption (Communication Off): 0.23 W	Rated power consumption: 658 W Standby power consumption (Communication On): 2.3 W Standby power consumption (Communication Off): 0.22 W	Rated power consump- tion: 594 W Standby power con- sumption (Communi- cation On): 2.3 W Standby power con- sumption (Communi- cation Off): 0.22 W	Rated power consump- tion: 479 W Standby power con- sumption (Communi- cation On): 2.3 W Standby power con- sumption (Communi- cation Off): 0.22 W			
	220 to 240 V area	Rated power consumption: 908 W Standby power consumption (Communication On): 2.3 W Standby power consumption (Communication Off): 0.33 W	Rated power consumption: 625 W Standby power consumption (Communication On): 2.4 W Standby power consumption (Communication Off): 0.28 W	Rated power consump- tion: 566 W Standby power con- sumption (Communi- cation On): 2.4 W Standby power con- sumption (Communi- cation Off): 0.28 W	Rated power consump- tion: 454 W Standby power con- sumption (Communi- cation On): 2.4 W Standby power con- sumption (Communi- cation Off): 0.28 W			
Operati	ng altitude	Altitude 0 to 3,048 m						
Operating temper- ature		0 to +45°C*7 (Altitude of 0 to 1,500 m, no condensation) 0 to +40°C*7 (Altitude of 1,501 to 3,048 m, no condensation)						
Storage tempera- ture		-10 to +60°C (No condensation)						
Mass		Approx. 24 kg	Approx. 21 kg Approx. 20 kg					

*1 The specifications are when ELPLM09 is attached.

*2 The specifications are when ELPLM08 is attached.

*3 ELPLR04 does not support lens shift.

*4 ELPLU03/ELPLW05 has a maximum vertical direction of approx. 24% and a maximum horizontal direction of approx. 10%.

*5 ELPLX01 has a maximum upward direction of approx. 17% and a maximum horizontal direction of approx. 10%.

*6 Approximate time until light source brightness is reduced by half.

*7 If the surrounding temperature gets too high, the brightness is automatically dimmed. (Approximately 40°C at an altitude of 0 to 1500 m, and approximately 35°C at an altitude of 1,501 to 3,048 m; however, this may vary depending on the surroundings and so on.)

Product name	EB-L1505U	EB-L1500U	EB-L1405U	EB-L1300U	EB-L1200U	EB-L1100U	
--------------	-----------	-----------	-----------	-----------	-----------	-----------	--



Connec- tors	Computer Port	1	Mini D-Sub15-pin (female) blue		
	Audio1 port	1	Stereo mini jack (3.5Φ)		
	BNC port 1		5BNC (female)		
	Audio2 port 1		Stereo mini jack (3.5Φ)		
	DVI-D port	1	DVI-D 24pin Single link HDCP compatible		
	HDMI port	1	HDMI HDCP2.2 supported (Audio is only supported by PCM)		
	Audio3 port	1	Stereo mini jack (3.5Φ)		
	Audio Out port	1	Stereo mini jack (3.5Φ)		
	Monitor Out port 1		Mini D-Sub15-pin (female) black		
	HDBaseT port	1	RJ-45 (HDCP2.2 supported)		
	LAN port 1		RJ-45		
	SDI input port	1	1BNC (female) -		
	Service port*1RS-232C port1		USB connector (Type B)		
			Mini D-Sub 9-pin (male)		
	Remote port 1		Stereo mini jack (3.5Φ)		
	USB port (Only for wireless LAN unit)*		USB connector (Type A)		

* Supports USB 2.0. However, USB ports are not guaranteed to operate all devices that support USB.

This product is also designed for IT power distribution system with phase-to-phase voltage 230V.

DECLARATION of CONFORMITY According to 47CFR, Part 2 and 15

Class B Personal Computers and Peripherals; and/or CPU Boards and Power Supplies used with Class B Personal Computers

We:	Epson America, Inc.
Located at:	3840 Kilroy Airport Way
	MS: 3-13
	Long Beach, CA 90806
Tel:	562-981-3840

Declare under sole responsibility that the product identified herein, complies with 47CFR Part 2 and 15 of the FCC rules as a Class B digital device. Each product marketed, is identical to the representative unit tested and found to be compliant with the standards. Records maintained continue to reflect the equipment being produced can be expected to be within the variation accepted, due to quantity production and testing on a statistical basis as required by 47CFR 2.909. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Trade Name:	EPSON
Type of Product:	LCD Projector
Model:	H733C/H734C/H735C/H739C/H792C



FCC Compliance Statement For United States Users

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING


The connection of a non-shielded equipment interface cable to this equipment will invalidate the FCC Certification or Declaration of this device and may cause interference levels which exceed the limits established by the FCC for this equipment. It is the responsibility of the user to obtain and use a shielded equipment interface cable with this device. If this equipment has more than one interface connector, do not leave cables connected to unused interfaces. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.



Units: mm

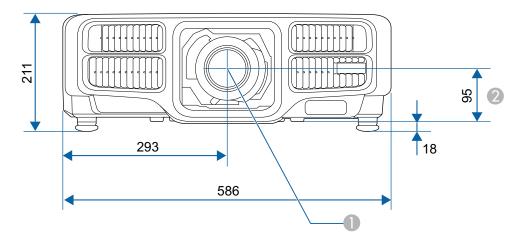

- Center of lens
- ② Distance from center of lens to suspension bracket fixing point

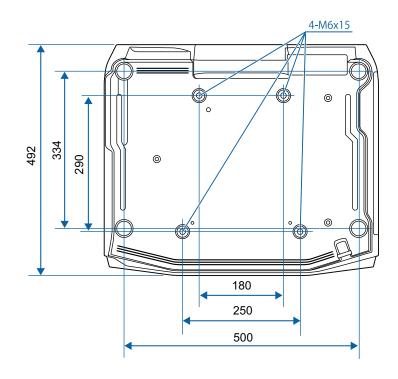



This section briefly explains the difficult terms that are not explained in the text of this guide. For details, refer to other commercially available publications.

AMX Device Discovery	AMX Device Discovery is a technology developed by AMX to facilitate AMX control systems for easy operation of the target equipment.
	Epson have implemented this protocol technology, and have provided a setting to enable the protocol function (ON).
	See the AMX Web site for more details.
	URL: http://www.amx.com/
Aspect Ratio	The ratio between an image's length and its height. Screens with a horizontal:vertical ratio of 16:9, such as HDTV screens, are known as wide screens. SDTV and general computer displays have an aspect ratio of 4:3.
Component Video	A method that separates the video signal into a luminance component (Y), and a blue minus luminance (Cb or Pb) and a red minus luminance (Cr or Pr).
Composite video	A method that combines the video signal into a luminance component and a color component for transmission down a single cable.
Contrast	The relative brightness of the light and dark areas of an image can be increased or decreased to make text and graphics stand out more clearly, or to make them appear softer. Adjusting this particular property of an image is called contrast adjustment.
Control4 Simple Device Discovery Protocol (SDDP)	Control4 SDDP is a technology developed by Control4 to allow Control4 control systems to acquire device information for the projector. Epson have implemented this protocol technology, and have provided a setting to enable the protocol function (ON). See the Control4 Web site for more details.
	URL: http://www.control4.com/
DHCP	An abbreviation of Dynamic Host Configuration Protocol, this protocol automatically assigns an <u>IP Address</u> to equipment connected to a network.
DICOM	An acronym for Digital Imaging and Communications in Medicine. An international standard that defines image standards and a communications protocol for medical images.
Gateway Address	This is a server (router) for communicating across a network (subnet) divided according to Subnet Mask.
HDBaseT	The connection standard for consumer electronics determined by the HDBaseT Alliance. Communicates various control signals such as uncompressed HD video, audio and 100BASE-TX Ethernet using a LAN cable.
HDCP	HDCP is an abbreviation for High-bandwidth Digital Content Protection. It is used to prevent illegal copying and protect copyrights by encrypting digital signals sent over DVI and HDMI ports. HDCP2.2 is a copyright protection standard for 4K content.
HDTV	An abbreviation for High-Definition Television that refers to high-definition systems which satisfy the following conditions. • Vertical resolution of 720p or 1080i or greater (p = <u>Progressive</u>), i = <u>Interlace</u>) • Screen <u>Aspect Ratio</u> of 16:9
Infrastructure mode	A method for wireless LAN connection in which devices communicate through access points.
Interlace	Transmits information needed to create one screen by sending every other line, starting from the top of the image and working down to the bottom. Images are more likely to flicker because one frame is displayed every other line.



IP Address	A number to identify a computer connected to a network.
Progressive	Projects information to create one screen at a time, displaying the image for one frame. Even though the number of scan lines is the same, the amount of flicker in images decreases because the volume of information has doubled compared with an interlace system.
Refresh Rate	The light-emitting element of a display maintains the same luminosity and color for an extremely short time. Because of this, the image must be scanned many times per second to refresh the light-emitting element. The number of refresh operations per second is called the Refresh rate and is expressed in hertz (Hz).
SDTV	An abbreviation for Standard Definition Television that refers to standard television systems which do not satisfy the conditions for HDTV ⁺ High-Definition Television.
SNMP	An abbreviation for Simple Network Management Protocol, which is the protocol for monitoring and controlling devices such as routers and computers connected to a TCP/IP network.
sRGB	An international standard for color intervals that was formulated so that colors that are reproduced by video equipment can be handled easily by computer operating systems (OS) and the Internet. If the connected source has an sRGB mode, set both the projector and the connected signal source to sRGB.
Subnet Mask	This is a numerical value that defines the number of bits used for the network address on a divided network (subnet) from the IP address.
Sync.	The signals output from computers have a specific frequency. If the projector frequency does not match this frequency, the resulting images are not of a good quality. The process of matching the phases of these signals (the relative position of the crests and the troughs in the signal) is called Synchronization. If the signals are not synchronized, flickering, blurriness, and horizontal interference occur.
Tracking	The signals output from computers have a specific frequency. If the projector frequency does not match this frequency, the resulting images are not of a good quality. The process of matching the frequency of these signals (the number of crests in the signal) is called Tracking. If Tracking is not carried out correctly, wide vertical stripes appear in the signal.
Trap IP Address	This is the <u>IP Address</u> for the destination computer used for error notification in SNMP.

General Notes



All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. No patent liability is assumed with respect to the use of the information contained herein. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

The contents of this guide may be changed or updated without further notice.

Illustrations in this guide and the actual projector may differ.

Restriction of Use

When this product is used for applications requiring high reliability/safety such as transportation devices related to aviation, rail, marine, automotive etc.; disaster prevention devices; various safety devices etc; or functional/precision devices etc, you should use this product only after giving consideration to including fail-safes and redundancies into your design to maintain safety and total system reliability. Because this product was not intended for use in applications requiring extremely high reliability/safety such as aerospace equipment, main communication equipment, nuclear power control equipment, or medical equipment related to direct medical care etc, please make your own judgment on this product's suitability after a full evaluation.

About Notations

Microsoft® Windows® 2000 operating system Microsoft® Windows® XP operating system Microsoft® Windows Vista® operating system Microsoft® Windows® 7 operating system Microsoft® Windows® 8 operating system Microsoft® Windows® 8.1 operating system Microsoft® Windows® 10 operating system

In this guide, the operating systems above are referred to as "Windows 2000", "Windows XP", "Windows Vista", "Windows 7", "Windows 8", "Windows 8.1", and "Windows 10". Furthermore, these may be referred to as the collective term Windows, and multiple versions of Windows may be referred to as, for example, Windows 2000/XP/Vista/7/8/8.1/10, with the Windows notation omitted.

Mac OS X 10.3.x Mac OS X 10.4.x Mac OS X 10.5.x Mac OS X 10.6.x OS X 10.7.x OS X 10.7.x OS X 10.9.x OS X 10.9.x OS X 10.10.x OS X 10.11.x

In this guide, the operating systems above are referred to as "Mac OS X 10.3.x", "Mac OS X 10.4.x", "Mac OS X 10.5.x", "Mac OS X 10.6.x", "OS X 10.7.x", "OS X 10.8.x", "OS X 10.9.x", "OS X 10.10.x", and "OS X 10.11.x". Furthermore, the collective term "OS X" is used to refer to them all.

Trademarks and Copyrights

"EPSON" is a registered trademark of the Seiko Epson Corporation. "EXCEED YOUR VISION" and "ELPLP" are trademarks or registered trademarks of the Seiko Epson Corporation.

Mac, Mac OS, and OS X, are trademarks of Apple Inc.

Microsoft, Windows, Windows Vista, PowerPoint, and Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

HDMI and High-Definition Multimedia Interface are the trademarks or registered trademarks of HDMI Licensing LLC.

PJLink trademark is a trademark applied for registration or is already registered in Japan, the United States of America and other countries and areas.

WPA[™] and WPA2[™] are registered trademarks of the Wi-Fi Alliance.

"QR Code" is a registered trademark of DENSO WAVE INCORPORATED.

Crestron and Crestron RoomView are registered trademarks of Crestron Electronics, Inc.

Art-Net[™] Designed by and Copyright Artistic Licence Holdings Ltd. Extron[®] and XTP[®] are registered trademarks of Extron Electronics. HDBaseT[™] and the HDBaseT Alliance logo are trademarks of the HDBaseT Alliance. Other product names used herein are also for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

©SEIKO EPSON CORPORATION 2016. All rights reserved.

Indication of the manufacturer and the importer in accordance with requirements of directive 2011/65/EU (RoHS)

Manufacturer: SEIKO EPSON CORPORATION Address: 3-5, Owa 3-chome, Suwa-shi, Nagano-ken 392-8502 Japan Telephone: 81-266-52-3131 http://www.epson.com/

Importer: SEIKO EUROPE B.V. Address: Azië building, Atlas ArenA, Hoogoorddreef 5, 1101 BA Amsterdam Zuidoost The Netherlands Telephone: 31-20-314-5000 http://www.epson.com/europe.html

TOP



The following table lists the meaning of the safety symbols labeled on the equipment.

No.	Symbol mark	Approved standards	Meaning
0		IEC60417 No. 5007	"ON" (power) To indicate connection to the mains.
2	0	IEC60417 No. 5008	"OFF" (power) To indicate disconnection from the mains.
3	Ç	IEC60417 No. 5009	Stand-by To identify the switch or switch position by means of which part of the equipment is switched on in order to bring it into the stand-by condition.
4	\triangle	ISO7000 No. 0434B IEC3864-B3.1	Caution To identify general caution when using the product.
6		IEC60417 No. 5041	Caution, hot surface To indicate that the marked item can be hot and should not be touched without taking care.
6		IEC60417 No. 6042 ISO3864-B3.6	Caution, risk of electric shock To identify equipment that has risk of electric shock.
7		IEC60417 No. 5957	For indoor use only To identify electrical equipment designed primarily for indoor use.
8		IEC60417 No. 5926	Polarity of d.c. power connector To identify the positive and negative connections (the polarity) on a piece of equipment to which a d.c. power supply may be connected.

No.	Symbol mark	Approved standards	Meaning
9		IEC60417 No. 5001B	Battery, general On battery powered equipment. To identify a device for instance a cover for the battery compartment, or the connector terminals.
0	(+ (+ –	IEC60417 No. 5002	Positioning of cell To identify the battery holder itself and to identify the positioning of the cell(s) inside the battery holder.
0		IEC60417 No. 5019	Protective earth To identify any terminal which is intended for connection to an external conductor for protection against electric shock in case of a fault, or the terminal of a protective earth electrode.
(2)	Ţ	IEC60417 No. 5017	Earth To identify an earth (ground) terminal in cases where symbol No. 11 is not explicitly required.
(3)	\sim	IEC60417 No. 5032	Alternating current To indicate on the rating plate that the equipment is suitable for alternating current only; to identify relevant terminals.
(2)		IEC60417 No. 5031	Direct current To indicate on the rating plate that the equipment is suitable for direct current only; to identify relevant terminals.
ß		IEC60417 No. 5172	Class II equipment To identify equipment meeting the safety requirements specified for Class II equipment according to IEC 61140.

No.	Symbol mark	Approved standards	Meaning
6	\bigcirc	ISO 3864	General prohibition To identify actions or operations that are prohibited.
1		ISO 3864	Contact prohibition To indicate injury that could occur due to touching a specific part of the equipment.
13	∢-⊁- ≩ Г		Never look into the projection lens while the projector is on.
19			To indicate that the marked item don't place anything on projector.
20		ISO3864 IEC60825-1	Caution, laser radiation To indicate the equipment has a laser radiation part.
2)		ISO 3864	Disassembly prohibition To indicate a risk of injury, such as electric shock, if the equipment is disassembled.
22	∢ ≯× ¤		Never look into the lens while the LED for lighting is on.
23	Ü	IEC60417 No. 5266	Standby, partial standby To indicate that part of the equipment is in the ready status.
24		ISO3864 IEC60417 No. 5057	Caution, movable parts To indicate that you must keep away from movable parts according to protection standards.





A

A/V Mute	19, 107
A/V Settings	136
Air exhaust vent	16
Air Filter Notice	133
Air filter replacement period	186
AMX Device Discovery	144
Art-Net	144
Aspect	78, 129
Audio Out port	17
Audio1 port	17
Audio2 port	17
Audio3 port	17
Auto Setup	130

B

Basic menu	139
Batch setup function	147
Веер	135
Black Level	137
BNC port	. 17
BNC Sync Termination	135
Brightness	128

С

Ceiling 134
Ceiling mount fixing points 19
Cinema 74
Cleaning 183
Cleaning the air filter and air intake vent
Cleaning the projector's surface 183

Color Adjustment 128
Color adjustment 128
Color Mode 74, 127
Color Saturation 128
Color Uniformity 133, 136
Computer Port 17
Configuration menu 124
Consumables 211
Contrast 128
Control panel 19
Control ⁴ SDDP 144
Corner Wall
Crestron RoomView 144, 202
Cross 109

D

Date & Time 135
DHCP 141, 142
DICOM SIM 74
Direct Power On 134
Display 133
Display Background 133
Distance 212
Document Camera 211
Dynamic 74
Dynamic Contrast 128

E

94
37
94
20
00

nt ID	146
ended menu	133
on XTP	136
oom	108
Join	

F

Filter Indicator	157
Focus	. 36
Freeze	108
Front	134
Front adjustable feet	. 18
Full Lock	119

G


Gateway Address 141	, 142
Geometry Correction	131

\boldsymbol{H}

H/V-Keystone	131
HDBaseT	136
HDBaseT port	. 18
HDBaseT Signal Quality	146
HDMI port	
Help function	155
High Altitude Mode	134
Home Screen	. 56
How to replace the air filter	186

Ι

Image Menu	127
Indicators	157
Info menu	145

 

L

Language	137
Lens Operation Lock	120
Lens Replacement Cover	
Lens shift	. 33

M

Mail Notification 143, 199
Memory 132
Menu 19
Message Broadcasting 144, 194
Messages 133
Monitor displays 239
Monitor Out port 17
Multi-Projection 74, 137
Multi-Projection function 90

N

Network Configuration	138
Network information	138
Network menu	137
Notification email address 1/2/3	143

0

Operating Temperature	242
Operation	134
Optional accessories	211

Overheati	ng	159
Overscan		130

Р

Panel Alignment 133
Part names and functions 15
Password protect 117
PJLink 201
PJLink Password 139
Port Number 143
Position 130
Power inlet 16
Power On Protection 117
Presentation 74
Priority Gateway 144
Projection 134
Projection lens 27
Projector 56, 58
Projector ID 40
Projector keyword 140
Projector Name 139

Q

Quick Corner	131
Quick Wireless Connection USB Key	. 53

R

Reading mail	199
Rear	134
Rear feet	. 18
Refresh Rate	145
Remote control	. 20
Remote control button lock	120

Remote control ID 41
Remote port 18
Remote receiver 15
Replacing batteries 23
Reset All 146
Reset Memory 146
Reset menu 146
Resolution 129, 145
RoomView
RS-232C port 18

S

Scale 130, 137
Schedule 113
Schedule Settings 137
Screen 133
Screen settings
Screen Size 106
Screen size 212
Search Access Point 142
Serial Number 146
Settings menu 131
Sharpness 128
Signal menu 129
SMTP Server 143
SNMP
Soft keyboard 139
Source 105, 145
Source Search 19, 59
Specifications 241
Split Screen 131
Split Screen Setup 105
sRGB





Standby Mode 13	36
Startup Screen 13	33
Status 14	16
Status indicators 1	15
Storage temperature 24	12
Subnet Mask 141, 14	12
Supported monitor displays 23	39
Swap Screens 10)6
Sync Info 14	45
Sync 12	29

T

Test Pattern 31,	132
Tint	128
Tracking	129
Trap IP Address 1/2	143

U

User Button	132
User's Logo	109
User's Logo Protection	117

V

Volume		131
--------	--	-----

W

Web browser	194
Web Control Password	140
White Balance	128
Wired LAN menu	142
Wireless LAN menu	140