

FAV 80\_TURBO INTELLIGENCE

FAV 70\_INTELLIGENCE

# LECOASPIRA Vaporetto®

## MANUALE DI ISTRUZIONI

INSTRUCTION MANUAL  
MANUEL D'INSTRUCTIONS

MANUAL DE INSTRUCCIONES  
BEDIENUNGSANLEITUNG

MANUAL DE INSTRUÇÕES

**REGISTRA IL TUO PRODOTTO  
REGISTER YOUR PRODUCT  
ENREGISTREZ VOTRE PRODUIT  
REGISTRA TU PRODUCTO  
GERÄTREGISTRIERUNG  
REGISTE O SEU PRODUTO  
[www.polti.com](http://www.polti.com)**




**VIDEO DEMO  
[www.youtube.com](http://www.youtube.com)**





**TUBO FLESSIBILE VAPORE + ASPIRAZIONE**  
FLEXIBLE STEAM HOSE + VACUUM  
TUBE FLEXIBLE VAPEUR + ASPIRATION  
TUBO FLEXIBLE VAPOR + ASPIRACIÓN  
DAMPF- UND SAUGSCHLAUCH  
TUBO FLEXÍVEL VAPOR + ASPIRAÇÃO

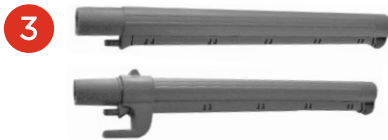

**TUBO PROLUNGA + TUBO PROLUNGA c/PARKING**  
EXTENSION TUBE + EXTENSION TUBE w/PARKING  
TUBE RALLONGE + TUBE RALLONGE a/PARKING  
TUBO ALARGADOR + TUBO ALARGADOR c/PARKING  
VERLÄNGERUNGSROHR + VERLÄNGERUNGSROHR  
MIT HALTERUNG  
TUBO EXTENSÃO + TUBO EXTENSÃO C/ ARRUMAÇÃO



**CARAFFA**  
JUG  
CARAFE  
JARRA  
NACHFÜLLBEHÄLTER  
JARRA



**CUFFIA**  
CAP  
BONNETTE  
FUNDA  
HAUBE  
PROTEÇÃO



**LANCIA ASPIRAZIONE**  
SUCTION LANCE  
SUCEUR  
LANZA DE ASPIRACIÓN  
SAUGLANZE  
LANÇA ASPIRAÇÃO



**CONCENTRATORE VAPORE + SET SPAZZOLINI COLORATI + LANCIA VAPORE**  
STEAM CONCENTRATOR + SET OF COLOURED BRUSHES + STEAM NOZZLE  
CONCENTRATEUR VAPEUR + KIT BROSSES COLORÉES + LANCIA VAPEUR  
CONCENTRADOR DE VAPOR + SET DE CEPILLOS DE COLORES + BOQUILLA VAPOR  
DAMPFKONZENTRIERER + SATZ KLEINE FARBIGE BÜRSTEN + DAMPFDÜSE  
CONCENTRADOR VAPOR + KIT ESCOVINHAS COLORIDAS + LANÇA VAPOR



**SPAZZOLA MULTIUSO**  
UNIVERSAL BRUSH  
BROSSE MULTIFONCTIONS  
BOQUILLA MULTIUSOS  
MEHRZWECKBÜRSTE  
ESCOVA MULTIUSO



**TELAIO SETOLATO + TELAIO GOMMATO + TELAIO TAPPETI/MOQUETTE**  
BRISTLE FRAME + RUBBER FRAME + RUG/CARPET FRAME  
BROSSE À SOIES + CADRE EN CAOUTCHOUC + CADRE TAPIS/MOQUETTE  
CHASIS CON CERDAS + CHASIS ENGOMADO + CHASIS PARA  
ALFOMBRAS/MOQUETAS  
BÜRSTENAUFSATZ + GUMMIRAHMEN + RAHMEN FÜR TEPPICHE/TEPPICHBÖDEN  
ESCOVA COM CERDA + ESCOVA DE BORRACHA + ESCOVA TAPETES/ALCATIFAS




**FIALA BIOECOLOGICO**  
BIOECOLOGICO PHIAL  
FLACON BIOECOLOGICO  
AMPOLLA DE BIOECOLOGICO  
BIOECOLOGICO-AMPULLE  
FRASCO BIOECOLÓGICO



**GUARNIZIONI DI RICAMBIO**  
SPARE SEALS  
JOINTS DE RECHANGE  
JUNTAS DE RECAMBIO  
ERSATZDICHTUNGEN  
GUARNIÇÕES DE SUBSTITUIÇÃO



**BOCCHETTA VAPORE + ASPIRAZIONE**  
STEAM+SUCTION NOZZLE  
PETIT EMBOUT VAPEUR+ASPIRATION  
BOQUILLA VAPOR+ASPIRACIÓN  
DAMPF-/SAUGDÜSE  
BOCA PEQUENA VAPOR+ASPIRAÇÃO

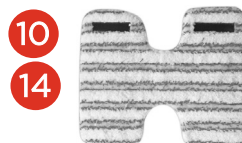

**N. 1 PANNI UNIVERSALI + 1 PARQUET**  
1 UNIVERSAL CLOTH + 1 PARQUET  
1 LINGETTE UNIVERSELLES + 1 PARQUET  
DÉLICATE + 1 PARQUET  
1 PAÑOS UNIVERSALES + 1 PARQUET  
1 UNIVERSALTÜCHER + 1 PARKETT TUCH  
1 PANOS UNIVERSAIS + 1 + 1 PARQUET



**SPAZZOLINO PULIZIA SECCHIO**  
COLLECTOR CLEANING BRUSH  
BROSSE NETTOYAGE BAC  
CEPILLO DE LIMPIEZA EN SECO  
REINIGUNGSBÜRSTE FÜR BEHÄLTER  
ESCOVA LIMPEZA BALDE



**TERGIVETRO 200 mm**  
200 mm SQUEEGEE INSERT  
ACCESSOIRE RACLETTES VITRES 200mm  
LIMPIA CRISTALES DE 200 mm  
FENSTERREINIGER 200 mm  
LIMPA-VIDROS DE 200 MM

## OPTIONAL

PFEU0021



**FERRO DA STIRO ACCESSORIO**  
IRON ACCESSORY  
FER À REPASSER ACCESSOIRE  
PLANCHA ACCESORIO  
BÜGELEISEN ZUBEHÖR  
FERRO DE ENGOMAR PROFISSIONAL

PAEU0226



**FILTRO HEPA**  
HEPA FILTER  
FILTRE HEPA  
FILTRO HEPA  
HEPA-FILTER  
FILTRO HEPA

PAEU0250



**N. 3 SPAZZOLINI c/SETOLE NYLON**  
3 BRUSHES w/ NYLON BRISTLES  
3 PETITES BROSSES a/SOIES EN NYLON  
3 CEPILLOS c/CERDAS DE NYLON  
3 KLEINE BÜRSTEN MIT NYLONBORSTEN  
3 ESCOVAS COM CERDAS NYLON

PAEU0292



**MINI TURBO SPAZZOLA**  
MINI TURBO BRUSH  
MINI TURBO BROSSSE  
MINI CEPILLO TURBO  
MINITURBOBÜRSTE  
MINITURBO ESCOVA

PAEU0296



**N. 3 SPAZZOLINI COLORATI c/SETOLE NYLON**  
3 COLOURED BRUSHES w/ NYLON BRISTLES  
3 PETITES BROSSES COLORÉES a/SOIES EN NYLON  
3 CEPILLOS DE COLORES c/CERDAS DE NYLON  
3 BUNTE KLEINE BÜRSTEN MIT NYLONBORSTEN  
3 ESCOVAS COLORIDAS COM CERDAS NYLON

PAEU0297




**N. 3 SPAZZOLINI c/SETOLE OTTONE**  
3 BRUSHES w/ BRASS BRISTLES  
3 PETITES BROSSES a/SOIES EN LAITON  
CEPILLOS DE COLORES c/CERDAS DE LATÓN  
3 KLEINE BÜRSTEN MIT MESSINGBORSTEN  
3 ESCOVAS COLORIDAS COM CERDAS BRONZE

PAEU0319




**N. 1 PANNO UNIVERSALE + 1 DELICATO + 1 CUFFIA**  
1 UNIVERSAL CLOTH + 1 DELICATE + 1 CAP  
1 LINGETTE UNIVERSELLES + 1 LINGETTE DÉLICATE + 1 BONNETTE  
1 PAÑOS UNIVERSALES + 1 DELICADO + 1 FUNDA  
1 UNIVERSALTÜCHER + 1 WEICHES TUCH + 1 HAUBEN  
1 PANOS UNIVERSAIS + 1 DELICADO + 1 PROTEÇÃO

PAEU0316

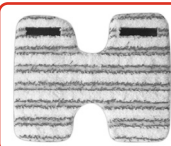

**N. 2 PANNI UNIVERSALI**  
2 UNIVERSAL CLOTHS  
2 LINGETTES UNIVERSELLES  
2 PAÑOS UNIVERSALES  
2 UNIVERSALTÜCHER  
2 PANOS UNIVERSAIS

PAEU0317

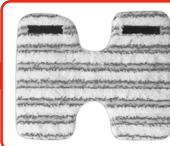

**N. 2 PANNI DELICATI**  
2 DELICATE CLOTHS  
2 LINGETTES DÉLICATES  
2 PAÑOS DELICADOS  
2 WEICHE TÜCHER  
PANOS DELICADOS

PAEU0318



**N. 2 CUFFIE**  
2 CAPS  
2 BONNETTES  
2 FUNDAS  
2 HAUBEN  
2 PROTEÇÕES

PAEU0072

PAEU0086

PAEU0088

PAEU0320

Bioecologico

PAEU0094

Kalstop


PAEU0108







**CADDY**  
CADDY  
CADDY  
CADDY  
CADDY  
CADDY

Gli accessori optional sono disponibili all'acquisto nei migliori negozi di elettrodomestici o sul sito [www.polti.com](http://www.polti.com).  
The optional accessories are on sale at all the best domestic appliance retailers or online at [www.polti.com](http://www.polti.com).  
Les accessoires en option sont disponibles dans les meilleurs magasins d'appareils électroménagers ou sur le site [www.polti.com](http://www.polti.com).  
Los accesorios opcionales están en venta en las mejores tiendas de electrodomésticos o en la página web [www.polti.com](http://www.polti.com).  
Die optionalen Zubehörteile sind in gut geführten Haushaltsgeschäften oder auf [www.polti.com](http://www.polti.com) erhältlich.  
Os acessórios opcionais estão disponíveis para compra nas melhores lojas de eletrodomésticos ou no site [www.polti.com](http://www.polti.com).





USO CORRETTO pag. 11  
 CORRECT USE page 27  
 UTILISATION CORRECTE p. 43  
 USO CORRETTO pág. 61  
 SACHGEMÄSSE VERWENDUNG S. 77  
 USO CORRETO pág. 95



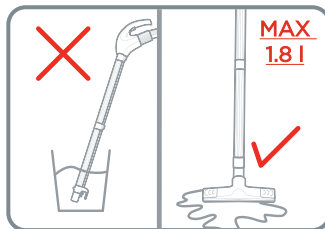


PREPARAZIONE ALL'USO pag. 11  
 PREPARING FOR USE page 27  
 PRÉPARATION p. 44  
 PREPARACIÓN PARA EL USO pág. 61  
 VORBEREITUNG DES GERÄTS S. 78  
 PREPARAÇÃO PARA UTILIZAÇÃO pág. 95

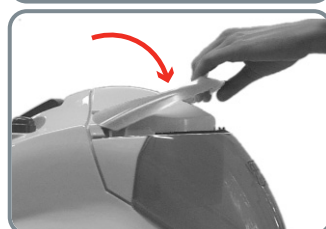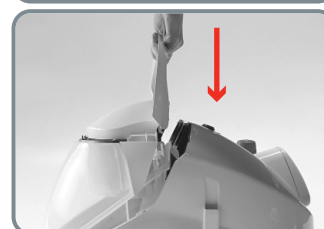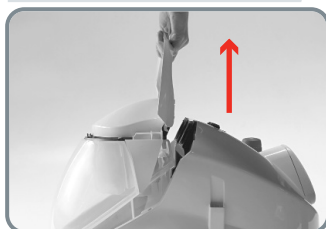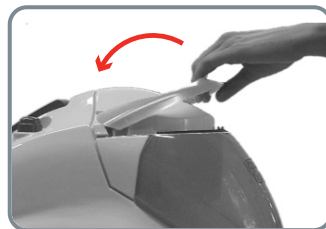


CONNESSIONE ACCESSORI pag. 12  
 CONNECTION OF ACCESSORIES page 28  
 RACCORDMENT ACCESSOIRES p. 44  
 CONEXIÓN DE LOS ACCESORIOS pág. 62  
 ANSCHLUSS DER ZUBEHÖRTEILE S. 78  
 LIGAÇÃO ACESSÓRIOS pág. 96

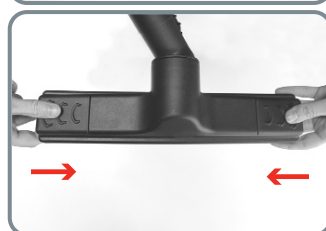
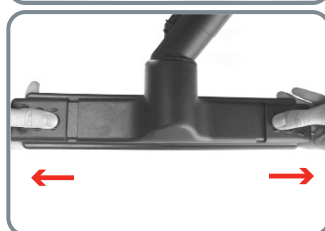
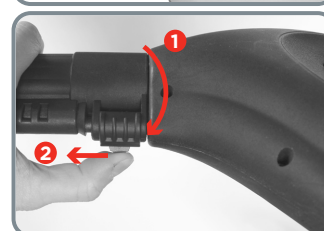
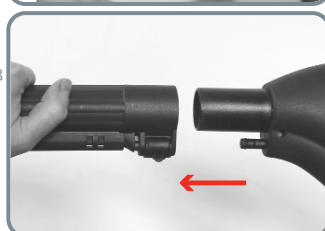


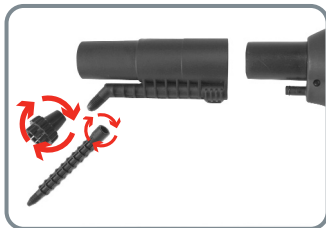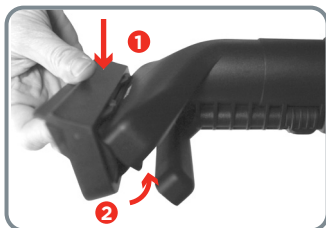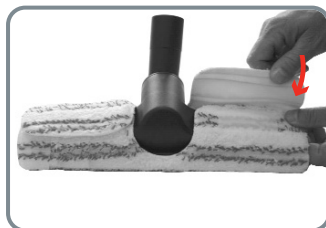






SELEZIONE PROGRAMMI pag. 12  
PROGRAMME SELECTION page 28  
SÉLECTION DES PROGRAMMES p. 44  
SELECCIÓN DE PROGRAMAS pág. 62  
PROGRAMM-AUSWAHL S. 78  
SELEÇÃO PROGRAMAS pág. 96

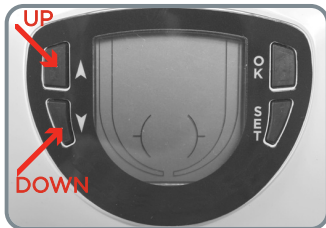

FUNZIONE MANUALE pag. 12  
MANUAL FUNCTION page 28  
FONCTION MANUELLE p. 45  
FUNCIÓN MANUAL pág. 62  
HANDBETRIEB S. 78  
FUNÇÃO MANUAL pág. 96

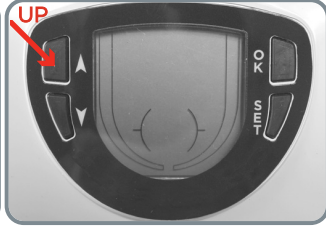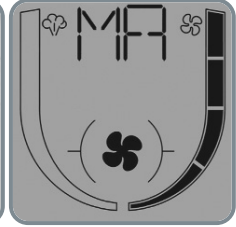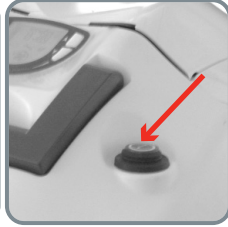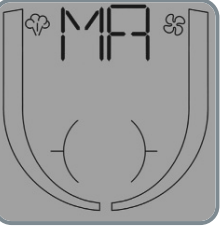

MANUTENZIONE pag. 17  
MAINTENANCE page 33  
ENTRETIEN p. 50  
MANTENIMIENTO pág. 67  
WARTUNG S. 84  
MANUTEÇÃO pág. 101

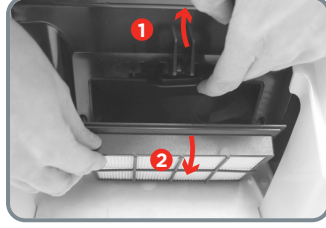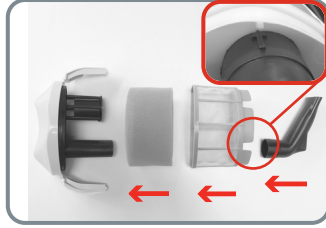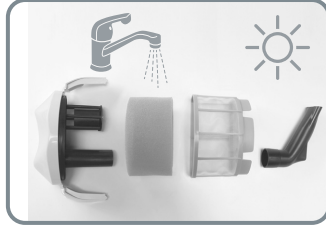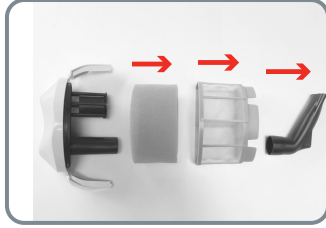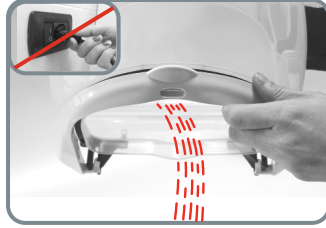

RIMESSAGGIO pag. 18  
STORAGE page 33  
RANGEMENT p. 51  
ALMACENAJE pág. 68  
AUFBEWAHRUNG S. 85  
ARMAZENAMENTO pág. 102



# WELCOME TO THE WORLD OF VAPORETTO LECOASPIRA

THE COMPLETE APPLIANCE FOR CLEANING THE HOUSE, IT CLEANS WITH THE STEAM  
AND VACUUMS WITH WATER.  
THIS DOUBLE FORCE OF NATURE HOLDS BACK 99.97% OF IMPURITIES



## ACCESSORIES FOR ALL NEEDS

On our web site [www.polti.com](http://www.polti.com) and in good appliance shops you will find a wide range of accessories to increase the performance and the practical applications of your appliances to make home cleaning even easier.

To check the compatibility of an accessory with your appliance, search the code PAEUXXXX/PFEUXXXX listed next to each accessory on page 3.

If the accessory code you wish to buy is not listed in this manual, please contact our Customer Service team for more information.



## REGISTER YOUR PRODUCT

Visit our website [www.polti.com](http://www.polti.com) or call our Customer Services department to register your product.

You can benefit from a special welcome offer, in participating countries, and keep up to date on all the latest Polti news, as well as buy accessories and consumables.

To register your product, in addition to your personal information, you must enter the serial number (SN) which you will find on the silver label, located on the box and underneath the appliance.

To save time and have your serial number to hand, write it in the space provided on the back cover of this manual.



## OFFICIAL YOUTUBE CHANNEL

Want to know more? Visit our official channel: [www.youtube.com/poltispa](http://www.youtube.com/poltispa). Search the illustrative video for Vaporetto Lecoaspira in order to see a quick and easy overview of all the features of this amazing appliance.

In addition, the video guide will lead you through use of the Vaporetto Lecoaspira from preparation for use to simple maintenance operations.

Sign up to the official channel to keep yourself updated about our video contents!

ATTENTION: The safety warnings are only indicated on this manual.



## SAFETY WARNINGS

### IMPORTANT PRECAUTIONS FOR USE



**WARNING! BEFORE USING THE APPLIANCE, CAREFULLY READ ALL THE INSTRUCTIONS AND WARNINGS IN THIS MANUAL, AND ON THE APPLIANCE ITSELF.**

Polti S.p.A. declines all liability for any accident deriving from any improper use of this appliance.

Only usage as detailed in this instruction manual constitutes correct usage.

Any use which does not comply with these instructions will invalidate the warranty.

### SAFETY SYMBOLS:



**WARNING: High temperature. Risk of scalding!**

If shown on the product, do not touch as parts may be very hot.



**WARNING: Steam. Risk of scalding!**

This appliance reaches very high temperatures. Incorrect use of the appliance can cause scalding.

- Never disassemble or carry out maintenance on the appliance apart from that indicated in this manual. In the event of a

fault or malfunction, do not try and repair the appliance yourself. In the event of a heavy knock, fall, damage or fall into water, the appliance may not longer be safe to use. Incorrect use or a lack of respect for the instructions herein may lead to serious accidents. Always contact Authorised Service Centres.

- To carry out any maintenance or cleaning requiring access to the boiler, ensure that the appliance is switched off and disconnected from the mains for at least two hours.
- This appliance can be used by children over 8 years old, by people with reduced physical, sensory or mental abilities or by inexperienced persons only where they are instructed in advance on its safe use and only if informed of the dangers related to the product. Children must not play with the appliance. The cleaning and maintenance of the appliance may not be done by children without the supervision of an adult. Keep the appliance and the power cable out of the reach of children under 8 years of age when the appliance is on or during the cooling phase.
- Keep all the parts of the packaging out of the reach of children; they are not toys. Keep the plastic bag out of the reach of children: danger of suffocation.
- This appliance is destined exclusively for indoor domestic use.

**In order to reduce the risk of accidents, including: fires, electrocution, personal injury and scalding, both during use and**

during preparation, maintenance and storage, always take the fundamental precautions listed in this manual.

## RISKS CONNECTED TO THE ELECTRIC POWER SUPPLY - ELECTROCUTION

- The earthing system and highly sensitive residual-current circuit breaker, complete with magnetothermic cut-out for your domestic system, guarantee safe use of electrical appliances. Therefore, for your own safety, check that the electrical system to which the appliance is connected complies with current laws.
- Do not connect the appliance to the mains if the voltage does not correspond with that of the domestic electrical circuit in use.
- Do not overload the sockets with adaptors and/or transformers. Only connect the product to a single socket with current that is compatible with the supplied plug.
- Do not use electrical extension leads that are unsuitable for the power rating or which are not compliant with law. They may overheat and possibly lead to short circuiting, fire, power outage or damage to the equipment. Only use extension leads which are certified, suitable for the power rating, supporting at least 16A or power above 2500W, and earthed.
- To remove the plug from the socket, do

not pull the power cable, but hold the plug itself to avoid damage to the plug and the cable.

- Always unplug the appliance if it is not in use and before any preparation, maintenance or cleaning operation.
- The appliance must not be left unattended if plugged in to the mains.
- Fully unwind the cable from the cable winder before connecting the appliance to the mains and before use. Always use the product with the cable completely unwound.
- Do not pull or jerk the cable or expose it to tensions (twisting, crushing or stretching). Keep the cable away from hot and/or sharp surfaces and elements. Avoid crushing the cables in doors and windows. Do not pull the cable tight around corners. Avoid treading on the cable. Do not pass over the cable with the appliance. Do not wind the power cable around the appliance, especially if the appliance is hot.
- Do not substitute the plug on the power cable.
- If the power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid all possible hazards. Do not use the product if the power cable is damaged.
- Do not touch or use the appliance barefoot and/or with wet body or feet.
- Do not use the appliance near containers full of water, e.g. sinks, baths and



swimming pools.

- Do not immerse the appliance, including the power cable and plug, in water or other liquids.
- Steam must not be directed towards equipment containing electric or electronic components.

## RISKS DURING USE OF THE PRODUCT – INJURIES/SCALDING

- The product should not be used in areas where there is a danger of explosions or in the presence of toxic substances.
- Do not pour toxic substances, acids, solvents, detergents, corrosive substances and/or explosives or perfumes into the boiler.
- Only pour water or the water mix indicated in the Chapter “WHICH WATER TO USE” into the boiler.
- Do not vacuum or direct the steam jet onto toxic substances, acids, solvents, detergents or corrosive substances. The handling and removal of dangerous substances must be carried out according to the indications of the manufacturers of these substances.
- Do not vacuum or direct the steam jet onto explosive powders or liquids, hydrocarbons, open flames and or extremely hot objects.
- Keep all body parts away from the vacuum intake and from any moving parts.
- Do not use the vacuum function on people and/or animals.

- Use the special carry handle for transport. Do not pull the power cable. Do not use the power cable as a handle. Do not lift the appliance using the power cable or the steam hoses/vacuum tubes. Do not lift the product using the dirt collector grip.
- Do not position the product near sources of heat such as fireplaces, stoves and ovens.
- Do not obstruct the openings and grills on the product.
- Do not direct the steam jet on any part of the body of people or animals.
- Do not direct the steam jet on clothes while they are being worn.
- Cloths and rags and fabrics which have been subjected to a deep steam reach very high temperatures, above 100°C. Wait a few minutes and check that they have cooled before handling them. Therefore, avoid contact with the skin if they have just been steamed.
- During use, keep the product in a horizontal position on stable surfaces.
- The steam lock on the handle guarantees greater safety, as it prevents the accidental activation of steam delivery by children or people who are unaware of the function of the appliance. When steam is not being used, engage the steam lock.  
To continue steam delivery, return the switch to its original position.

## CORRECT USE OF THE PRODUCT

This appliance is intended for internal home use as a steam cleaner and as a vacuum with water filter for liquids, and dry and/or damp material (dirt) from surfaces in accordance with the instructions provided in this manual. Please read these instructions carefully and keep them. If this manual is lost, it can be consulted and/or downloaded from the website [www.polti.com](http://www.polti.com).

Only vacuum domestic dirt and/or water.

Do not use on debris or chalk, cement or residues from building sites or brick laying.

Do not use on earth and sand/soil, etc.

Do not use on ash, soot and combustion residues (fireplaces, barbecues, etc.).

Do not use on printer, photocopier or fax toner and ink powder.

Do not vacuum pointed, sharp or stiff objects.

The appliance only functions correctly if the water filter collector is inserted and complete with all its parts.

Do not lift the product using the water-filter-collector grip.

Never leave the appliance exposed to weathering.

Only usage as detailed in this instruction manual constitutes correct usage. Any other use may damage the appliance and invalidate the warranty.

## INFORMATION FOR USERS

Pursuant to European Directive 2012/19/EU, regarding electric and electronic appliances, this appliance must not be disposed of with domestic waste, but sent to an official collection facility. This appliance complies with EU Directive 2011/65/EU



The crossed-out bin symbol on the appliance indicates that, at the end of its useful lifespan, the product must be disposed of separately from other waste.

Therefore, at the end of its life, the user must hand-over the appliance to an appropriate collection centre for electric and electronic waste. Proper separate waste collection to facilitate the subsequent recycling, treatment and environmentally compatible disposal of the appliance helps to prevent negative effects on the environment and human health, and promotes recycling of the materials the product is made of. Unlawful disposal by the owner involves the application of the administrative sanctions envisaged by current legislation. POLTI S.p.A. reserves the right to change equipment or accessory specifications without prior notice.

Before leaving our factory all our products are rigorously tested. This is the reason why your Vaporetto Lecoaspira may contain some residual water in the boiler and in the tank.

## WHICH WATER TO USE IN THE BOILER

This appliance has been designed to function with normal medium-hardness tap water between 8°F and 20°F. If the tap water contains a lot of calcium carbonate, use a mix composed of 50% tap water and 50% widely available demineralised water.

Do not use pure demineralised water.

**Warning: check the hardness of the water at the technical office at your local council or the local water supplier.**

If you only use tap water, you can reduce the formation of limescale by using the special Kalstop FP2003 decalcifying product, distributed by Polti, and available for sale at all major domestic-appliance stores or online at [www.polti.com](http://www.polti.com).

Never use distilled water, rain water or water containing additives (e.g. starch, perfumes), or water produced by other domestic appliances, water softeners and filter jugs.

Do not use chemical substances or detergents.

**Use tap water in the water filter collector.**

## 1. PREPARING FOR USE (see page 4)

**There could be accessories in the water filter collector, therefore remove them before using the appliance.**

1.1 Lift the handle of the water filter collector and remove the collector from its housing.

1.2 Turn the handle of the water filter collector and remove the water filter unit.

1.3 Fill the water filter collector with about 1.2 l of tap water up to the MAX indicator.

**Add Bioecologico to the water in the water-filter collector. This anti-foam and deodorising liquid containing natural substances releases a pleasant perfume into the room, prevents the formation of foam in the water filter, and guarantees the correct operation of the appliance (Chapter 20)**

1.4 Replace the filter unit in the water filter collector returning it to its original position.

1.5 Reposition the water filter collector in its housing and turn the handle until it returns to its starting position.

**WARNING: Incorrectly inserting the water filter collector can cause a reduction in the suction capacity.**

1.6 Turn the door of the tank outwards and fill the tank with approximately 550 ml of water using the special filler jug, at least until the maximum-level float is visible. Close the door.

**Avoid water leaks. Make sure that the water does not overflow, to avoid wetting the surface on which your Lecoaspira is resting.**

This operation must always be carried out with the power cable disconnected from the mains.

1.7 Open the door of the built-in socket and insert the built-in plug of the flexible steam/vacuum hose.

1.8 Completely unwind the power cable and connect it to an appropriate mains socket. Always use the product with the cable completely unwound.

1.9 The appliance is ready for use.

 
**WARNING: When first operating steam, there may be some drops of water mixed with the steam due to temperature imbalances. Direct the first jet of steam onto a rag.**

To avoid any dirt in the dirt collector causing bad smells, we recommend emptying and cleaning after every use according to the methods described in Chapter 22.

## 2. CONNECTION OF ACCESSORIES (see page 4)

All the Vaporetto Lecoaspira accessories can be connected directly to the flexible steam/vacuum hose or to the extension hoses.


2.1 To connect the specific accessories for the suction and steaming features proceed as follows:



Move the locknut of the accessory, if present, to the OPEN position and connect the accessories.



 Move the accessory locknut to the CLOSED position. Check the strength of the connection.



On the extension tubes there is an additional fastening button: proceed as described previously for the accessories and release the tubes by sliding the button

as far as the lock position.

2.2 To connect the special accessories only for suction it is only necessary to attach them without coupling them to the locknut.

2.3 To connect the steam lance with the steam concentrator, simply screw it on. The same operation can be carried out for the coloured brushes, which can in turn be screwed onto the steam concentrator and onto the steam lance. The different colours allow you to always use the same brush for the same surface.

## 3. INTEGRATED CLEANING PROGRAMS

The appliance is equipped with preset programmes to automatically regulate the steam pressure and the duration of suction based on the surface in question.

**WARNING: The preset programmes can vary depending on the Lecoaspira model chosen.**

3.1 Press the SET button on the control panel. When it is turned on, the appliance starts in manual mode. Using the buttons ▲ and ▼ it is possible to select the desired programme. Confirm the selection by pressing the OK button.

To change the programme again, repeat the operation indicated above.

On the appliance, under the handle, there is a handy label listing the number and type of programmes.



## 4. MANUAL OPERATION

In this mode, it is possible to manually adjust the quantity of steam dispensed and the suction speed.

Make sure that you have prepared the appliance following the instructions provided in Chapter 1.

**For safety reasons, engage the steam lock on the handle during vacuuming.**

4.1 For suction only, press the suction button on the appliance and proceed with cleaning.

The suction power can be adjusted, based on the surface to be cleaned, by holding the suction button down. In this case the number of segments on the suction indicators will increase or decrease on the appliance control panel.

Level 1	Curtains
Level 2	Sofas and cushions
Level 3	Rugs and carpets
Level 4	Floor or liquid collection

Hold the suction button down to stop suction.

**When the appliance is switched on again, the suction level will be that set last time it was used.**

4.2 For steam cleaning only, switch on the boiler using the button ▲. The pressure and boiler indicators will start flashing. Select the steam pressure desired by pressing the button ▲ again. One of the 4 pressure indicators lights up every time the button is pressed, indicating the increase in the pressure of the steam. Press the button ▼ to reduce the steam pressure. One of the pressure indicators goes off every time the button is pressed, showing the reduction in the steam pressure. When the pressure indicator and the boiler indicator remain lit, it means that the appliance has reached the desired steam pressure.

Steam Maximum	4 indicators turned on	To remove scaling, stains, and grease and sanitise
Regular steam	2 or 3 indicators turned on	For carpets, rugs, windows, floors
Minimum steam	1 indicator turned on	To steam plants, clean delicate fabrics, wall coverings, sofas, etc.

Ensure that the steam lock on the handle is deactivated. Hold the steam trigger to dispense steam, the relative indicator will turn on.

To stop the steam flow, simply release the steam button.

4.3 For steam cleaning and suction, carry out points 4.1 and 4.2 at the same time.

HARD FLOORS	DELICATE FLOORS	RUGS/CARPETS
BRISTLE FRAME (2a) suction only	BRISTLE FRAME (2a) suction only	BRISTLE FRAME (2a) suction only
RUBBER FRAME (2b) for steam and suction. The universal cloth can be used combined with the RUGS/CARPET FRAME (2c).	RUGS/CARPET FRAME (2c) with parquet cloth for steam and suction	RUGS/CARPET FRAME (2c) for steam and suction


5. CLEANING HARD FLOORS  
(tiles, ceramic surfaces, etc.)

Make sure that you have prepared the appliance following the instructions provided in Chapter 1.

- 5.1 Connect the two extension tubes (3) to the handle (1).  
5.2 For suction only, connect the universal brush (2) with the frame w/bristles (2a) and follow the instruction indicated in point 4.1.

For safety reasons, engage the steam lock on the handle during vacuuming.

- 5.3 For steam cleaning and suction attach the frame for liquids (2b) to the universal brush (2).

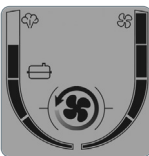

- 5.4 Select programme **P1** for model **FAV80**, **P0** for the model **FAV70**, as indicated in Chapter 3. This programme is specifically for cleaning parquet and delicate floors. The function involves the combined action of an intermittent flow of steam with adequate suction force.

- 5.5 Wait for the indicators to remain lit.  
5.6 Disconnect the steam lock on the handle and hold the steam button down to start dispensing steam. Steam starts to be dispensed continuously and suction starts at the same time. Release the steam button to stop the steam flow, while suction will continue to dry the surface treated.  
If you need to restart the programme to complete cleaning of the surface, just press the steam button again.

The suction speed and the quantity of steam are preset and therefore they cannot be adjusted manually.

The combined use of steam and suction allows the most efficient sanitising of the surface, dissolving dirt, eliminating grease, germs and mites, and above all allows drying of the surfaces. In this position, it is also possible to vacuum small quantities of liquids and dry the floor.

- Once the cleaning cycle is finished, it is possible to start suction by pressing the suction button to remove any residual humidity.  
5.7 For steam cleaning only, proceed as indicated in point 4.2. It is possible to use the abrasive action of the universal cloth supplied (10). Attach it to the universal brush (2) before starting to clean the surface.

Before removing the cloth from the brush, wait a few minutes to allow the cloth to cool.

6. CLEANING DELICATE FLOORS  
(wooden, stone, waxed surfaces, etc.)

WARNING: For additional safety, test steam delivery on a hidden part, leave the steamed part to dry to ensure that no changes in colour or deformation have occurred.


Before using the appliance on delicate surfaces, ensure that the part in contact with the surface is free from foreign bodies that could cause scratches.

Make sure that you have prepared the appliance following the instructions provided in Chapter 1.

- 6.1 Connect the two extension tubes (3) to the handle (1).  
6.2 For suction only, connect the universal brush (2) with the frame w/bristles (2a) and follow the instruction indicated in point 4.1.

For safety reasons, engage the steam lock on the handle during vacuuming.

- 6.3 For steam cleaning and suction attach the rug/carpet frame (2c) to the universal brush (2). Attach the parquet cloth supplied (14) to the universal brush (2).

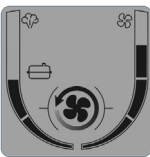

- 6.4 Select programme **P2** for model **FAV80**, **P1** for the model **FAV70**, as indicated in Chapter 3. This programme is specifically for cleaning parquet and delicate floors. The function involves the combined action of a delicate intermittent flow of steam with adequate suction force.

- 6.5 Wait for the indicators to remain lit.  
6.6 Disconnect the steam lock on the handle and hold the steam button down to start dispensing steam. Intermittent steam starts to be dispensed and suction starts at the same time. Release the steam button to stop the steam flow, while suction will continue for a few seconds more to dry the surface treated.  
If you need to restart the programme to complete cleaning of the surface, just press the steam button again.

The suction speed and the quantity of steam are preset and therefore they cannot be adjusted manually.

Before removing the cloth from the brush, wait a few minutes to allow the cloth to cool.

7. CLEANING RUGS AND CARPETS


WARNING: Before cleaning fabrics with steam, consult the manufacturer's instructions and always carry out a test on a hidden part or on a sample of the material. Allow the steamed part to dry to make sure that no changes in colour or deformations have occurred.

Make sure that you have prepared the appliance following the instructions provided in Chapter 1.

- 7.1 Connect the two extension tubes (3) to the handle.

- 7.2 Connect the universal brush (2) to the rug/carpet frame (2c).  
 7.3 For suction only follow the instructions in point 4.1.

**For safety reasons, engage the steam lock on the handle during vacuuming.**

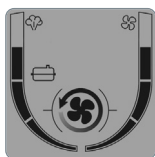

- 7.4 For steam cleaning and suction select Programme **P3** for model **FAV80**, **P2** for the model **FAV70**, as indicated in Chapter 3.

7.5 Wait for the indicators to remain lit.

- 7.6 Disconnect the steam lock on the handle and hold the steam button down to start dispensing steam.


When releasing the steam button or after a maximum of 150 seconds, the suction starts automatically to dry the treated surface. Suction stops automatically after a period of time in proportion to the time the steam was supplied.

If you need to restart the programme to complete cleaning of the surface, just press the steam button again.

**The suction speed and the quantity of steam are preset and therefore they cannot be adjusted manually.**

## 8. CLEANING GLASS, WINDOWS AND TILES

**WARNING: To clean glass surfaces in particularly cold seasons, preheat the windows starting to vacuum from a distance of about 50 cm from the surface.**

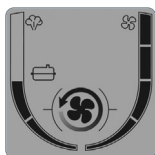

- Make sure you have prepared the appliance following the instructions provided in Chapter 1 and that you have selected Programme **P4** for model **FAV80**, **P3** for the model **FAV70**, as indicated in Chapter 3.

8.1 Wait for the indicators to remain lit.

This programme alternates steam and suction to remove grease and polish the surfaces, removing smears and dissolving limescale deposits.

- 8.2 Connect the nozzle for frames (7) to the handle (1) or to the extension tubes (3) and attach the window cleaning accessory (7a). Ensure that the steam lock on the handle is deactivated.

8.3 Press and hold the steam trigger on the handle (1) and steam the surface abundantly to dissolve the dirt.

8.4 When releasing the steam button or after a maximum of 30 seconds, the suction starts automatically. Suction stops automatically after a period of time in proportion to the time the steam was supplied. In any case, it is possible to stop the programme manually by pressing the suction button.

If you need to restart the programme to complete cleaning of the surface, just press the steam button again.

Once the cleaning cycle is finished, it is possible to start suction by pressing the suction button to remove any residual humidity.

**The suction speed and the quantity of steam are preset and therefore they cannot be adjusted manually.**

The combined use of steam and suction allows the most efficient sanitising of the surface, dissolving dirt, and eliminating grease and germs, and above all allows drying of the surface.

## 9. CLEANING BEDS/MATTRESSES

**WARNING: Before cleaning leather or fabrics with steam, consult the manufacturer's instructions and always carry out a test on a hidden part or on a sample of the material. Allow the steamed part to dry to make sure that no changes in colour or deformations have occurred.**

Make sure that you have prepared the appliance following the instructions provided in Chapter 1.

- 9.1 For suction only, connect the nozzle for frames (7) to the handle (1) and follow the instruction indicated in point 4.1.

**For safety reasons, engage the steam lock on the handle during vacuuming.**


- 9.2 For steam cleaning and suction use the nozzle for frames (7) with the cap cloth (9) attached and connect it to the handle (1) or to the extension tubes (3).

9.3 Follow the instructions provided in points 4.1 and 4.2.

Ensure that the steam lock on the handle is deactivated.

9.4 It is possible to use the suction and steam features either together or by alternating them, activating both as described in the previous points.

Combined use of steam and suction allows the most efficient sanitising of the surface, dissolving dirt and removing grease, germs and mites; it allows brightens the colour of fibres and dries surfaces more quickly.

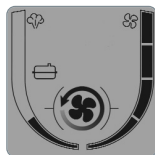

- 9.5 For model **FAV80** select Programme **P5**, as indicated in Chapter 2.

Wait for the indicators to remain lit.

This programme is ideal for eliminating mites, and vacuuming hair, animal fur and dust.

Steam the surface to be treated. Releasing the steam button or after a maximum of 60 seconds, suction starts automatically, making it possible to dry the treated surface.

If you need to restart the programme to complete cleaning of the surface, just press the steam button again.

In any case, it is possible to stop the programme manually by pressing the suction button.

## 10. UPHOLSTERY, WALL COVERINGS, CAR INTERIORS

**WARNING: Before cleaning leather or fabrics with steam, consult the manufacturer's instructions and always carry out a test on a hidden part or on a sample of the material. Allow the steamed part to dry to make sure that no changes in colour or deformations have occurred.**

Make sure that you have prepared the appliance following the instructions provided in Chapter 1.

- 10.1 For suction only, connect the nozzle for frames (7) to the handle (1) and follow the instruction indicated in point 3.1.

**For safety reasons, engage the steam lock on the handle during vacuuming.**




10.2 For steam cleaning and suction use the nozzle for frames (7) with the cap cloth (9) attached and connect it to the handle (1) or to the extension tubes (3).

10.3 Follow the instructions provided in points 4.1 and 4.2.

Ensure that the steam lock on the handle is deactivated.

10.4 It is possible to use the suction and steam features either together or by alternating them, activating both as described in the previous points.

Combined use of steam and suction allows the most efficient sanitising of the surface, dissolving dirt and removing grease, germs and mites; it allows brightens the colour of fibres and dries surfaces more quickly.

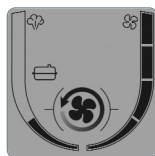

10.5 For model **FAV80** select Programme **P6**, as indicated in Chapter 3.

Wait for the indicators to remain lit. This programme is ideal for eliminating mites, and vacuuming hair, animal fur and dust.

Intermittent jets of steam are supplied and at the same time suction begins.

When the steam button is released the flow of steam stops, while suction will continue for a few seconds more to dry the surface treated. Suction stops automatically after a period of time in proportion to the time the steam was supplied.

If you need to restart the programme to complete cleaning of the surface, just press the steam button again.

In any case, it is possible to stop the programme manually by pressing the suction button.

**The suction speed and the quantity of steam are preset and therefore they cannot be adjusted manually.**

**Before steaming surfaces, we recommend vacuuming up any hair or dust, using the vacuum only function in manual mode.**

## 11. CLEANING BATHROOM FIXTURES, GROUTING AND KITCHEN WORKTOPS

Make sure that you have prepared the appliance following the instructions provided in Chapter 1.

11.1 Connect the concentrator accessory (4) equipped with bristly round brush (5) to the handle (1). The steam lance (6) can be attached to the concentrator accessory (4). This is recommended for reaching the most difficult areas, ideal for cleaning radiators, door and window frames, bathrooms and shutters.

To connect the steam lance (6) to the concentrator accessory (4) just screw it on like the coloured brushes, which can be screwed onto the lance and/or onto the accessory directly.

11.2 Turn on the boiler and adjust the strength of the steam following the instructions provided in point 4.2.

11.3 Ensure that the steam lock is deactivated and press and hold the steam trigger on the handle to begin cleaning.

11.4 Connect the suction lance (11) to the concentrator accessory (4) and activate the suction function to begin vacuuming immediately, removing dirt thanks to the concentrated steam jet.

**The different coloured brushes allow for a different colour for each surface or environment.**

## 12. CLEANING FURNITURE AND DELICATE SURFACES

**WARNING: Do not direct the steam jet directly onto surfaces. Before cleaning the surface, always do a test on a hidden part and see how it reacts to the application of steam.**

12.1 Connect the suction lance (11) or the nozzle for frames (7) to the handle and press the suction button on the appliance.

12.2 Turn on the boiler and adjust the strength of the steam following the instructions provided in point 4.2.

Press and hold the steam trigger on the handle and direct the jet onto a cloth.

12.3 Use the cloth previously steamed to clean the surface, avoiding prolonged use on the same spot.

## 13. OTHER GENERAL USES

**WARNING: Before cleaning the surface, always do a test on a hidden part and see how it reacts to the application of steam.**

### 13.1 BRIGHTENING UP CURTAINS AND DRAPES

Mites and dust can be removed from curtains and drapes by steaming the fabric with just the handle. The steam is able to remove odours and brighten up colours, allowing the fabric to be washed less frequently.

For this surface, set the steam to **level 1**.

### 13.2 REMOVING STAINS FROM CARPETS AND UPHOLSTERY



**WARNING: Steam.  
Risk of scalding!**

Connect the concentrator accessory (4) without the bristly round brush; direct the steam directly onto the stain with the greatest angle possible (never vertically to the surface to be cleaned) and place a cloth beyond the stain to collect the dirt that has been “blown” away by the steam pressure.

For this surface, set the steam to **level 1**.

Connect the suction lance (11) to the concentrator accessory (4) and activate suction to begin vacuuming the dirt removed which has remained on the floor.

### 13.3 TAKING CARE OF PLANTS AND HUMIDIFYING ROOMS

To take care of your house plants, remove the dust from the leaves using just the handle, vacuuming the surface: adjust the steam to **level 1** and vacuum at a distance of 50 cm. Plants breathe better and will be cleaner and brighter. Furthermore, you can also use the steam to refresh spaces, especially those frequented by smokers.



## 14. ECO PROGRAMME - P0 **only for Model FAV80**

The Eco function is specifically for cleaning floors. Thanks to the ECO function, Vaporetto Lecoaspira automatically sets the pressure of the steam and suction to achieve significant energy savings and at the same time provide optimal performance for the cleaning of all floors.

To activate the ECO Programme select programme P0 , as indicated in Chapter 3. For steam cleaning and suction of floors, please refer to the table "Use of frames for floors" of Chapter 4.

## 15. TURBO STEAM PROGRAMME

This programme automatically sets the pressure of the steam at maximum power, ideal for stubborn dirt.

To activate the Turbo Steam Programme select Programme P7 for model **FAV80**, P5 for the model **FAV70**, as indicated in Chapter 3.

After 10 minutes of use, the programme returns to manual.

## 16. TURBO SUCTION PROGRAMME - P8 **only for Model FAV80**

This programme automatically sets the Vaporetto Lecoaspira at maximum suction power. This programme allows you to vacuum up dust and liquids or efficiently remove animal hair. To activate the Turbo Suction Programme select programme P8, as indicated in Chapter 3.

## 17. IRON PROGRAMME (optional)

(only functions with Polti iron accessory connected)

Make sure that you have prepared the appliance following the instructions provided in Chapter 1.

This programme makes it possible to turn the appliance into a powerful ironing system.

Open the door of the built-in socket and insert the built-in plug of the iron accessory, set Programme P9 for model **FAV80**, P4 for model **FAV70**, as indicated in Chapter 3.

Adjust the quantity of steam by pressing the UP and DOWN buttons, based on the type of fabric to be ironed.

No sections lit: SYNTHETIC FABRICS and SILK	
3 sections lit: LINEN	
2 sections lit: COTTON	
1 sections lit: WOOL	

In order to optimise ironing times, we recommend starting to iron the more delicate fabrics first (steam quantity 0 or 1) and then moving on to fabrics that require greater steam pressure. Otherwise, although the supply of steam is not prevented, it will be necessary to wait for the boiler to cool down to allow the appliance to reach the steam pressure selected.

In this programme, if the iron accessory is not inserted steam is not dispensed.

## 18. OUT OF WATER

Thanks to the self-filling system, it is not necessary to wait for the appliance to cool before refilling the boiler with water.

When the tank is out of water, the indicator light on the control panel (tap or drop) will turn on and you will hear a beep.

To continue with steam cleaning, simply open the tank door and add water.

To vacuum surfaces it is not necessary to fill the tank, simply turn the boiler off.

## 19. AUTOMATIC SUCTION LOCK

When the dirt sucked into the water filter collector reaches the maximum level allowed, suction will be automatically blocked by the special safety float. This can also happen when the water in the collector is very dirty. In these cases, there is an increase in the motor rpm: it is therefore necessary to remove the water in the collector.

Turn off the appliance and only restart it when the level of the water in the collector has been restored as described in Chapter 1.

**WARNING: Immediately turning the appliance back on, without replacing the water, could damage the air outlet filter.**

## 20. BIOECOLOGICO

Bioecologico is an anti-foaming and deodorising product containing natural substances. It prevents foaming inside the water filter thus ensuring correct functioning of the appliance. When diluted inside the dirt collection tank, Bioecologico also acts as an effective deodoriser and thanks to the natural substances which it is composed of, it prevents unpleasant smells inside the collection tank and releases a fresh clean fragrance into the environment.

**WARNING:**

- Keep out of the reach of children.
- IF SWALLOWED: Rinse mouth DO NOT induce vomiting. Immediately contact a POISON CENTRE or a doctor.
- Avoid contact with eyes, skin or clothing.
- Avoid releasing into the environment.
- Dispose of in conformity with local regulations.

CONTAINS: Eugenol, Citral, Cinnamal - May cause an allergic reaction.

Contents of the phial: 5 ml e

Bioecologico is sold at all major domestic-appliance shops or online at [www.polti.com](http://www.polti.com).

## HOW TO USE BIOECOLOGICO

20.1 Add water to the water filter as instructed in this manual.

20.2 Shake the phial before use.

20.3 Bend and break the phial cap.

20.4 Pour the contents of the phial into the water filter collector of the appliance.

**Use 1 phial per use.**

**A possible change in the colour of the liquid does not alter the functioning or the efficacy of the product**

**WARNING: Never pour Bioecologico into the boiler.**

## 21. GENERAL MAINTENANCE

To clean the outside of the appliance, only use a damp cloth and tap water.

All accessories can be cleaned using running water, ensuring they are completely dry before the next use.

Do not use detergents of any type.

## 22. CLEANING THE WATER FILTER COLLECTOR (ordinary maintenance)

22.1 Ensure that the appliance is switched off and disconnected from the mains.

22.2 Lift the water filter collector removing it from its housing using the special handle.

22.3 Turn the handle backward and remove the water filter unit.

22.4 Empty the tank by tilting it towards the spout (14).

22.5 Turn the elbow tube downward until it slides off the filter unit (15).

22.6 Separate all the components and rinse them under running water.

**WARNING: Check the filters during cleaning. Replace the filters when visibly damaged.**

22.7 Dry the various components of the filter, reassemble it and reinsert it into the dirt collector.

22.8 Reposition the water filter collector in the appliance.

**To clean the water filter collector and the extension tubes, if they are especially dirty, once the cleaning operations have been completed, empty the container as described and replace it in its housing in the machine. Connect the appliance to the mains.**

**Then vacuum up approximately 1.5 litres of clean water using the suction function for a few seconds. The water vortex created inside the collector will rinse the sides and remove any dirt. The clean water will also clean the inside of the tubes as it travels through them. Empty the collector again and put Vaporetto Lecoaspira away.**

## 23. CLEANING THE HEPA FILTER (extraordinary maintenance)

23.1 Ensure that the appliance is switched off and disconnected from the mains.

23.2 Lift the water filter collector removing it from its housing using the container handle.

23.3 Lift the release lever of the HEPA filter and remove it from its housing.

23.4 Rinse the HEPA filter using running water only and shake gently to remove any excess dirt or water residue; before replacing the filter in the appliance, leave to dry naturally away from sources of heat for at least 24 hours.


**WARNING: Check the filters during cleaning. Replace the filters when visibly damaged.**

**WARNING: Do not clean the filter with the brush as it can be damaged, thereby reducing its filtering capacity. Do not use detergents, do not rub the filter, and do not wash it in a dishwasher.**

The HEPA filter should be fully cleaned approximately three times per year.


## 24. SPARE SEALS

Periodically check the status of the coloured washer located in the built-in socket. If necessary, replace with the corresponding spare part, as described below.

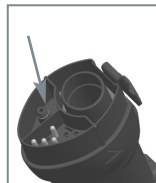

- Remove the damaged washer.
- Insert the new washer, attaching it on the steam nozzle and pushing it into place.
- Lubricate the gasket with silicone grease or Vaseline, or alternatively with small quantities of vegetable oils.

Perform the same check on the connection seals of the extension tubes and the handle of the hose. If necessary, operate as follows.

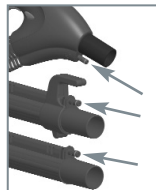

- Remove the damaged washer.
- Insert the new washer, applying it on the steam nozzle and pushing it into place.
- Lubricate the gasket with silicone grease or Vaseline, or alternatively with small quantities of vegetable oil.

## 25. STORAGE

25.1 Turn off the appliance and disconnect from the mains electricity.

25.2 Remove the water filter collector as indicated in Chapter 1.

25.3 Manually wind the cable evenly and replace it into the holder, passing it into the power cable storage space.

25.4 Replace the water filter collector in its housing, making sure to position it correctly.

25.5 The hoses, brush and flexible hose can be housed on the body of the appliance, sliding the hook on the universal brush into the parking system on the appliance.

**The hook is present only on extension tubes. Incorrect assembly of the two extension tubes will prevent the use of the appliance parking system.**

## 26. TROUBLESHOOTING - TIPS

PROBLEM	CAUSE	SOLUTION
The appliance does not start	No power	Check that the appliance has been disconnected from the mains, as indicated in Section 1.
Suction power is decreased	Nozzle, flexible suction hose or rigid suction hose are clogged.  HEPA filter is blocked or dirty	Turn the appliance off and unplug it. Clean the filter and remove any blockages of tubes and accessories.  Proceed as described in Chapter 23.
Water leaks out when vacuuming liquids	Float blocked.	Clean the water filter assembly.
The appliance is pressurized but little steam comes out	The steam adjustment handle is on Level 1	Turn the steam adjustment handle to increase the flow of steam
The extension tubes and the accessories are loose	The locknut is OPEN	Turn the locknut to the CLOSED position as indicated in Chapter 2.
The appliance won't dispense steam	Boiler turned off  No water in the tank  Steam lock activated  The boiler is not yet pressurised  Monobloc plug not inserted correctly	Turn on the boiler  Add water to the tank as described in Chapter 18  Disconnect the steam lock on the handle  Wait for the steam indicator light to stop flashing  Insert the monobloc plug correctly.
Steam is dispensed mixed with drops of water	The steam hose and/or the telescopic tube are cold	Direct the steam jet onto a cloth to heat up the tubes
Loss of steam or drops of water between the connection of the accessories.	The seals are damaged.	Replace the seals, as indicated in Chapter 24.

PROBLEM	CAUSE	SOLUTION
Accessories are difficult to assemble	The seals produce friction	Lubricate the seals with silicone grease or Vaseline, or alternatively with a small amount of vegetable oil.
	The locknut is not in the correct position	Turn the locknut to the correct position
After vacuuming liquids, the liquid vacuumed comes out of the brush	Liquid remains inside the tubes	Suck in air for a few seconds to allow the transfer of the liquid to the tank
	Floor is still not dry	Repeat the vacuuming operation
The filling pump of the boiler continues to operate.	There is air in the boiler circuit.	Switch off the appliance and let it cool, after which repeat the operations described in chapter 1.
The appliance turns off while using suction	Water filter collector full or motor overheated	Turn off and disconnect the appliance from the mains. Empty the dirt collector and clean it. If the problem persists, turn off and disconnect the appliance from the mains and wait 60 minutes for it to cool.
The appliance stops and the wording "E1" appears on the display	The circuit board has detected a fault in the boiler.	Turn the appliance off for a few minutes and then start it again. Should the problem occur again, contact an Authorised Service Centre.
The appliance stops and the wording "E2" appears on the display	The circuit board has detected a fault relative to incorrect operating temperature.	Turn the appliance off for a few minutes and then start it again. Should the problem occur again, contact an Authorized Service Centre.
The maintenance indicator lights up on the display	The appliance does not warm up correctly.	Turn the appliance off for a few minutes and then start it again. Should the problem occur again, contact an Authorized Service Centre.

Should the problems persist, contact an Authorised Polti Service Centre (see [www.polti.com](http://www.polti.com) for the up-to-date list) or Customer Services.

## WARRANTY

This appliance is for domestic use only and is guaranteed for two years from the date of purchase against any defects present at the time the goods are handed over; the date of purchase must be proven via a proof of purchase document valid for tax purposes and issued by the seller.

For repairs, the appliance must be accompanied by proof of purchase.

This warranty does not affect the consumer rights deriving from European Directive 99/44/EC as regards some aspects of sale and warranty of consumer goods, rights which the consumer should uphold with respect to the seller.

This warranty is valid in the countries which adhere to European Directive 99/44/EC. For other countries, local regulations on warranties apply.

### WHAT THE WARRANTY COVERS

During the warranty, Polti guarantees free repair of a product with a manufacturing or factory defect and, therefore, the client is not liable to pay for any work or materials.

In case of irreparable defects, Polti may replace the product free of charge.

To avail of the warranty, the customer should visit one of the Polti Authorised Service Centres with proof of purchase from the seller valid for tax purposes and bearing the date of purchase of the product. Without proof of purchase and the relative date of purchase, the work will be charged for. Store the proof of purchase document safely for the whole duration of the warranty.

### WHAT THE WARRANTY DOES NOT COVER

- Any fault or damage not deriving from a manufacturing defect.
- Any fault due to improper use or use other than that indicated in the instruction booklet, an integral part of the product sales contract.
- Any defect resulting from *force majeure* (fires, short circuits) or caused by third parties (tampering).
- Damage caused by the use of non-original Polti parts, and repairs or modifications performed by staff or service centres not authorised by Polti.
- Damage caused by the customer.
- Parts (filter, brush, hose, etc.) damaged by use (consumable goods) or normal wear and tear.
- Any damage caused by limescale.
- Defects resulting from lack of maintenance/cleaning according to the manufacturer's instructions.
- Assembly of non-original Polti accessories or those that have been modified or which are not suitable for the appliance.

Inappropriate use and/or use not compliant with the instructions for use and any other warnings or indications contained in this manual invalidates the warranty.

Polti takes no responsibility for any direct or indirect damage to people, objects or animals caused by non-compliance with the instructions indicated in this instruction booklet, regarding warnings for use and product maintenance.

**To see the up-to-date list of the Polti Authorised Service Centres, visit the website [www.polti.com](http://www.polti.com).**

LECOASPIRA  
Vaporetto®







REGISTRA IL TUO PRODOTTO  
REGISTER YOUR PRODUCT  
ENREGISTREZ VOTRE PRODUIT  
REGISTRA TU PRODUCTO  
GERÄTREGISTRIERUNG  
REGISTE O SEU PRODUTO

SN:



|||||

## CALL CENTER

ITALIA SERVIZIO CLIENTI	848 800 806
FRANCE SERVICE CLIENTS	04 786 642 12
ESPAÑA SERVICIO AL CLIENTE	902 351 227
PORTUGAL SERVIÇO AO CLIENTE	707 780 274
UK CUSTOMER CARE	0845 177 6584
DEUTSCHLAND KUNDENDIENST	03222 109 472 9

OTHER COUNTRIES, PLEASE VISIT [WWW.POLTI.COM](http://WWW.POLTI.COM)



# POLTI®

NATURAL HOME FEELING

POLTI S.p.A. - Via Ferloni, 83  
22070 Bulgarograsso (CO) - Italy  
[www.polti.com](http://www.polti.com)

Follow us:

