

# M.A.X

## Gebrauchsanweisung

Instructions for use

## Mode d'emploi

Gebruiksaanwijzing

Istruzioni per l'uso



## Brugsanvisning

Bruksanvisning

## Käyttöohje

Manual de utilização

Instrucciones para el uso



## Οδηγίες χρήσης

Instrukcje użytkowania

## Használati utasítás

Инструкция за използване

הוראות שימוש



## Návod k použití

Návod na použitie

## Instrucțiuni de utilizare

Инструкции по эксплуатации

تعليمات وكيفية الاستعمال

[www.whirlpool.com](http://www.whirlpool.com)



SENSING THE DIFFERENCE



## INSTALLATION



 
### PRIOR TO CONNECTING



**CHECK THAT THE VOLTAGE** on the rating plate corresponds to the voltage in your home.

**DO NOT REMOVE THE MICROWAVE INLET PROTECTION PLATES** located on the side of the oven cavity wall. They prevent grease & food particles from entering the microwave inlet channels.

**PLACE THE OVEN ON A STABLE, EVEN SURFACE** that is strong enough to hold the oven and the food utensils you put in it. Use care when handling.

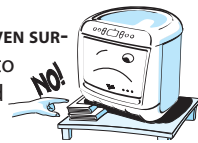

**POSITION THE OVEN AT A DISTANCE** from other heating sources. For sufficient ventilation there must be a space of at least 30 cm above the oven. The appliance must be placed against a wall, ensure that the space underneath, above and both sides of the oven is empty to allow for proper airflow. The microwave oven shall not be placed in a cabinet.

**ENSURE THAT THE APPLIANCE IS NOT DAMAGED.** Check that the oven door closes firmly against the door support and that the internal door seal is not damaged. Empty the oven and clean the interior with a soft, damp cloth.



**DO NOT OPERATE THIS APPLIANCE** if it has a damaged mains cord or plug, if it is not working properly, or if it has been damaged or dropped. Do not immerse the mains cord or plug in water. Keep the cord away from hot surfaces. Electrical shock, fire or other hazards may result.

**DO NOT USE EXTENSION CORD:**



 
**IF THE POWER SUPPLY CORD IS TOO SHORT,** have a qualified electrician or serviceman install an outlet near the appliance.

**WARNING:** Improper use of the grounding plug can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the microwave oven is properly grounded.

### AFTER CONNECTING

**THE OVEN CAN BE OPERATED ONLY** if the oven door is firmly closed.

**POOR TELEVISION RECEPTION** and radio interference may result if the oven is located close to a TV, radio or aerial.

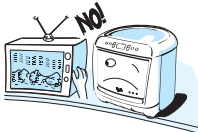

**THE EARTHING OF THIS APPLIANCE** is compulsory. The manufacturer will accept no responsibility for injury to persons, animals or damage to objects arising from the non-observance of this requirement.

**The manufacturers are not liable for any problems caused by the user's failure to observe these instructions.**



## IMPORTANT SAFETY INSTRUCTIONS



READ CAREFULLY AND KEEP FOR FUTURE REFERENCE



**DO NOT HEAT, OR USE FLAMMABLE MATERIALS** in or near the oven. Fumes can create a fire hazard or explosion.



**DO NOT USE YOUR MICROWAVE** oven for drying textiles, paper, spices, herbs, wood, flowers, fruit or other combustible materials. Fire could result.



**IF MATERIAL INSIDE / OUTSIDE THE OVEN SHOULD IGNITE OR SMOKE IS OBSERVED**, keep oven door closed and turn the oven off. Disconnect the power cord or shut off power at the fuse or circuit breaker panel.



**DO NOT OVER-COOK FOOD.** Fire could result.



**DO NOT LEAVE THE OVEN UNATTENDED**, especially when using paper, plastic or other combustible materials in the cooking process. Paper can char or burn and some plastics can melt if used when heating foods. Do not leave the oven unattended if you are using a lot of fat or oil since they can overheat and cause a fire!



**DO NOT USE** corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat or cook food. It is not designed for industrial or laboratory use.



 
**DO NOT HANG OR PLACE** heavy items on the door as this can damage the oven opening and hinges. The door handle should not be used for hanging things on.



**ONLY ALLOW CHILDREN** to use the appliance without adult supervision after adequate instructions have been given, so that the child is able to use the appliance in a safe way and understands the hazards of improper use. Children should be supervised when using other heat sources (if available) separately or in combination with microwaves due to the high temperatures generated.

**THIS APPLIANCE IS NOT INTENDED FOR use** by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

**CHILDREN SHOULD BE SUPERVISED** to ensure that they do not play with the appliance.

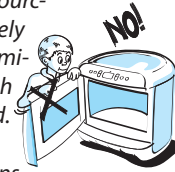

**DO NOT USE YOUR MICROWAVE** oven for heating anything in airtight sealed containers. The pressure increases and may cause damage when opening or may explode.




**THE DOOR SEALS AND THE DOOR SEAL AREAS** must be regularly inspected for damage. If these areas are damaged the appliance should not be operated until it has been repaired by a trained service technician.



**THE APPLIANCES ARE NOT INTENDED** to be operated by means of an external timer or separate remote-control system.

### EGGS

 **DO NOT USE YOUR MICROWAVE** oven for cooking or reheating whole eggs with or without shell since they may explode even after microwave heating has ended.

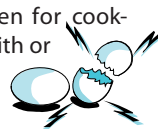



## PRECAUTIONS



### GENERAL

**THIS APPLIANCE IS DESIGNED FOR DOMESTIC USE ONLY!**

**THE APPLIANCE SHOULD NOT BE OPERATED** without food in the oven when using microwaves. Operation in this manner is likely to damage the appliance.

**THE VENTILATION OPENINGS** on the oven must not be covered. Blocking the air intake or exhaust vents may cause damage to the oven and poor cooking results.

**IF YOU PRACTICE OPERATING** the oven, put a glass of water inside. The water will absorb the microwave energy and the oven will not be damaged.

**DO NOT STORE** or use this appliance outdoors.

**DO NOT USE** this product near a kitchen sink, in a wet basement, or near a swimming pool, or similar.



**DO NOT USE THE CAVITY** for any storage purposes.

**REMOVE WIRE TWIST-TIES** from paper or plastic bags before placing bag in the oven.



### DEEP-FRYING

**DO NOT USE YOUR MICROWAVE** oven for deep-frying, because the oil temperature cannot be controlled.



**USE HOT PADS OR OVEN MITTS** to prevent burns, when touching containers, oven parts, and pan after cooking. Accessible parts may become hot during use, young children should be kept away.

### LIQUIDS

**E.G. BEVERAGES OR WATER.** Overheating the liquid beyond boiling point can occur without evidence of bubbling. This could result in a sudden boil over of the hot liquid.



To prevent this possibility the following steps should be taken:

1. Avoid using straight-sided containers with narrow necks.
2. Stir the liquid before placing the container in the oven and let the teaspoon remain in the container.
3. After heating, allow standing for a short time, stirring again before carefully removing the container from the oven.

**AFTER HEATING BABY FOOD** or liquids in a baby bottle or in a baby food jar, always stir and check the temperature before serving.



This will ensure that the heat is evenly distributed and the risk of scalding or burns can be avoided.

**Ensure the Lid and the Teat is removed before heating!**



## ACCESSORIES



### GENERAL

**THERE ARE** a number of accessories available on the market. Before you buy, ensure they are suitable for microwave use.

**ENSURE THAT THE UTENSILS YOU USE** are oven proof and allow microwaves to pass through them before cooking.



**WHEN YOU PUT FOOD AND ACCESSORIES** in the microwave oven, ensure that they do not come in contact with the interior of the oven.

**This is especially important with accessories made of metal or metal parts.**

 
**IF ACCESSORIES CONTAINING METAL** comes in contact with the oven interior, while the oven is in operation, sparking can occur and the oven could be damaged.

**ALWAYS ENSURE** that the turntable is able to turn freely before starting the oven. If the turntable isn't able to turn freely you should use a smaller vessel.

### TURNTABLE SUPPORT

**USE THE TURNTABLE SUPPORT** under the Glass turntable. Never put any other utensils on the turntable support.

☞ Fit the turntable support in the oven.



### GLASS TURNTABLE

**USE THE GLASS TURNTABLE** with all cooking methods. It collects the dripping juices and food particles that otherwise would stain and soil the interior of the oven.

☞ Place the Glass turntable on the turntable support.



**CRISP HANDLE** (only available in specific models)

**USE THE SUPPLIED SPECIAL CRISP HANDLE** to remove the hot Crisp plate from the oven.



**CRISP-PLATE** (only available in specific models)

**PLACE THE FOOD DIRECTLY ON THE CRISP-PLATE.**

Always use the Glass turntable as support when using the Crisp-plate.

 
**DO NOT PLACE ANY UTENSILS ON** the Crisp-plate since it will quickly become very hot and is likely to cause damage to the utensil.

**THE CRISP-PLATE** may be preheated before use (max. 3 min.). Always use the Crisp function when preheating the crisp-plate.



**WIRE RACK** (only available in specific models)

**USE THE WIRE RACK** when cooking with Grill functions.



**STEAMER** (only available in specific models)

**USE THE STEAMER WITH THE STRAINER** in place for such foods as fish, vegetables and potatoes.



**ALWAYS PLACE** the steamer on the Glass Turntable.




## MAINTENANCE & CLEANING

**CLEANING IS THE ONLY MAINTENANCE** normally required. It must be carried out with the microwave oven disconnected.


**FAILURE TO MAINTAIN THE OVEN** in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

 **DO NOT USE METAL SCOURING PADS, ABRASIVE CLEANSERS, steel-wool pads, gritty wash-cloths, or sharp metal scrapers etc. which can damage the control panel, and the interior and exterior oven surfaces. Use a cloth with a mild detergent or a paper towel with spray glass cleaner. Apply spray glass cleaner to a paper towel.** 


**DO NOT SPRAY** directly on the oven.

**AT REGULAR INTERVALS**, especially if spill overs have occurred, remove the turntable, the turntable support and wipe the base of the oven clean. 

**THIS OVEN IS DESIGNED** to operate with the turntable in place.


 **DO NOT** operate the microwave oven when the turntable has been removed for cleaning.


**USE A SOFT AND DAMP CLOTH** with mild detergent to clean the interior surfaces, front and rear of the door and the door opening.

 **DO NOT ALLOW GREASE** or food particles to build up around the door.

**FOR STUBBORN STAINS**, boil a cup of water in the oven for 2 or 3 minutes. Steam will soften the marks.

**ADDING SOME LEMON JUICE** to a cup of water, placing this on the turntable and boiling for a few minutes can eliminate odors inside the oven.

 **DO NOT USE STEAM CLEANING APPLIANCES** when cleaning your microwave oven.

 
 **THE OVEN** should be cleaned regularly and any food deposits removed.

**THE GRILL ELEMENT** does not need cleaning since the intense heat will burn off any splashes, but the ceiling beneath it may need regular cleaning. This should be done with a soft and damp cloth with mild detergent.

If the Grill is not used regularly, it should be run for 10 minutes a month to burn off any splashes, in order to reduce the risk of fire.

DISHWASHER SAFE:


TURNTABLE SUPPORT.

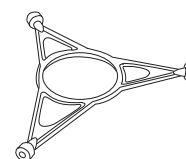


GLASS TURNTABLE.



 
CRISP HANDLE

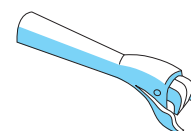

STEAMER

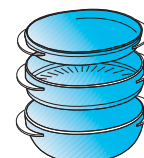 


WIRE RACK

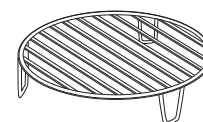 



CAREFUL CLEANING:

 **THE CRISP-PLATE** should be cleaned in mild, detergent water. Heavily soiled areas can be cleaned with a scouring cloth and a mild cleanser.

**ALWAYS** let the crisp-plate cool off before cleaning.



 **DO NOT** immerse or rinse with water while the crisp-plate is hot. Quick cooling may damage it.

 **DO NOT USE STEEL-WOOL PADS.** This will scratch the surface.

## TROUBLE SHOOTING GUIDE

**IF THE OVEN DOES NOT WORK**, do not make a service call until you have made the following checks:

- ❏ The Turntable and turntable support is in place.
- ❏ The Plug is properly inserted in the wall socket.
- ❏ The Door is properly closed.
- ❏ Check your Fuses and ensure that there is power available.
- ❏ Check that the oven has ample ventilation.
- ❏ Wait for 10 minutes, then try to operate the oven once more.
- ❏ Open and then close the door before you try again.

**THIS IS TO AVOID** unnecessary calls for which you will be charged.

When calling for Service, please give the serial number and type number of the oven (see Service label). Consult your warranty booklet for further advice.



**IF THE MAINS CORD NEEDS REPLACING** it should be replaced by the original mains cord, which is available via our service organization. The mains cord may only be replaced by a trained service technician.



**SERVICE ONLY TO BE CARRIED OUT BY A TRAINED SERVICE TECHNICIAN.**

 
*It is hazardous for anyone other than a trained person to carry out any service or repair operation, which involves the removal of any cover, which gives protection against exposure to microwave energy.*

**DO NOT REMOVE ANY COVER.**




## ENVIRONMENTAL HINTS

**THE PACKING BOX** may be fully recycled as confirmed by the recycling symbol. Follow local disposal regulations. Keep potentially hazardous packaging (plastic bags, polystyrene etc.) out of the reach of children.

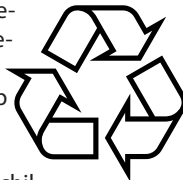

**THIS APPLIANCE** is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

 **THE SYMBOL** on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

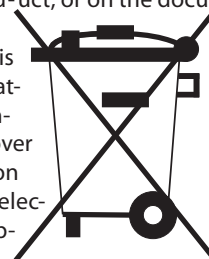

**DISPOSAL** must be carried out in accordance with local environmental regulations for waste disposal.

**FOR MORE DETAILED INFORMATION** about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

**BEFORE SCRAPPING**, cut off the mains cord so that the appliance cannot be connected to the mains.

IN ACCORDANCE WITH IEC 60705.

**THE INTERNATIONAL ELECTROTECHNICAL COMMISSION** has developed a standard for comparative testing of heating performance of different microwave ovens. We recommend the following for this oven:

Test	Amount	Approx. time	Power level	Container
12.3.1	750 G	9.5 MIN	700 W	PYREX 3.220
12.3.2	475 G	5 MIN	700 W	PYREX 3.827
12.3.3	900 G	15 MIN	700 W	PYREX 3.838
13.3	500 G	11-13 MIN	DEFROST LEVEL	



4 6 1 9 6 5 2 7 6 5 9 1 /A



Whirlpool is a registered trademark of Whirlpool, USA