

Fully Automatic Rice Cooker

User's manual

EN



SENCOR®

SRM 1000SS

Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep the user's manual in a safe place where it can be easily retrieved for future use.

Save the original shipping box, packaging material, purchase receipt and warranty card for the duration of the warranty. In the event of shipping, pack the appliance using the original packaging materials only.

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	3
DESCRIPTION OF THE RICE COOKER	5
DESCRIPTION OF SUPPLIED ACCESSORIES	6
BEFORE FIRST USE	7
USING THE RICE COOKER	7
CLEANING AND MAINTENANCE	8
STORAGE	8
TECHNICAL SPECIFICATIONS	8
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS . . .	9
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES	9

IMPORTANT SAFETY INSTRUCTIONS

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers. Cleaning and maintenance performed by the user must not be performed by children unless they are older than 8 years of age and under supervision. Keep this appliance and the power cord out of reach of children younger than 8 years of age.
- Children must not play with the appliance.

Fully Automatic Rice Cooker

SRM 1000SS

IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance is designed for cooking rice and for keeping cooked rice warm.
- This appliance is designed for domestic use and similar locations such as:
 - staff kitchens in stores, offices and other workplaces;
 - hotel or motel rooms and other living areas;
 - bed and breakfast establishments.
- Only use the appliance with original accessories from the manufacturer.
- The appliance must be located on a stable and even surface.
- Do not place the appliance on or near an electric or gas stove or other sources of heat.
- Connect the appliance only to a grounded socket.
- Before connecting this appliance to a power socket ensure that:
 - the rated voltage on the rating label is the same as the electrical voltage in the power socket.
 - the removable bowl is filled with an appropriate amount of rice and water and that it is correctly seated inside the outer pot.
- Do not start the appliance without the lid being properly placed on it.
- Do not leave the rice boiling for too long.
- Prior to consuming, always check that there is not a layer of burned rice on the bottom of the bowl.

**Attention:**

Do not pour rice or water into the outer pot.

- During operation there needs to be sufficient area for air circulation above the appliance and around it.
- When using the appliance, the outer pot, the removable bowl and the lid heat up. Do not touch the hot surface. Use the handle and grip when handling the pot or lid.
- Always turn off the appliance and disconnect it from the power socket if you leave it without supervision if you are not using it and before cleaning.
- Allow the appliance to fully cool down before moving, cleaning or storing it.
- Regularly clean the appliance after each use according to the instructions in the chapter Cleaning and maintenance.
- To avoid possible injury by electrical shock, do not clean the outer pot or the power cord under running water and do not submerge in water or any other liquid.
- Do not disconnect the appliance from the power socket by pulling on the power cord. This could damage the power cord or the socket. Disconnect the appliance from the power socket by gently pulling the plug of the power cord.
- If the power cord is damaged, it must be replaced by an authorised service centre or by a similarly qualified person, this will prevent dangerous situation from arising.
- Do not use the appliance if it does not function properly or is damaged in any way. To avoid the danger of injury by electrical shock, do not repair the appliance yourself or make any adjustments to it. Have all repairs or adjustments of the appliance performed at an authorised service centre. Tampering with the appliance during the warranty period may void the warranty policy.

 
Fully Automatic Rice Cooker

SRM 1000SS

EN

DESCRIPTION OF THE RICE COOKER


A

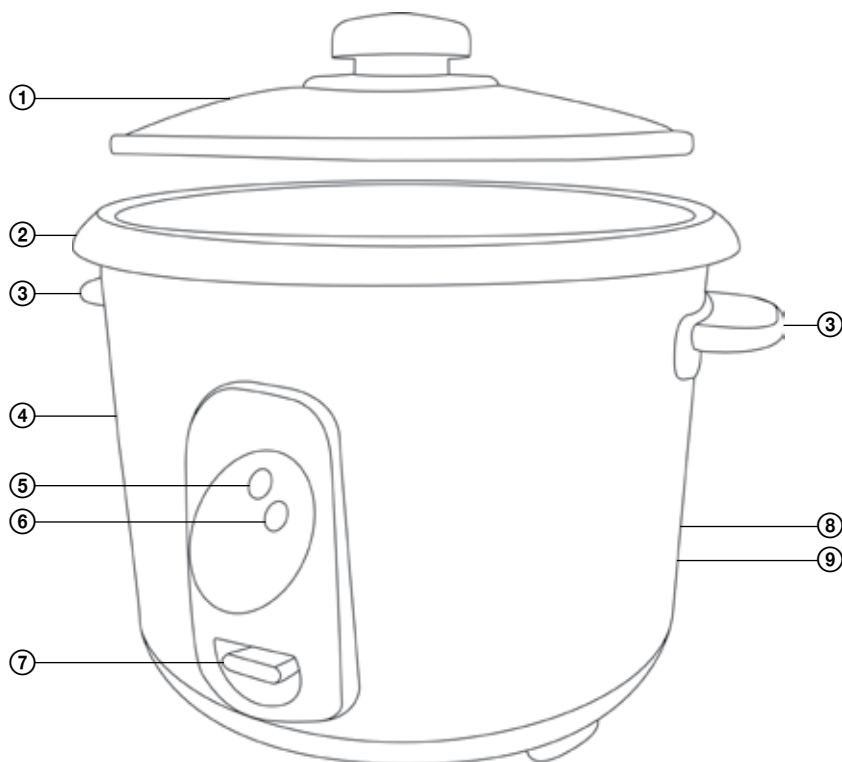

- ① Glass lid with a handle and an excess steam release hole
- ② Inner removable bowl with a non-stick finish
- ③ Handle
- ④ Outer pot
- ⑤ WARM indicator light indicates the keep warm mode


- ⑥ COOK indicator light indicates the rice cooking mode
- ⑦ Switch for changing between the WARM and COOK modes
- ⑧ Power cable (no illustration)
- ⑨ Power switch (no illustration)

 DESCRIPTION OF SUPPLIED ACCESSORIES

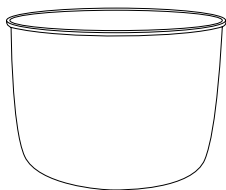B

①

 ① Rice and water measuring cup



②

② Stirring spoon

Fully Automatic Rice Cooker

SRM 1000SS

EN

BEFORE FIRST USE

- 1) Take the rice cooker and its accessories out of the packaging materials.
- 2) Wash the removable bowl A②, the lid A①, the measuring cup B① and the spoon B② in warm water with dishwashing detergent. Then rinse all these parts under clean running water and dry them thoroughly.

USING THE RICE COOKER

- 1) Place the removable bowl A② on the kitchen bench or another even and stable surface. Using the supplied measuring cup B① measure the required amount of rice.



Attention:

A maximum of 10 level measuring cups of rice can be cooked in a single batch.

Transfer the rice to a strainer and rinse through using running water. Transfer the rinsed rice into the removable bowl A② and evenly spread it out from the centre towards the wall of the bowl. Add the appropriate amount of cold water. You will find the recommended rice and water dosage ratio in the table below.

Number of level measuring cups of rice	Amount of water
1	0.2 l
2	0.4 l
3	0.6 l
4	0.8 l
5	1.0 l



Note:

Two measuring scales are marked on the measuring cup B①. One measuring scale is used for measuring rice ($\frac{1}{4}$, $\frac{1}{2}$, $\frac{3}{4}$ cup or one level measuring cup) and the second scale is used for measuring water (40 to 160 ml).

A single level measuring cup is equal to 140 g of uncooked rice.



Attention:

The rice to water ratio can be modified as necessary. However, make sure that the water level does not exceed the 1.0 l water level mark on the inside wall of the removable bowl A②. Otherwise boiling water could spray out during the cooking process.

- 2) Insert the bowl A② into the outer pot A④ and cover it with the lid A①. Make sure that bowl A② is correctly seated in the outer pot A④.
- 3) Insert the power plug into an electrical power socket. Slide the power switch to position I (turned on).
- 4) When the appliance is turned on using power switch A⑨, the WARM mode (keep warm function) is automatically started. This is indicated by the WARM A⑤ indicator light being lit. To start the COOK (cook rice) mode, slide the switch A⑦ downwards. The COOK indicator light A⑥ will turn on. Do not slide switch A⑦ back to the upper position while the rice is cooking.

Fully Automatic Rice Cooker

SRM 1000SS

- 5) The rice will be cooked in approximately 30 minutes. Afterwards, the rice cooker will automatically switch to the WARM mode. The WARM mode can keep the rice warm for up to 6 hours. After this, the rice cooker will turn off.

**Tip:**

The rice will taste better if you allow it to finish cooking in the WARM mode for 10 to 20 minutes.

**Note:**

To maintain flavour, we recommend that you do not keep the rice warm for longer than 3 hours. Otherwise it may dry out.

- 6) If you wish to serve the rice, carefully lift the lid A① and put it aside. Gently stir the rice using the spoon B② and serve.

**Attention:**

To avoid damaging the non-stick finish of the removable bowl A②, do not use metal kitchen utensils to stir the rice.

- 7) Another batch of rice can be cooked after several minutes as soon as it is possible to start the COOK mode.

**Note:**

Do not attempt to hold down the switch A⑦ in the lower position.

- 8) When you have finished using the appliance, slide the power switch A⑨ to position 0 (turned off). If you will not be using the rice cooker, disconnect it from the power socket.

CLEANING AND MAINTENANCE

- Check that the power cord is disconnected from the power socket and allow the rice cooker to cool down. Take the removable bowl A② out of the outer pot A④ and remove any remaining rice.
- Wash the removable bowl A②, the lid A①, the measuring cup B① and the spoon B② in warm water with dishwashing detergent. Then rinse these parts under flowing water and dry them.

**Attention:**

Do not wash the removable bowl A② in a dishwasher.

- Clean the outer pot A④ using a lightly damp cloth and then wipe dry.
- Do not use abrasive cleaning products, steel wool, petrol, solvents, etc. for cleaning.

STORAGE

- Store the assembled rice cooker in a dry, clean place that is out of reach of children.

Fully Automatic Rice Cooker

SRM 1000SS

EN

TECHNICAL SPECIFICATIONS

Nominal voltage range	220–240 V
Nominal frequency	50/60 Hz
Rated power input	400 W
Capacity	0.7 kg of uncooked rice + 1 l water

We reserve the right to change the text and technical specifications.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Fully Automatic Rice Cooker

SRM 1000SS