

HEINNER

CITRUS JUICER

Model: C300SS



- Citrus juicer
- Capacity: 0.5L
- Power: 30W

www.heinner.ro

Thank you for purchasing this product!

I. INTRODUCTION

Before using the appliance, please read carefully this instruction manual and keep it for future reference.

This instruction manual is designed to provide you with all required instructions related to the installation, use and maintenance of the appliance.

In order to operate the unit correctly and safety, please read this instruction manual carefully before installation and usage.

II. CONTENT OF YOUR PACKAGE




- Citrus juicer
- User manual
- Warranty card

III. SAFETY MEASURES

Before using the electrical appliance, the following basic precautions should always be followed including the following:

1. Read all instructions before using.
2. Before using check that the voltage power corresponds to the one shown on the appliance label.
3. To protect against risk of electrical shock do not put the motor unit in water or other liquid.
4. Unplug from outlet when not use, before putting on or taking off parts, and before cleaning.
5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return the appliance to the authorized service facility for examination, repair or electrical or mechanical adjustment.
6. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
7. Place the appliance on the flat surface. Do not place on or near a hot gas or electric burner, or in a heated oven.
8. Do not let supply cord hang over the edge of table or counter.
9. Close supervision is necessary when the appliance is used by or near children.
10. Do not use appliance for other than intended use.
11. The appliance can only be used to squeeze the citrus fruit, never use it for juicing any other kind of fruits.
12. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
13. Children should be supervised to ensure that they do not play with the appliance.
14. Do not use outdoors. The appliance must be used household only.
15. Save these instructions.
16. This appliance is intended to be used in household only.
17. Warning: Potential injury from misuse.
18. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
19. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.

IV. DESCRIPTION

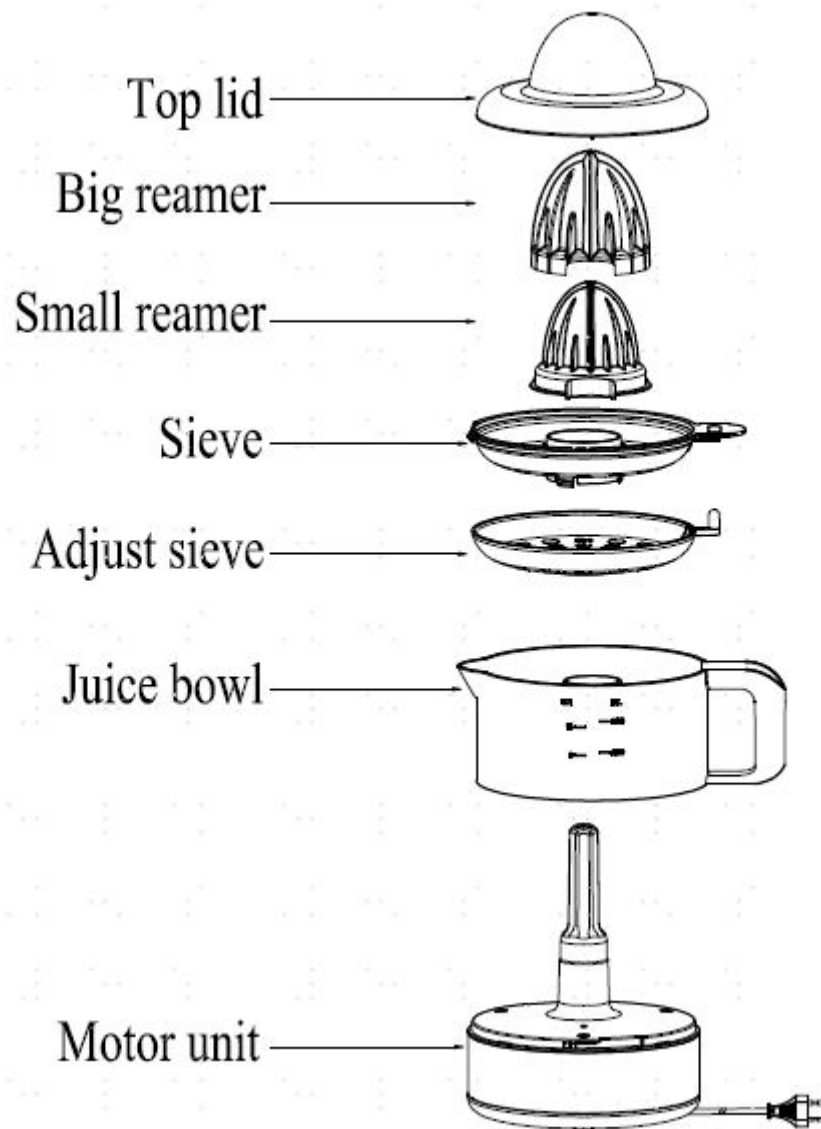

V. USING INSTRUCTIONS

Before first use, clean the top lid, ramer, filter and cup thoroughly with warm water.

1. Place the cup onto the base, then assemble the sieve into the spindle cap, after assemble the reamer into the spindle cap.
2. Halve the fruit, put it on the reamer and press it lightly. The motor will start running. The extracted juice will flow into the cup through the sieve, the roughness flesh and pith will be remained on the sieve. The motor may rotate in different directions.

Caution: Never exert excessive force when pressing the fruit to prevent from blocking and damaging motor.

3. Once finishing the operation, release the hand from the remaer and the motor stops running. The appliance will remain in stand by. You may restart it again at any time by pressing the reamer down.
4. After colecting the juice, first put the reamer away, then pour juice.

Caution: The appliance shall be on 15s, off 15s, and after 10 consecutive cycles, the appliance must be cooled down for 30 minutes.

Note: the max capacity of the cup is 0.5L. Make sure do not overfill the cup.

5. When operating is completed or do not use the appliance, unplug the appliance.
6. If depositing the juice in the cup, make sure the top lid is in place. For remaining clean and sanitation, do not deposit the juice in the cup for long time.

Caution: When juicer is not use, never hold the two pins of plug while turn the reamer by hand as this may result in electric shock.

VI. MAINTENANCE AND CLEANING

1. Unplug the appliance and wait it completely cool down before clean.
2. Filter, reamer, cup. Clean them in hot, sudsy water. Then rinse under running water and wipe dry.

Caution: never use metal polish for cleaning and do not put into dishwasher to clean.

3. Wipe the rotating axis with a soft, damp cloth, never immersed the power base in water or other liquid.
4. Assemble all parts together.

VII. TECHNICAL DETAILS

Power	30W
Capacity	0.5L
Voltage	220-240V; 50Hz

**Environment friendly disposal**

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipment's to an appropriate waste disposal center.



HEINNER is a registered trademark of **Network One Distribution SRL**. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from NETWORK ONE DISTRIBUTION.

Copyright © 2013 Network One Distribution. All rights reserved.

www.heinner.com, <http://www.nod.ro>



This product is in conformity with norms and standards of European Community.

Importer: **Network One Distribution**

Marcel Iancu Street, 3-5, Bucharest, Romania

Tel: +40 21 211 18 56, www.heinner.com, www.nod.ro