

HEINNER

HAND BLENDER

Model: HB-600UV



- Hand blender
- Power: 600W, 50Hz, 220-240V
- Color: ultraviolet

www.heinner.ro

Thank you for purchasing this product!

I. INTRODUCTION

Before using the appliance, please read carefully this instruction manual and keep it for future reference.

This instruction manual is designed to provide you with all required instructions related to the installation, use and maintenance of the appliance.

In order to operate the unit correctly and safety, please read this instruction manual carefully before installation and usage.

II. CONTENT OF YOUR PACKAGE




- **Hand blender**
- **User manual**
- **Warranty card**

III. SAFETY PROTECTIONS




Before using the appliance, you must always follow these basic precautions:


01. Read all instructions.
02. Before use, check that the wall outlet voltage matches to that indicated on the rating plate.
03. Do not use any appliance with damaged cord or plug, after the appliance malfunctions or damaged in any way. Return the device to the nearest authorized service facility for adjustment, examination, electrical or mechanical repair of the product.
04. If the cord is damaged, it must be replaced by manufacturer or an authorized service agent or a qualified technician in order to avoid a hazard.
05. Always disconnect the appliance from the power supply if it is left unattended and before installing, removing or cleaning it.
06. Do not let cord hang over edge of table or hot surfaces.
07. Do not insert the top of blender in water it would produce an electric shock.
08. Close supervision is necessary when appliance is used near children or people with disabilities.
09. Avoid contact with the moving parts.
10. During operation, the device does not insert your hands into his bowl to avoid serious injury. Make sure that there are no utensils flask that can cause damage to the device.
11. The device cannot be used for crushing ice cubes or mixing hard and dry food. Otherwise the blade may be damaged.
12. To reduce the risk of injury, do not put the bowl utensils properly without additional device.
13. Before using the cutter, make sure that the cover is fixed.
14. Using other types of accessories is not recommended by the manufacturer. They can cause injury.
15. Do not use the appliance for other purposes than those stipulated in the manual.
16. This appliance is not intended for use by persons with reduced physical (including children), sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
17. Do not use the appliance outdoors.
18. Keep these instructions.
19. This device should not be used by children. Never leave the appliance and its cord away from children.
20. Keep out of the reach of children.

IV. DESCRIPTION

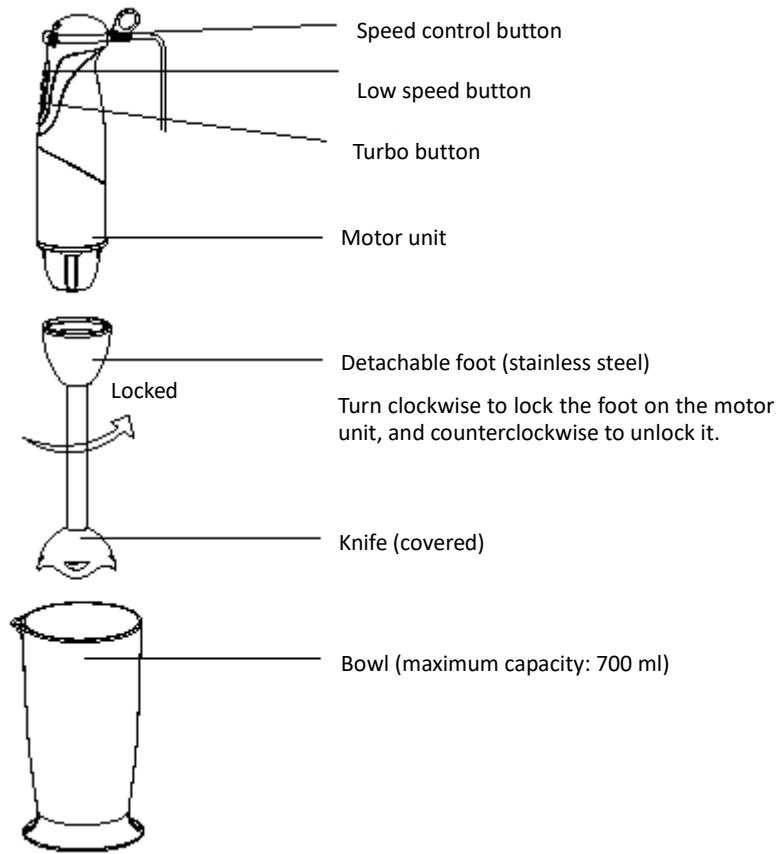

V. USING THE BLENDER

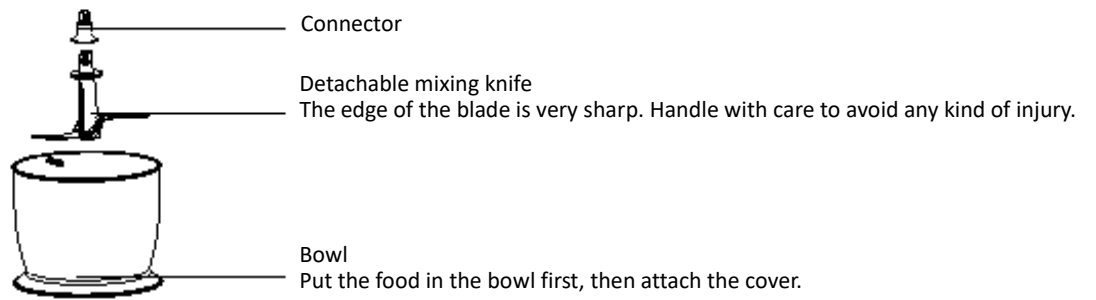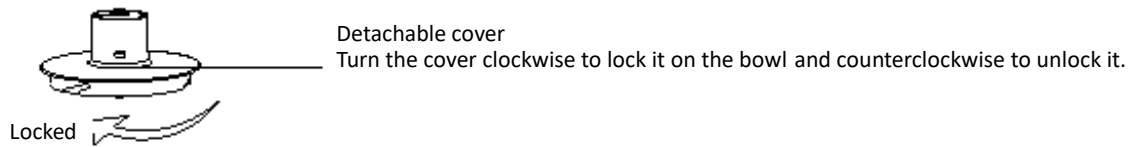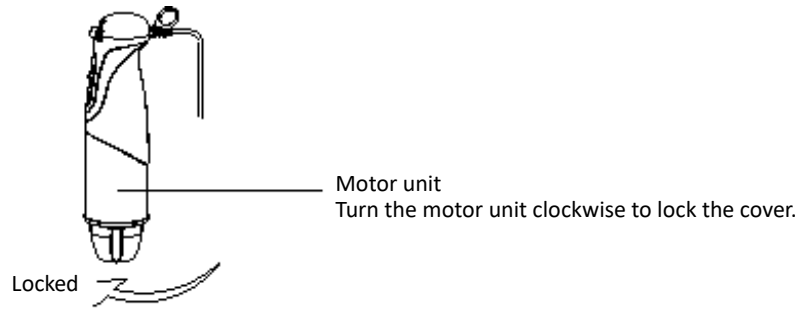

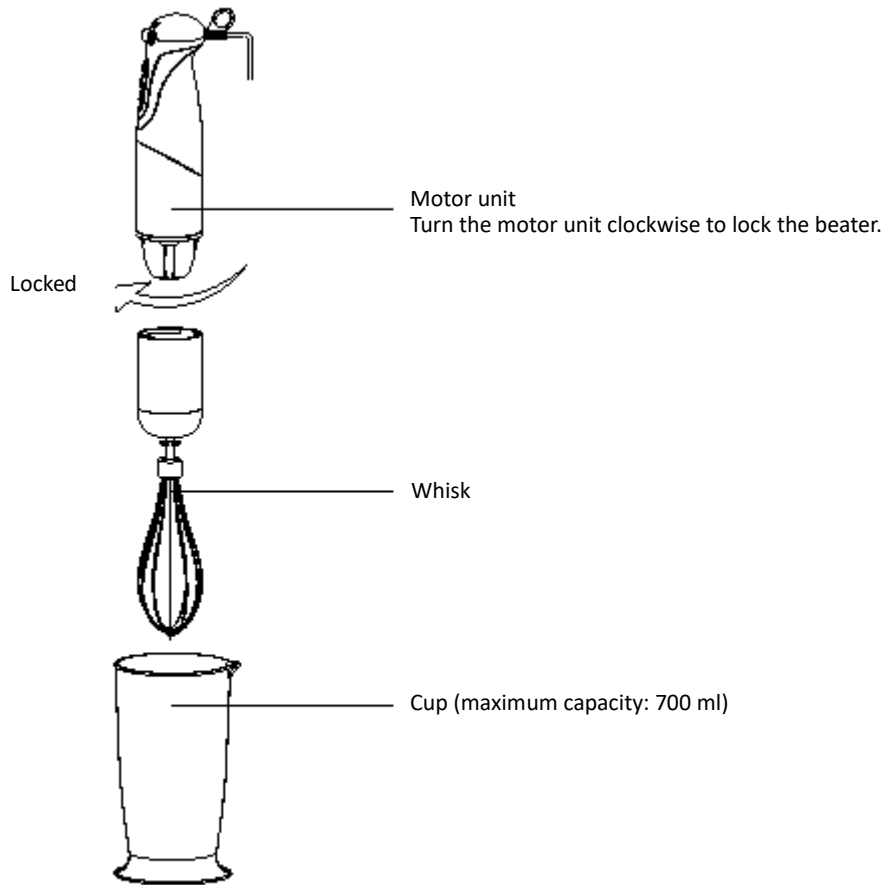

Before first use, clean the unit according to the section of "quick cleaning".

Important: the blades are very sharp, handle with care. Make sure the appliance is disconnected from the wall outlet before assembling or removing accessories.

VI. USING INSTRUCTIONS

Maximum uptime cannot exceed 1 minute. Idle time between two consecutive cycles must be at least 3 minutes.

01. To mount accessories detachable camera unit , turn the camera to the right until they are secure.
02. Connect the outlet .
03. Carefully lower the blender bowl with food. Then press and hold the button low speed to start using it. Meanwhile, you can select the speed by pressing the speed control button . There are five gears : 1, 2 , 3, 4 , 5 (from low speed to high speed) .
04. Also, the blender can operate by touch and by mentinereaa turbo button pressed . The device will always work to the highest speed .
05. To stop the blender, release the button low speed or high speed .

Instructions for chopper

Maximum uptime can not exceed 1 minute. Idle time between two consecutive cycles must be at least 3 minutes.

01. Place the dish on a clean, flat surface.
 02. Assemble the stainless-steel chopping blade in the bowl, as shown in Figure 1.
 03. Place the food in the bowl.
- Note: remove the bones from the meat, cut it in small pieces, then put the meat in the bowl , the maximum amount of meat can not exceed 200 g of each mixture.
04. Attach the lid and turn it clockwise until it snaps into place (See Figure 2). To remove the lid, turn in the opposite direction.
 05. Insert the drive into the bowl , and turn to the right to lock it (See Figure 3).
 06. Connect the outlet. Then press and hold the button low speed to start using it. Meanwhile, you can select the speed by pressing the speed control button. There are five gears: 1, 2 , 3, 4 , 5 (from low speed to high speed).
 07. Also, the blender can be operated by pressing and holding the turbo button. The device will always work to the highest speed.
 08. To stop the machine, release the button low speed or high speed.
 09. After the grinding process is finished, remove the unit from the wall outlet plug, and then remove the cutter unit cap by turning it to the left.
 10. Open the cutter cover by turning it anticlockwise and remove chopped food.

VII. WARNING!

To reduce the risk of injury, make sure the device is placed properly the knife in bowl

- Ensure that the cover is securely chopper before use.
- During operation and after chopping, safety, and first remove the unit from the cover cutter device, then remove the cutter cover.
- Never remove the cutter cover unit if the unit works.



Fig. 1

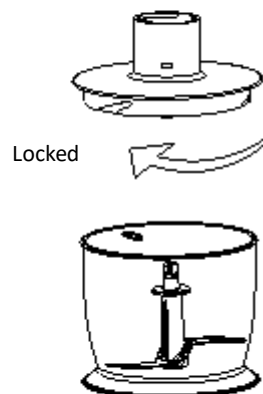


Fig. 2

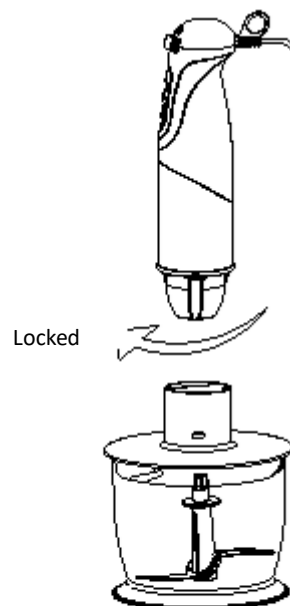


Fig. 3

VIII. INSTRUCTIONS TO BEAT EGG WHITES

Maximum operating life cannot exceed 2 minutes. Idle time between two consecutive cycles must be at least 3 minutes.

01. To assemble the machine to beat egg whites, turn to the left until its accessories are secure. To disassemble, turn in the opposite direction.
02. Connect blender outlet.
03. Add the egg whites in the bowl (usually two egg whites are enough).
04. Lower blender in the bowl with food. Then press and hold the button low speed to start using it. Meanwhile, you can select the speed by pressing the speed control button. There are five gears: 1, 2, 3, 4, 5 (from low speed to high speed).
05. Also, the blender can operate by touch and by maintain turbo button pressed. The device will always work to the highest speed.
06. To stop the machine, release the button low speed or high speed.

IX. MAINTENANCE AND CLEANING

01. Unplug the unit and remove the detachable leg.
02. Wash detachable foot under running water without the use of abrasive cleaning products or detergents. After you have finished cleaning detachable leg, put the camera in a vertical position, so to drain any water droplets. The stem is the component that can be washed safely.

03. Wash the cup, bowl, beater blade in warm water and dish soap. It is not recommended to clean bowl and beater in the dishwasher, the plastic material can be damaged by prolonged use of the dishwasher.

04. Wipe the drive unit with a damp cloth. Do not submerge the device in water for cleaning, can cause an electric shock.

05. Dry thoroughly.

Caution: blades are very sharp, handle with care.

06. Reassemble the blender or close it to save space.

Quick Cleaning

Keep your hand blender in half a glass of water and turn it on for a few seconds.

X. TECHNICAL DETAILS

Power	600 W
Voltage	220-240V, 50Hz
Color	Ultraviolet



Environment friendly disposal

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipment's to an appropriate waste disposal center.



HEINNER is a registered trademark of **Network One Distribution SRL**. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from NETWORK ONE DISTRIBUTION.

Copyright © 2013 Network One Distribution. All rights reserved.

www.heinner.com, <http://www.nod.ro>

<http://www.heinner.com>, <http://www.nod.ro>



This product is in conformity with norms and standards of European Community.

Importer: **Network One Distribution**

Marcel Iancu, no. 3-5, Bucharest, Romania

Tel: +40 21 211 18 56, www.heinner.com, www.nod.ro