www.heinner.com

HEINNER

STAND BLENDER Model: HBL-ICE1000XMC



• Stand blender

• Power: 1000W

• Capacity: 1.5L

Thank you for chosing this product!

I. INTRODUCTION

Please read this instruction manual carefully before using it and kee it for later information

This manual is conceived for ofering you all of the necessary info regarding instalation, using and maintenance of the machine. For a correctly and safely use of the machine, please, read this manual before instalation and using.

II. PACKAGE CONTENTS




- > Stand blender
- > Instruction Manual
- > Warranty card

III. SAFETY MEASURES

When using the electrical appliance, the below basic safety precautions should be followed:

- 1. Read all instructions.
- 2. Before using check that the voltage power corresponds to the one shown on the appliance nameplate.
- 3. Do not let cord hang over edge of table or counter.
- 4. Do not place on or near a hot gas or electric burner, or in a heated oven.
- 5. Do not operate any appliance with a damage cord or plug or after the appliance malfunction or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
- 6.If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- 7. Close supervision is necessary when any appliance is used by or near children.
- 8. Avoid contacting moving parts.
- 9. Blades are sharp, so handle carefully.
- 10. The use of attachment, including jar, jar lid, not recommended or sold by manufacturer may cause fire, electric shock or injury.
- 11. The appliance can not be used for blending hard and dry substance, otherwise the blade could be blunted.
- 12. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- 13. To protect against risk of electrical shock do not put motor unit or power cord in water or other liquid.
- 14. Do not use outdoors.
- 15. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
- 16. To reduce the risk of injury, never place cutter-assembly blades on base without jar properly attached.
- 17. Always operate blender with cover in place.
- 18. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- 19. Children should be supervised to ensure that they do not play with the appliance.
- 20. Warning: never use hot liquids or run the appliance empty.
- 21. Save this instruction.

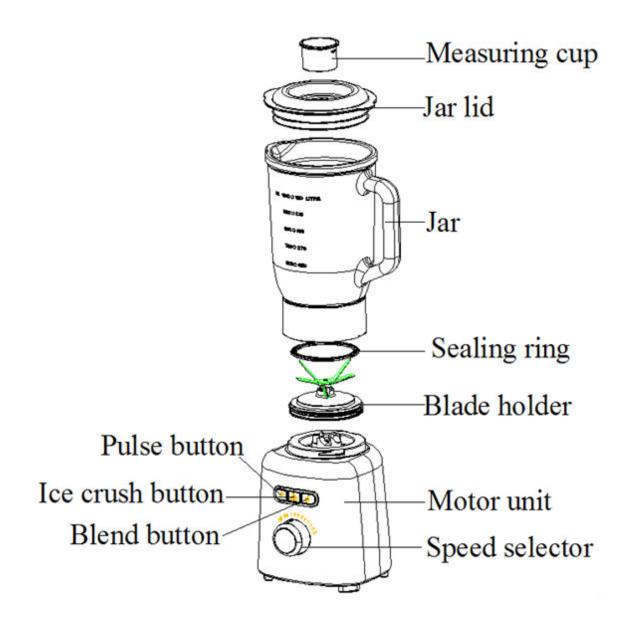

V. USING THE APPLIANCE

- 1. Unpack the appliance and place all parts on a horizontal surface.
- 2. Immerse the jar, jar lid and measuring cup in warm soapy water and rinse them and dry. Never immerse motor unit in water for cleaning to prevent the risk of electric shock.

Caution: The blade is very sharp, please handle carefully.

3. The correct assembly way will be described in detail in below sections. Before assembling the jar, be sure the power cord is unplugged from the power outlet and the speed selector is on the OFF position.

The blender jar is suitable for making mixture which the juice and pulp are mixed. For attaching jar, firstly place the jar lid into the jar, ensure the jar lid is placed tightly and properly with the jar. And then place the jar into the motor unit properly.

Note: Make sure all the assembly is placed properly.

BLENDING FRUIT AND VEGETABLE

- 1. Before assemble or attach the power cord into the outlet, make sure the speed selector is in OFF position.
- 2. Peel or core the fruit or vegetables and then cut it into small dices, put the food pieces into the jar. Usually certain amount of purified water should be added to facilitate the smooth running of appliance. The proportion of the food and water is 2:3. The amount of mixture should not exceed the max level as indicated on the jar.

FOOD TYPE	SPEC	WEIGHT	SPEED
Carrott (apple, pear	Cut into	Carrott: 600g	High speed
etc.)	15mm*15mm	Water: 900g	

Note: Never use boiling liquids or run the appliance empty.

- 3. Place the jar lid in position tightly. Connect the plug to the wall outlet and turn the speed selector to ON position.
- 4. Turn the speed selector to adjust the speed. The speed selector is a stepless speed knob, the speed is gradually increased by turning clockwise.
- 5. You may add ingredients into the jar through the center opening of jar lid during operation, and then replace measuring cup if necessary. You just need to press down the measuring cup directly to fix it tightly.
- 6. The max operation time per time shall not exceed 3 minutes. Minimum 3 minutes' rest time must be maintained between continuous two cycles.
- 7. Turn the Speed control knob to OFF position once the mixture has been blended to your desired consistency.
- 8. Remove the jar from the motor unit, carefully take off the jar lid, then pour and serve.

VI. FUNCTION BUTTONS

When the speed selector is in ON position, you can use the following three function buttons: Pulse button: you can press and hold it if you want to accelerate the process of blending. Ice crush button: if there is ice in your ingredient, you can press it to process food. The unit will operate at MAX speed and stop automatically after finishing.

Blend button: after you pressing it, the unit will operate at MAX speed for 60s, then stop automatically.

VII. CLEANING AND MAINTENANCE

The Auto Clean feature can clean the blender and blade assembly easily and rapidly in complete safety.

- -After use, reassemble the jar and pour a little warm water into it and turn the speed selector to Pulse position for a few seconds to remove the residual food.
- -After stop, remove the jar from the motor unit and rinse the jar under running water.
- -Wiping the outer surface of motor unit with a damp cloth, do not use abrasive cleansers. Never immerse in water or other solution for cleaning.
- -Dry all parts and then replace them.

Warning: Do not use abrasive cleansers. Never immerse in water for cleaning.

Note: The blade is very sharp, handle carefully when clean.

VIII. TECHNICAL FICHE

Rated voltage	220-240 V	
Rated frequency	50/60Hz	
Power	1000W	



Environment friendly disposal

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipment's to an appropriate waste disposal center.



HEINNER is a registered trademark of **Network One Distribution SRL**. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from NETWORK ONE DISTRIBUTION.

Copyright © 2013 Network One Distibution. All rights reserved.

www.heinner.com, http://www.nod.ro http://www.heinner.com, http://www.nod.ro



This product is in conformity with norms and standards of European Community

Importer: Network One Distribution

Marcel lancu Street, no 3-5, Bucharest, Romania
Tel: +40 21 211 18 56, www.heinner.com , www.nod.ro