

# HEINNER

## TELESCOPIC COOKER HOOD

Models: HTCH-F660IX / HTCH-F660GBK



- Telescopic cooker hood
- Suction power: 611.79 m<sup>3</sup>/h
- Color: Inox / Black

[www.heinner.ro](http://www.heinner.ro)

Thank you for purchasing this product!

## I. INTRODUCTION

**Please read the instructions carefully and keep the manual for future information.**

This manual is designed to give all necessary instructions concerning installation, use and maintenance of the unit. In order to operate the unit correctly and safely, please read this instruction manual carefully before installation and use.

## III. SAFETY PRECAUTION

## II. PACKAGE CONTENT



- Telescopic cooker hood
- User manual
- Warranty card

1. Never let the children operate the machine.
2. The cooker hood is for home use only, not suitable for commercial purpose. The cooker hood and its filter should be clean, regularly in order to keep in good working conditions.
3. Clean the cooker hood according to the instruction manual and keep the unit from danger of burning. There is a fire risk if cleaning is not carried out in accordance with the instructions.
4. Please keep the kitchen room a good convection before connecting this appliance. Please check that the power supply cord is not damaged. A damage supply cord must be replaced by qualified service personnel only.
5. There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels; the air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.
6. Regulations concerning the discharge of air have to be fulfilled.
7. Do not flame under the range hood.
8. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
9. If the supply cord is damaged, it must be replaced by a service agent or similarly qualified persons in order to avoid a hazard.

**CAUTION:** Accessible parts may become hot when with cooking appliance.

**Electrical Shock Hazard**

Only plug this unit into a properly earthed outlet. If in doubt, seek advice from a suitably qualified engineer.

 
#### IV. TELESCOPIC MODEL INSTALLATION

##### Way 1

To install onto the wall drill 2 holes of 8 mm on a suitable place according with the centre distance of hole in the back of the cooker hood.

Insert the nut into the holes.

Insert the screws into the nuts and tight. Put the cooker hood onto the tighten screws.

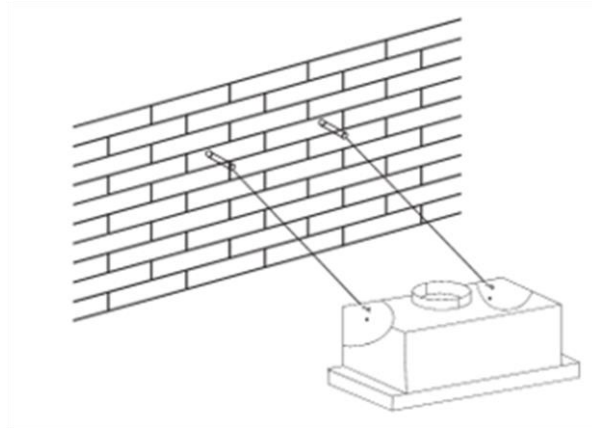


Fix the cooker hood with safety screw. The two safety vents are position on the back casing, with diameter of 6mm. Put the one way valve onto the cooker hood.

##### Way 2

 Drill 4 holes of 6mm diameter at the bottom of the hanging cupboard.

Put the one way valve on the cooker hood, then install the cooker hood on the bottom of the hanging cupboard, tighten the hood with enclosed 4 screws.

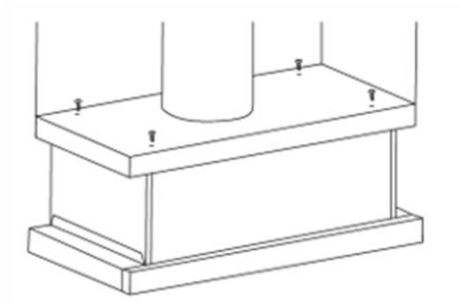

##### Note:

1. The extensible pipe is optional accessory, not supplied.
2. Take off protection film before installation.

## V. OPERATION

### Mechanical rocker button

It just appears in Telescopic model.



Light button

On the left side of the hood



Speed button

On the right side of hood

"=": High speed level

 
"-": Low speed level

"0": Off


### Ventilation

Heinner telescopic hoods can be used on two modes: outdoor air ventilation and indoor air ventilation. For indoor air ventilation, it is necessary to install carbon filters, which must be purchased separately.

For outdoor air ventilation install the outlet, turn on the cooker hood, the the air will be vented outside.

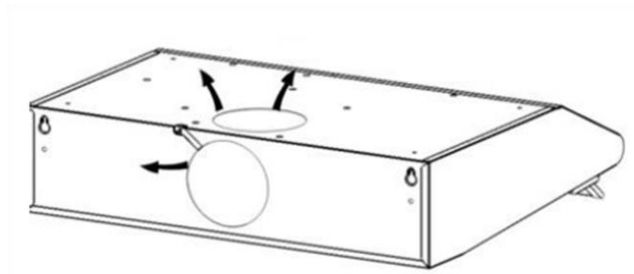

 For indoor air ventilation, install the carbon filter, turn on the cooker hood, then the air will be vented inside.

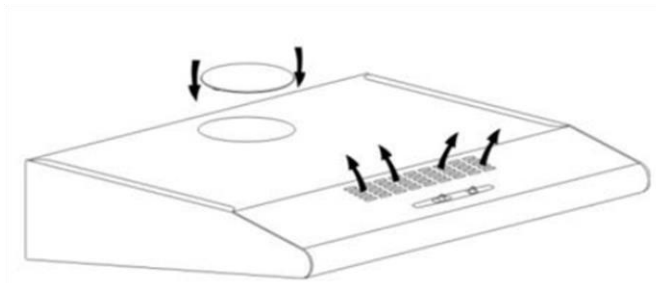

## VI. MAINTENANCE

Before cleaning switch the unit off and pull out the plug.

### I. Regular Cleaning

Use a soft moistened with hand-warm mildly soapy water or household cleaning detergent.

Never use metal pads, chemical, abrasive material or stiff brush to clean the unit.

### II. Monthly cleaning for Grease Filter

ESSENTIAL: Clean the filter every month can prevent any risk of fire. The filter collects grease, smoke and dust. So the filter is directly affecting the efficiency of the cooker hood. If not cleaned, the grease residue (potential flammable) will saturate on the filter. Clean it with household cleaning detergent.

 
 
 
### III. Annual Cleaning for Activated Filter

Apply SOLELY to unit that installed as a recirculation unit (not vented to the outside). This filter traps odours and must be replaced at least once a year depending on how frequent the cooker hood used.

## VII. LAMP REPLACEMENT

1. Switch the unit off and unplug the appliance.
2. Remove the lamp cover by unscrewing the 2 screws.
3. Unscrew the lamp.
4. Replace with the same type and rated bulb/lamp.

LED lamp (max, 1.5W)

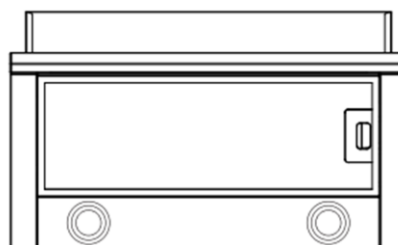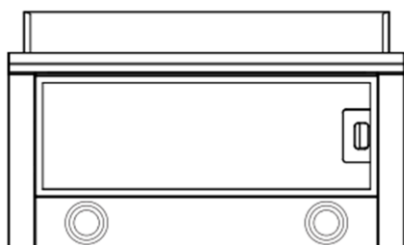

## VIII. TROUBLESHOOTING

FAULT	POSSIBLE CAUSE	SOLUTION
Light on, but fan does not work	The fan blade id jammed	Switch of the unit. The repair must be done by qualified service personnel only.
	The motor is damaged	
Both light and fan do not work	Light bulb burn	Replace the bulb with correct rating
	Power cord looses	Plug in to the power supply again
Serious vibration of the unit	The fan blade is damaged	Switch of the unit and repair by qualified personnel only
	The fan motor is not fixed	Switch of the unit and repair by qualified service personnel only
	The unit is not hung properly on the bracket	Take down the unit and check whether the bracket is in proper location
Suction performance not good	Too long distance between the unit and the cooking plane	Readjust the distance to 65-75 cm

**NOTE:** Any electrical repairs to this appliance must conform to your local, state and federal laws. Please contact the service centre if in any doubt before undertaking any of the above. Always disconnect the unit from the power source when opening the unit.

**Environment friendly disposal**

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipment's to an appropriate waste disposal center.



**HEINNER** is a registered trademark of **Network One Distribution SRL**. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from NETWORK ONE DISTRIBUTION.

Copyright © 2013 Network One Distribution. All rights reserved.

[www.heinner.com](http://www.heinner.com), <http://www.nod.ro>



This product is in conformity with norms and standards of European Community.

Importer: **Network One Distribution**

Marcel Iancu Street, no 3-5, Bucharest, Romania

Tel: +40 21 211 18 56, [www.heinner.com](http://www.heinner.com) , [www.nod.ro](http://www.nod.ro)