

HEINNER

SANDWICH MAKER

Model: SM-K750BKRX



- Sandwich maker
- Power: 750W
- Color: black with red

www.heinner.com

Thank you for choosing this product!

I. INTRODUCTION

Please read this instruction manual carefully before using it and keep it for later information

This manual is conceived for offering you all of the necessary info regarding installation, using and maintenance of the machine. For a correctly and safely use of the machine, please, read this manual before installation and using.

II. PACKAGE CONTENTS



- **Sandwich maker**
- **Instruction Manual**
- **Warranty card**

III. SAFETY MEASURES

- Please read these operating instructions thoroughly before first operating the sandwich maker and keep them in a safe place.
- If you pass this appliance on to a third party, these operating instructions must also be handed over.
- Incorrect operation and handling can lead to malfunction of the appliance and injures to the user.
- This appliance is intended for household use only.
- Before inserting the plug into the mains socket, please check that the current and power supply comply with the specifications on the type plate.
- Disconnect the mains plug from the socket when the appliance is not in use and before cleaning.
- Parts of the appliance become hot during use. Therefore, the appliance must only be held by the handle.
- Do not immerse the appliance or the mains plug in water or other liquids. There is danger to life due to electric shock!
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Appliances are not intended to be operated by means of an external timer or separate remote-control system.
- Do not use the appliance if the mains cable or plug show signs of damage, if the appliance has fallen on the floor or has otherwise been damaged. In such cases take the appliance to a specialist for checking and repair if necessary.
- Ensure that the mains cable is not hung over sharp edges and keep it away from hot objects and open flames.
- Place the appliance on a stable, level surface and not close to hot objects or open flames (e. g. hotplates).
- Never leave the appliance unattended during use.
- The temperature of accessible surfaces may be high when the appliance is operating.

IV. PRODUCT DESCRIPTION



- A. Handle
- B. Power light
- C. Ready light
- D. Stainless Steel Cover
- E. Handle Lock
- F. Non-stick Coated Plate

V. USING THE APPLIANCE

BEFORE INITIAL USE

- Remove all packaging.
- Clean the toasting surfaces with a soft damp cloth and then dry them.
- Unwind the mains cable completely.

OPERATING INSTRUCTIONS

- Connect the appliance to an appropriate socket.
- The control lights illuminate and the toasting surfaces heat up.
- The appliance must be heated up before grilling. In the meantime, prepare your food.
- As soon as the appliance has heated up, the control light goes out.
- You can now begin grilling.
- Open the appliance at the catch.
- Close the appliance, making sure that catch is engaged.
- Caution: If the foods have too much filling on, it will not be possible to close the appliance. Take some of the filling off. Never use force to close the appliance.
- During toasting the temperature regulating thermostat switches off and on again. The control light also switches off and on again.
- After completion of the grilling process (approx. 2-3 minutes) open the catch and remove the foods with the help of a flat wooden or plastic spatula. Never use sharp or metal object (e. g. knives, metal spatulas, etc.) as this will damage the Teflon coating.

- If you wish to grill move food, close the appliance again and wait until the toasting surfaces have reheated sufficiently.
- When the control light illuminates again you can repeat the toasting process as described above.
- After completion of the grilling process disconnect the mains plug immediately. With the appliance open allow it to cool down.

Caution:

- The grilling surfaces as well as the sides and top of the appliance get very hot. Avoid any contact. Danger of burning! Only hold by the handle.
- The appliance must always be positioned horizontally during use.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not immerse the appliance in any liquid.
- The temperature of accessible surfaces may be high when the appliance is operating.

WARNING: Charcoal or similar combustible fuels must not be used with this appliance.

VI. CLEANING AND MAINTENANCE

1. Firstly, disconnect the mains plug!
2. Only clean when the appliance has completely cooled down.
3. Clean the housing surface and the toasting surfaces of the sandwich toaster with a soft, damp cloth.
4. It is easiest to remove toast or food crumbs with a very soft brush.
5. Never use abrasive cleaning agents or sharp objects (e.g. scrubbing brush or knife) for cleaning.
6. Caution: Do not immerse the appliance in water or other liquids. There is danger to life due to electric shock.
7. This appliance is intended to be used in household only.

VII. TECHNICAL FICHE

Rated voltage	220-240 V
Rated frequency	50/60Hz
Power	750W

**Environment friendly disposal**

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipment's to an appropriate waste disposal center.



HEINNER is a registered trademark of **Network One Distribution SRL**. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from NETWORK ONE DISTRIBUTION.

Copyright © 2013 Network One Distribution. All rights reserved.

www.heinner.com, <http://www.nod.ro>

<http://www.heinner.com>, <http://www.nod.ro>



This product is in conformity with norms and standards of European Community

Importer: **Network One Distribution**

Marcel Iancu Street, no 3-5, Bucharest, Romania

Tel: +40 21 211 18 56, www.heinner.com, www.nod.ro