

HEINNER

TOASTER

Model: TP-750UV



- Toaster
- Power: 750W
- Color: Ultraviolet

www.heinner.ro

Thank you for purchasing this product!

I. INTRODUCTION

Before using the appliance, please read carefully this instruction manual and keep it for future reference.

This instruction manual is designed to provide you with all required instructions related to the installation, use and maintenance of the appliance.

In order to operate the unit correctly and safety, please read this instruction manual carefully before installation and usage.

II. PACKAGE CONTENT




- **Toaster**
- **User manual**
- **Warranty card**

III. SAFETY INSTRUCTIONS

When using the appliance should always be observed following precautions:

1. Read all instructions.
2. Before using, check that the wall outlet voltage matches the name plate, which is in the bottom.
3. Do not touch the hot surface. Use only handles and camera buttons.
4. Do not immerse cord, plug or any part of the toaster in water or other liquids to avoid electrical shock.
5. Close supervision is necessary when used by or near children.
6. Before cleaning, disconnect the appliance.
7. If the cord is damaged, it must be replaced by the manufacturer, service or a qualified person to avoid a hazard.
8. Do not let cord hang over edge of table or hot surfaces.
9. Do not place the product on / or near a hot surface.
10. Do not use appliance for other than intended use in manual.
11. Make sure the toaster is not placed oversized food packaging, metal foil or utensils, they can cause fire or electric shock.
12. Bread can be baked, therefore toasters must not be used near combustible materials. It must be you observe.
13. The use of accessories not recommended by the manufacturer may cause injuries.
14. Do not attempt to dislodge the food when toaster is in use.
15. To avoid injury, remove carefully toast the device.
16. This unit was built with a grounded plug. Make sure the wall outlet in your home is well grounded.
17. The device is intended for use with an external timer or remote-control system.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
19. Keep the appliance and its cord away from children younger than 8 years.
20. Caution: If bread slices are smaller than 85 mm in length, must pay attention to the potential risk of burning when taking into slices.
21. Do not use the appliance outdoors.
22. This device is intended for use in household and similar applications
23. Keep these instructions.

IV. DESCRIPTION

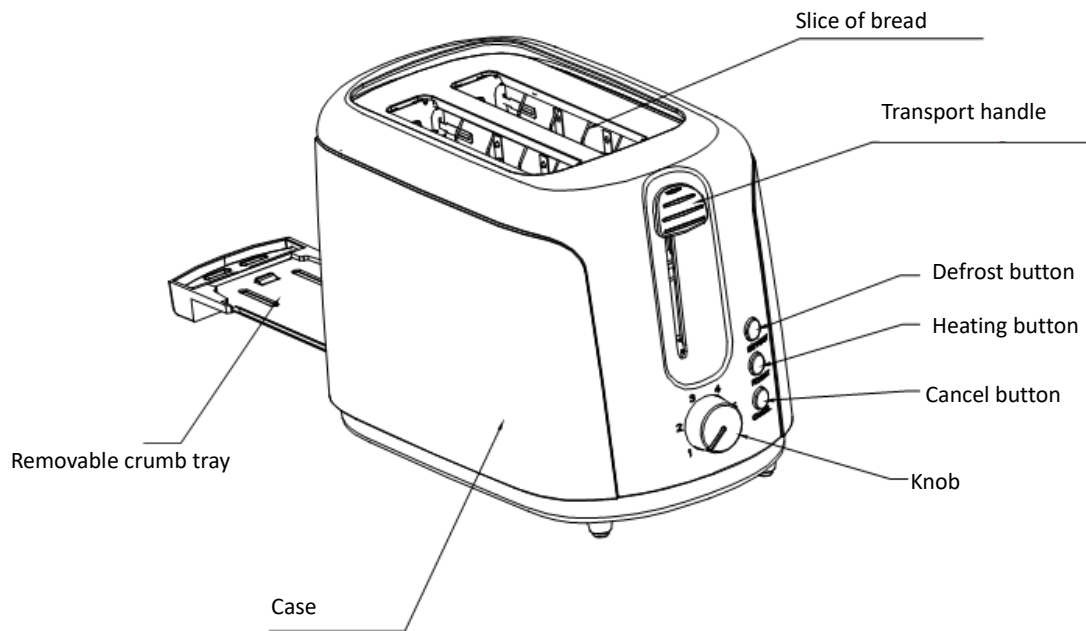

Since no manufacturing or oil residue left in toaster element emits heat usually smell first use. It is normal and will not occur more than once after use. Before the first slice of bread toast we suggest you use the device by following the instructions below.

V. USING INSTRUCTIONS

1. Can be entered in two slices toaster up every time.

Note: Make sure the crumb tray is fully seated before using the machine.

2. Connect the power cord to the outlet .

3. Set the color control to get the desired color of slices of bread. The lower level nic is white and the sea is dark brown . Slices of bread can be toasted and golden color at position "4" .

Note: 1) The color of roasting at the same level for a single slice placed in the device is darker than the two slices of bread .

2) If continuous roasted , the color is much darker , even though it was used the same level.

4. To start frying , press the vertical drive until it is fixed . Indicator "Cancel" will light up and then start frying . Once the bread was toasted in color preset button action will lift automatically.

Note: The drive can be set only when the device connects to the power supply .

5. During roasting , frying is apparent color . If satisfactory color slices of bread, you can interrupt roasting process by clicking " Cancel" at any time.

6. If the bread has been removed from the refrigerator , set the color to the desired color control . Press down on the vertical drive until it is fixed , then press the " Defrost " and defrost indicator will light. In this way it will be fried with the desired color .

7. If you want to reheat cold toast , press the drive down vertically until it is fixed . As soon as you press the button and reheating , they will illuminate . At this point how roasting slices of bread is fixed . Action button will automatically raise and reheating process will end.

VI. CAUTION

1. Remove all protective packaging before frying.
2. If the toaster starts to smoke, press "Cancel" to stop immediately frying slices of bread.
3. Avoid frying foods with ingredients that can melt inside the machine, such as butter. It may leak and may cause electric shock or fire.
4. Never try to remove stuck bread in the slots machine without disconnecting toaster from the electrical outlet. Make sure not to damage the internal mechanism or heating elements when taking slices of bread toaster.

VII. MAINTENANCE AND CLEANING

1. Before cleaning, be sure to disconnect the unit from the power supply and make sure that is completely cooled.
2. Wipe the outside with a soft dry cloth.
3. Remove the crumb tray of the toaster and empty. If the toaster is used frequently crumb tray should be cleaned at least once a week. Make sure the crumb tray is completely attached before using the machine again toaster.
4. When not using the power cord, you can store in the bottom of the toaster.

VIII. TECHNICAL DETAILS

Power	750W
Voltage	220-240V
Frequency	50/60 Hz
Color	Ultraviolet



Environment friendly disposal

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipment's to an appropriate waste disposal center.



HEINNER is a registered trademark of **Network One Distribution SRL**. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from NETWORK ONE DISTRIBUTION.

Copyright © 2013 Network One Distribution. All rights reserved.

www.heinner.com, <http://www.nod.ro>

<http://www.heinner.com>, <http://www.nod.ro>



This product is in conformity with norms and standards of European Community.

Importer: **Network One Distribution**

Marcel Iancu Street, 3-5, Bucharest, Romania

Tel: +40 21 211 18 56, www.heinner.com , www.nod.ro