Xiaomi Soundbar 3.1ch User Manual





Product Overview



HDMI Connection



Hanger Mount Installation



- 1 Drill holes into the wall at a distance of 600mm.
- 2 Push the plastic expansion tube into the hole, and then screw the wall-hanging screws in. (T4, L30mm).
- 8 Fix the mounts onto the unit with screws (M4, L10mm).
- 4 Hang the unit onto the wall screws.

CAUTION:

1. The USB port of Soundbar is used for update software and signal input only.

- 2. No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 3. The apparatus is intended to be used in moderate climates.

4. WARNING: The mains plug/appliance coupler is used as disconnect device, the disconnect device shall remain readily operable

5. Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

6. Risk of fire or explosion if the battery is replaced by an incorrect type.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.



For DTS patents, see http://patents.dts.com. Manufactured under licence fron DTS Licensing Limited. DTS, Digital Surround, Virtual:X and the DTS logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. 2021 DTS, Inc. ALL RIGHTS RESERVED.

Remote function



Other function

NFC

Switch Soundbar to BT input, tap the phone in NFC section, the phone will connect with Soundbar automatically.

Bar and Subwoofer Connection

Connect power supply, the Bar and Subwoofer will connect with each other automatically. If auto pairing didn't work, please follow these instructions. 1. Long press "Power button" and "Volume –" on the Bar at the same time, until the screen shows "ID SET". 2. Long press pairing button of Subwoofer until the indicator in the back of it quickly flashes. 3. Wait for bar and subwoofer pairing. When it's done, the indicator will light stably.

Specifications

Model Name: S26

Channel: 3.1

Max Power output (Speaker): 430W (Bar-180W, Subwoofer-250W) Supported play formats: Dolby Audio, DTS Digital Surround, DTS Virtual: X Dimension(L×W×H): Bar-860×115×60 mm³, Subwoofer-297×210×371 mm³ Operating Temperature Range: 0°C-40°C Operating Humidity Range: 20%-80% Storage Temperature Range: -15°C-45°C Storage Humidity Range: < 80% The following also applies to the Wireless Subwoofer

SAFETY WARNINGS

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK).

NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

Í	CAUTION RISK OF ELECTRIC SHOCK. DO NOT OPEN.
<u>Å</u>	This symbol indicates that high voltage is present inside. It is dangerous to make any kind of contact with any internal part of this product.
	This symbol indicates that this product comes with important literature concerning operation and maintenance.
	Class II product : This symbol indicates that a safety connection to electrical earth (ground) is not required. If this symbol is not present on a product with a power cord, the product MUST have a reliable connection to protective earth (ground).
\sim	AC voltage : Rated voltage marked with this symbol is AC voltage.
	DC voltage : Rated voltage marked with this symbol is DC voltage.
A i	Caution. Consult Instructions for use : This symbol instructs the user to consult the user manual for further safety related information.

WARNING

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
- To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.
- CAUTION
- Do not expose this apparatus to dripping or splashing. Do not put objects filled with liquids, such as vases, on the apparatus.
- To turn this apparatus off completely, you must pull the power plug out of the wall socket. Consequently, the power plug must be easily and readily accessible at all times.

Important Safety Instructions

Read these operating instructions carefully before using the unit. Follow all the safety instructions listed below. Keep these operating instructions handy for future reference.

- 1. Read these instructions.
- 2. Keep these Instructions.
- 3. Heed all warnings.
- 4. Follow all instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized or groundingtype plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11. Only use attachments/accessories specified by the manufacturer.
- 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

Importer: Beryko s.r.o. Na Roudné 1162/76, 301 00 Plzeň www.beryko.cz