



## WUBEN C2 2000 Lumen Power Bank Flashlight User Manual

[Home](#) » [WUBEN](#) » WUBEN C2 2000 Lumen Power Bank Flashlight User Manual 

### Contents

- [1 WUBEN C2 2000 Lumen Power Bank Flashlight](#)
- [2 Package List](#)
- [3 About Product](#)
- [4 Installation](#)
- [5 Operation](#)
- [6 Charging/Discharging](#)
- [7 Battery Capacity \(C\) Status Indication](#)
- [8 Parameters](#)
- [9 Operation](#)
- [10 Maintenance](#)
- [11 FAQs](#)
- [12 Documents / Resources](#)
- [13 Related Posts](#)

 


## WUBEN C2 2000 Lumen Power Bank Flashlight




### Package List


Before using this product, please check whether the contents of the package are complete.

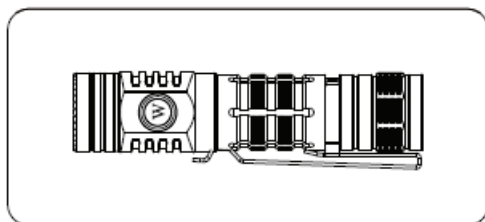


① C2 × 1

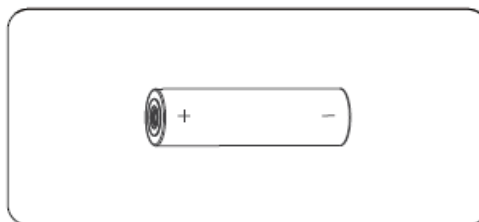 


② ABD4800 × 1

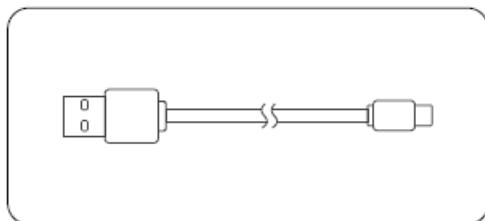 

③ Type-C charging cable × 1

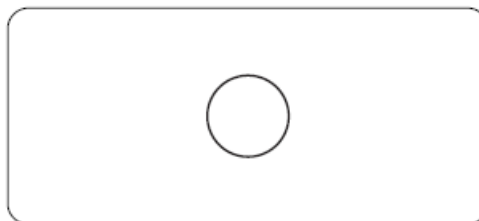 

④ Spare O-ring × 2

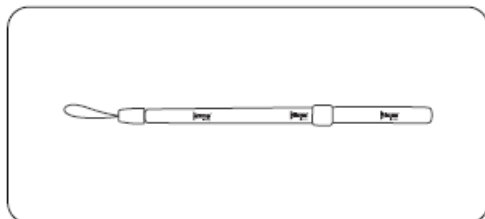 


⑤ Lanyard × 1




⑥ User manual, Warranty card × 1

## About Product

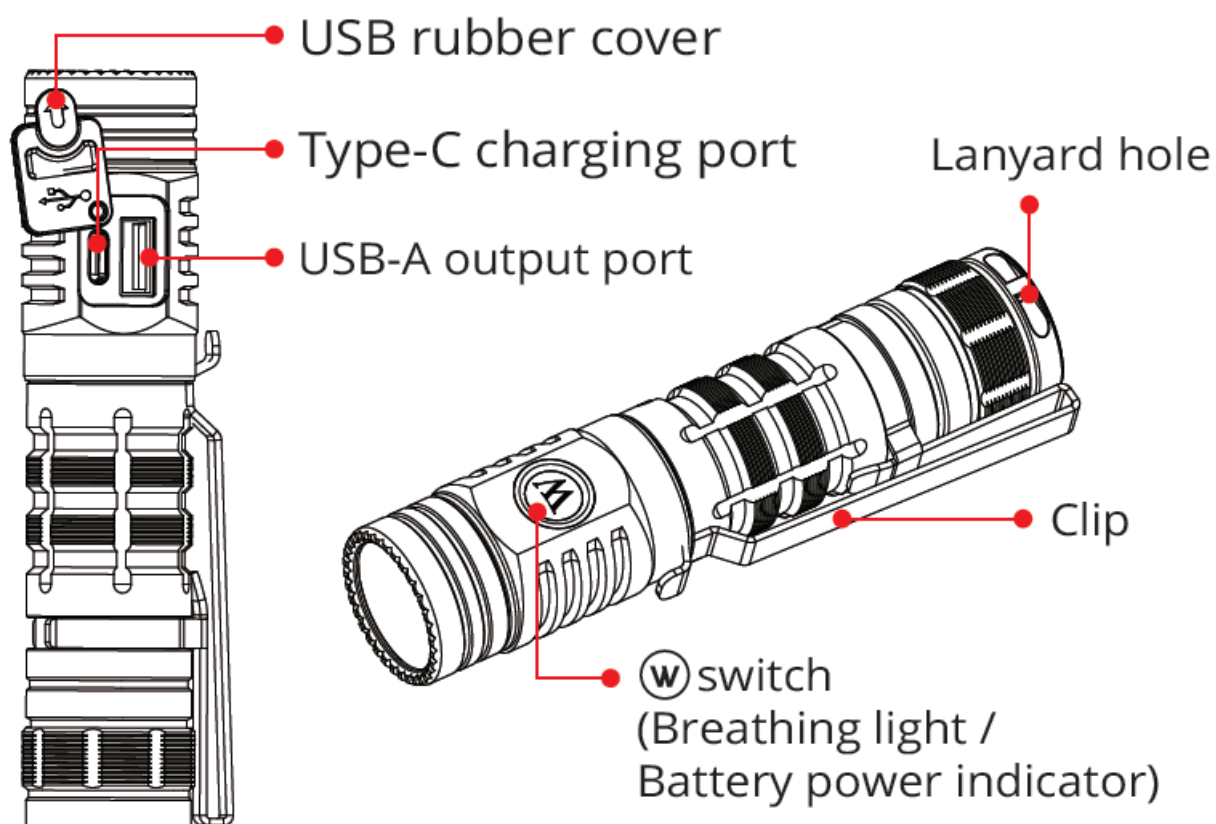 


## Installation

 Please remove the insulation plate before using it.

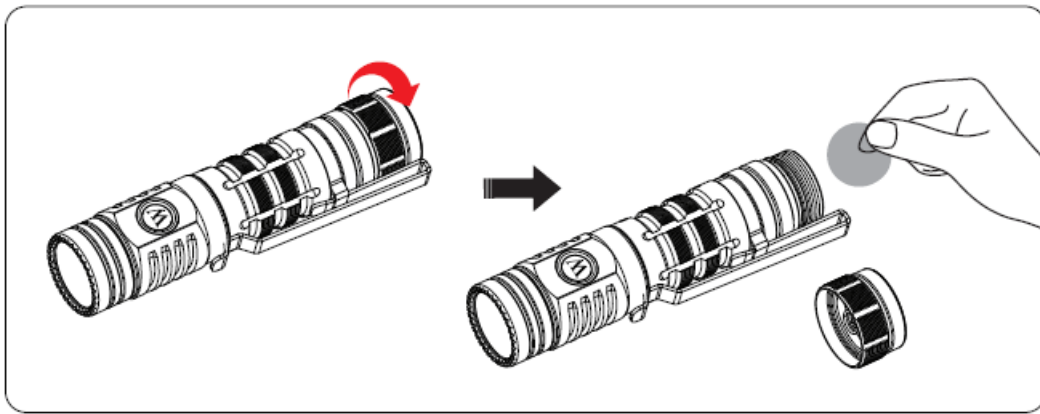


## Operation

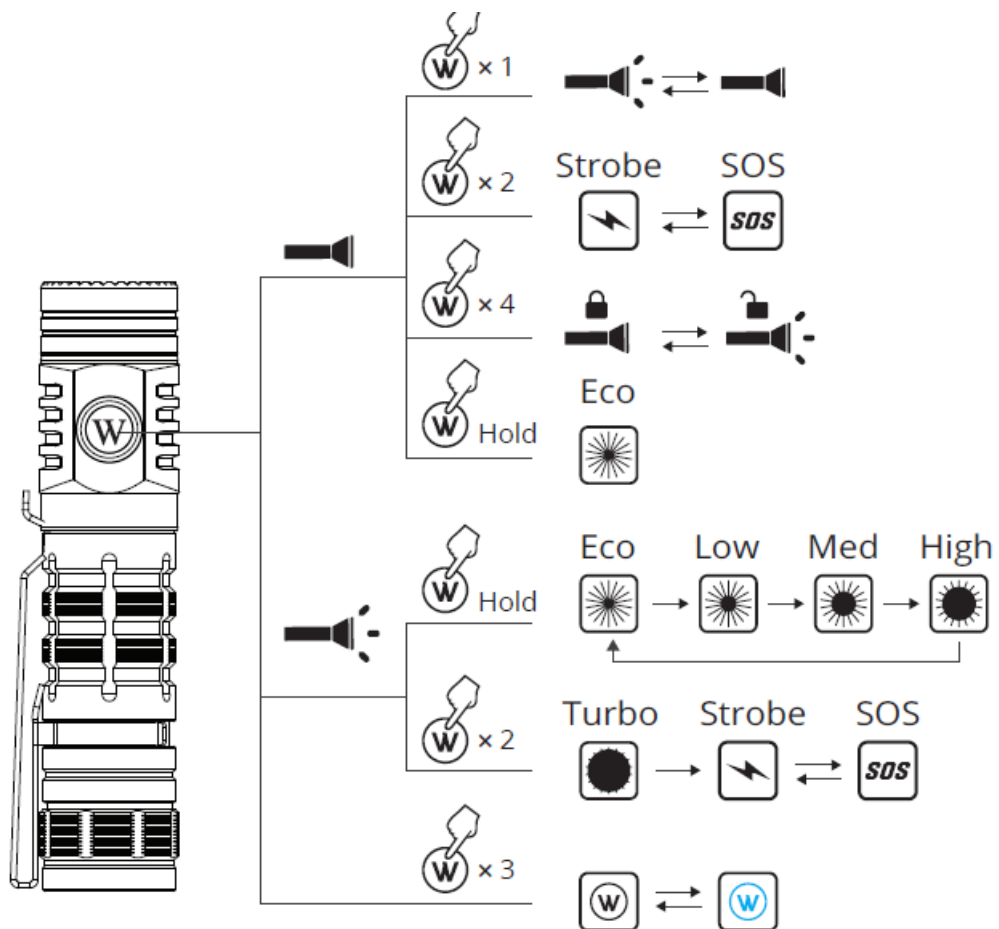 


## Charging/Discharging

   
## Charging

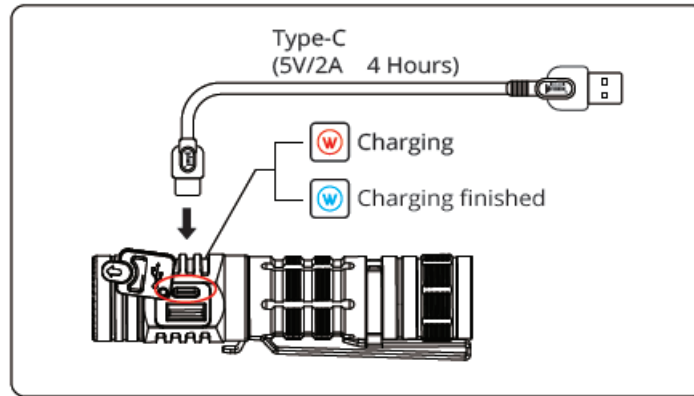



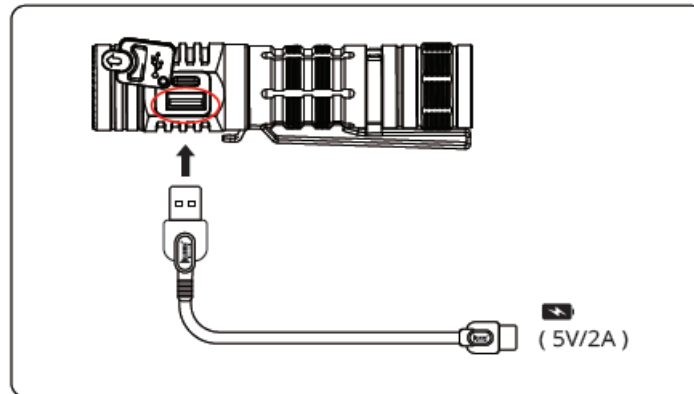

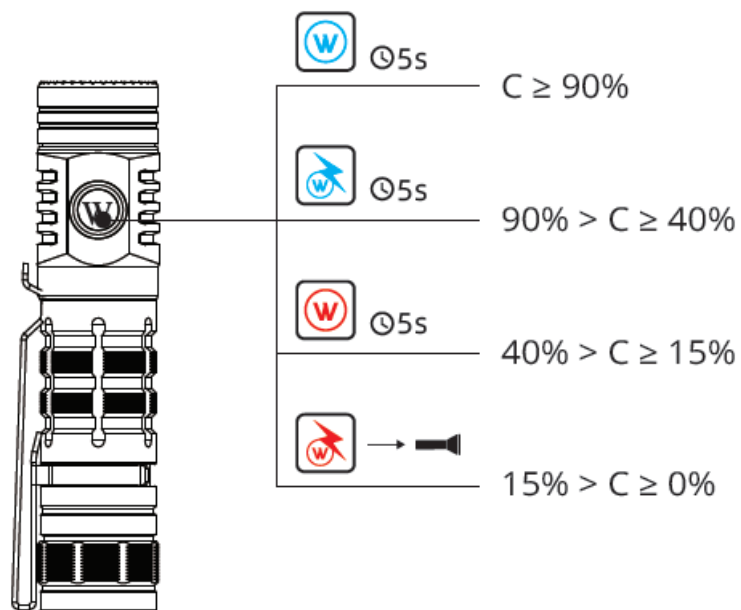


 
## Discharging



## Battery Capacity (C) Status Indication



## Parameters

FL1 Standard	Turbo	High	Med	Low	Eco	Strobe	SOS
	2000~700 Lumens	1200~600 Lumens	400 Lumens	130 Lumens	5 Lumens	1200 Lumens	200 Lumens
	1 min + 3 Hours	3mins+3.5 Hours	5 Hours	15 Hours	300 Hours	/	/
	358 Meters				1.0 Meter		
	32000 Candelas				IP68 (2m underwater for 1h)		
	109g/3.85oz (without battery) 190g/6.70oz (with battery)						
	128.6mm × 29mm   5.06in × 1.14in (L × D)						

All data from experiments of WUBEN lab according to ANSI/NEMA FL1 standard, may vary because of different experiment equipment, experiment environment, or other factors. Experiments are based on WUBEN ABD4800 Li-ion battery

## Warnings

- Please read user manual carefully before using the product. The product will generate heat while working, please be cautious with that to avoid any possible harm.
- Please don't shine into eyes directly to avoid harm to eyes. Please keep the product away from children.
- Please use WUBEN or WUBEN recommended batteries. Please don't disassemble the product or it will not be covered by WUBEN warranty policy.
- Please don't throw the product into fire.
- This is not a diving product, please don't use it underwater for a long time.
- If it can only be identified to charge by turning off the voltage, the adapter is not applicable to this product.

## Operation

1. ON/OFF: Single click on the switch to turn on the flashlight, single click again to turn off. The flashlight has a memory function, will memorize default output selections, but not flash or Turbo mode.
2. Default Output Selections: When the flashlight is on, long press on the switch to cycle through
3. Eco-Low-Med-High-Eco.
4. Quick Turbo: When the flashlight is on, double click on the switch to activate Turbo mode, single click to back to the previous status.
5. Quick Eco: When the flashlight is off, long-press the switch to activate Eco mode, keep pressing for 2 seconds, the flashlight will cycle through Eco-Low-Med-High-Eco. Flash Modes:
6. When the flashlight is off or at Turbo, quick double click the switch to activate Strobe, double click again to

activate SOS. Single-click to exit.

7. Lock/Unlock: When the flashlight is off, 4 times click the switch, the main light will blink 3 times to indicate the locking of the flashlight, any operation on the switch will activate blinking 3 times of the indicator. 4 times click on the switch again will activate Eco mode, to indicate unlocking of the flashlight.
8. Breathing Light: At any mode, triple-click the switch to turn on/off the blue breathing light. The breathing light has a power-off memory function.

## Maintenance

- The O-Ring may be damaged after a long time of use, please replace the O-Ring in time to ensure the waterproof level of the product.
- Please use the WUBEN battery or WUBEN recommended batteries.
- When the product indicates low power, please charge or replace the battery in time to avoid affecting the durability of the battery.
- Please use alcohol and rag to clean the conductive parts of the product in time.
- When not in use for a long time, please remove the battery to prevent the battery from leaking or exploding. Please store the product in a dry and ventilated place.

## FAQs

Problems	Causes	Solutions
Abnormal flash or failure to turn on	Check if the switch is locked	Unlock the switch
	Check if the switch is turned on correctly	Turn on the switch
	Check if it is assembled in place	Tighten the assembly parts
	Check if the battery is no power	Try the battery on other products
	Check if the battery is reversed	Remove the battery and reassemble it correctly
	Check if the conductive position is dirty	Clean the surface with alcohol
Abnormal noise	Check if foreign matter falls in the tube	Pour out possible foreign matter
	Part damage	Contact your seller

## Warranty Policy

### Warranty Coverage

- 15 days replacement: Within 15 days from the date of purchase, if the product has quality problems, customers

can request free replacement.

- 1 year warranty: Within 1 year from the date of purchase, if the product has quality problems, WUBEN will offer free repair.
- 5 years warranty: Within 5 years from the date of purchase, if the product (accessories excluded) has quality problems, WUBEN will offer free repair for WUBEN registered customers.
- Battery warranty: WUBEN offers a 1-year warranty for the rechargeable batteries but other included accessories are not covered by the warranty.
- Lifetime maintenance: From the date of purchase, if the product has a problem after 5 years, WUBEN will offer paid repair for WUBEN registered customers.
- If proof of purchase cannot be provided, it will be counted on the date of manufacture.
- If there is any dispute, the two parties will coordinate to solve it.

### **Beyond Warranty**

- Man-made damage.
- Damage caused by not following the instructions. Damage caused by improper use of the battery. Abnormal wear and tear.
- Damage caused by irresistible factors.
- Gifts.

The final interpretation right is reserved by WUBEN.

## **Documents / Resources**



[WUBEN C2 2000 Lumen Power Bank Flashlight](#) [pdf] User Manual  
C2, 2000 Lumen Power Bank Flashlight