

BATTERY SAFETY INFORMATION

- Use only size “AA” (LR6) alkaline batteries (3 required).
- Charging of rechargeable batteries should only be done under adult supervision.
- Remove rechargeable batteries from the product before recharging.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Be sure to insert the batteries correctly and follow the toy and battery manufacturer’s instruction.
- Always remove exhausted or dead batteries from the product.
- Dispose of dead batteries properly: do not burn or bury them.
- Do not attempt to recharge non-rechargeable batteries.
- Avoid short-circuiting battery terminals.
- Remove batteries before placing the unit into storage for a prolonged period of time.

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different than that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void user’s authority to operate this device.
CAN ICES-3 (B)/NMB-3(B).

LIMITED WARRANTY

The Little Tikes Company makes fun, high quality toys. We warrant to the original purchaser that this product is free of defects in materials or workmanship for one year * from the date of purchase (dated sales receipt is required for proof of purchase). At the sole election of The Little Tikes Company, the only remedies available under this warranty will be the replacement of the defective part or replacement of the product. This warranty is valid only if the product has been assembled and maintained per the instructions. This warranty does not cover abuse, accident, cosmetic issues such as fading or scratches from normal wear, or any other cause not arising from defects in material and workmanship. *The warranty period is three (3) months for daycare or commercial purchasers. U.S.A and Canada: For warranty service or replacement part information, please visit our website at www.littletikes.com, call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires—contact us for details. Outside U.S.A and Canada: Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.



‘Let’s care for the environment!’

The wheelie bin symbol indicates that the product and its batteries must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item.

Please keep this manual as it contains important information.
Illustrations are for reference only. Styles may vary from actual contents.

© The Little Tikes Company, an MGA Entertainment company. LITTLE TIKES® is a trademark of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of Little Tikes.

Printed in China

US/CA - Little Tikes Consumer Service
2180 Barlow Road, Hudson, Ohio 44236 U.S.A.
Phone: 1-800-321-0183

UK - MGA Entertainment UK Ltd. 50 Presley Way, Crownhill, Milton Keynes, MK8 0ES, Bucks, UK.
Little Tikes Consumer Services
P.O. Box 2040 Hockley, Essex, S55 4BF
Phone: 0 800 521 558

EU - MGA Entertainment (Netherlands) B.V. Baronie 68-70, 2404XG, Alphen a/d Rijn, The Netherlands
Tel: +31-172-758-010

AU/NZ - Imported by MGA Entertainment Australia Pty Ltd. Suite 5.05, 32 Delhi Road, Macquarie Park NSW 2113. AU.
Tel: 1 300 059 676

Email: au-sales@mga.com



0323-0-E/INT



www.littletikes.com
www.littletikes.co.uk
www.littletikes.com.au

little tikes




SKU: 663741
AGES 2+ YEARS
ADULT ASSEMBLY REQUIRED

CONTENTS

- | | | | |
|-------------------------------------|-----------------|-------------|-----------------------|
| A. 1 Little Tikes® First Dishwasher | D. 2 Dish Racks | G. 2 Forks | J. 1 Dish Soap Bottle |
| B. 1 Window with Backsplash | E. 2 Plates | H. 2 Spoons | K. 1 Dish Towel |
| C. 1 Top Panel Insert | F. 2 Cups | I. 2 Knives | L. Dish Drying Mat |
| | | | M. Plastic Screws |

NOTE: • The window with backsplash, top panel insert, and accessories are packed out inside the dishwasher.
• Make sure to remove and discard all tape and packaging material before beginning.

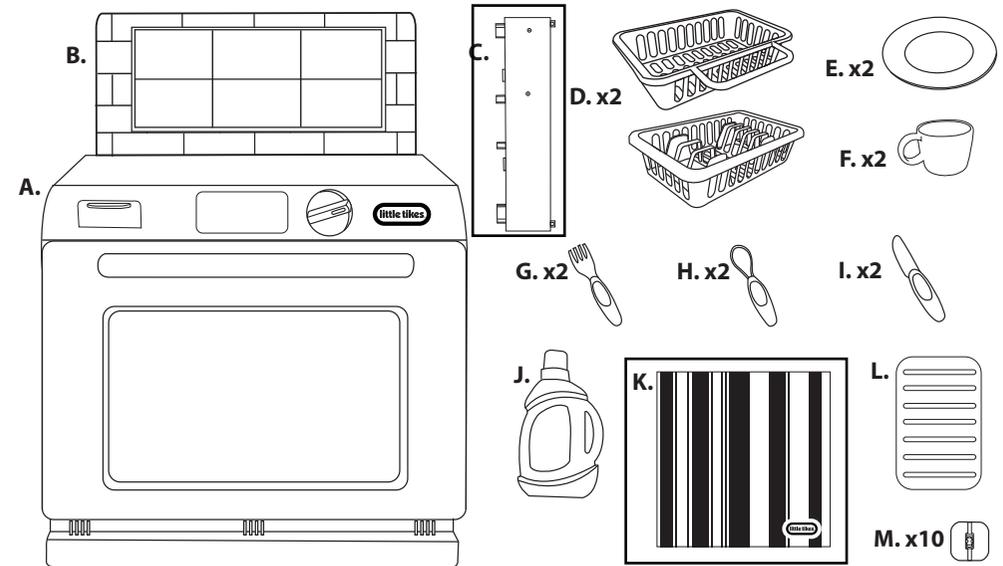


Illustrations are for reference only. Styles may vary from actual contents.

REPLACING THE BATTERIES

Before assembly, an adult must install fresh alkaline batteries (not included) in the unit. Here’s how:

1. Using a Phillips screwdriver (not included) remove the screw and battery compartment cover from the top of the dishwasher.
2. Install three (3) 1.5V AA (LR6) alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
3. Replace the compartment cover and tighten the screw.

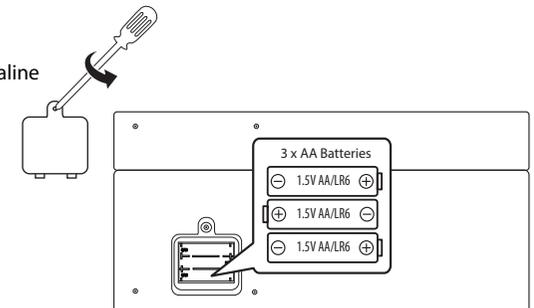


⚠ WARNING:

- Do not pour water into the dishwasher. This unit is a toy and not intended to be used like a real dishwashing machine.
- Only use the plates and utensils included in playset. Do not use real detergent with the dishwasher.


IMPORTANT INFORMATION

- Clean accessories thoroughly before use. Only use a damp cloth to clean the unit. Keep water away from the battery compartment.
- Product will go into sleep mode after 30 seconds of inactivity. Turn the knob to turn it back on.
- If the dishwasher's door detaches from the hinges, replace it into the hinges and close the door.


ASSEMBLY

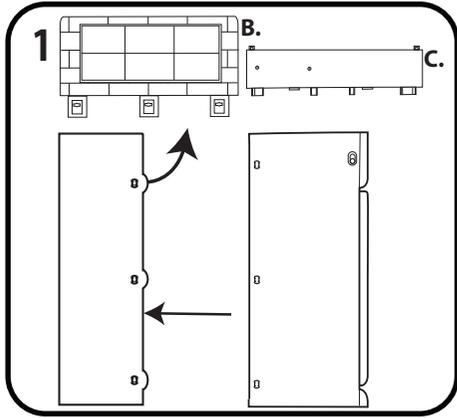


Pull out the back wall of the dishwasher and remove all of the contents from inside.

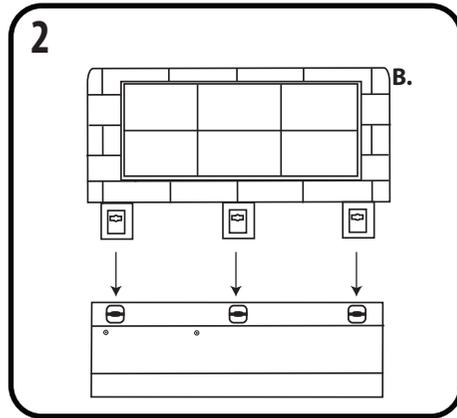


Insert the backslash panel into the openings at the top of the dishwasher.

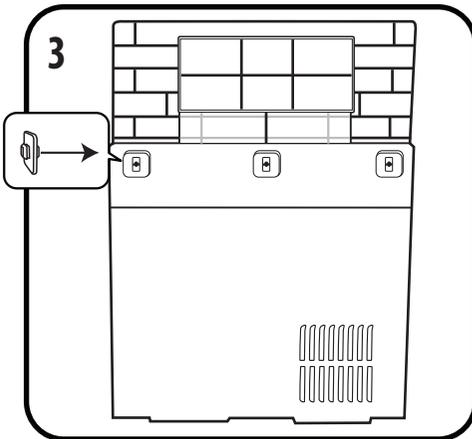


Insert three screws on the back of the dishwasher. Make sure the screw enters both openings. Then, turn the screw to lock in place.

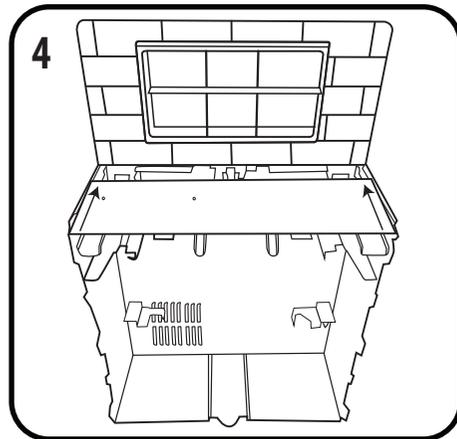


Fit the rear shell upper cover to the rear shell.
Noted: the left and right sides should be aligned and inserted.

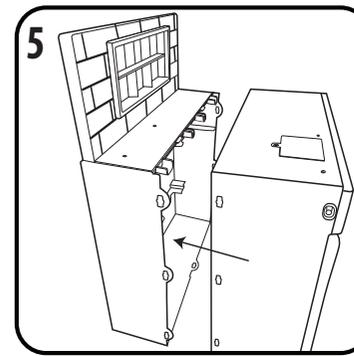


Connect the front and back parts of the product together.

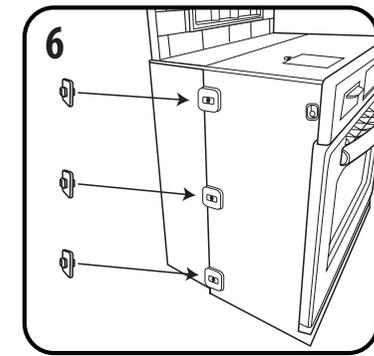

Insert three screws on each side and one screw on the bottom. Make sure the screw enters both openings. Then, turn the screw to lock in place.

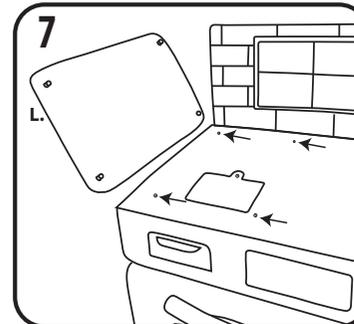



Snap in place the dish drying mat within the holes on the top left side of the dishwasher; this will keep the battery compartment covered.

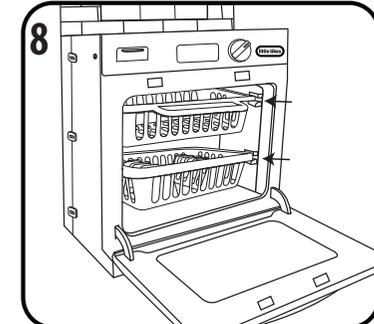


Insert the dish rack without the handle into the bottom slot. Insert the dish rack with the handle in the upper slot in order for the dishwasher to close properly.

USING THE DISHWASHER


Before beginning, move the switch on the side of the dishwasher from the OFF (O) position to the ON (I) position. Always turn the unit OFF (O) after use to conserve battery power.

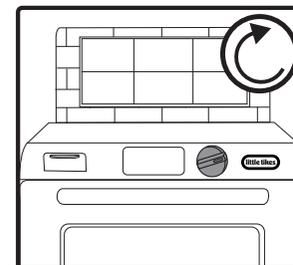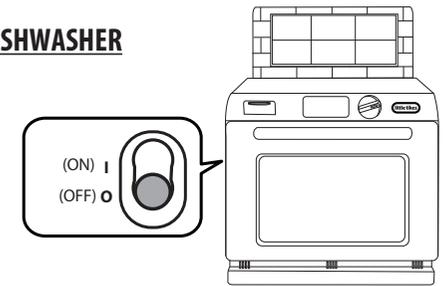

Turn the knob clockwise to start the cycle. The unit will make dishwasher machine sounds and will display lights. Continue turning clockwise to go through each cycle.

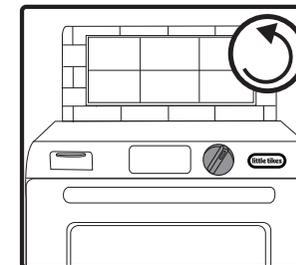

Turn the knobs counterclockwise to turn off the cycle.

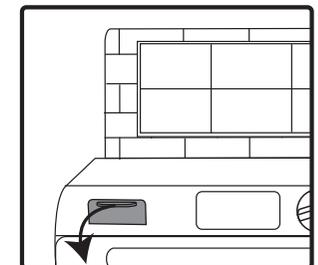

Pull the detergent drawer outwards to open.