

# SENCOR®

# SMS 7500BK



## MEN'S SHAVER

 
 
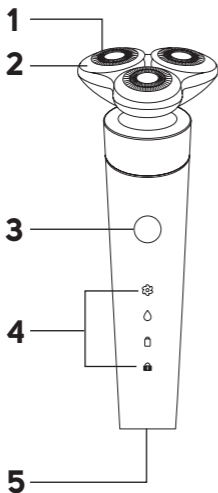 
Translation of the original manual

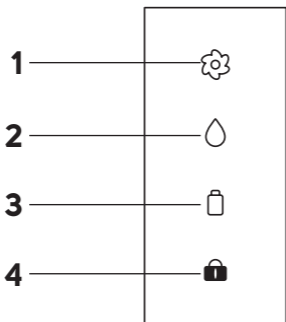 
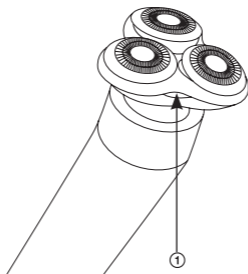 


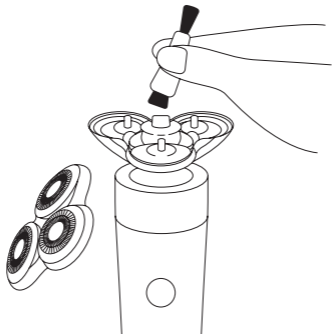 
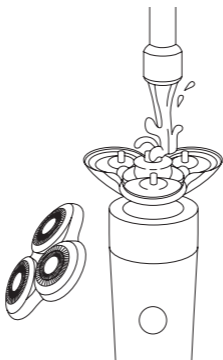 
**SENCOR®**

**SMS 7500BK**



**A**

**B****C**

**D****E**

## **Important Safety Instructions**

### **READ CAREFULLY AND STORE FOR FUTURE USE.**

#### **General Warnings**

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- Cleaning and maintenance performed by the user must not be performed by unsupervised children.

- In the event that the charging cable is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged charging cable.



This appliance can be washed under a water tap.



**Warning:**

Before cleaning with water, make sure that the appliance is turned off and disconnected from the power source.

- The parts of the appliance that need to be mounted or stood upright, must be mounted or stood upright in such a way that they cannot fall into water.
- .....

## Additional Important Safety Instructions for Use of the Appliance

- Before connecting the appliance to a power source, make sure that the voltage indicated on the rating plate matches the voltage of the power source.
- Use the appliance only with the supplied charging cable. To avoid a dangerous situation, never use a different type of cable.
- Keep the charging cable dry.
- Do not place the charging cable over sharp objects. Make sure that it does not hang over the edge of a table or touch a heated surface.
- Do not wrap the charging cable around the handle of the appliance.
- Do not connect or disconnect the charging cable with wet or damp hands.
- Store, charge and use the appliance at an ambient temperature of 15 °C to 35 °C. Do not charge the appliance for longer than is necessary for it to fully charge.
- Once it is charged, disconnect it from the power source.
- Do not expose the appliance to temperatures higher than 50 °C. Otherwise, the built-in battery could be damaged.
- The appliance is equipped with a built-in long-life battery that can only be removed at a professional service centre. Never attempt to remove it from the appliance yourself.



### Attention:

Never disassemble the appliance for the purpose of removing the battery. Never short circuit the appliance or throw it into a fire. Incorrect use, risks releasing toxic substances or causing a fire or explosion.

- Do not charge, use or store the appliance or leave it lying in a bathroom or in locations where it could fall into a bath, wash basin or other containers filled with water.
- In the event that the appliance falls into water, under no condition reach for it, rather, immediately disconnect the power adapter from the power socket.
- Never use an appliance or power adapter that was submerged in water. Hand it over to an authorised service centre for inspection.
- This electric shaver is intended for home use only and is designed for shaving and trimming beards or whiskers and facial hair. The electric shaver is not intended for commercial purposes or for trimming animal fur.
- Only use the electric shaver on dry, clean beards or whiskers. Do not use it on wet beards or whiskers on which a shaving foam or gel, etc. is applied.
- We do not recommend using the electric shaver on parts of the face where there are open wounds or lacerations, burns, blisters, etc.
- For hygiene reasons, the electric shaver should be used only by a single user.
- Use the electric shaver in accordance with the instructions contained in this user's manual.

- Use only the original accessories supplied with this electric shaver.
- The electric shaver and its power adapter must only be used in indoor areas. Do not use it outdoors.
- Do not use the electric shaver in rooms where aerosol sprays are used or where oxygen is administered.
- Do not expose the electric shaver to the outdoor environment, extreme temperatures, direct sunlight, excessive humidity or excessively dusty environments.
- Do not place the electric shaver near heaters, open fires or other sources of heat.



**Warning:**

Keep the electric shaver dry.

- Before every use, check the shaving head for damage. Never use an electric shaver with a damaged shaving head.
- The electric shaver may heat up during use or when it is being charged. This is completely normal.
- Keep the electric shaver at a safe distance from eyes.
- Always turn off the electric shaver and disconnect it from the power socket when not using it, when leaving it without supervision, before cleaning, maintenance or storage. Store the electric shaver and its power adapter in a dry environment.
- Keep the electric shaver clean. Perform cleaning and maintenance according to the instructions in chapter Cleaning and maintenance.
- Do not perform any maintenance on the electric shaver other than cleaning the individual components as described in chapter Cleaning and maintenance.
- Never use an electric shaver or power adapter that are damaged in any way.
- Do not use the electric shaver if it has fallen on the floor, if it was submerged in water, if it is not functioning correctly or if it is damaged in any other way.
- In order to prevent a hazardous situation from arising, do not repair the electric shaver or any of its accessories yourself or modify it in any way. For all repairs, contact an authorised service centre. By tampering with the product you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

.....

**EXPLANATION OF SYMBOLS PLACED ON THE PRODUCT OR IN THE ACCOMPANYING DOCUMENTATION**



The product meets all the basic requirements of the applicable EU directives.



Used electrical and electronic products must not be added to ordinary municipal waste.



Used accumulators and batteries do not belong in normal municipal waste.

.....

# EN Men's Shaver

## User Manual

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Prior to using this appliance, please read the user manual thoroughly, even in cases when you are already familiar with the use of similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference. If you pass the appliance on to another person, ensure that this user manual is included.
- Carefully unpack the appliance and make sure not to discard any part of the packaging material until you have found all its components. It is recommended to keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right of defective performance or quality guarantee. When transporting the appliance, we recommend packaging it again in the original box provided by the manufacturer.

### DESCRIPTION OF THE ELECTRIC RAZOR AND ITS ACCESSORIES

- A1** Shaving cutters
- A2** Shaving head with cutter holder
- A3** On/Off switch
- A4** Display
- A5** Socket for connecting the power cable

- A6** Protective cover
- A7** Charging cable
- A8** Cleaning brush
- A9** Charging stand

### DESCRIPTION OF THE DISPLAY

- B1** Setting indicator
- B2** Cleaning indicator
- B3** Charging indicator
- B4** Lock indicator

### PURPOSE OF USE

- The electric razor is designed for dry and wet shaving beards and trimming sideburns, moustaches or smaller hairs. The electric razor is not intended for wet shaving or cutting artificial hair or animal hair.

### CHARGING

- The electric razor is equipped with a built-in battery that allows cordless operation of the razor.
- Allow the battery of the electric razor to fully charge first without turning it on before first use or after a long period of non-use.
- The electric razor can be charged in two ways:
  1. charging via a USB cable and external devices (such as a computer, power bank, etc.); or
  2. charging via charging stand.

- Insert the smaller USB connector into the socket on the underside of the electric razor and the larger connector into the selected power source.
- The electric razor will start charging when connected to a power source. The charging indicator lights up.
- The charging time differs depending on the current charge level of the battery. If the battery is completely flat, it may take up to 1.5 hours to charge.
- The charging indicator will flash red when the charging level is 0–20%. The charging indicator will flash white when the charging level reaches 20–100%.
- When the electric razor is fully charged, the charging indicator lights up white.
- Disconnect the charged electric razor from the power source.



**Warning:**

Do not leave the electric razor connected to the mains for longer than it takes to fully charge it.

Fully charged electric razor will provide approximately 60 minutes of operation. Then the electric razor needs to be recharged.

**DIRECT DRIVE TECHNOLOGY**

- If the battery of the electric razor is discharged or if it discharges during operation, the electric razor can be connected to the power supply and continue to use it. This is made

possible thanks to the **DIRECT DRIVE** technology that the electric razor is equipped with. Thus, it is not necessary to wait for a minimum battery charge.

**RECOMMENDATIONS FOR EXTENDING BATTERY LIFE**

- To keep the built-in battery working for as long as possible, charge, use and store the electric razor at an ambient temperature of 15–35°C in a dry environment. Lower or higher temperatures adversely affect the life of the battery.
- Do not wait until the battery is completely discharged. It is better to recharge the battery before they are fully discharged.
- If you do not use the electric razor for a long time, charge the battery at least once every 6 months.

**OPERATION**

**Shaving**

- Turn the electric razor on by pressing the On/Off switch.
- Hold the electric razor at a right angle to the surface of the skin and in short circular movements sweep the shaving head over the skin of the face in the opposite direction to the growth of the beard. Apply adequate pressure to the skin. Do not push too hard.
- In more difficult to reach places, such as on the chin, stretch the skin with your free hand. This will give you a better shaving result.

## Speed setting

- The electric razor has two speed modes. Press the on/off switch for 1 second to switch. When the mode is switched successfully, a beep will sound.



### Note:

Your skin and beard may take up to three weeks to get used to the new way of shaving. In this period it is recommended to use the electric razor daily.

- When you have finished shaving, clean the electric razor according to the instructions in the Cleaning and Maintenance chapter.

## Low Battery Indicator

- When you turn on the electric razor, the charge indicator will be lit or flashed according to the charge level:
- charge level  $\geq 20\%$ : the charging indicator will light up white;
- charge level  $\geq 5-20\%$ : the charging indicator will light up red;
- charge level  $\leq 5\%$ : the charging indicator will start flashing red.

## Shaving Head Cleaning Indicator

- The electric razor is equipped with a timer that sums up the operating time of the electric razor (shaving time). After 10 minutes, the cleaning indicator will light up and a beep will sound to remind you to clean the shaving head. In such an event, clean the electric razor as soon as possible according to the chapter Cleaning the Shaving Head.

## Travel Lock

- The travel lock protects against accidental switching on of the electric razor, e.g. during its transport.
- To activate the travel lock, press and hold the on/off switch until the lock indicator is lit on the display. On/Off switch does not respond to normal press.
- To deactivate the travel lock, press and hold the on/off switch again. The lock indicator will first blink and then turn off. Now the electric razor is ready for use again.

---

## CLEANING AND MAINTENANCE

- For hygiene reasons, clean the electric razor after each use. Regular cleaning is also important to ensure proper operation of the electric razor and extends the life of the shaving cutters.
- Please turn the electric razor off before cleaning it. Never clean the electric razor when it is plugged into the power supply to recharge.
- Do not use hard-bristled brushes, abrasive cleaners, thinners, etc. Otherwise the surface to be cleaned may be damaged.

## Cleaning the Body of the Electric Razor

- The electric razor body can be cleaned using a clean dry wiping cloth. In the event of heavy soiling, you can use a slightly damp cloth. Clean the surface then properly wipe dry.

## Cleaning the Shaving Head

- Brush off any remaining beard or hair from the shaving head, including the shaving cutters.
- Pull upwards to remove the razor head from the razor body (Fig. **C**). Using a brush, remove dirt and beard residue from the shaving head attachment area (Fig. **D**).
- Insert the shaving head back into the holder.

## Cleaning with Water

- Turn the electric razor upside down and immerse the electric razor head in water. Switch on the electric razor by pressing the on/off switch and let it run for approximately 30 seconds. Then turn off and remove the head from the water.
- Dry the shaving head with a fine cloth or allow it to dry naturally. Do not use paper towels or coarse cloths for drying, because they could damage the shaving blades.



### Warning:

Never immerse the electric razor body in water. Risk of serious electric shock!

For thorough cleaning, the shaving head can be removed by pulling on the holder and then also by removing the holder from the razor body (Fig. **E**). Then wash both parts under running water and allow them to dry completely and then insert them back into the body of the electric razor.

.....

## TECHNICAL SPECIFICATIONS

### Electric Razor

Input voltage .....	5 V/1 A
Built-in battery .....	Li-Ion, 3.7 V, 800 mAh
Dimensions (h x w x d)...	165 x 66 x 66 mm
Weight .....	143 g
Noise level.....	72 dB(A)

The declared noise emission level of the appliance is 72 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

.....

## **INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL**

Dispose of used packaging material at the location designated by the municipality for waste disposal.

## **DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT**

Used electrical and electronic products must not be added to ordinary municipal waste. For proper disposal and recycling of these products, deliver them to designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By properly disposing of this product, you help preserve valuable natural resources and contribute to preventing potential negative impacts on the environment and human health resulting from improper waste disposal. For more details, contact your local authority or nearest collection point. Fines may be imposed for improper disposal of this type of waste as per national regulations.

## **For Business Entities in European Union States**

To dispose of electric or electronic equipment, request necessary information from your retailer or supplier.

## **Disposal in Other Countries Outside the European Union**

If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.

.....  
Changes to text and technical parameters are reserved.

FAST ČR, a.s.  
U Sanitasu 1621  
CZ-251 01 Říčany  
[www.sencor.com](http://www.sencor.com)  
[info@sencor.cz](mailto:info@sencor.cz)