

SENCOR®

SES 6100BK



FULLY AUTOMATIC ESPRESSO COFFEE MACHINE

Translation of the original manual






SENCOR®

SES 6100BK




A

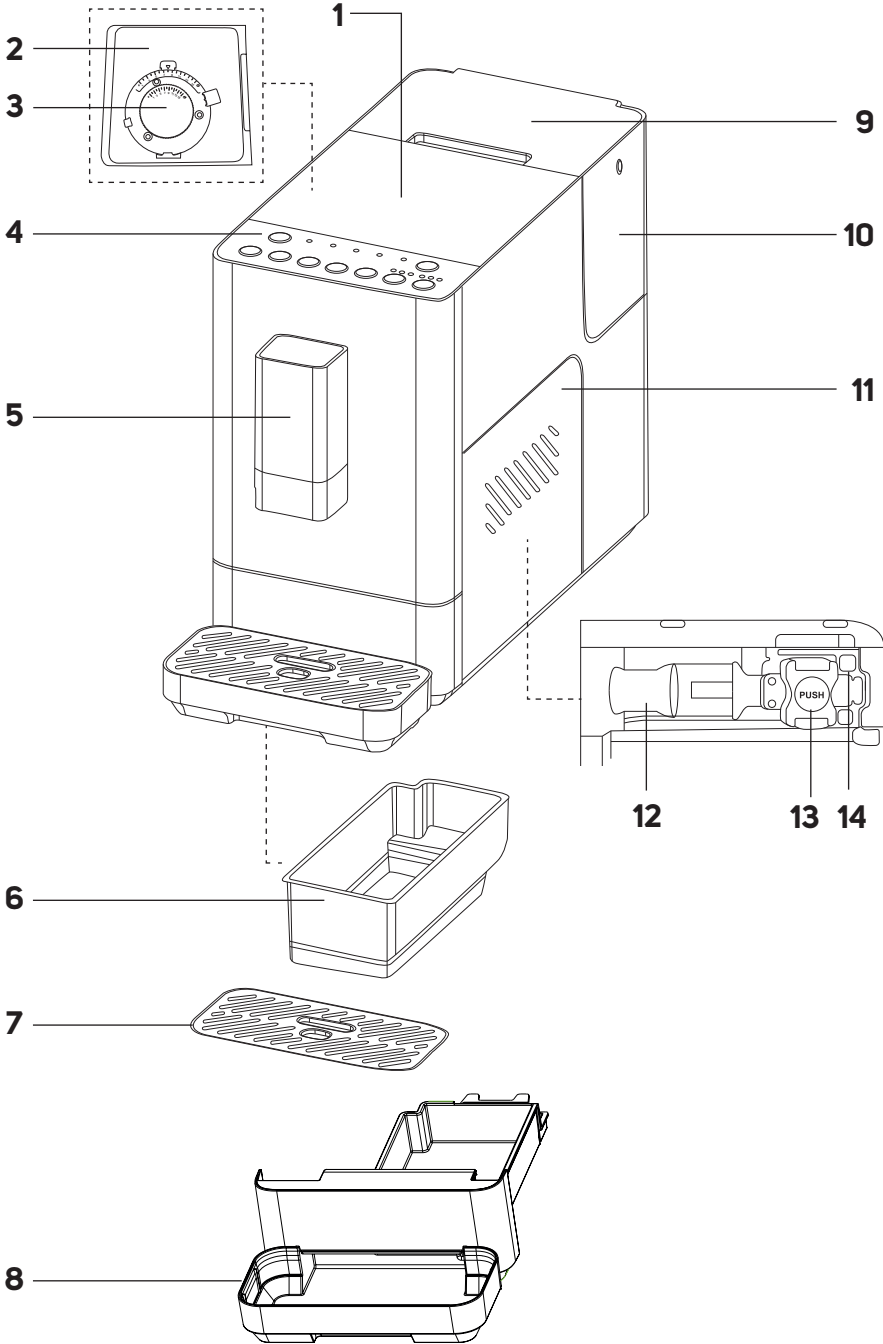


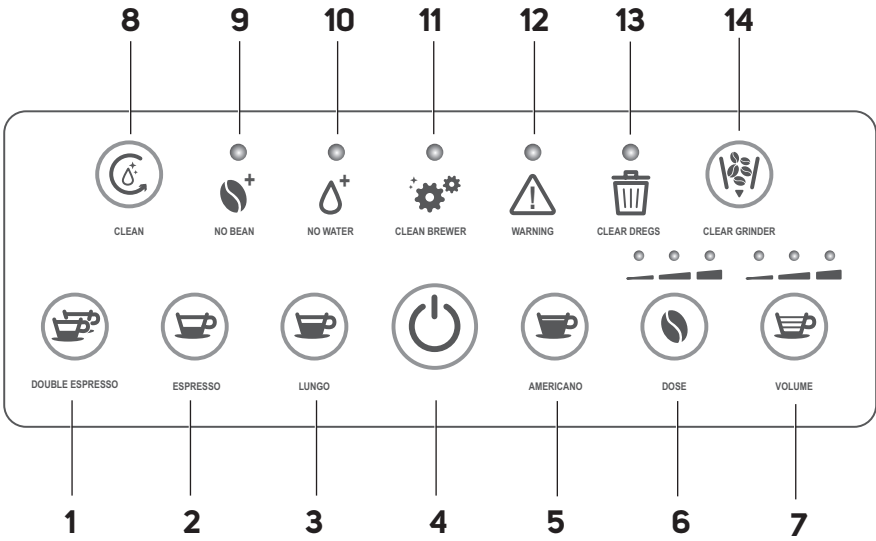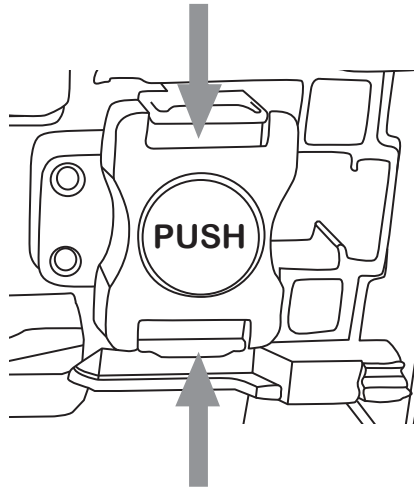B**C**

D1

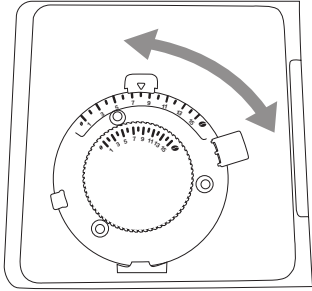

D2

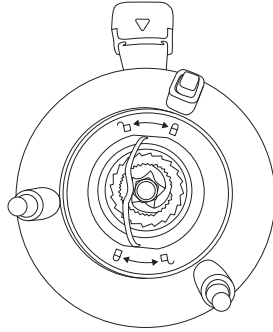

Important Safety Instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance is not to be used by children. Keep this appliance and its power cable out of the reach of children.
- The appliance may be used by persons with reduced physical, sensory or mental abilities or lack of experience and knowledge, provided they are supervised or have been instructed on the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance.
- Cleaning and maintenance must not be carried out by children.
- If the power cord is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. Never use the appliance if the power cord is damaged.
- Always clean the parts of the appliance that come into contact with food with clean warm water and a little neutral dishwashing liquid, rinse them with clean water and wipe dry.



WARNING:

Incorrect use may lead to injury.

- Always disconnect the appliance from the power supply when leaving it unattended and before assembly, disassembly or cleaning.
- This appliance is intended for household use. It is not intended for use in areas such as:
 - kitchenettes in shops, offices and other workplaces;
 - agricultural premises;
 - hotel, motels and other residential areas;
 - bed and breakfast establishments.



WARNING:

Prevent the plug from getting wet.



WARNING:

The outer surface of the appliance heats up during use and may be hot for some time after use. Be very careful.

- The appliance must not be placed in a cabinet when in use.



WARNING:

The filling hole must not be opened during use. Do not do submerge the power cable, plug or appliance in water or any other liquid.

ELECTRICAL SAFETY

- Before connecting the appliance to a power socket, make sure that its nominal voltage indicated on the rating plate matches the electrical voltage of the socket.
- Connect the appliance only to a properly earthed socket. For safety reasons, we do not recommend using adaptors or extension cables.
- Do not place the appliance on windowsills, sink drain trays or unstable surfaces. Always place the appliance on a stable, flat and dry surface.
- Do not place the appliance on an electric or gas stove or near an open flame.
- Never use the appliance in the immediate vicinity of a bath, shower or swimming pool.
- Use the appliance only for its intended purpose.
- Use the appliance according to the instructions in this user manual. Failure to do so may result in injury, damage to the appliance, or a hazardous situation.
- Use the appliance only with the original accessories supplied with it.
- Leave at least 15 cm of free space around and above the appliance to ensure proper air circulation during operation.

- Do not place any items on the top surface of the appliance.
- Fill the water tank with clean, cold water. Do not pour hot water or other liquids into it or place any objects inside it.
- Before turning on the appliance, make sure that:
 - the drip tray with grid is installed in its place;
 - the water tank is filled with a sufficient amount of water and is properly installed in its position;
 - the bean hopper is filled with fresh coffee beans.

SAFETY IN USE

- The water level must not exceed the maximum mark.
- Take extra care when operating the appliance to avoid scalding with hot water or steam.
- The hot water function may only be used continuously for a maximum of one emptying of the entire water tank.
- When using the appliance, check the water level in the water tank regularly. If the water level falls below the minimum mark, refill the water tank. Before adding water, first turn the appliance off and disconnect it from the power socket.
- Use the built-in coffee grinder only for grinding coffee beans. Do not use it for any other purposes.
- Ensure that no hair or other items enter the grinder area during the grinding process. The coffee bean hopper lid should always be properly closed unless you are refilling coffee beans or adjusting the grind fineness.
- The appliance is equipped with a built-in thermal fuse that shuts it off when the pump is idling to prevent damage. If such a situation occurs, unplug the power cable and allow the appliance to cool down for at least 30 minutes. Then you can use it again.
- Do not move the appliance if there is a cup of coffee on the drip tray grille.
- Ensure that the power cable does not come into contact with hot surfaces.
- Unplug the appliance from the power socket by pulling on the plug, not the power cable. Otherwise, you may damage the power cable or the socket.
- Do not submerge the appliance, power cable or plug in water or any other liquid.
- Make sure that the power cable and plug do not come into contact with water or other fluids.
- To avoid the risk of electric shock, do not repair or modify the appliance yourself. All repairs should be carried out by an authorised service centre. Tampering with the appliance may result in the loss of your legal rights regarding faulty performance or warranty for quality.

EXPLANATION OF SYMBOLS PLACED ON THE PRODUCT OR IN THE ACCOMPANYING DOCUMENTATION



The product meets all the basic requirements of the applicable EU directives.



This symbol on products or accompanying documents means that used electric or electronic products must not be added to ordinary municipal waste.



This symbol indicates a hot surface warning.


- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Before using this appliance, please familiarise yourself with the user manual, even if you are already familiar with using similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference.
- It is recommended to keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right to file defect claims or the quality warranty. When transporting the appliance, we recommend repackaging it in the original box provided by the manufacturer.

DESCRIPTION OF THE COFFEE MACHINE

A1 Bean hopper lid	A8 Drip tray
A2 Bean hopper, capacity 180 g	A9 Water tank lid
A3 Grinding coarseness regulator	A10 Water tank, capacity 1.5 l
A4 Control panel	A11 Service door
A5 Coffee spout head (adjustable height)	A12 Tamper
A6 Coffee grounds container	A13 Brewing unit
A7 Drip tray grid	A14 Brewing unit handle

Not shown: Cleaning brush, power cord

DESCRIPTION OF THE CONTROL PANEL

B1 DOUBLE ESPRESSO button: start brewing Espresso (2 cups)	B8 CLEAN button: manual cleaning
B2 ESPRESSO button: start brewing Espresso (1 cup)	B9 NO BEAN indicator light: empty bean hopper warning
B3 LUNGO button: start brewing lungo	B10 NO WATER indicator light: for empty water tank warning
B4  button: switch coffee machine on/off	B11 CLEAN BREWER Indicator light: warning for cleaning the brewing unit
B5 AMERICANO button: start brewing Americano (Espresso + hot water)	B12 WARNING indicator light
B6 DOSE button: to adjust the amount of ground coffee	B13 CLEAR DREGS indicator light: full coffee grounds container warning
B7 VOLUME button: for setting the volume of coffee dispensed	B14 CLEAR GRINDER button: grinder empty

BEFORE FIRST USE

- Before first use, remove the appliance and its accessories from the packaging and discard all promotional labels and tags. Check that neither the appliance nor any of its components is damaged.
- Remove the protective foil from the control panel.
- Install the appliance on a flat, dry and clean surface.
- Remove the water tank, the brewing unit, the drip tray, the grid and the coffee grounds tank. Wash them with clean water and a small amount of neutral kitchen detergent. Then rinse them properly with clean water, dry them and put them back in place.
- Remove the protective cap from the outlet of the water tank. It serves as protection during transport and must be removed before using the coffee machine.
- Wipe the outer surface of the appliance with a slightly damp cloth and then wipe dry properly.

POSITIONING THE COFFEE MACHINE

- Place the coffee machine on a flat, dry and clean surface at a sufficient distance from the mains socket.
- Ensure there is enough free space around it for manipulation, at least 15 cm on all sides.

PREPARING THE COFFEE MACHINE BEFORE USE

Filling the water tank

1. Carefully remove the water tank.
2. Grab the handle and remove the water tank from the rear of the appliance.
3. Fill the water tank with clean water up to the maximum mark and insert it back into the appliance. Make sure that the water tank is properly installed in its place.



Note:

The water you pour into the water tank should ideally be at room temperature (approximately 25 °C). Too cold water can negatively affect the final taste of the coffee beverage.



Caution:

The maximum capacity of the water tank is 1.5 l. Do not overflow it.

Never fill the water tank with warm or hot water, sparkling water or other liquids such as milk. This could damage the appliance.

Never fill the water tank by pouring water into it while it is inserted inside the appliance. You risk splashing the appliance overflowing the water tank.



Note:

Do not leave water in the water tank for more than one day. For preparing quality fresh coffee, it is necessary to always use fresh water. Using water that is not fresh will affect the taste of the final beverage.

Filling the coffee bean hopper

1. Remove the coffee bean hopper lid.
2. Pour roasted coffee beans into the hopper and close the lid. Do not leave the lid of the hopper open, otherwise the coffee beans will lose their aroma more quickly.



Caution:

The maximum capacity of the hopper is 180 g of coffee beans. Do not overflow it.

Never fill the hopper with ground or instant coffee, caramelised or otherwise specially treated coffee beans, cocoa beans or other items that may damage the appliance.

Adjusting the grind fineness

Use the grinding coarseness regulator to adjust the appropriate coarseness of the ground coffee. Grinding coarseness adjustment is possible only when the grinder is in operation. The new coarseness setting will take effect after the second or third coffee preparation following the grinding coarseness change.

1. Use the grinding coarseness regulator inside the coffee bean hopper to adjust the coarseness in 15 levels. For first use, we recommend setting the grinding coarseness to 8 and then adjusting as needed.

- Turn the regulator clockwise to set a coarser grind, turn counterclockwise to set a finer grind. Always adjust by one level. Try it out and then readjust as needed.
- Only adjust the grinding coarseness when the grinder is running. Otherwise, damage to the appliance may occur.**
- If the brewed coffee flows out very slowly, it means that the beans are ground too finely and a coarser grind should be set. If the brewed coffee flows out too quickly, it means that the grains are ground too coarsely and a finer grind should be set.

Adjusting the Head Height

- The head can be moved up/down according to the height of the cup in which you will be preparing the coffee. First, place the cup under the head and then adjust the height.

Brewing unit

- Gently press on the centre of the upper part of the service door (it is marked with a PUSH). The top part of the service door slides out. Remove it and check that the brewing unit is properly installed. When inserting the brewing unit into the coffee machine, align the arrow on the brewing unit with the arrow above the brewing unit compartment - see figure C. After you check, close the service door.
- If you remove and reinsert the brewing unit and hear a click, it indicates that the brewing unit is properly installed.
- If the **WARNING** indicator light is continuously on, the brewing unit is not installed correctly.
- If the **WARNING** indicator light blinks when you press the beverage preparation button, the service door is not closed properly.

Drip Tray and Coffee Grounds Container


- Place the coffee grounds container on the drip tray.
- Insert the drip tray into the coffee machine.
- Attach the grid to the outside of the drip tray.
- The grid must be firmly secured to prevent the cup with hot beverage from tipping over during preparation.
- Water from the spout flows into the drip tray during each rinse, self-cleaning, and also any coffee that may spill during brewing. Therefore, clean and empty the drip tray daily.

CONNECTING TO THE POWER SUPPLY

- Fully unwind the power cord.
- Make sure the water tank is filled with fresh water, there is a sufficient amount of coffee beans in the hopper, and the appliance is properly assembled.
- Plug the mains plug into a properly grounded power socket.
- You will hear a short beep, the control panel buttons will briefly light up, then go out. The coffee machine will enter the sleep mode.

USING THE COFFEE MACHINE

Turning On the Coffee Machine, Rinsing, and Preheating

- Place a cup or a bowl that can hold at least 100 ml under the coffee spout.
- Long press the  button to switch on the coffee machine. A short beep will sound, the button will start blinking and the **CLEAN** button will light up.
- When switching on for the first time, the coffee machine starts heating up, and the preparation process begins, during which water is pumped into the internal circuit, the grinder is checked, and the coffee spout is rinsed, with a proportional amount of water flowing into the cup (the proportional amount of water is slightly greater than the amount of water during normal switching on and automatic rinsing). During this time, the grinder and pump will briefly operate. This is normal.
- Each time you turn it on, the coffee machine starts heating up, the preparation process begins, the grinder is checked, and the spout is rinsed, with a small amount of water flowing into the cup. During this time, the grinder and pump will briefly operate. This is normal.


- Then the coffee machine will warm up. During this time, the buttons from **DOUBLE ESPRESSO** to **VOLUME** will gradually blink. The coffee machine cannot be operated during this time.
- Once the control buttons light up, the coffee machine is ready to use.



Note:

You can skip the rinsing process by pressing the **CLEAN** button after turning on the coffee machine. The preheating process will begin right away.

Turning off the coffee machine

- When you have finished using the coffee machine, press the  button to turn it off. The coffee machine will enter the sleep mode.
- To switch the appliance completely off, unplug the power cord from the socket.




Note:

The coffee machine is equipped with an automatic shut-off and switch to sleep mode function. This occurs after 28 minutes of inactivity. This is normal.

Automatic Rinsing

- Each turn on and off of the coffee machine is accompanied by a short rinsing of the entire system. In both cases, both the outlet and the brewing unit are rinsed. A small amount of water will flow from the outlet, so place a cup under the outlet with a min. volume of 100 ml.
- When the brewing unit is flushed, some of the water gets into the spent coffee grounds container. This is normal. Therefore, we recommend regularly emptying the spent coffee grounds container so that the coffee does not come in contact with the rinse water. Pour out the water from the rinse, clean the containers, dry them and return them to their place.

Preparing Espresso (1 and 2 Cups), Lungo, Americano

- Place a cup, mug or glass under the head. Adjust the height of the head by moving it up or down depending on the size of the cup, mug or glass.
- Press the **ESPRESSO** button (for preparing 1 cup of Espresso), **DOUBLE ESPRESSO** (for preparing 2 cups of Espresso) **LUNGO** (for preparing Lungo) or **AMERICANO** (for preparing Americano). The selected button will light up, the other buttons will turn off.
- The coffee machine will automatically start the process of grinding, dosing, tamping the coffee, and dispensing it.
- Once the coffee dispensing process is complete, you will hear a sound alert, the  button will briefly blink, indicating that the coffee machine is heating up to operating temperature. Once the control panel lights up, the coffee machine is ready to make another coffee.
- Preparing 2 cups of Espresso involves two consecutive preparations of 1 cup of Espresso. Do not remove the cup from under the head until the preparation of the second cup is complete.
- Preparing Americano coffee consists of preparing 1 cup of Espresso and adding hot water. Do not remove the cup from under the brew head until the hot water dispensing is finished.
- You can cancel the coffee preparation by pressing the button of the drink being prepared.
- You can adjust the amount of ground coffee and the volume of coffee dispensed according to your personal preferences by following the instructions in the "**USER SETTINGS**" section.



Note:

During the coffee preparation process, you may hear the sound of the grinder and pump, and after preparation, the sound of used ground coffee being expelled into the coffee grounds container. These are normal sounds.



Note:

At the beginning of the coffee dispensing process, coffee may drip slowly (2 to 3 seconds after brewing), and then the full coffee dispensing will start. After the dispensing is complete, the coffee may drip from the spout for about 6 to 8 seconds. This is normal.

USER SETTINGS

Adjusting the Amount of Ground Coffee

- The amount of ground coffee affects the intensity (strength) of the brewed coffee.
- Press the **DOSE** button repeatedly to adjust the amount of ground coffee. Each time it is pressed, one LED above the button will be lit. In total, three indicator lights may light up:
 - One light represents the initial amount of ground coffee (approximately 9 g of ground coffee).
 - The two lights represent a larger amount of ground coffee (approximately 11 g of ground coffee).
 - The three lights represent the highest amount of ground coffee (approximately 13 g of ground coffee).



Note:

The amount of ground coffee depends on several factors, such as the type of coffee, the degree of roasting or the fineness of the grinding.

Adjusting the amount of coffee dispensed

- Press the **VOLUME** button repeatedly to adjust the amount of coffee dispensed. Each time it is pressed, one LED above the button will be lit. In total, three indicator lights may light up:
 - One light represents the default volume of dispensed coffee.
 - Two indicator lights represent a larger volume of dispensed coffee.
 - Three indicator lights represent the highest volume of dispensed coffee.

Coffee	VOLUME button	Coffee quantity (ml)
DOUBLE ESPRESSO		2x 30
		2x 40
		2x 50
ESPRESSO		30
		40
		50
LUNGO		50
		60
		70
AMERICANO		100
		110
		120



Note:

The amount of ground coffee depends on several factors, such as the type of coffee, the degree of roasting or the fineness of the grinding.



Note:

Adjust the amount of ground coffee or the volume of coffee dispensed before pressing the button of the selected beverage. While the coffee is brewing, the buttons are inoperative.

Restoring default factory settings

- If you need to restore the factory settings and erase all your customised settings, perform a factory reset.
- Press the **DOUBLE ESPRESSO** and **ESPRESSO** buttons simultaneously for 2 seconds.
- The coffee machine beeps briefly, press the button to switch the machine on. A short beep will sound and the button will flash shortly.

- When all buttons light up, the factory reset has been completed.

EMPTYING THE GRINDER

- This function is used to empty the grinder and remove any coffee beans inside it if you won't be using the coffee machine for an extended period to prevent them from deteriorating.
 - Empty the coffee bean hopper.
 - Press the **CLEAR GRINDER** button to start the grinder emptying function. The button will light up.
 - The grinder will stop after about 15 seconds. If the grinder is still full, run the function again.
 - Empty the coffee grounds hopper.
 - You can cancel the emptying function of the grinder by pressing the **CLEAR GRINDER** button.

CLEANING AND MAINTENANCE

Before cleaning, switch off the coffee machine and unplug the power cord from the mains socket and allow the appliance to cool down.



Caution:

Do not use abrasive cleaning agents, solvents, etc. to clean any parts of the appliance, as these could damage the surface. None of the components of this appliance are dishwasher safe.



Caution:

To prevent the risk of electric shock, do not immerse the appliance, power cable, or plug into water or any other liquid.

OVERVIEW OF CLEANING AND MAINTENANCE OF THE COFFEE MACHINE

PART OF THE COFFEE MACHINE	WHEN TO CLEAN
Coffee grounds hopper	Every day, or when the CLEAR DREGS indicator lights up
Brewing unit	At the same time as the coffee grounds container
Water Tank	Every day
Drip tray	Every day
Grinder	Once a week, or when you refill a new type of coffee
Bracket Seat Switch	Once a week
Ground Coffee Dispensing Channel	Once a week

DAILY CLEANING AND MAINTENANCE

Regular cleaning and maintenance are crucial for the proper functioning and longevity of the appliance.

Manual Rinsing

We recommend cleaning the coffee outlet after each use. This is also recommended when the appliance has not been used for an extended period of time.

- Press the **CLEAN** button to initiate the manual rinsing process. Several rinses and hot water dispensing will occur. Pour out the water.
- The manual rinsing process will automatically stop, and you will hear a sound alert, the button will briefly blink, indicating that the coffee machine is heating up to operating temperature. Once the control panel lights up, the coffee machine is ready to make another coffee.
- You can cancel the manual rinsing process by pressing the button **CLEAN**.
 - Manual flushing is a larger flushing of the entire system. In both cases (manual rinsing and rinsing when switched on or off), the outlet

and the brewing unit are rinsed. A larger amount of water will flow out of the outlet, so place a cup under the outlet of volume of min. 300 ml. When the brewing unit is flushed, some of the water gets into the spent coffee grounds container. This is normal. Therefore, we recommend regularly emptying the spent coffee grounds container so that the coffee does not come in contact with the rinse water. Pour out the water from the rinse, clean the containers, dry them and return them to their place.

Drip Tray and Coffee Grounds Container

- The drip tray should be emptied daily.
- Carefully pull out the drip tray from the coffee machine. Remove the grid and the coffee grounds container.
- Pour the contents of the drip tray into the sink.
- Empty the coffee grounds container into the municipal waste or compost.
- Clean the drip tray, grid and coffee grounds container with warm water and a little dishwashing detergent. Rinse and wipe dry.
- Place the coffee grounds container on the drip tray.
- Insert the drip tray into the coffee machine.
- Attach the grid to the outside of the drip tray.



Caution:

Be careful not to scald yourself when handling the tray. It may contain hot water.

Full coffee grounds hopper warning

- Empty the coffee grounds container whenever the **CLEAN DREGS** indicator light comes on. The coffee grounds container has a capacity of 8 coffee servings or 4 if it is a Double Espresso (the grinder grinds two servings in a row). When emptying the container, ensure the coffee machine is turned on to reset the counter.
- Carefully pull out the drip tray from the coffee machine.
- Empty the coffee grounds container into the municipal waste or compost.
- Clean the drip tray, grid and coffee grounds container with warm water and a little dishwashing detergent. Rinse and wipe dry.
- Place the coffee grounds container on the drip tray.
- Insert the hopper into the coffee machine.

Brewing unit

- We recommend cleaning the brewing centre at the same time as emptying the coffee grounds container.
- Gently press on the centre of the upper part of the service door (it is marked with a PUSH). The top part of the service door slides out. Lower them.
- Press both latches on the brewing unit and remove it from the coffee machine (Figure C).
- Wash it under running water and then dry it properly.
- Insert the brewing centre back into the coffee machine, aligning the arrow on the brewing centre with the arrow above the brewing centre compartment. A click indicates that the brewing centre is correctly installed.
- Close the service door.



Note:

- If the warning indicator light **WARNING** is continuously on, the brewing unit is not installed correctly.
- If the warning indicator light **WARNING** blinks when you press the beverage preparation button, the service door is not closed properly.

Water Tank

- Remove the water tank, rinse it with clean water, dry it and put it back in its place.

REGULAR MAINTENANCE

Perform regular maintenance of the coffee machine at least once a week.

Coffee Bean Hopper and Grinder

1. Empty the coffee beans from the hopper and store them in an airtight container.
2. Start the emptying function of the grinder with the **CLEAR GRINDER** button.
3. Turn the grinding coarseness regulator counterclockwise until the tabs on the regulator are aligned with the notches on the grinder (figure **D1**).
4. Lift the regulator upward and remove it from the grinder.
5. Lift the handle of the upper grinding stone and turn it counterclockwise in the direction of the "⌚" symbol.
6. Remove the upper grinding stone and clean it using a cleaning brush. If the grinding stone is clogged with coffee bean oil, we recommend degreasing them.
7. Clean the lower grinding stone and chamber using a cleaning brush.
8. Insert the upper grinding stone into the grinding chamber, aligning the "⌚" symbol with the arrow on the grinder outlet (Figure **D2**).
9. Rotate the handle of the upper grinding stone clockwise in the direction of the "⌚" symbol. Lower the handle.
10. Attach the grinding coarseness regulator, ensuring that the tabs on the regulator fit onto the notches on the grinder (Figure **D1**) and rotate the regulator clockwise.

Bracket Seat Switch

1. While the coffee machine is switched on, press the **CLEAN** and **DOUBLE ESPRESSO** buttons simultaneously until they start blinking.
2. The brewing unit holder will enter the brewing coffee position.
3. Open the service door and wipe the bracket and the area underneath it.
4. After cleaning, close the service door and then press the **CLEAN** and **DOUBLE ESPRESSO** buttons simultaneously. The bracket will retract back to its original position.
5. The ☺ button will briefly blink, indicating that the machine is heating up to operating temperature. Once the control panel lights up, the coffee machine is ready to make another coffee.

Ground Coffee Dispensing Channel

The ground coffee dispensing channel can be cleaned using the following steps.

1. Press the **CLEAR GRINDER** and **ESPRESSO** buttons simultaneously until they start blinking.
2. The cover of the ground coffee dispensing channel, located above the tamper, will open.
3. Open the service door and use a cleaning brush to remove any dirt from the channel. The dirt will fall into the coffee grounds container. Clean the container as well.
4. When the ground coffee dispensing channel is clean, close the service door and press the **CLEAR GRINDER** and **ESPRESSO** buttons simultaneously. The cover of the ground coffee channel will close.
5. The ☺ button will briefly blink, indicating that the machine is heating up to operating temperature. Once the control panel lights up, the coffee machine is ready to make another coffee.

Outer Surface of the Coffee Machine

To clean the outer surface of the appliance, use a clean, slightly damp cloth. Then wipe everything thoroughly dry.

DESCALING



- Over time, minerals from the water can build up in the machine's inner circuit. This is a natural process. Therefore, regular descaling is necessary. Mineral deposits can spoil the taste of your coffee.
- The coffee machine is equipped with a built-in counter that keeps track of the number of prepared coffees, and once it reaches 500, the descaling process should be performed. In such a case, the **AMERICANO** and **DOUBLE ESPRESSO** buttons will start blinking at the same time.

1. Fill the water tank with a solution of water and descaling agent. Use Sencor descaling agent suitable for Espresso-type coffee machines and follow the instructions given in the descaling agent's accompanying documentation.
2. Place a bowl of at least 200 ml under the head.
3. Press and hold the **AMERICANO** and **DOUBLE ESPRESSO** buttons simultaneously. The coffee machine will enter the descaling mode.
4. The descaling process takes about 10 minutes. The **CLEAN, DOUBLE ESPRESSO, ESPRESSO** and **AMERICANO** control buttons will flash gradually. Leave the coffee machine to complete the descaling process.
5. Once the descaling process is complete, the buttons will turn off.
6. Remove the water tank and refill it with clean, cold water. Insert it back into the coffee machine and activate the manual rinsing process repeatedly until the water tank is completely empty.

Storage

- If the appliance will not be used for an extended period, unplug it from the power socket, let it cool down, and clean it following the instructions provided above.
- Before storing, ensure that the appliance and all accessories are thoroughly clean and dry.
- Store the appliance in a dry, clean, and well-ventilated place away from extreme temperatures and out of the reach of children or pets.

TROUBLESHOOTING

Problem	Cause	Solution
The NO WATER indicator light is blinking.	Insufficient water in the tank.	Refill the water tank.
The WARNING indicator light is blinking.	Incorrectly closed service door.	Close the service door properly.
The WARNING indicator light is on.	Improperly inserted brewing unit; improperly inserted coffee grounds container and drip tray.	Insert the brewing unit, coffee grounds container and drip tray correctly.
The NO BEAN indicator light is on.	Insufficient coffee beans in the hopper.	Add coffee beans to the hopper.
The CLEAR DREGS indicator light is on.	The coffee grounds container is full.	Empty the coffee grounds container and inner tray.
The CLEAN BREWER indicator light is on.	Brewing centre needs to be cleaned.	Remove the brewing centre and clean it. Then, reinsert it.
The ESPRESSO and WARNING buttons are flashing simultaneously.	Ground coffee dispensing channel door drive does not work properly.	Turn off the coffee machine and then turn it on again. If the problem persists, contact your authorised service centre.
The NO BEANS and WARNING indicator lights are blinking simultaneously.	The coffee machine has ground coffee for 16 cycles with each grinding time being less than 5 minutes.	Turn off the coffee machine and disconnect it from the power source. Let it cool down for 5 minutes and then you can use it again.
The CLEAN button and WARNING indicator light are blinking simultaneously.	The flow meter has no signal and the water dispensing is abnormal.	Add water to the water tank.
The CLEAN and ESPRESSO buttons and the WARNING indicator light are blinking simultaneously.	Hall sensor has no signal and brewing centre is not functioning properly.	Turn off the coffee machine, wait for a while, then turn it on again.
Weak coffee froth.	The ground coffee is too coarse.	Turn the coarseness regulator clockwise to adjust the grinder setting.
	You are using unsuitable roasted coffee beans.	Use roasted coffee beans specially for Espresso machines.
Slow or dripping coffee flow.	The ground coffee is too fine.	Turn the coarseness regulator counterclockwise and adjust the grinder setting.
The coffee machine is not dispensing coffee.	The coffee spout is clogged.	Clean the coffee spout, for example, using a thin object.
The coffee machine does not switch on.	The plug is not inserted correctly into the power socket.	Check the plug connection in the power socket.
	The power cable is not inserted correctly in the socket at the back of the coffee machine.	Check the power cable connection.
	You have not pressed the  button.	Press the  button to turn the coffee machine on.
CLEAR DREGS and CLEAN BREWER are on.	Coffee grounds container needs to be emptied and brewing centre needs to be cleaned.	Empty the coffee grounds container and clean the brewing centre. Wait about 3 seconds before reinstalling.
The CLEAN DREGS indicator light is on, but the coffee grounds container is empty.	The internal counter has not been reset after emptying the container or cleaning the brewing centre.	Always wait for about 3 seconds for the counter to reset after emptying the coffee grounds container or cleaning the brewing unit. Empty the coffee grounds container and clean the brewing unit whenever the coffee machine is turned on. If you empty the container or clean the brewing unit while the coffee machine is turned off, the counter will not reset.
The grinder grinds but does not dispense ground coffee.	Deeply roasted beans may have oil on their surface. If the coffee beans are wet or have too much oil on their surface, the ground coffee dispensing channel will be blocked.	Press and hold the CLEAR GRINDER and ESPRESSO buttons simultaneously for 2 seconds, and they will start blinking. Open the service door and remove the ground coffee from the ground coffee dispensing channel using a brush. Close the service door once the ground coffee starts to fall freely. Press and briefly hold the CLEAR GRINDER and ESPRESSO buttons simultaneously and they will turn off.
The coffee machine is too noisy.	It is normal for the coffee machine to make noise during operation.	If the coffee machine starts to make a different kind of noise, lubricate the brewing centre.

.....

TECHNICAL SPECIFICATIONS

Rated voltage range.....220–240 V~
Rated frequency.....50 Hz
Rated input power.....1350W
Noise level.....70 dB(A)

.....

Values provided according to Commission Regulation EU 2023/826

Off mode	
Power consumption in off mode	0.5 W
Time needed for the equipment to automatically reach off mode	28 min
Standby mode	
Power consumption in Standby mode	–
Time needed for the equipment to automatically reach standby mode	–
Networked standby mode (Wi-Fi)	
Power consumption in networked standby	–
Time needed for the equipment to automatically reach networked standby mode	–

.....

INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material at the designated municipal waste disposal site.

.....

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

Used electrical and electronic products must not be disposed of in ordinary municipal waste. To enable the proper disposal, renewal and recycling of these products, deliver them to the designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By disposing of this product correctly, you help to conserve valuable natural resources and prevent any potential adverse impact on the environment and human health that could result from improper waste disposal. For more details, contact your local authority or nearest collection point. Fines may be imposed for the improper disposal of this type of waste as per national regulations.

For business entities in European Union States

If you wish to dispose of electrical and electronic equipment, please request the necessary information from your retailer or supplier.

Disposal in other countries outside the European Union

To dispose of this product elsewhere, request the necessary information on the correct disposal method from local authorities or your retailer.

.....

Changes to text and technical parameters are reserved.

FAST ČR, a.s.
U Sanitasu 1621
CZ-251 01 Říčany
www.sencor.com
info@sencor.cz