

# SENCOR®

SMS 800BK



**ELECTRIC SHAVER**

 
 
 
 
 
Translation of the original manual



 
 
**SENCOR®**

**SMS 800BK**

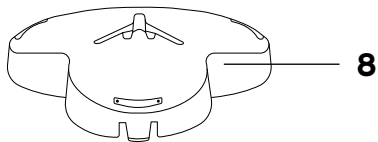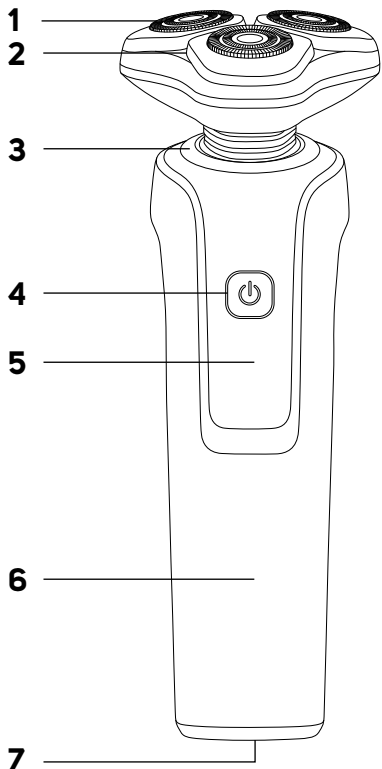 
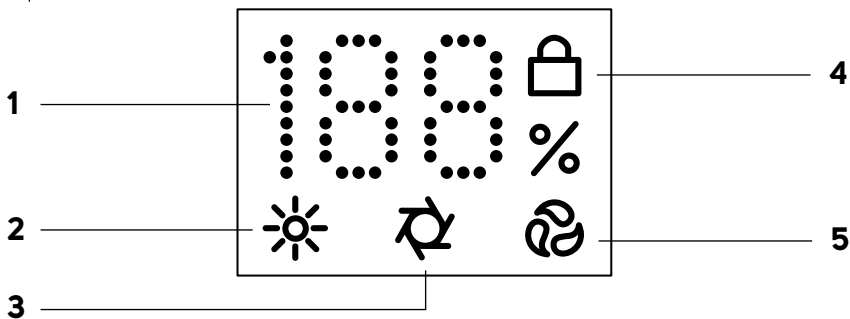 


**A****B**

C

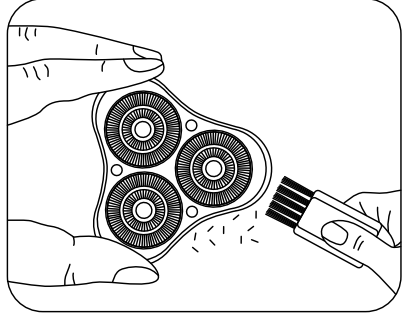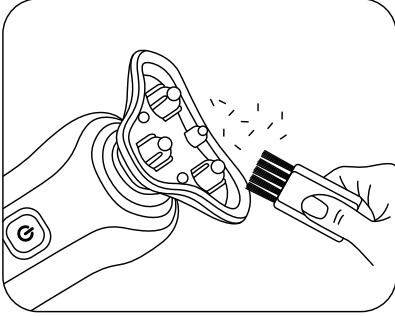

D

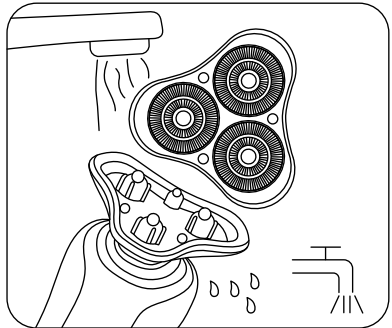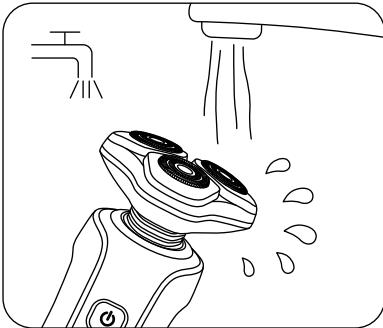

 


## IMPORTANT SAFETY INSTRUCTIONS

### READ CAREFULLY AND STORE FOR FUTURE USE.

#### General Warnings

- This appliance may only be used by children aged 8 years and older and by persons with physical, sensory or mental impairments or lack of experience and knowledge, if they are supervised or have been instructed on the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance.
- Cleaning and maintenance must not be performed by unsupervised children.
- If the charging cable is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the charging cable damaged.



This appliance is suitable for cleaning under running water.



#### **Warning:**

Before cleaning, make sure the machine is switched off and disconnected from the power supply.

- Parts of the appliance that need to be fixed or erected must be fixed or erected in such a way that they cannot fall into the water.

---

#### **Additional Important Safety Instructions for Use of the Appliance**

- Before connecting the appliance to a power socket, check that the nameplate rated voltage matches the voltage of the power socket.
- Use the appliance only with the supplied charging cable. To avoid a dangerous situation, do not use other types of charging cable.
- Keep the charging cable dry.
- Do not place the power cord over sharp objects. Make sure that it does not hang over the edge of a table or touch a hot surface.
- Do not wind the charging cable around the handle of the appliance.
- Do not connect or disconnect the charging cable with wet or damp hands.
- Store, charge and use the appliance at an ambient temperature of 15°C to 35°C. Do not charge the appliance for longer than necessary to fully charge it. After charging, disconnect it from the power source.
- Do not expose the appliance to temperatures above 50°C. Otherwise damage to the built-in battery may occur.
- The appliance is equipped with a built-in battery with a long service life, which can only be removed by a professional service. Never attempt to remove it from the appliance by yourself.



#### **Caution:**

Never disassemble the appliance in order to remove the battery. Do not short-circuit the appliance or throw it into a fire. There is a risk of leakage of toxic substances, fire or explosion if improperly handled.

- Do not charge, use, store or leave the appliance in a bathroom or any place where it could fall into a bathtub, wash basin or any other container filled with water.
- If the appliance falls into water, under no circumstances should you touch it, but immediately disconnect the power adapter from the socket. Never use an appliance or power adapter that has been submerged in water. Take it to an authorised service centre for inspection.
- This shaver is designed for domestic use only and is used for shaving and trimming beards or facial hair. The shaver is not intended for commercial purposes or for trimming animal fur.
- We do not recommend using the shaver on parts of the face with open or cut wounds, burns, blisters, etc.
- For hygiene reasons, the shaver head should only be used by one person.
- Use the shaver in accordance with the instructions in this manual.
- Use only the original accessories supplied with this shaver.
- The shaver and its power adapter must only be used indoors. Do not use it outdoors.
- Avoid using the shaver in rooms where aerosol dispensers are used or where oxygen is administered.
- Do not expose the shaver to the outdoor environment, extreme temperatures, direct sunlight, excessive humidity or excessive dust.
- Do not place the shaver near heaters, open fires or other sources of heat.



#### **Warning:**

Keep the shaver dry.

- Before using it, always check that the shaving head is not damaged. Never use a shaver with a damaged shaving head.
- The shaver may heat up when used or recharged. This is completely normal.
- Keep the shaver at a safe distance from your eyes.
- Always turn off the shaver and disconnect it from the power socket if you will not be using it, will be leaving it unsupervised, before cleaning, maintenance or storing it. Store the shaver and its power adapter in a dry environment.
- Keep the shaver clean. Perform the cleaning and maintenance following the instructions in the Cleaning and Maintenance section.
- Do not perform any maintenance on the shaver other than cleaning its individual components as described in the Cleaning and Maintenance section.
- Never use a shaver or power adapter that is damaged in any way.
- Do not use the shaver if it has fallen on the floor, if it was submerged in water, if it is not functioning properly or if it is damaged in any other way.
- To avoid a hazardous situation arising, do not repair or modify the shaver or its accessories yourself. Contact an authorised service centre for all repairs. By interfering with the product, you risk losing the legal right to defective performance or warranty for quality.

---

**EXPLANATION OF SYMBOLS PLACED ON THE PRODUCT OR IN THE ACCOMPANYING DOCUMENTATION**



The product meets all the basic requirements of the applicable EU directives.



Used electrical and electronic products must not be disposed of in ordinary municipal waste.



Used accumulators and batteries do not belong in normal municipal waste.

---

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Prior to using this appliance, please read the user manual thoroughly, even in cases when you are already familiar with the use of similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference. If you pass the appliance on to another person, ensure that this user manual is included.
- Carefully unpack the appliance and make sure not to discard any part of the packaging material until you have removed all its components. It is recommended that you keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right to file a defect claim or the quality warranty. When transporting the appliance, we recommend repackaging it in the original box provided by the manufacturer.
- When the battery level falls below 20%, a numerical value will be flashing on the display as a charge warning. When the battery level falls below 10%, a numerical value on the display will be flashing fast. Allow the electric shaver to charge.
- If the value 0% is flashing, the shaver switches into low voltage protection mode and cannot be switched on. It is necessary to charge it before next use.


**Caution:**

Do not leave the electric shaver connected to the mains for longer than it takes to fully charge it.


**Note:**

The shaver can be used while it is charging.

### DESCRIPTION OF THE ELECTRIC SHAVER AND ITS ACCESSORIES

<b>A1</b> Shaving cutters	<b>A6</b> Handle
<b>A2</b> Shaving head with cutter holder	<b>A7</b> Socket for connecting the power cable
<b>A3</b> shaving head pressure light indicator	<b>A8</b> Protective cover
<b>A4</b> On/Off switch	<b>A9</b> USB-C charging cable
<b>A5</b> Display	<b>A10</b> Cleaning brush

### DISPLAY DESCRIPTION

<b>B1</b> Numerical value of the charge status (%)	<b>B4</b> Lock indicator
<b>B2</b> Dryness indicator	<b>B5</b> Shaving head cleaning indicator
<b>B3</b> High speed indicator	

### INTENDED USE

- The electric shaver is designed exclusively for shaving beards and trimming sideburns, mustaches or smaller hairs. The electric shaver is not intended for cutting artificial hair or animal hair.

### CHARGING

- The electric shaver is equipped with a built-in battery that allows it to be used without the power cord.
- Allow the shaver battery to fully charge first without turning it on before first use or after a long period of non-use.
- Insert USB-C connector of the charging cable into the socket on the bottom of the shaver and the free connector of the charging cable into the mains adapter (not included in the package; recommended values 5 V/2 A).
- The electric razor will start charging when connected to a power source. The display will show the charging percentage as a numerical value. When a 100% appears, the shaver is fully charged. Disconnect the charging cable from the shaver and from the charging source.
- The charging time differs depending on the current charge level of the battery. If the battery is completely flat, it may take up to 1.5 hours to charge.

### DIRECT DRIVE TECHNOLOGY

- If the battery of the electric razor is discharged or if it discharges during operation, the electric razor can be connected to the power supply and continue to use it. This is made possible thanks to the **DIRECT DRIVE** technology that the electric razor is equipped with. Thus, it is not necessary to wait for a minimum battery charge.

### RECOMMENDATIONS FOR EXTENDING BATTERY LIFE

- To keep the built-in battery working for as long as possible, charge, use and store the electric shaver at an ambient temperature of 15–35°C in a dry environment. Lower or higher temperatures adversely affect the life of the battery.
- Do not wait until the battery is completely discharged. It is better to recharge the battery before it is fully discharged.
- If you do not use the electric shaver for a long time, charge the battery at least once every 6 months.

### OPERATION

#### Switching the shaver on and off

- Turn the shaver on by pressing the On/Off switch. The shaver turns on in the last speed setting. The display will show current battery level and the indicator light comes on.
- Turn the shaver off by pressing the On/Off switch.

#### Speed setting

- After turning the shaver on, press and hold the On/off switch for 3 seconds and the shaver switches to the next speed.
- The shaver is equipped with 3 speeds: low, medium and high. No indicator appears on the display for low and medium speed but for high speed appears.

#### Dry Shaving

- Hold the electric shaver at a right angle to the surface of the skin and in short circular movements sweep the shaving head over the skin of the face in the opposite direction to the growth of the beard. Apply adequate pressure to the skin. Do not push too hard.

- The shaver is equipped with a light indicator showing the pressure exerted on the shaving head. If the pressure is too high, the light is blue. If the pressure is too high, the light turns red.
- In more difficult to reach places, such as on the chin, stretch the skin with your free hand. This will give you a better shaving result.
- The electric razor has two speed modes. Press the on/off switch for 1 second to switch. When the mode is switched successfully, a beep will sound.



**Note:**

Your skin and beard may take up to three weeks to get used to the new way of shaving. During this time it is recommended to use the electric shaver daily.

- When you have finished shaving, clean the electric shaver according to the instructions in the Cleaning and Maintenance section.

**Wet Shaving**

- You can also use the shaver on a wet face with a shaving foam or gel for more comfortable shaving.
- Apply a little water to your skin, then apply shaving cream or gel.
- Rinse the shaving head under running water so it glides smoothly over the skin.
- Turn the shaver on and move the shaving head over the skin in circular motion to catch all hairs growing in different directions. Make sure that the entire shaving head is in full contact with the skin. Apply a little pressure for smooth and comfortable shaving.
- Rinse the shaving head regularly so it keeps moving smoothly over the skin.
- Dry your face after shaving.
- After each shaving, turn the shaver off and clean it.



**Note:**

Do not forget to rinse all shaving foam or gel from the shaver.

**Travel Lock**

- The travel lock protects against accidental switching on of the electric razor, e.g. during its transport.
- When the shaver is switched off, to activate the travel lock, press and hold the On/Off switch until the lock indicator is lit on the display . On/Off switch does not respond to normal press.
- To deactivate the travel lock, press and hold the on/off switch again. The lock indicator will turn off. Now the electric razor is ready for use again.

**CLEANING AND MAINTENANCE**

- For hygiene reasons, clean the electric shaver after each use. Regular cleaning is also important to keep the electric shaver working properly and extends the life of the shaving cutters.
- Turn the electric shaver off before cleaning it. Never clean the electric shaver when it is plugged into the power supply to recharge.
- Do not use hard-bristled brushes, abrasive cleaners, thinners, etc. Otherwise the surface to be cleaned may be damaged.

**Cleaning the Shaver Body**

- The shaver body can be cleaned using a clean dry wiping cloth. In the event of heavy soiling, you can use a slightly damp cloth. Clean the surface then properly wipe dry.

**Shaving Head Cleaning Indicator**

- If the motor current exceeds 1.8 A, the indicator flashes 5 times continuously to remind you that cleaning is needed.
- The indicator will be lit constantly during cleaning of the shaver. It will turn off after cleaning is done or after it is turned off manually.
- Clean the shaving head according to the instructions below.
- After cleaning, the indicator lights up on the display signalling that the shaver needs to be left to dry. The indicator switches off after approximately 40 minutes.

**Cleaning the Shaving Head (Fig. C)**

- Brush off any remaining beard or hair from the shaving head, including the shaving cutters.
- Pull upwards to remove the shaving cutters from the shaver head. Using a brush, remove dirt and beard residue from the shaving head attachment area.
- Insert the shaving head back into the holder.

**Cleaning with Water (Fig. D)**

- Rinse the shaver head under running water.
- If needed, the shaving cutters can be removed from the shaver head and washed separately under running water.
- Dry the shaving head with a fine cloth or allow it to dry naturally. Do not use paper towels or coarse cloths for drying, because they could damage the shaving blades.



**Warning:**

Never immerse the electric razor body in water. Risk of serious electric shock!

**TECHNICAL SPECIFICATIONS**

**Electric Shaver**

Input voltage .....	5 V/2 A
Built-in battery .....	Li-ion, 3.7 V, 2200 mAh
Protection class .....	IPX7
Noise level .....	72 dB(A)

The declared noise emission level of the appliance is 72 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

**INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL**

Dispose of used packaging material at the designated municipal waste disposal site.

**DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT**

Used electrical and electronic products must not be disposed of in ordinary municipal waste. To enable the proper disposal, renewal and recycling of these products, deliver them to the designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By disposing of this product correctly, you help to conserve valuable natural resources and prevent any potential adverse impact on the environment and human health that could result from improper waste disposal. For more details, contact your local authority or nearest collection point.

Fines may be imposed for the improper disposal of this type of waste as per national regulations.

**For business entities in European Union States**

If you wish to dispose of electrical and electronic equipment, please request the necessary information from your retailer or supplier.

**Disposal in other countries outside the European Union**

To dispose of this product elsewhere, request the necessary information on the correct disposal method from local authorities or your retailer.

.....

Changes to text and technical parameters are reserved.

FAST ČR, a.s.  
U Sanitasy 1621  
CZ-251 01 Říčany  
[www.sencor.com](http://www.sencor.com)  
[info@sencor.cz](mailto:info@sencor.cz)