


Using Chain Tool

Install new chain pin or remove old chain pin.

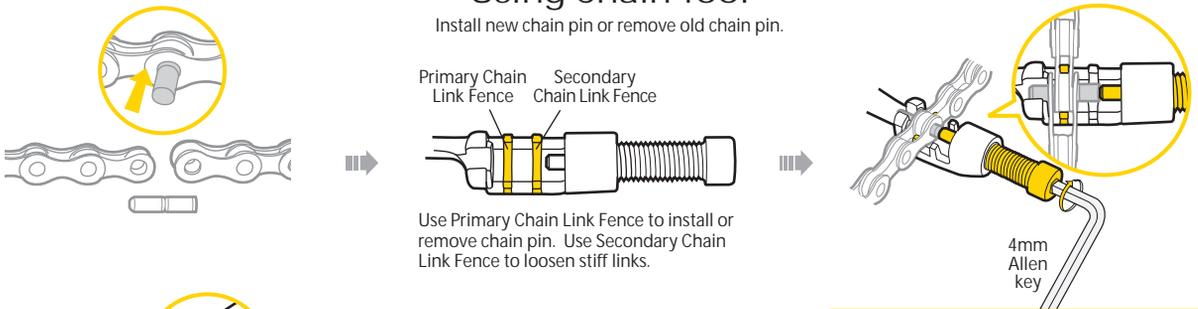

Use Primary Chain Link Fence to install or remove chain pin. Use Secondary Chain Link Fence to loosen stiff links.

4mm Allen key

WARNING




When pressing in the chain pin, push down on the top of the chain to keep it fully engaged in the chain tool cradle. Make sure the press pin of the chain tool is centered against the chain pin.

Chain Pin Tool: available in ALIEN II, ALIEN III & Mini 18.


Press chain pin as little as necessary to loosen the stiff link.

Using Chain Hook and Chain Tool

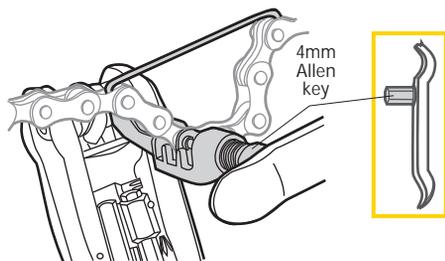


Tool maintenance

Using 4mm Allen key on tire lever to adjust the folding resistance.

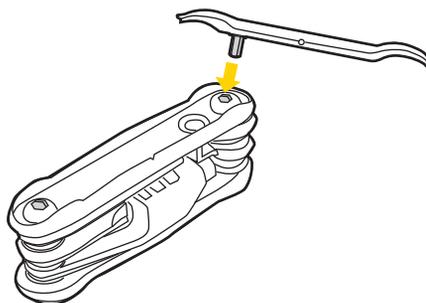


Using T25 Torx

Tighten disc brake rotor bolts with the T25 Torx bit.

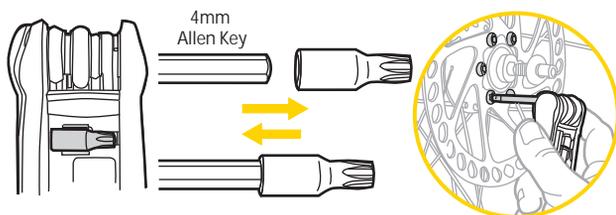


Using 5mm and 8mm Allen Keys


These two tools are combined. Remove 8mm Allen head to use 5mm Allen key.

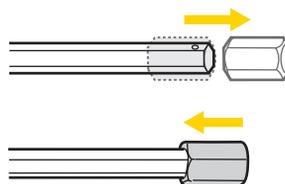

Using Tire Levers

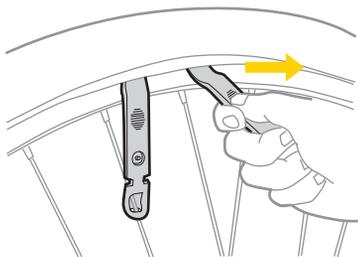

Using Air Pressure Release Button

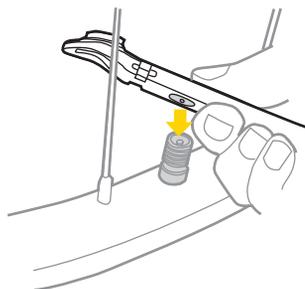

NOTE

Lubricate and maintain Hexus II with teflon based lubricant when needed. To prevent rusting, keep Hexus II dry.

WARRANTY

2-year Warranty: All mechanical components against manufacturer defects only.

Warranty Claim Requirements

To obtain warranty service, you must have your original sales receipt. Items returned without a sales receipt will assume that the warranty begins on the date of manufacture. All warranties will be void if The HEXUS is damaged due to user abuse, tool or body alterations, modification, or used in any way not intended as described in this user's guide.

*The specifications and design are subject to change without notice.

Topeak products are available only from professional bicycle shops. Please contact your nearest Topeak authorized bicycle dealer for any questions. For customers in the USA, call: 1-800-250-3068 Website: www.topeak.com