

FORZASPIRA MC 330_TURBO

FORZASPIRA MC 350_TURBO & FRESH

Forzaspira®

MANUALE DI ISTRUZIONI

INSTRUCTION **MANUAL**
MANUEL D'INSTRUCTIONS

MANUAL DE INSTRUCCIONES
BEDIENUNGSANLEITUNG

MANUAL DE INSTRUÇÕES

REGISTRA IL TUO PRODOTTO
REGISTER YOUR PRODUCT
ENREGISTREZ VOTRE PRODUIT
REGISTRA TU PRODUCTO
GERÄTREGISTRIERUNG
REGISTE O SEU PRODUTO
www.polti.com

 **POLTI®**
NATURAL HOME FEELING

 


SPAZZOLA UNIVERSALE
UNIVERSAL BRUSH
BROSSE UNIVERSELLE
BOQUILLA UNIVERSAL
UNIVERSALBÜRSTE
ESCOVA UNIVERSAL

TUBO FLESSIBILE
HOSE
TUYAU FLEXIBLE
MANGUERA FLEXIBILE
SCHLAUCH
TUBO FLEXÍVEL



BOCCHETTA PICCOLA + TELAIO SETOLATO
SMALL NOZZLE + BRISTLE FRAME
BUSE PETITE + BROSSE À SOIES
BOQUILLA PEQUEÑA + CHASIS CON CERDAS
KLEINE BÜRSTE + BÜRSTENAUFSAZ
EMPREGO DA ESCOVA PEQUENA + ESTRUTURA COM CERCAS

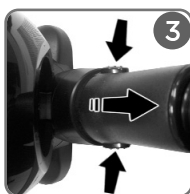

TUBO TELESCOPICO
TELESCOPIC TUBE
TUBE TÉLESCOPIQUE
TUBO TELESCÓPICO
TELESKOPROHR
TUBO TELESCÓPICO

LANCIA
LANCE
LANÇE
LANZA
DAMPFDÜSE
LANÇA

SPAZZOLA PARQUET
PARQUET BRUSH
BROSSE PARQUET
CEPILLO DE PARQUET
PARKETTBRÜSTE
ESCOVA PARA PARQUET



TURBOSPAZZOLA
TURBOBRUSH
TURBO BROSSE
TURBO BOQUILLA
TURBOBÜRSTE
TURBO ESCOVA



only MC350



MINI TURBOSPAZZOLA
MINI TURBO-BRUSH
MINI TURBO BROSSE
MINI BOQUILLA TURBO
MINI-TURBOBÜRSTE
MINITURBO ESCOVA

Frescoaspira

only MC350

 


LANCIA FLESSIBILE ASPIRAZIONE
FLEXIBLE SUCTION LANCE
LANÇE FLEXIBLE D'ASPIRATION
LANZA FLEXIBLE DE ASPIRACION
FLEXIBLE SAUGLANZE
LANÇA FLEXÍVEL ASPIRACÃO




OPTIONAL

only MC330
PAEU0304

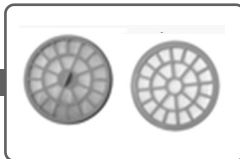

KIT FILTRO EPA + FILTRO SECCHIO
EPA FILTER + CONTAINER FILTER KIT
KIT FILTRE EPA + FILTRE BAC
KIT FILTRO EPA + FILTRO DEPÓSITO
SET HEPA- UND BEHÄLTERFILTER
KIT FILTRO EPA + FILTRO BALDE

 only MC350
PAEU0338

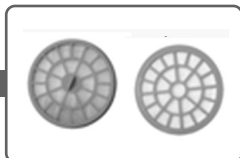

KIT FILTRO HEPA + FILTRO SECCHIO
HEPA FILTER + CONTAINER FILTER KIT
KIT FILTRE HEPA + FILTRE BAC
KIT FILTRO HEPA + FILTRO DEPÓSITO
SET HEPA- UND BEHÄLTERFILTER
KIT FILTRO HEPA + FILTRO BALDE

only MC350
PAEU0322



Frescoaspira
AROMATICO

only MC350
PAEU0323



Frescoaspira
PULITO

Gli accessori optional sono disponibili all'acquisto nei migliori negozi di elettrodomestici, nei Centri Assistenza autorizzati e sul sito www.polti.com.

The optional accessories are on sale at all the best domestic appliance retailers, an Authorised Polti Service Centre or online at www.polti.com.

Les accessoires en option sont disponibles dans les meilleurs magasins d'appareils électroménagers, un SAV agréé ou sur le site www.polti.com.

Los accesorios opcionales están en venta en las mejores tiendas de electrodomésticos, Centros de Asistencia Autorizadoo en la página web www.polti.com.

Die optionalen Zubehörteile sind in gut geführten Haushaltsgeschäften, bei den Autorisierten Kundendienstcenter oder auf www.polti.com erhältlich.

Os acessórios opcionais estão disponíveis para compra nas melhores lojas de eletrodomésticos, um dos Centros de Assistência Autorizados ou no site www.polti.com.

WELCOME TO THE WORLD OF FORZASPIRA

MC 330_TURBO AND MC 350_TURBO & FRESH ARE THE POLTI MULTI-CYCLONIC VACUUMS. BAGLESS AND WITH POWER CONTROL THEY COMBINE QUALITY AND EFFECTIVENESS PERFECTLY.



ACCESSORIES FOR ALL NEEDS

Visiting our site www.polti.com or any of the top household appliance stores, you will find a vast range of accessories to enhance the performance and convenience of your appliance and make cleaning your home even simpler.

To check compatibility with your appliance, look for the PAEXXXXX/ code next to each accessory listed on Page 3. If the code of the accessory you want to buy is not included in this manual, please contact our Customer Services department for more information.



REGISTER YOUR PRODUCT www.polti.com

Visit our website www.polti.com or call our Customer Services department to register your product.

You can get useful recommendations on using the products, and updates on innovations, as well as finding all the accessories that make the family of Polti products even more valuable for looking after your home.

To register your product, in addition to your personal information, you must enter the serial number (SN) which you will find on the silver label, located on the box and underneath the appliance. To save time and have your serial number to hand, write it in the space provided on the back cover of this manual.



OFFICIAL YOUTUBE CHANNEL

Do you want to know more? Visit our official channel: www.youtube.com/poltispa. We will show you the effectiveness of the natural and ecological power of steam in cleaning and ironing operations.

Register on the channel so you are always up-to-date on our video content!

SAFETY WARNINGS

IMPORTANT PRECAUTIONS FOR USE



WARNING! BEFORE USING THE APPLIANCE, CAREFULLY READ ALL THE INSTRUCTIONS AND WARNINGS IN THIS MANUAL, AND ON THE APPLIANCE ITSELF.



Polti S.p.A. declines all liability for any accident deriving from any improper use of this appliance.

Correct use of the product is only as detailed in this instruction manual.

Any use which does not comply with these instructions will invalidate the warranty.

- Never disassemble or carry out maintenance on the appliance apart from that indicated in this manual. In the event of a fault or malfunction, do not try and repair the appliance yourself. In the event of a heavy knock, fall, damage or fall into water, the appliance may not longer be safe to use. Incorrect use or a lack of respect for the instructions herein may lead to serious accidents. Always contact Authorised Service Centres.
- This appliance can be used by children over 8 years old, by people with reduced physical, sensory or mental abilities or by inexperienced persons only where they are instructed in advance on its safe use and only if informed of the dangers related to the product. Children must not play with the appliance. The cleaning and maintenance of the appliance may not be done by children without the supervision of an adult. Keep the appliance and the power cable out of the reach of children under 8 years of age.
- Keep all the parts of the packaging out of the reach of children; they are not toys. Keep the plastic bag out of the reach of children: danger of suffocation.
- This appliance is destined exclusively for indoor domestic use. **In order to reduce the risk of accidents, including: fires, elec-**

trocutation, personal injury and scalding, both during use and during preparation, maintenance and storage, always take the fundamental precautions listed in this manual.

RISKS CONNECTED TO THE POWER SUPPLY - ELECTROCUTION

- The earthing system and highly sensitive residual-current circuit breaker, complete with magnetothermic cut-out for your domestic system, guarantee safe use of electrical appliances. Therefore, for your own safety, check that the electrical system to which the appliance is connected complies with current laws.
- Do not connect the appliance to the mains if the voltage does not correspond with that of the domestic electrical circuit in use.
- Do not overload the sockets with adaptors and/or transformers. Only connect the product to a single socket with current that is compatible with the supplied plug.
- Electrical extension leads that are unsuitable for the power rating or which are not compliant with law may overheat and possibly lead to short-circuiting, fire, power outage or damage to the equipment. Only use certified extensions, suitable for the power rating, that support at least 10A.
- To remove the plug from the socket, do not pull the power cable, but hold the plug itself to avoid damage to the plug and the cable.
- Always unplug the appliance if it is not in use and before any preparation, maintenance or cleaning operation.
- The appliance must not be left unattended if plugged in to the mains.
- Fully unwind the cable from the cable winder before connecting the appliance to the mains and before use. Always use the product with the cable completely unwound.
- Do not pull or jerk the cable or expose it to tensions (twisting, crushing or stretching). Keep the cable away from hot and/or sharp surfaces and elements. Avoid crushing the cables in doors and windows. Do not pull the cable tight around cor-

ners. Avoid treading on the cable. Do not pass over the cable with the appliance. Do not wind the power cable around the appliance, especially if the appliance is hot.

- Do not substitute the plug on the power cable.
- If the power cable is damaged, it must be replaced by the manufacturer or its service agent in order to avoid all possible hazards. Do not turn on and use the product if the power cable is damaged.
- Do not touch or use the appliance barefoot and/or with wet body or feet.
- Do not use the appliance near containers full of water, e.g. sinks, baths and swimming pools.
- Do not immerse the appliance, including the power cable and plug, in water or other liquids.

RISKS DURING USE OF THE PRODUCT - INJURIES/SCALDING

- The product should not be used in areas where there is a danger of explosions or in the presence of toxic substances.
- Do not vacuum liquid substances or damp dirt.
- Do not vacuum onto toxic substances, acids, solvents, detergents or corrosive substances. The handling and removal of dangerous substances must be carried out according to the indications of the manufacturers of these substances.
- Do not vacuum onto explosive powders or liquids, hydrocarbons, open flames and or extremely hot objects.
- Keep all body parts away from the vacuum intake and from any moving parts.
- Do not use the vacuum function on people and/or animals.
- Re-wind the cable when the appliance is not in use.
- Do not position the product near sources of heat such as fireplaces, stoves and ovens.
- Do not obstruct the openings and grills on the product.
- During use, keep the product in a horizontal position on stable surfaces.

CORRECT USE OF THE PRODUCT

This appliance is intended for internal home use as a vacuum of dry material, in accordance with the descriptions and instructions contained in this manual. Please read these instructions carefully and keep them. If this manual is lost, it can be consulted and/or downloaded from the website www.polti.com. Only vacuum domestic dirt.

Do not use on debris or chalk, cement or residues from building sites or brick laying.

Do not use on earth and sand/soil, etc.

Do not use on ash, soot and combustion residues (fireplaces, barbecues, etc.).

Do not use on printer, photocopier or fax toner and ink powder.

Do not vacuum pointed, sharp or stiff objects.

The appliance only functions correctly with the collector inserted, and complete with all its parts.

Correct use of the product is only as detailed in this instruction manual. Any other use may damage the appliance and invalidate the warranty. Polti S.p.A. reserves the right to change equipment or accessory specification without prior notice.

INFORMATION FOR USERS

Pursuant to European Directive 2012/19/EU, regarding electric and electronic appliances, this appliance must not be disposed of with domestic waste, but sent to an official collection facility. This appliance complies with EU Directive 2011/65/EU



The crossed-out bin symbol on the appliance indicates that, at the end of its useful lifespan, the product must be disposed of separately from other waste. Therefore, at the end of its life, the user must handover the appliance to an appropriate collection centre for electric and electronic waste. Proper separate waste collection to facilitate the subsequent recycling, treatment and environmentally compatible disposal of the appliance helps to prevent negative effects on the environment and human health, and promotes recycling of the materials the product is made of. Unlawful disposal by the owner involves the application of the administrative sanctions envisaged by current legislation.

1. PREPARATION OF THE APPLIANCE

1.1 Remove the appliance from the packaging, checking that the product is whole and that all the parts are there.

1.2 Insert the batteries into the remote control handle (1) (see chapter 9).

1.3 Insert the suction opening of the flexible tube into the connector (2). To disconnect it from the appliance press the keys and pull the flexible hose (3).

1.4 Unwind the power supply cable and insert the plug into a suitable power socket.

2. CONNECTION OF ACCESSORIES

All the accessories can be connected directly to the flexible hose or to the telescopic tube. Just connect them together.

3. SUCTION CONTROL

3.1 Using the buttons “+” and “-”, it is possible to increase or decrease the suction power level. A suction indicator level lights up for every level.

There are three power levels:

Minimum for curtains.

Medium for sofas, armchairs and pillows.

Maximum for floors and hard surfaces .

3.2 By pressing the “Max” button, located on the handle, the appliance is adjusted to the maximum power.

3.3 By pressing the “⏸”, button, located on the handle, the appliance is paused.

4. CLEANING HARD FLOORS

4.1 Make sure that chapter 1 has been completed.

4.2 Connect the telescopic tube to the flexible hose and the floor brush to the telescopic tube. The length of the telescopic tube can be adjusted. Press the button to extend it or shorten it at will.


4.3 Move the selector located on the brush, pressing it with a foot, to the bristles-extended position (4).

The turbo-brush can be used by moving the selector, located on the back, to the left (13). The selector, by adjusting the speed of the turbine system, adapts the brush to any type of surface.

4.4 Press the foot pedal. ①. The appliance will start to operate at maximum power.

Adjust the suction power, as shown in Chapter 3. For this type of surface, we recommend the

Maximum level.


4.5 To end suction, press the foot pedal or the button  on the handleagain.

5. CLEANING DELICATE FLOORS


5.1 Make sure that chapter 1 has been completed.

5.2 Connect the telescopic tube to the flexible hose and the parquet brush to the telescopic tube.

The length of the telescopic tube can be adjusted. Press the button to extend it or shorten it at will.

5.3 Press the foot pedal. . The appliance will start to operate at maximum power.

Adjust the suction power, as shown in Chapter 3. For this type of surface, we recommend the **Maximum level**.

5.4 To end suction, press the foot pedal  or the button on the handleagain.

6. CLEANING CARPETS AND RUGS

6.1 Make sure that chapter 1 has been completed.

6.2 Connect the telescopic tube to the flexible hose and the turbo brush to the telescopic tube.

The length of the telescopic tube can be adjusted. Press the button to extend it or shorten it at will.


The turbo-brush, thanks to a turbine system, increases effectiveness and efficiency when vacuuming fabric surfaces. Move the selector, located on the back of the turbo-brush to the right (13).

The selector, by adjusting the speed of the turbine system, adapts the brush to any type of surface.

The floor brush can be used by moving the selector to the no-bristles position (4).

6.3 Press the foot pedal . The appliance will start to operate at maximum power.

Adjust the suction power, as shown in Chapter 3. For this type of surface, we recommend the **Maximum level**.

6.4 To end suction, press the foot pedal  or the button on the handleagain.

7. CLEANING UPHOLSTERY

(mattresses, sofas, car interiors, etc.)

7.1 Make sure that chapter 1 has been completed.

7.2 Connect the mini turbobrush to the flexible hose and pass over the surfaces.

Using the mini turbo-brush on armchairs and sofas, car interiors etc., is particularly recommended for the removal of animal fur and hair, thanks to the mechanical action of the roller brush. The suction nozzle with bristle frame attached is particularly recommended for removing the most stubborn dirt thanks to the abrasive action of the bristles on the surface.


If it is not needed, the bristle frame can be removed from the suction nozzle by sliding the guides of the frame on the base of the nozzle (5).

Use the lance for thorough vacuum cleaning of hard-to-reach spots such as skirting-boards and folds in sofas, armchairs, upholstered furniture and car upholstery.


For the MC350 Turbo & Fresh model only it is possible to use the flexible suction hose to reach the most difficult-to-reach places such as inside cars, radiators, door and window jambs.


7.3 Press the foot pedal . The appliance will start to operate at maximum power.

Adjust the suction power, as shown in Chapter 3. For this type of surface, we recommend the **Medium level**.

7.4 To end suction, press the foot pedal  or the button on the handleagain.

8. EMPTYING AND CLEANING THE DUST CONTAINER

When the dust container is full, the “container full ” indicator light comes on. To empty it, proceed as follows:

8.1 Turn off the appliance using the foot pedal . Disconnect the power supply cable from the mains.

8.2 Release the dust container from the vacuum cleaner by pulling the lever (6).

8.3 Remove the dust container lifting it by the handle.

8.4 Press the button located on the container in order to open the container and remove the dirt collected (7).

WARNING: Since by operating the button the lower base of the reservoir opens, it is recommended that this operation be done over a waste bin.

8.5 Remove the container cover by turning it anti-clockwise relative to the container, aligning the two reference arrows (8).

8.6 Remove the filter under the cover of the

collector, pull out the filter unit and remove any remaining dirt.

8.7 Replace the filter unit in the container.

8.8 Reinsert the filter under the cover of the collector.

8.9 Reassemble the cover on the container turning it clockwise, making sure to align the two arrows (9).

8.10 Reposition the dust container on the appliance by repeating the steps described previously in the opposite order, making sure that it is well attached.

We recommend to clean the container after each use.

WARNING: Do not use the appliance without the dust container complete with filter.

WARNING: Never exceed the "MAX" level shown on the dust container, otherwise the filters will clog reducing the suction power of the appliance.

9. REPLACING REMOTE CONTROL BATTERIES

In order to work, the remote control handle must be power by two 1.5V AAA batteries. The life of the batteries depends on how often it is used.

If, when pressing any button on the remote control, the control operation indicator light does not come on and the vacuum cleaner does not respond to the remote control commands, replace the batteries.

Take the remote control handle, press the lever of the battery cover pulling it towards the remote control keypad (1).

Remove the cover and replace the batteries making sure that the + and - marks match what is indicated. Replace the cover.

WARNING: to protect the environment, we recommend disposing of the battery in the special recycling containers, in accordance with the instructions of the manufacturer.

10. GENERAL MAINTENANCE

Ensure that the appliance is switched off and disconnected from the mains.

To clean the outside of the appliance, only use a damp cloth and tap water.

Do not use detergents of any type.

10.1 CLEANING THE DUST CONTAINER

- Pull out the dirt container and remove the container filter and the filter unit, as described in the chapter 8.

- Rinse all the components under running water and let them dry.

- Replace everything repeating the steps described previously in the reverse order.

ATTENTION: Check all components of the dust collector are dry, before put them in order.

We recommend to clean the container after each use.

10.2 REMOVAL AND CLEANING OF THE EPA FILTER

For model MC 330_TURBO only

- Turn the grill anti-clockwise (10) and remove the filter (11).

- Rinse the filter using running water only and shake gently to remove any excess dirt or water residue; before replacing the filter in the appliance, leave to dry naturally away from direct light and heat for at least 24 hours.

The filter should be fully cleaned approximately every four months.

WARNING: Check the filters during cleaning. Replace the filters when visibly damaged.

WARNING: Do not clean the filters with the brush as they can be damaged, reducing their filtering capacity. Do not use detergents, do not rub the filter, and do not wash it in a dishwasher.

10.3 REMOVAL AND CLEANING OF THE HEPA FILTER

For model MC 350_TURBO & FRESH only

- Turn the grill anti-clockwise (10) and remove the filter (11).

- Shake gently to remove any excess dirt or water residue

The filter should be fully cleaned approximately every four months.

WARNING: Check the filters during cleaning. Replace the filters when visibly damaged.

10.4 CLEANING CAP

- On the bottom of the appliance there is a cap for cleaning the internal hoses, created to remove any accumulation of dirt which cannot pass into the suction container. To open it,


just turn the cap anti-clockwise (12). To close it, turn the cap clockwise.

10.5 CLEANING THE TURBO-BRUSH

- Remove the door (14) and clean the inside of the brush.
- Close the brush following the procedure in reverse order.

11. STORAGE

11.1 Turn off the appliance and disconnect from the mains electricity.

11.2 Press the cable-winder button  to activate the automatic winding guiding it gently back into the appliance.

11.3 The hose and flexible hose can be housed on the body of the appliance, sliding the universal brush into the parking system on the appliance (15).

11.4 The small nozzle and the lance can be replaced in their relative storage locations (16).

12. FRESCOASPIRA

For model MC 350_TURBO & FRESH only

FrescoAspira is an ambient deodorant which contains natural essences. During use, it releases a fresh perfume in every room.

12.1 Ensure that the appliance is switched off and disconnected from the mains.

12.2 Turn the grille anti-clockwise (10).

12.3 Place FrescoAspira in the special pocket of the grill (17).

12.4 Reassemble all the parts following the procedure in reverse order.

WARNING:

- Keep out of reach of children.
- IF SWALLOWED: Rinse mouth. Do NOT induce vomiting. Contact a POISON CENTRE or a doctor immediately.
- Do not get in eyes, on skin, or on clothing.
- Harmful to aquatic life with long lasting effects.
- Avoid release to the environment.
- Dispose of in conformity with local regulations.

Aromatic contains:

ETHANONE,1-(HEXAHYDRO-TETRAMETHYLMETHANONAZULENYL) - ALPHA-METHYL-1,3-BENZODIOXOLE-5-PROPIONALDEHYDE - MIX GERANIOL NEROL ACETATE

Clean contains:

2-PENTYL-3-PHENYL-2-PROPEN-1-AL - OTONE (1-(1,2,3,4,5,6,7,8 Octahydro-2,3,8,8-tetramethyl-2-naphthalenyl) ethanone) - 3-METHYL-4-(2,6,6-TRIMETHYL-2-CYCLOHEXEN-1-YL)-3-BUTEN-2-ONE (MAIN COMPONENT) - ACETATO P-T-BUT-CICLOEXILE - 3,4,5,6,6,PENTAMETHYLHEPT-3-EN-2-ONE (AND ISOMERS) - 7-HYDROXY-3,7-DIMETHYLOCTAN-1-AL

May cause an allergic skin reaction.

FrescoAspira is on sale at household appliance stores, at Polti Authorised Service Centres or on the site www.polti.com.

13. TROUBLESHOOTING

| PROBLEM | CAUSE | SOLUTION |
|--|--|---|
| The vacuum cleaner does not turn on. | No power. | Check that the appliance is connected to the power as indicated in Chapter 1. |
| | Batteries of the remote control handle are dead. | Replace the batteries for the remote control (see Chapter 9). |
| The vacuum has no/reduced suction. | Flexible hose/telescopic tube clogged. | Remove possible blockages from the hoses. |
| | Dust-collector over full. | Empty the dust collector (see Chapter 8) |
| | Dust tank not inserted correctly. | Insert the dust collector correctly (see Chapter 8) |
| | The suction can be adjusted on MIN. | Increase the adjustment of the suction. |
| During suction from the appliance, dust comes out. | Dust collector not inserted correctly. | Insert the dust collector correctly. |
| | Dust-collector over full. | Empty the dust collector. |
| | Flexible hose not inserted correctly. | Insert the flexible tube correctly. |
| Should the problems persist, contact an Authorised Polti Service Centre (see www.polti.com for the up-to-date list) or Customer Services. | | |

WARRANTY

This appliance is for domestic use only and is guaranteed for two years from the date of purchase against any defects present at the time the goods are handed over; the date of purchase must be proven via a proof of purchase document valid for tax purposes and issued by the seller.

For repairs, the appliance must be accompanied by proof of purchase.

This warranty does not affect the consumer rights deriving from European Directive 99/44/EC as regards some aspects of sale and warranty of consumer goods, rights which the consumer should uphold with respect to the seller.

This warranty is valid in the countries which adhere to European Directive 99/44/EC. For other countries, local regulations on warranties apply.

WHAT THE WARRANTY COVERS

During the warranty, Polti guarantees free repair of a product with a manufacturing or factory defect and, therefore, the client is not liable to pay for any work or materials.

In case of irreparable defects, Polti may replace the product free of charge.

To avail of the warranty, the customer should visit one of the Polti Authorised Service Centres with proof of purchase from the seller valid for tax purposes and bearing the date of purchase of the product. Without proof of purchase and the relative date of purchase, the work will be charged for. Store the proof of purchase document safely for the whole duration of the warranty.

WHAT THE WARRANTY DOES NOT COVER

- Any fault or damage not deriving from a manufacturing defect.
- Any fault due to improper use or use other than that indicated in the instruction booklet, an integral part of the product sales contract.
- Any defect resulting from *force majeure* (fires, short circuits) or caused by third parties (tampering).
- Damage caused by the use of non-original Polti parts, and repairs or modifications performed by staff or service centres not authorised by Polti.
- Damage caused by the customer.
- Parts (filter, brush, hose, battery, etc.) damaged by use (consumable goods) or normal wear and tear.
- Any damage caused by limescale.
- Defects resulting from lack of maintenance/cleaning according to the manufacturer's instructions.
- Assembly of non-original Polti accessories or those that have been modified or which are not suitable for the appliance.

Inappropriate use and/or use not compliant with the instructions for use and any other warnings or indications contained in this manual invalidates the warranty.

Polti takes no responsibility for any direct or indirect damage to people, objects or animals caused by non-compliance with the instructions indicated in this instruction booklet, regarding warnings for use and product maintenance.

To see the up-to-date list of the Polti Authorised Service Centres, visit the website www.polti.com.



Vaporella[®]

Vaporetto[®]

LECOASPIRA

Vaporetto[®]

Forzaspira[®]

UNICO 

www.politi.com



REGISTRA IL TUO PRODOTTO
REGISTER YOUR PRODUCT
ENREGISTREZ VOTRE PRODUIT
REGISTRA TU PRODUCTO
GERÄTREGISTRIERUNG
REGISTRE O SEU PRODUTO

SN:



CALL CENTER

| | |
|-----------------------------|-----------------|
| ITALIA SERVIZIO CLIENTI | 848 800 806 |
| FRANCE SERVICE CLIENTS | 04 786 642 12 |
| ESPAÑA SERVICIO AL CLIENTE | 902 351 227 |
| PORTUGAL SERVIÇO AO CLIENTE | 707 780 274 |
| UK CUSTOMER CARE | 0845 177 6584 |
| DEUTSCHLAND KUNDENDIENST | 03222 109 472 9 |

OTHER COUNTRIES, PLEASE VISIT WWW.POLTI.COM



POLTI S.p.A. - Via Ferloni, 83
22070 Bulgarograsso (CO) - Italy
www.polti.com

Follow us:

