

RECentral 3



Disclaimer

All the screen shots in this documentation are only example images. The images may vary depending on the product and software version. Information presented in this documentation has been carefully checked for reliability; however, no responsibility is assumed for inaccuracies. The information contained in this documentation is subject to change without notice.

Copyright and Trademark Information

© 2017 by AVerMedia Technologies, Inc. All rights reserved. No part of this publication, in whole or in part, may be reproduced, transmitted, transcribed, altered or translated into any language in any form by any means without the written permission of AVerMedia Technologies, Inc. Information and specification contained in this manual are subject to change without notice and do not represent a commitment on the part of AVerMedia.

For more information, please refer to www.avermedia.com

AVerMedia and RECentral[™] are trademarks or registered trademarks of AVerMedia Technologies, Inc.

Headquarters

 Address
 No.135, Jian 1st Rd., Zhonghe Dist., New Taipei City 23585, Taiwan

 Website
 www.avermedia.com

 Support
 www.avermedia.com/support

 Telephone
 +886-2-2226-3630

5 TABLE OF CONTENTS

| INTRODUCTION | 04 |
|--------------------|----|
| Download & Install | 04 |
| INTERFACE | 05 |
| RECORD | 06 |
| Live Editing | 07 |
| Scenes | 08 |
| STREAM | 09 |
| BROWSE & SHARE | 10 |
| SETTINGS | 11 |



Thank you for purchasing one of our Live Gamer capture cards. We strongly recommend using it with RECentral to unleash its full potential.

This manual will go over the interface and the main functions of RECentral.

Download & Install

Download the installation file from q.avermedia.com/RECentral and install RECentral 3 to your computer.

For instructions on hardware connections, please refer to the quick guide inside the box of your Live Gamer capture card.



INTRODUCTION



This is RECentral 3's interface:



| 1 | Mode Dial | Switches between modes |
|---|---------------|--------------------------------|
| 2 | Option Panel | Audio and video options |
| 3 | Preview Panel | Main viewing area |
| 4 | Info Panel | Information and action buttons |

5 RECORD

- 1. Click
 to switch to Capture / Stream mode
- 2. Your active capture card
- 3. Adjust your video and audio settings
- 4. Click 🖲 to select the Record tab
- 5. Select a Recording Quality
- 6. Select a Codec
- 7. Type in a Game Genre to categorize your recording
- 8. Tick to enable Live Editing, see the next section for more details
- 9. Disk space available (in hours and minutes)
- 10. Click REC to start recording, click 💿 to capture images
- 11. Click 🔀 to go fullscreen, and 📣 to mute audio
- 12. Click lostop recording





Live Editing


When enabled, your source feed will be cached to your storage. When storage is full, older footages will be overwritten.

| 1 2 | 3 |
|-----------------------|-----------|
| Dashboard Scene | |
| | 3 h. X |
| Available 00737/00833 | 0 |

- 1. Click 🔘 to select the Dashboard tab
- 2. Edit cached footage
 - Drag 🛡 or click on the timeline to shift forward/backward
 - Click 🗞 to go back 30 seconds, or 🚌 to return to the live feed
 - Click X to add/remove time marks at your current position in time, or right-click on the timeline to add/remove time marks anywhere on the timeline. Add multiple marks to create clips of footages in-between
 - Click $\widehat{\mathbb{m}}$ on a clip to remove it, \checkmark to add it back, or drag-and-drop the filmstrips to reorder the clips
- 3. When done, click SAVE to export your edited video

Scenes

Scenes are different arrangements of on-screen elements (including the source video, your webcam's view, and images). When enabled, you may select from a number of pre-arranged scenes, or create ones that match your occasions.

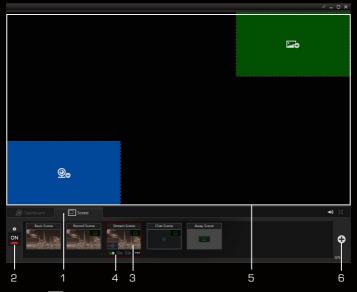


- 1. Click 🛄 to select the Scene tab
- 2. Click the button to enable/disable Scenes
- 3. Select a scene to apply to your video
- 4. Click to add elements (picture, webcam, video, webpage, or text)
- 5. Edit the position, size, transformation, and layer properly of each individual element in the Preview Panel
- 6. Click 🕂 to create new scenes


5 STREAM

- 1. Click
 to switch to Capture / Stream mode
- 2. Your active capture card
- 3. Adjust your video and audio settings
- 4. Click (()) to select the Stream tab
- 5. Select a Streaming Platform, or click + to add one
- 6. Tick to enable Video Backup
- 7. Click **STREAM** to start streaming, click **o** to capture images
- 8. Click to go fullscreen, and () to mute audio
- 9. Click 🔗 to go to your channel in your default browser
- 10. Click 🚺 to stop streaming



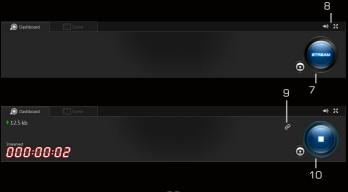



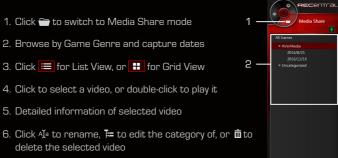


7. Click SHARE to share the selected videos

З 4

2016082519015507.mp4

2016082519012960.mp4

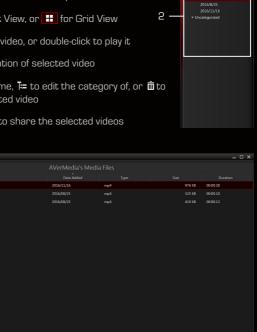



BROWSE & SHARE

🝠 SETTINGS

- 1. Click 🌣 to switch to Settings mode
- 2. Select a menu to adjust detailed settings for RECentral. Refer to the table below for the settings available under each menu
- 3. Click to adjust settings for your capture card



| General | » Language» Save Path» Shortcuts | Select interface language Set locations to save files Set keyboard shortcuts |
|------------------------|--|--|
| Microphone | » Microphone» Microphone Volume» Test Volume | Select your microphone Adjust its volume Test microphone volume |
| Shortcuts | » Keyboard Shortcuts | - Set keyboard shortcuts |
| Social Network Account | » Facebook » Twitter » YouTube | - Set up social network accounts |
| Profile Management | » Recording Profile» Streaming Profile | Edit, import, or export recording / streaming profiles |
| About | » Software Version» UXIP | RECentral version and updates Submit anonymous usage data |

SETTINGS



www.avermedia.com