


**SENCOR®**

Let's live!

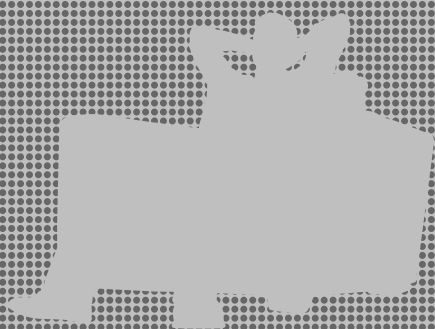

**BLUETOOTH  
SPEAKER**

**SSS 81**

**OPERATING MANUAL  
EN**





# Contents

1.	Important safety instructions.....	2
2.	Getting started .....	7
2.1.	Appearance of the device .....	7
2.2.	Appearance of the display.....	7
2.3.	Device features.....	7
2.4.	Description of buttons.....	7
2.5.	Power.....	9
2.6.	Operating instructions .....	9
3.	Troubleshooting.....	12
4.	Technical specifications .....	13

## Declaration

We reserve the right to make corrections, modifications and translations of this manual without prior notice. For this reason, we recommend that you regularly visit our website to get the latest information.

# 1. Important safety instructions

## General safety instructions

- Read these instructions. Follow this manual and the instructions inside.
- Heed all warnings.
- Follow all instructions.
- Use only the attachments and accessories specified by the manufacturer.
- **You must not put an open flame on the device, e.g. a burning candle.**
- Use the device in temperate climate.
- The manufacturer and vendor of the device are in not in any way liable for any direct or indirect damages caused by not following the instructions for installation, setup, operation, maintenance and cleaning of the device mentioned in this manual.
- Protect the device against impacts, falls, blows, shocks, vibration, moisture and dust.
- Before you agree to the use of the device by children, the children must be instructed in an age-appropriate manner about safe use of the device.

## Installation, control

- Install the device according to the instructions in the manual.
- Leave free space around the device, it is necessary for proper air circulation. It helps to dissipate the heat generated by the operation of the device. By covering the air vents of the cabinet, you risk overheating and damage of the device. You must ensure that the air circulation will not be prevented by covering the air vents with e.g. newspaper, tablecloth, curtain, etc. Follow the installation instructions in the manual.

- Do not install the device in direct sunlight, or close to heat sources, like radiators, heat exchangers, stoves or other appliances (including amplifiers) producing heat. High temperatures shorten the life of the electronic components of the device significantly. Do not use and do not leave the device near an open fire.
- **The device must not be exposed to dripping or running water and you must not place upon it objects filled with liquid, e.g. vases.** Protect the device against becoming wet, sprayed on or poured on by any liquid, do not leave or install the device outdoors. Do not use the device outdoors. You risk electric shock or fire by not adhering to these instructions.
- Do not use the device close to water.
- Do not attempt to bypass the safety function of the polarized plug. If the plug cannot be plugged into your socket, refer to an electrician to replace your obsolete socket.
- Before plugging the device into the socket make sure the voltage in your socket corresponds with the voltage on the label of the device or power adapter.
- Make sure the power cord is not stepped on or compressed, especially near the plug and point leading from the device or adapter. The power plug (adapter) is used to disconnect the system and must be easy to access.
- Remember to always unplug the plug (adapter) from the socket before unplugging the power cord.
- Disconnect the power cord from the power outlet during thunderstorms, or when not in use for a longer period of time.
- Avoid carrying the device from a cool environment into a warm environment or vice versa, or operating the device in a moist environment. Air moisture may condense in some areas within the device case and may cause the device to become temporarily inoperable. In this case, leave the device in a warm and well-ventilated area

and leave for 1–2 hours until the moisture evaporates. The device can be normally used again. Pay attention especially when using it in cold season.

- Under no circumstances are the manufacturer or vendor liable for any direct or indirect damage caused by the failure to observe the instructions for installation, configuration, operation, treatment and cleaning of this device included within this manual.

## **Repairs and maintenance**

- To avoid risks of electric shock or fire, do not remove the device from the case – the case does not contain components that the user could repair or adjust without the necessary equipment and qualification. Refer to a professional service centre if your device requires service.
- In the event of any unusual occurrences during the use of the device, e.g. smelling the characteristic smell of burning insulation or even seeing a smoke, turn the device off immediately, disconnect the power supply and wait with continuing use of the device until you learn the result of its inspection by the service personnel.
- Leave all service to qualified service personnel. Service is necessary when the device is damaged in any way, for example in case of damage to the power cord, spilling liquid on the device, intrusion of foreign objects into the device, when the device is exposed to rain or moisture, if the device does not function in the usual manner or if it fell.
- Before cleaning, transferring and other maintenance disconnect the power plug (adapter) from the power outlet.
- Clean the device with a dry cloth only.
- Do not use gasoline, thinner or other solvents or abrasives, scouring pads, or sponges with scouring pads to clean the device.

**WARNING**

**To prevent risk of fire or electric shock, do not expose the device to rain or moisture.**

**WARNING**

**The batteries must not be exposed to excessive heat, for example sunlight, fire, etc.**

**USB connector, notes on the use of the device:**

USB memory devices require being connected directly into the device. To prevent a failing or interrupting data transfer, do not use USB extension cable.

Electrostatic discharge can cause the device to not function. In this case, the user must restart the device.

Before using a USB memory device, test that it communicates with the device and its read and write speed.

For maximum reading speed, we recommend to keep the disc space defragmented. Use file system FAT32, single partition, no protection. If the reading/writing of the memory device is not smooth, it can lead to undesirable effects, such as interruption of the image (blocky image) or failure of whole frames, audio malfunctions, and in extreme cases, stopping of the operation. Unexpected behaviour of the memory device or the presence of viruses or other malware, may cause stopping of functioning of the device and need to be restarted.

The USB connector is a standard type and cannot power a USB device with a high power consumption (e.g. hard drives). Use a device with its own power and power them with their own power supply.

The device was designed with respect to maximum compatibility with memory devices. Considering the variety of devices on the market, we cannot guarantee compatibility with every USB device available. Should problems persist, use another memory device.

**WARNING:** Do not open. There are no parts inside the device replaceable by the user. Leave repairs to a qualified technician.

**WARNING:** Never use a lubricant for any part of this device.

**WARNING:** Place the device on a level, firm and stable surface.


**WARNING:** Do not place this device on any other electrical device.

**DECLARATION:** Our company reserves the right to review the contents of this manual without prior notice.



## 2. Getting started

### 2.1. Appearance of the device

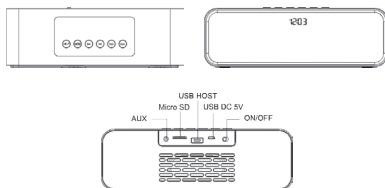

### 2.2. Appearance of the display




 











### 2.3. Device features

1. Wireless Bluetooth functions
2. Hands-free function (microphone and speaker) for a telephone
3. Playing music MP3 from USB keychain or SD card
4. Built-in lithium good quality battery, charging with regular USB charger
5. Built-in alarm clock and time display
6. Hi-Fi Stereo sound
7. Elegant design

### 2.4. Description of buttons



1.  Play/Pause/Receive and end call  
In the Bluetooth mode press briefly  to receive incoming call or end a call from the connected phone.  
In the MP3 and Bluetooth mode press briefly  to start or pause music playback.  
In the Line-In mode press briefly  to mute sound.  
In the FM mode press and hold  to search the bandwidth and save available stations.  
Press briefly to switch saved stations in ascending order.
2. **MODE:** Pressing **MODE** changes the function and display as follows:  
TIME (Time) → DATE (Date) → ALARM (Alarm) → BLUETOOTH → MP3 → FM Radio → Line IN
3.  In the Bluetooth mode press briefly  to select a previous track, if it is available.  
In the MP3 mode press briefly  to select a previous track, if it is available. Long press goes through the played track backward. In the FM mode press  to lower the tuned frequency.
4.  In the Bluetooth mode press briefly  to select the next track, if it is available.  
In the MP3 mode press briefly  to select the next track, if it is available. Long press goes through the played track forward.  
In the FM mode press  to increase the tuned frequency.
5. **Vol-** Press to lower the volume.
6. **Vol+** Press to increase the volume.
7. **ON/OFF** switch (on the back panel): turns the device on or off.

## 2.5. Power

The device is portable, with battery, powered by a built-in battery. If the battery is dead, charge it. Use a common 5V charger, e.g. for a phone. Complete charging of the battery takes about 5 hours, the time depends on the condition of the battery and on the parameters of the charger. If the device is switched on during charging, the charging time will be extended accordingly. We recommend that you charge a turned off device. Red indicator is on under the charging jack during charging, when the charging is complete it changes to green.

### Notes on the rechargeable lithium battery

1. **Use:** The battery capacity is gradually reduced by repeated charging and discharging (several hundred cycles). This is normal. If the battery operating time becomes too low, replace the battery in an authorized service center.
2. **Lithium battery maintenance:** if you do not use the device, keep the battery charged, charge it every 2-3 months to full capacity. Leaving the battery for long periods in a discharged state may significantly and irreversibly reduce the battery capacity, up to zero.

## 2.6. Operating instructions

1. Time mode  
When you enter the time mode it displays the set time on the screen. Press briefly **◀◀** or **▶▶** to switch between 24/12 display (am/pm). Press and hold **MODE** to set time and date. When you press MODE briefly, it gradually switches on Year-Month-Hour-Minute. You can set each value by pressing **◀◀/▶▶**.
2. Date mode  
Press **MODE** to enter the date display. Press **◀◀/▶▶** to switch between the year and the date.
3. Alarm mode (Alarm)  
Press and hold **MODE** to set the alarm in the same manner as setting the time. The last value is On/Off (ON/OFF). An active alarm clock (ON) is indicated also by a symbol of a bell on the display. A started alarm sound

can be turned off by pressing any button. If you want to disable the alarm permanently, go again through its setting and as a last value press OFF, the symbol on the display goes off. The device has only one sound built-in (e.g. singing birds).

4. Bluetooth mode

Press **MODE** to enter the Bluetooth mode. The screen displays „BLUE“ and plays a short melody. Switch on Bluetooth on your mobile/tablet/computer and scan for a near device. Connect to „SSS 81“. A short sound plays after a successful connection and the display changes, typically to „PAUSE“. You can control the operation on your mobile/tablet/computer and you can control some functions also on that device when the system allows it. Using buttons **◀◀/▶▶** select previous/next track. Press **Vol+/Vol-** to increase/lower volume. Press **▶||•↻** to start/pause the playback. Press **▶||•↻** to receive/end call, if your mobile processes it.

5. MP3 mode

Enter the MP3 mode by inserting an SD card into the Micro SD slot or by inserting a USB keychain in the USB HOST port. If there is playable music, it starts playing. Press briefly **◀◀/▶▶** to select previous/next track. Press and hold **◀◀/▶▶** to browse through fast play back/forward. Press **Vol+/Vol-** to increase/lower volume. Press **▶||•↻** to start/pause the playback.

6. FM radio mode

Press **MODE** to enter the FM radio mode. Press **◀◀/▶▶** to change gradually the tuned frequency up/down. Press and hold **▶||•↻** to start scanning the bandwidth, the stations with acceptable reception will be saved in the memory of the device. When the saving of stations is completed, you can browse through them in ascending order by pressing **▶||•↻**.

Note: stations with weaker signals can buzz, connect the cable to the AUX input (and switch to FM), which as an external antenna may help the reception of the internal antenna. Avoid placing the unit near computers or other devices that may produce noise and spoil listening.

## 7. LINE-IN mode

You enter the Line-IN mode by inserting a cable with 3,5 mm jack to AUX input. Press **Vol+/Vol-** to increase/lower volume. Press **▶||◀** to turn on/off sound.

### 3. Troubleshooting

Cannot turn on	The battery is empty, first charge the battery or at least turn on the USB charger.
No audio	The volume is set to zero, raise it by pressing <b>VOL+</b> . The playback is stopped or the sound is muted. Press <b>▶  ◀</b> . The battery is nearly empty, charge it.
Sound distortion	Overdriven input or output, lower the volume by pressing <b>VOL-</b> . The source of the sound is distorted, select another source with clean sound. The battery is nearly empty, charge it.
The device does not respond	Turn off the device by pressing <b>OFF</b> and turn on again. Charge sufficiently the internal battery.

## 4. Technical specifications

Display	LED	
Built-in rechargeable lithium battery	Hours of operation: Max. 4~ 6 hours (*depending on the volume setting)	
LINE-IN Audio in (AUX)	Max. input voltage	300 mV
	Output	5 W × 2
	MP3 bit rate	8 kbps – 320 kbps
	Signal-to-noise ratio (SNR)	85 dB
	Distortion	<0.55 %
Music format	MP3/WMA/FLAC/WAV	
Operating temperature	-5 to 40 °C	

The appearance of the device, features and specifications are subject to change without notice.

Manufacturer address: FAST ČR, a.s., Černokostelecká 1621,  
251 01 Říčany

The original version is in Czech.

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.



### DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES

The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product.

The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

#### For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

#### Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



Hereby, FAST ČR a.s. declares that the radio equipment type SSS 81 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: [www.sencor.eu](http://www.sencor.eu)

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.



# SENCOR®

## EN Warranty conditions

**Warranty card is not a part of the device packaging.**

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

### **This warranty is void especially if apply as follows:**

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.

- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

### **Authorized service centers**

Visit **[www.sencor.eu](http://www.sencor.eu)** for detailed information about authorized service centers.



# **SENCOR®**

**Let's live!**

