Instruction Manual



SENCOR®

SCM 3033BL SCM 3033RD

Before first use, please read all instructions contained in this user's manual carefully, even if you are already familiar with using similar products. Only use this appliance in accordance with the instructions described in the user's manual. Keep the user's manual in a safe place where it can be easily retrieved for future use.

Save the original packaging, including the internal packing material, warranty card and proof of purchase receipt, at least for the duration of the warranty. If you need to ship this appliance, pack it in the original cardboard box to ensure maximum protection during shipping or transport (e.g. when moving or when you need to send this appliance for repair).

SCM 3033BL/SCM 3033RD

CONTENTS

SAFETY INSTRUCTIONS	3
INTENDED USE	4
TECHNICAL DESCRIPTION	4
OPERATION	5
CLEANING AND MAINTENANCE	5
TROUBLESHOOTING	6
TECHNICAL DATA	6
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS	7
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES	7

Please observe the following safery instructions carefully.

SCM 3033BL/SCM 3033RD

SAFETY INSTRUCTIONS

General safety

- · Do not operate the device if it is visibly damaged.
- Ensure that the ventilation slots are not covered.
- This device may only be repaired by qualified personnel. Inadequate repairs can lead to considerable hazards.
- Do not use electrical device inside the cooler unless they are recommended by the manufacturer for the purpose,
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This electronic device is not a toy. Always keep and use the device out of the reach of children. Children must be supervised to ensure that they do not play with the device.
- Food may only be stored in its original packaging or in suitable containers.
- The cooling device is not suitable for transporting caustic material or material containing solvents.
- Check that the voltage specification on the type plate corresponds to that of the energy supply.
- Only connect the device as follows:
 - with the 12V cable supplied to a 12 V socket.
 - with using adaptor Y 50 to AC (220-240 V) socket.
- Do not pull the plug out of the cigarette lighter or the socket by the cable.
- If the connection cable is damaged, it must be replaced with the cable of the same type and specifications.
- Do not leave the device without supervision if it is connected.
- Pull out the connection cable:
 - before cleaning and maintenance
 - after use
- On boats: if the device is powered by the mains, ensure h t at the power supply has a ground fault
 interrupter circuit. Danger of fatal injuries!

Operating the device safely

- Before starting the device, ensure that the power supply cable and the plug are dry.
- Keep the 12 V socket (cigarette lighter) clean without cigarette ash. Do not use metal or other
 conductive objects for cleaning the socket.
- It is recommended to check the status of storage battery in the car in which it is possible to use the supply from 12 V socket to prevent from its total discharge.
- Do not place the device near naked flames or other heat sources (heaters, direct sunlight, gas ovens etc.) Caution! Danger of overheating!
- Ensure at all times that there is sufficient ventilation so that the heat that arises during operation
 does not build up. Make sure that the device is sufficiently far away from walls and other objects
 so that the air can circulate.
- · Do not fill the inned container with ice or fluid.
- Never immerse the device in water.
- Protect the device and the cable against heat and moisture.
- Do not touch exposed cables with your bare hands. Danger of fatal injuries!
- If you have an impresion that the device does not work correctly, pull out of the socket immediately.
- The manufacturer cannot be held for damage resulting from improper usage or incorrect operation.
- A few water drops my form inside the cooler if it has been cooling for a long period. This is normal
 because the moisture in the air condenses to water when the temperature in the cooler falls. The
 cooler is not defective. Wipe it out with a dry cloth if necessary.

SCM 3033BL/SCM 3033RD

INTEDED USE

The cooler is suitable for cooling foodstuffs.

The device has been designed for use with a 12V DC on-board power supply socket of a car (cigarette lighter), boat or caravan.

The appliance may also be used for camping use. It can be used as a box or cupboard.

THE APPLIANCE SHALL NOT TO BE EXPOSED TO RAIN!




Caution:

If you wish to cool medicines, please check it the cooling capacity of the device is suitable for the medicine in question.

TECHNICAL DESCRIPTION

The cooler is suitable for mobile use. It can cool goods to max. 15 °C under the ambient temperature or keep them cool. Its cooling system is a non-wearing and CFC-free Peltier cooling, the heat is discharged by a fan.

Description of the device

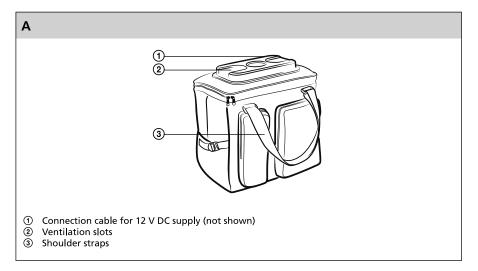

SCM 3033BL/SCM 3033RD

OPERATION



Note:

Before starting your new cooling device for the first time, you should clean it inside and outside with a damp cloth for hygienic reasons (please also refer to the "Cleaning and maintenance" chapter).

Energy saving tips

Choose a well ventilated installation location which is protected against direct sunlight.

Allow warm food to cool down first before placing it in the device to keep cool.

Do not open the cooling device more often than necessary.

Do not leave the device lid open more than it is necessary.

Using the cooler

Lift the cooler by the straps on the sides. Straps can be set to optimal size.

It can be folded together to a compact size when empty.



Note:

Like every cooling device, your cooler must be properly ventilated so that any heat created can dissipate. Otherwise proper functioning cannot be ensured.

- Place the cooler on a firm base.
- Connect the 12V connection cable into the cigarette lighter socket or a 12V socket in the vehicle.



Caution:

Ensure that the objects placed in the cooler are suitable for cooling to the selected temperature. Close top cover and zip fastener located along edge of top cover.

If you wish to switch the cooler off, pull out connection cable.

Folding away the cool bag

Lift up the base located on bottom and fold up to one side. Tilt the top cover downwards the cooling device. Then fold the empty cool bag flat and fasten it with the press studs/tightening straps.

Connection to a cigarette lighter



Note:

If you connect the device to the cigarette lighter of your vehicle, remember that the ignition must be turned on to supply the device with power.

CLEANING AND MAINTENANCE



Caution

Before cleaning the device remove the power plug of the power cord from the cigarette lighter socket.

- Keep the device clean. Regularly clean the device interior and exterior with a damp cloth.
- Do not fold it away until it is completely dry.



Caution:

Do not clean the cooler under running water or in dishwasher.



Caution:

Do not use abrasive cleaning agents or hard objects during cleaning as these can damage the cooler.

SCM 3033BL/SCM 3033RD

TROUBLESHOOTING

Fault	Possible cause	Suggested remedy
Your cooler does not work.	There is no voltage fl owing from the 12V socket (cigarette lighter) in your vehicle.	The ignition must be switched on in most vehicles for voltage to flow at the cigarette lighter.
	No voltage present at the AC voltage socket.	Try using another plug socket.
The device does not cool (is switched on).	The inner fan or the cooling element is defective.	This can only be repaired by an authorised customer services unit.
Operation with 12V socket (cigarette lighter): The ignition is on and the cooler is not working. Pull out of the socket and make the following checks.	Cigarette lighter socket is dirty. This results in a poor electrical contact.	If the plug of your cooler becomes very warm in the cigarette lighter socket, either the socket must be cleaned or the plug has not been assambled correctly.
	The fuse of the 12V plug has blown.	Replace the fuse (5 A) in the 12V plug.
	The vehicle fuse has blown.	Replace the vehicle's 12V socket fuse (usually 15 A). (Please refer to the operating manual of your vehicle.)

TECHNICAL DATA

Gross capacity	32
Connection voltage	
	Ň
	Full isolation, lite
Proportions (I × h × d)	
	2.9 kg

Changes in text and technical parameters reserved.

SCM 3033BL/SCM 3033RD

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.



SCM 3033BL/SCM 3033RD