

# Electric Scooter Alu Power



## User Manual

**! You can only use the product after reading this manual!**

Thank you for purchasing our product. It is a highly innovative, light and electric mobile product that balances itself.

**WARNING!** Be sure to read this manual thoroughly before using the product and understand the instructions contained in this manual. Before using, be sure to familiarize yourself with all the functions and the way you operate the device to avoid falls and other inconveniences, etc. The user manual refers to all instructions and instructions, and the user is required to read and follow them thoroughly. Our company is not responsible for any consequences that may result from misuse of this product. For further information or additional questions, please contact us. In case of any defect or suspicion of a defect, the customer is obliged to report this defect immediately to the seller, who will take care of any claim. It is strictly forbidden to continue using the product and attempting to disassemble the product after a fault has been detected or suspected of malfunction. Charge the scooter only with the original charger.

### INSTALLATION OF A SCOOTER

1. Press the folding button and position the steering column in the upright position as shown
2. Connect the handlebar cable to the handlebar cable, insert the handlebars in the steering column, secure with the key and make sure the handlebars are in the correct position



### INSERTING AND REMOVING BATTERY

**Inserting:** Release the clamp on the steering column, secure the battery on the steering column, lock the clamp.

**Removing:** Release the clamp, disconnect the battery, lock the clamp.

### INSTRUCTIONS TO SCOOTER DRIVING

The handlebar includes two control buttons

Right button: gas

Left button: brake

1. Stand up the scooter and get ready to ride
2. Press the ON / OFF button on the right of the display for at least two seconds
3. Refrain
4. Press the control button on the right side of the handlebar to add gas - select from 3 gears

**WARNING!** The electronic brake and mechanical brake (in the rear fender) can be used at the same time.  
Please charge the battery every 45 days to maintain good battery life.

#### INSTRUCTIONS TO BATTERY

Start: Long press the on / off button (longer than 2 seconds), 6 battery status indicators

Shutdown: Long press the on / off button. The red indicator – is charging, green – charged

#### INSTRUCTIONS TO DISPLAY



1. Battery status
2. Current grade
3. Current speed
4. Change to higher speed gear
5. ON / OFF Button
6. Change to lower speed gear
7. Distance

**WARNING:** If the battery is low, the scooter enters the low speed mode

#### FOLDING AND PARKING



Fold down the lever to fold the scooter



#### Parking

1. Push the steering column forward and hold it
2. Press the fold-out button to unlock the device bar
3. Place the steering column until it is locked. The Scooter can stand alone in this parking position (see picture)

## WEIGHT LIMITATION

The reason for the weight restriction is the safety of the rider and the prevention of damage caused by exceeding the recommended weight limit.

**Maximum weight:** 120 kg

### **WARNING!**

If the weight limit is exceeded, there is a risk of falling, resulting in injury to the rider or damage to Scooters. It is forbidden to use the Scooter if your weight is higher than the specified limit.

### **WARNING!**

-Do not use the battery in the following cases:

1) The battery emits constant heat or odor

2) Leakage of any substance / fluid. It is strictly forbidden for any other company, private person or user to do anything manipulated the battery. Do not touch any substance / liquid that flows out of the battery. After charging, disconnect the charger, otherwise the battery life may be shortened.

- Batteries contain hazardous substances, do not open, breathe, try or touch any internal parts of the battery or insert anything into it. Only use the chargers supplied by us. Do not overload the batteries or expose them too much. Never charge the adapter while charging. It must be placed in a free, airy place.

- Fully charge the battery before storing or storing to prevent the battery from fully disposing during use / storage. Maximum storage time without recharging is 3 months.

If the storage temperature is below 10 ° C, do not charge the battery. Transfer the device to a warmer environment where it is above 10 ° C and then charge. We recommend that you cover the scooter so that it does not get dusty and make sure that the scooter is stored in a warm, dry environment.

-If the owner of the scooter leases the product to a third party, our company is not responsible for the damages that will arise if the recommendations in this manual are not followed. By any breach of this manual, the customer assumes full responsibility for their actions. It is forbidden to lend to third parties who have not thoroughly studied this manual. The scooter should not be used on a wet, damp, slippery or loose surface.

- It is essential to recharge the device only in the presence of a physical person during the entire charging period. It is forbidden to charge the product without permanent supervision.