



Mobile Print/Scan Guide for Brother iPrint&Scan (Windows Phone®)



Before You Use Your Brother Machine

Definitions of Notes

We use the following symbol and convention throughout this User's Guide:



Tips icons provide helpful hints and supplementary information.

Trademarks

BROTHER is either a trademark or a registered trademark of Brother Industries, Ltd.

Wi-Fi and Wi-Fi Direct are registered trademarks of Wi-Fi Alliance.

Microsoft and Windows Phone are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Any trade names and product names of companies appearing on Brother products, related documents and any other materials are all trademarks or registered trademarks of those respective companies.

Table of Contents

Mobile Print/Scan Guide for Brother iPrint&Scan (Windows Phone®)

1	Introduction	1
	Overview.....	1
	Download Brother iPrint&Scan from the Windows Phone® Store (Marketplace).....	1
	Device Connections.....	1
2	Print	2
	Set a Device for Print.....	2
	Icons	2
	Print Photos Stored on Your Mobile Device	3
	Print Photos Taken with Brother iPrint&Scan	4
	Print Photos or Documents from Microsoft® OneDrive	5
	Print Photos from Other Applications	6
3	Scan.....	7
	Set a Device for Scan.....	7
	Icons	7
	Scan and Save Documents to Your Mobile Device or Microsoft® OneDrive	8

Overview

Brother iPrint&Scan allows you to use features of your Brother machine directly from your Windows Phone®.

Brother iPrint&Scan supports the following functions:

- Print
- Scan



If your machine does not have a printer or scanner, you cannot use the related print or scan functions of Brother iPrint&Scan.

Download Brother iPrint&Scan from the Windows Phone® Store (Marketplace)

You can install Brother iPrint&Scan from the Windows Phone® Store (Marketplace). To take advantage of all the features supported by Brother iPrint&Scan, make sure you are using the latest version.

Device Connections

Connect your mobile device to your Brother machine using one of the following connection methods:

Wi-Fi®

To configure your Brother machine for a Wi-Fi connection, see your machine's Quick Setup Guide.

Wi-Fi Direct®

To configure your Brother machine to a Wi-Fi Direct® network, download any one of the following guides from your model's **Manuals** page on the Brother Solutions Center at <http://support.brother.com>.

- Wi-Fi Direct Guide
- Software and Network User's Guide
- Online User's Guide


Your Brother machine must support Wi-Fi Direct®.





Depending on your Brother machine and mobile device, supported connection methods may vary.


Set a Device for Print

If a different machine is selected or if **Device Is Not Selected** is displayed, follow these steps:

- 1 Tap .
- 2 Tap **Printer**.
- 3 The application will search and display a list of available machines. Tap your machine in the list.

 If your machine is not displayed in the list, you may be able to find it by tapping  and then entering your machine's IP address.

- 4 Set other options as needed.
- 5 Press the **back** button to exit the Print Settings screen.

 Tap the upper portion of your mobile device's screen to hide or show the operation buttons.

Icons



 
Settings



Print

Print Photos Stored on Your Mobile Device

1 Tap **Pictures**.

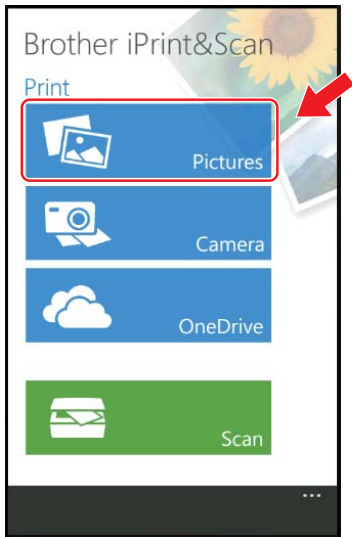


2 Tap the file you want to print.

3 Tap .

Print Photos Taken with Brother iPrint&Scan

 1 Tap **Camera**.

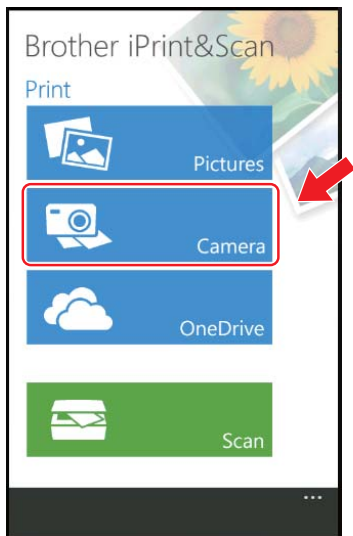


2 Take a photo.

3 Select **accept** or **retake**.

4 Tap .


Print Photos or Documents from Microsoft® OneDrive

 1 Tap **OneDrive**.

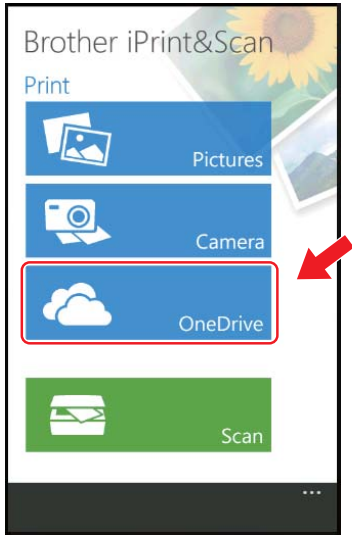


2 Tap the file you want to print.

3 Tap .

 Flick left or right to view the previous or next page.

Print Photos from Other Applications

 
You can print photos from pre-installed applications. For example, you can print photos saved in your mobile device's Pictures hub.

- 1 Select a photo from your Pictures hub.
- 2 Tap the sequential dots ●●●.
- 3 Tap **apps...**
- 4 Select **Brother iPrint&Scan**.
- 5 Tap .



Set a Device for Scan

If a different machine is selected or if **Device Is Not Selected** is displayed, follow these steps:

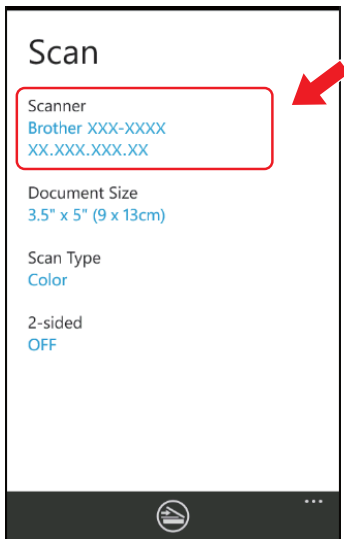- 1 Tap **Scanner**.

 


- 2 The application will search and display a list of available machines. Tap your machine in the list.

 If your machine is not displayed in the list, you may be able to find it by tapping  and then entering your machine's IP address.

- 3 Set other options as needed.

Icons

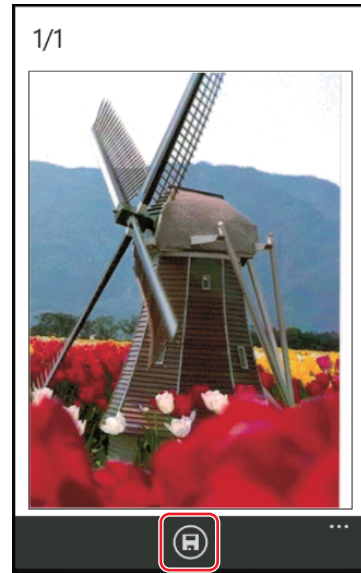

Scan

 


Save

Scan and Save Documents to Your Mobile Device or Microsoft® OneDrive

1 Load the document to scan in your Brother machine.

2 Tap **Scan**.

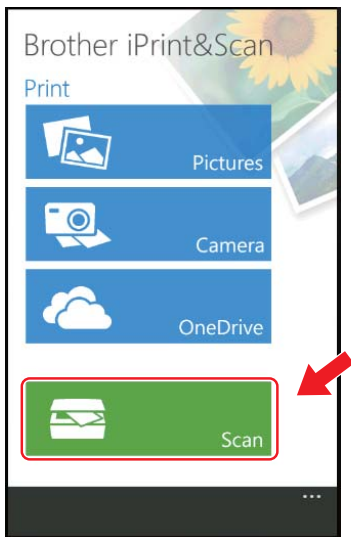

3 Tap .

4 Tap .

5 Do one of the following:

- Tap **JPEG in phone** to save the scanned image to your mobile device.

The scanned image will be saved in **Pictures/Saved Pictures**.

- Tap **JPEG in OneDrive** or **PDF in OneDrive** to save the scanned image to OneDrive.

The scanned image will be saved in the **Brother iPrint&Scan** folder on OneDrive.



-
- Flick left or right to view the previous or next page.
 - If you selected JPEG format, each page is saved as a separate file.

If you selected PDF format, all pages of the document are saved in one file.

brother

Visit us on the World Wide Web
<http://www.brother.com>



ENG
Version 0