

# SENCOR®

## SDC 2800



**User's manual**

**LCD ALARM CLOCK WITH CALENDAR AND  
INDOOR TEMPERATURE**

**Návod k obsluze**

**LCD BUDÍK S KALENDÁŘEM  
A MĚŘENÍM VNITŘNÍ TEPLoty**

**Návod na obsluhu**

**LCD BUDÍK S KALENDÁROM  
A MERANÍM VNÚTORNEJ TEPLoty**

**Használati útmutató**


**LCD ÉBRESZTŐÓRA NAPTÁRRAL  
ÉS BELTÉRI HŐMÉRSÉKLET KIJELEZÉSSEL**

**Instrukcja obsługi**


**BUDZIK LCD Z KALENDARZEM I POMIAREM  
TEMPERATURY POMIESZCZENIA**

**EN CZ SK HU PL**


FRONT VIEW

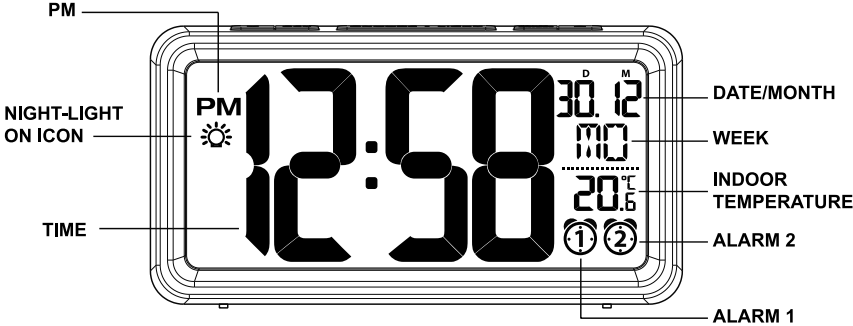

TOP VIEW

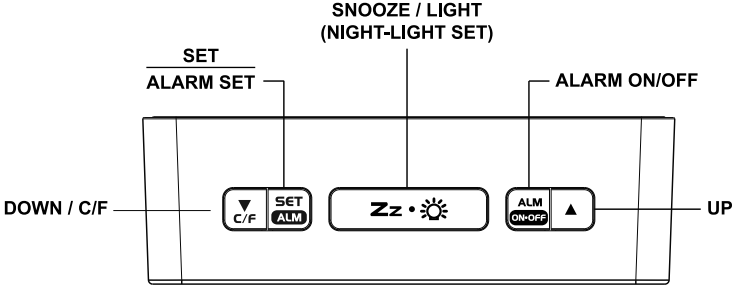

BACK VIEW

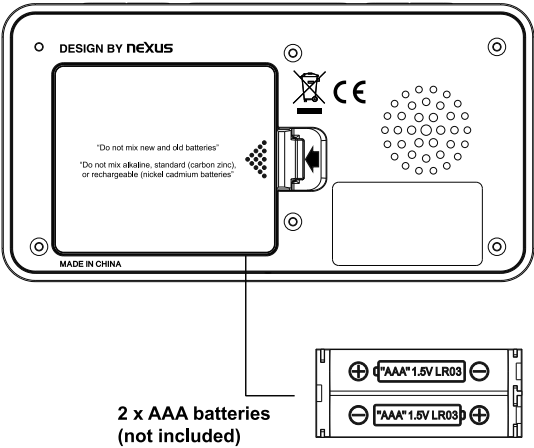

Thank you for your purchase of this alarm clock. Please read these instructions carefully and keep the manual well for future reference.

## INSTALLATION

1. Place your clock face down on a flat and soft surface.
2. Remove the battery cover at the back of your unit.
3. Insert 2 x new AAA batteries into the battery compartment by observing the correct "+" and "-" polarity.
4. Replace the battery cover.

Remarks:

- Alkaline batteries are recommended for optimal usage of this clock.
- Do not mix old and new batteries.
- Do not mix alkaline, standard or rechargeable batteries.

When the battery life is short, the back light and night light may not function as normal.

### TO SET TIME, 12/24 HR TIME AND SNOOZE DURATION

1. Press and hold **SET/ALM**, the hour digits flash. Press **▲** or **▼** to set the hours. Press and hold **▲** or **▼** will accelerate setting in fast speed.
2. Press **SET/ALM** once again, the minute digits flash. Press **▲** or **▼** to set the minutes. Press and hold **▲** or **▼** will accelerate setting in fast speed.
3. Press **SET/ALM** once again, **24Hr** flash, press **▲** or **▼** to select **12Hr** ⇄ **24Hr**. In 12Hr mode, **PM** will appear on the display to indicate afternoon time. There is no **AM** indicator.
4. Press **SET/ALM** once again, **2014** flash and **Y** **r** appears. Press **▲** or **▼** to set the years.
5. Press **SET/ALM** once again, the month digits flash. Press **▲** or **▼** to set month.
6. Press **SET/ALM** once again, the date digits flash. Press **▲** or **▼** to set date.
7. Press **SET/ALM** once again, the **Month 1. Date 1** flash. Press **▲** or **▼** to select Month-date or Date-Month display.
8. Then press **SET/ALM** once again, **EN** flash. Press **▲** or **▼** to select the language of day of week.  
EN = English  
IT = Italian  
FR = French  
DU = Dutch  
SP = Spanish  
DA = Danish  
GE = German
9. Press **SET/ALM** once again, **05** flash and **S** **n** appears. Press **▲** or **▼** to set snooze duration (from 5 min to 60 min.)
10. Press **SET/ALM** again or if no key pressed for approx. 10 seconds to exit the setting mode.

### TO SET ALARM 1

At normal time display, press **SET/ALM** once, **6:00 (AM)** and **A** **I** appears.

1. Press and hold **SET/ALM** until the hour digit flash. Then press **▲** or **▼** to set alarm 1's hours. Press and hold **▲** or **▼** to accelerate setting in fast speed. **PM** will appear on the display to indicate afternoon time. There is no **AM** indicator.
2. Press **SET/ALM** once again, alarm's 1 minute digits flash. Then press **▲** or **▼** to set alarm 1's minutes.

3. Press **SET/ALM** once again or if no key pressed for approx. 10 seconds to exit the Alarm 1's setting mode.

## TO SET ALARM 2

1. At normal time display, press **SET/ALM** twice, **6:00 (AM)** and **R 2** appears.
2. Press and hold **SET/ALM** until the hour digits flash. Then press **▲** or **▼** to set Alarm 2's hours. Press and hold **▲** or **▼** to accelerate setting in fast speed. **PM** will appear on the display to indicate afternoon time. There is no **AM** indicator.
3. Press **SET/ALM** once again, the minute digits flash. Then press **▲** or **▼** to set Alarm 2's minutes.
4. Press **SET/ALM** once again or if no key pressed for approx. 10 seconds to exit the Alarm 2's setting mode.

## TO TURN ON OR OFF ALARM 1 AND 2

1. At normal time display, press **ALM/ ON.OFF** once to activate Alarm 1, **1** appears.
2. Press **ALM/ ON.OFF** once again to activate Alarm 2, **2** appears.
3. Press **ALM/ ON.OFF** again to activate both Alarm 1 and 2, both **1** and **2** appear.
4. Press **ALM/ ON.OFF** again to deactivate both alarms (both **1** and **2** disappear).

## TO STOP AND RESET THE ALARM TO COME ON THE NEXT DAY

When alarm 1 or 2 is sounding, the related alarm icon flashes. Press the **ALM/ ON.OFF** once to stop the alarm and reset it to come on the following day. After that both **1** and/or **2** remains on the display.

## TO ACTIVATE THE SNOOZE FUNCTION (default snooze duration is 5 minutes)

When alarm is sounding, press **Zz • ☀** once, the alarm will be silenced and come on again after the set snooze duration.

**Note:** if your second alarm activates while the first alarm is sounding or it is in the snooze mode, the second alarm overrides the first alarm (the first alarm is reset to come on the next day).

## TO ACTIVATE THE NIGHT LIGHT FUNCTION

Your clock has a night light function which illuminates the LCD display for you to view time in a dark environment.

1. At normal time display mode, press and hold **Zz • ☀** until the **☀** appear and **OFF** flash. Then press **▲** or **▼** to select night light **ON** or **OFF**.
2. Press **Zz • ☀** once again, **12:00 (AM)** flash, then press **▲** or **▼** to select Night Light starting hours.
3. Press **Zz • ☀** once again, **6 Hr** appears, then press **▲** or **▼** to select Night Light on duration **5 Hr / 6 Hr / 7 Hr**
4. Press **Zz • ☀** once again or if no key pressed for approx. 10 seconds to exit the Night Light setting mode.

## TO VIEW DEGREE CELSIUS OR DEGREE FAHRENHEIT TEMPERATURE READOUT

Simply press **▼ / C / F** to select degree Celsius or degree Fahrenheit temperature readout.

## TO USE BACKLIGHT

At normal time display mode, simply press **Zz • ☀** once to activate the backlight for 5 seconds.

## TROUBLE SHOOTING

If your clock displays irrelevant time or does not function properly, which maybe caused by electro-static discharge or other interference, open the battery cover, take out the batteries a few seconds and reinstall them by observing the correct +/- polarity. Your unit will be reset to default settings and you need to set it again.

### CARE OF YOUR PRODUCT

1. Place your unit on a stable surface, away from sources of direct sunlight or excessive heat or moisture.
2. Protect your furniture when placing your units on a natural wood and lacquered finish by using a cloth or protective material between it and the furniture.
3. Clean your unit with a soft cloth moistened only with mild soap and water. Stronger agents such as Benzine, thinner or similar materials can damage the surface of the unit. Make sure the unit is unplugged before cleaning.
4. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
5. If the unit is not to be used for a prolonged period, such as a month or longer, remove the batteries to prevent possible corrosion. Should the battery compartment become corroded or dirty, clean the compartment thoroughly and replace the batteries.

## SPECIFICATIONS

Alarm duration	2 minute
Snooze duration	5 to 60 minutes
Default settings:	-
Time	0:00
Alarm 1 and 2	6:00
Snooze duration	05 (5 minutes)

### Environmental Protection



#### **Disposal of electrical & electronic equipment**

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate collection point. If you are unsure of where this is contact local authority. Improper disposal may be harmful to the environment.



## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

## DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

### **For business entities in the European Union**

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

### **Disposal in other countries outside the European Union**

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



The product meets EU requirements.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

The original version is in the Czech language.

Address of the manufacturer: FAST ČR, a.s., Černokostelecká 1621, Říčany CZ-251 01



## **EN Warranty conditions**

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

### **This warranty is void especially if apply as follows:**

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

### **Authorized service centers**

Visit [www.sencor.eu](http://www.sencor.eu) for detailed information about authorized service centers.