



STARTING OUT

The aroma diffuser uses ultrasound waves to evaporate water and essential oils from a container and creates a cool, gentle mist to pleasantly refresh dry air.



Remove the diffuser's lid and place it on a level surface.



Fill the container with water up to the indicator line. Add essence (sold separately) to the water in the container.



Connect the diffuser's power supply cable. (Do not plug the power adapter into the electrical socket!)



Put the lid on the container, plug in the power adapter, and turn the diffuser on by pressing the MIST button.

DESCRIPTION AND FUNCTION

The aroma diffuser has seven-colour LED lighting, two steam generation intensity levels, and a timer with four operation times.



STEAM INTENSITY SETTING

By pressing and holding the MIST button, you can determine the intensity of steam generation and the diffuser operation time (1 hour, 3 hours, 6 hours or continuous). When the water gets too low, the diffuser automatically shuts off.

TURNING OFF

To turn the diffuser off, press the MIST button 5 times.

MAINTENANCE

- If you will not be using the diffuser for an extended time, pour out the remaining water and dry the container.
- Clean the diffuser after 5 days of operation (unplug, remove the lid, pour out the remaining water, and clean with a damp cloth).
- Do not use substances containing solvents. The ultrasound membrane can be cleaned with a substance for removing lime scale. Do not touch the membrane.

WARNINGS AND OTHER INFORMATION

For optimal performance from the ultrasonic generator, we recommend using distilled water.

WARNINGS

- The steam intensity may change depending on the surrounding conditions (dry air, humidity, temperature, drafts).
- Use only natural essences. Essences with a large amount of alcohol may damage the diffuser.
- If the container is tipped over, remove the lid, pour out the remaining water, wipe dry and let the diffuser dry out for at least one day.
- Do not turn the diffuser on if it is not filled with water.
- Before cleaning, unplug the diffuser. Do not touch the ultrasound membranes.
- Fill the container with water using only the measuring cup in the package.
- Place the diffuser on a level surface in a space without any major input from heating, air conditioning or fans.
- The diffuser can be allowed to work up to 6 hours in intensive mode, and up to 10 hours in low. Before further use, leave the diffuser off for at least one hour.
- Do not handle the diffuser, or even touch it, if you have wet hands and it is running.
- Keep out of the reach of children and pets.

TROUBLESHOOTING

Diffuser won't turn on or off.

Check the water container — it may be empty. Check the power connection. If it is connected, try unplugging the power adapter and plugging it back in.

No steam is coming from the diffuser.

Check the water container — it may be empty or contain too much water. Clean the container using a lime scale cleaner, for example.

Water is leaking from the diffuser.

Check whether the diffuser is properly closed and placed on a level surface.

SPECIFICATIONS

Container volume: 100, 200, 300, 350, 400 and 600 ml (depending on model) Power: AC 100–240 V 50/60 Hz; DC 18–24 V (depending on model) Electrical consumption: 9–14 W Timer: 1 hour / 3 hours / 6 hours / continuous LED lighting: 7 colours Material: PP/ABS/PC Package contents: aroma diffuser, power adapter, user manual



Aromacare®