
Introduction

Thank you for purchasing this Rollei product! Please read this manual carefully before using this camera.

Warning

1. Keep it safe from falling and dropping.
2. Keep it distance from any strong magnetic interference objects like electrical machines to avoid strong radio waves that might be damaging the product and affect the sound or image quality.
3. Don't expose the product directly to high temperatures and strong sunlight.
4. We recommend using high quality Micro SD Cards for the best results.
5. Don't place your Micro SD card near strong magnetic objects to avoid data error.
6. In case of overheating, unwanted smoke or unpleasant smell from the device, unplug it immediately from the power outlet to prevent hazardous fire.
7. Keep it safety from children while on charging.
8. Stored the device in a cool, dry and dust free location.

Product



- 1.Power/Mode
- 2.UP/WI-FI
- 3.DOWN
- 4.LENS



- 5.TF card slot
- 6.USB slot
- 7.HDMI
- 8.OK

Getting Started

To power ON:






Press the Power/Mode Button.

To power OFF:

Press and hold the Power/Mode Button.

Overview

Turn camera ON and repeatedly press the Power/Mode Button to cycle through camera modes and settings. The modes will appear in the following order:

	Video	Record Video
	Photo	Capture a single photo
	Time-lapse	Time-lapse video
	Play back	Play back Video and photo
	Settings	Adjust camera settings

Settings

Press the OK Button to enter the settings menu. Press the Power/Mode Button repeatedly to cycle through the options and press the OK Button to select desired option.

Video setting

Video Resolution	4K@30FPS/2.7K@30FPS/1080P@60FPS/1080P@30FPS/720P@120FPS
Video sound	ON/OFF
Time-lapse	OFF/0.5S/1S/2S/5S/10S/30S/60S
Loop Recording	OFF/2min/3 min /5 min
Slow motion	1080P@60FPS/720P@120FPS


Photo

Pixel set	16M/12M/8M /5M/2M
Self Timer	3S/5S/10S/20S/OFF
Auto	3S/10S/15S/20S/30S/OFF
Burst shot	3P/S、 5P/S、 10P/S、 OFF
Exposure	-2 to +2
White balance	Auto/Sunny/Cloudy/Incandescent light/Fluorescent light
Image Rotation	ON/OFF
WIFI	ON/OFF
Light source frequency	Auto/50HZ/60HZ


Settings

Language	English/German/French/Italian/Spanish/ Portuguese/ Finnish/ Danish/ Swedish/ Norway/ Czech/ Hungarian/ Dutch/ Slovakia/ Greece		
Date-time	2018/01/01 12:00:00		
Format	Confirmation/cancel		
Reset	Confirmation/cancel		
Micro SD	4K@30FPS/108 0P@60FPS	1080P@30 FPS	720P@60 FPS
32GB	120min	240min	320min
16GB	60min	120min	160min
LED indicator light	ON/OFF		
Auto Screen saver	10S/20S/30S/OFF		
Auto shutdown	1min/3min/5min/OFF		
Time watermark	ON/OFF		


Video mode

1. To record video, please make sure, that the camera is in the video mode.
2. If the Video icon "  " is visible on screen, press the OK button to start recording a video, at the same time a red LED is flashing.
3. Click the OK button again to stop the video, also the red icon disappears.


Picture mode

1. To take picture, please make sure, that the camera is in the picture mode.
2. If the picture icon "  " is visible on screen, press the OK button to take pictures.

Slow motion

1. To record slow motion video, please make sure, that the camera is in the slow-motion mode.
2. If the slow motion Video icon "  " is visible on screen, press the OK button to start video, at the same time also the red LED flashing.

Time-lapse

1. Enter the setting menu, open this function, return to video mode.
2. If the slow motion Video icon "  " on screen is showing, press the OK button to start the time-laps video, at the same time is the red LED flashing".

Playback

Playing back video and photos

1. Verify the camera is in playback menu
2. Press up or down button to select file and press OK button to playback the video or photo

Battery

1. install and remove the battery

- a. Slide the latch to the side and open the cover.
- b. Insert the battery into the slot with the correct side and polarity.
- c. To take out the battery, remove the cover fist, after that pull out the battery at the tab.

2. Charge the battery

- a. Connect camera with the USB cable to a computer.
- b. Use an external power adapter to charge the battery (not included).
- c. Use a car charger to recharge the battery inside a car (not included).
- d. Charge while video function is active (inside the function table Settings the car mode must be ac-tivated).

Camera WIFI APP

1. Download the APP client (iOS App Store or Google Play Store) and install it to the smart phone, which displays the "**Rollei AC540**" application icon after installation. Direct search "**Rollei AC540**", and click install. After the installation of the mobile phone interface will appear an APP application icon. Click to enter the APP "**Rollei AC540**" interface .

2. Activate the WIFI function

- a. You can select "WIFI" in the general setup menu and press "OK" button to activate WiFi. The screen will show the WIFI icon and some seconds later the WiFi parameter.

SSID: **Rollei AC540*******,

PWD:12345678

- b. Or you can press short the UP button to activate WiFi connection. The screen will show the WIFI icon and some seconds later the WiFi parameter.
- c. Open the WiFi setting on your smartphone, search for the Rollei AC540***** and enter all required parameters.
- d. After the Rollei AC540 WiFi connection is established, open the "**Rollei AC540**" APP and search to

Parameter

LCD	2.0LTIPS
LENS	146 degree A + high resolution wide Angle lens
Language	English/German/French/Italian/Spanish/ Portuguese/ Finnish/ Danish/ Swedish/ Norway/ Czech/ Hungarian/ Dutch/ Slovakia/ Greece in language
video	4K 30FPS 2.7K 30FPS 1080P 60FPS/30FPS 720P 120FPS/60FPS/30FPS
video format	MP4
Compression format	H.264
Photo	16M/12M/8M/5M/2M
Memory	Micro SD UPTO 64GB
Picture mode	Single/timer / （2S/5S/10S） / Continuous shot
Light source frequency	50Hz/60Hz
USB	USB2.0
Power	5V 1A
Battery	750MAH
Video time	1080P/ 90min
Charge time	About 3 hours
System	Windows XP/Vistaor Above/Win7/Mac os

Disposal



Dispose of packaging: For disposal, separate packaging into different types. Cardboard and board must be disposed of as paper and foil must be recycled.



Disposal of Waste Electrical and Electronic Equipment and/or Battery by users in private households in the European Union.

This symbol on the product or on the packaging indicates that this cannot be disposed of as a household waste. You must dispose of your waste equipment and/or battery by handing it over to the applicable take-back scheme for the recycling of electrical and electronic equipment and/or battery. For more information about recycling of this equipment and/or battery, please contact your city office, the shop where you purchased help to conserve natural resources and ensure that it is recycled in a manner that protects human health and environment.

Battery warning

- Never dismantle, crush, or pierce the battery, or allow the battery to short-circuit. Do not expose battery being placed in high temperature environment, if battery leaks or bulges, stop continue to use.
- Always charge using the charger. Risk of explosion if battery is replaced by an incorrect type.
- Keep the battery out of reach of children.
- Batteries may explode if exposed to naked fire. Never dispose of batteries in a fire.
- Disposed of used batteries observing local regulations.
- Before disposing the device, please remove the battery.

Conformity

The Manufacturer hereby declares that the CE marking was applied to the Rollei Actioncam 540 in accordance with the basic requirements and other relevant provisions of the following CE Directives:

- 2011/65/EC RoHs Directive
- 2014/30/EU EMC Directive
- 2012/19/EC WEEE Directive
- 2014/53/EU RED-Directive



The EC Declaration of Conformity can be requested from the address specified on the Warranty card.