



# B100

## User manual

All information in this document is subject to change.

www.intezze.com

### Basic instructions

#### Powering On and first pairing

The case with earbuds needs to be fully charged before first use.

Take the left and then the right earbud out of the charging case. In 5 seconds, one earbud starts flashing red / blue. The second earbud will not flash. Turn on the cellphone Bluetooth function and search for "B100". Select this item and confirm pairing. When the connection is successful, both LEDs on the earbuds go off.

#### Powering Off

Put both earbuds back into the charging case or press and hold the two headset touch keys for 3~5 seconds.

#### Reconnecting to your phone

Turn on the cellphone Bluetooth function, take out both earbuds from the charging case and they will reconnect automatically.

### Using the touch buttons

#### Pause / Resume playback

Short press the touch button (R / L) during playback to switch Play / Pause.

#### Next track

Double-click the touch button during playback to skip to the next song.

#### Previous track

Triple-click the touch button during playback to skip to the previous track.

#### Answer / Terminate call

On incoming call / call in progress, short press the touch button to answer / terminate the call.

#### Reject the call

On incoming call, press and hold the touch button for 1.5 seconds to reject the call.

### Charging

#### Charging the earbuds

Put the earbuds into the charging case. LED is slowly flashing red while charging and turns off when the earbuds are fully charged.

#### Charging the case

Use the micro USB charging cable and plug it into the microUSB port of the charging box. The digital number flashes during charging and will stay on after the battery is fully charged (displaying "100").

### Specification

Bluetooth version: V5.0

supporting agreement: A2DP, AVRCP, HFP, HSP

Frequency Range: 2.402GHz~2.480GHz ISM Band

Signal distance: > 10M

### FAQ

#### How do I restore the factory settings?

If the left and right earbud are not connected correctly, you can perform the factory reset operation:

1. Turn off both earbuds by holding the touch buttons for 3-5 seconds.
2. Press and hold both touch buttons for 10 seconds (until both LED indicators are flashing shortly).
3. Press both touch buttons 4x quickly. Both LEDs turn purple for a second.
4. Put the two earbuds back to the charging case and then perform a new pairing with your phone (delete from paired devices and search for a new device "Intezze B100").

#### Sound comes only from a single earphone?

Generally, it is because only one earphone is connected, and it can be solved after rebooting or restoring the factory settings.

#### How do I know, if the earbuds are fully charged?

There is a 5-step indication in the charging box. 1 active bar = 0-20 %, 5 bars (or all 5 off) = 100 %. You can check the charging status by taking the earbuds out and putting them back into charging case.

#### The charging box cannot charge the headphones

Connect the charging case to an USB charger via the USB charging cable.

### Warning

1. When using the headphones, please pay attention to your environment and adjust the volume level, so your hearing can not be damaged by long listening at high volume.
2. Do not use the earbuds in a corrosive environment to avoid damaging the electronic circuits of the headset.
3. The case with earbuds needs to be fully charged before first use.
4. If the earbuds are left unused for over 2 weeks, please recharge the case with earbuds periodically.
5. Never disassemble or modify your earbuds / charging case to avoid any damages or loss of warranty.
6. Please use the DC5V/1A charger to charge the charging box to avoid damage of the product.