

LAMINATOR

Instruction Manual

Model No.: L409-A



(GB) Operating Instruction

Dear customer,

thank you for buying this quality product. Please read this instruction carefully before initial operation. Particularly take note of the following safety instructions. Please keep this instruction for future reference and pass it, when handing over this item. If you should have any further questions on the device or complaints you will find our service information at the end of this instruction.

Intended Use:

The laminator is only suitable for laminating documents. Any other use or modification shall be deemed to be improper and involves substantial risk of accidents .

Important advice about safety

1. Read through these operating instructions carefully and completely before using the machine for the first time.
2. Only put the machine on a flat and dry surface. It must be freely accessible from all sides. It is not recommended to use an extension cable!
3. Do not open or repair the laminating machine yourself but take it to your specialized dealer whenever it is damaged, or contact our service hot line.
4. Only use films of the correct size (up to DIN A4 max.) and thickness (80 to 125 microns). Films that are too thin cause a blockage of the film in the machine.
5. Do not touch the hot surface of the machine after it has started up.
6. The laminating machine is not allowed – for safety reasons – to be used by children, unless they are supervised by an adult. Skladujte mimo dohled dětí.
7. Never use the machine outdoor or near water.
8. Hot lamination: do not laminate in this mode any materials that are sensitive to heat with this machine, like thermo-fax paper for example. These materials are only suitable for cold lamination.
9. Do not pour or spill any liquid into the machine or onto it.
10. Do not insert any metal objects into the machine. Please do not grasp inside the machine with your fingers.
11. The laminating machine is unsuitable for constant use commercially. It is recommended to switch „O“ the machine for 30 minutes, after it has been operating for a period of approximately 30 minutes.
12. The socket should be near the device and easily accessible.

Starting up the laminating machine

1. Push the plug into the mains socket outlet and set the switch to 'I'. The red LED (Power) lights up and the heating process will begin.
2. The green LED (Ready) lights up after approximately 3 - 5 minutes. Now you can begin the laminating process.
3. Open the laminating film and lay the material that is to be laminated directly onto the closed side. Leave a margin of between 3 mm and 5 mm approximately beyond the edges while doing so.

Caution

- a) Choose a film of correspondingly suitable size in relation to the material that is to be laminated respectively.
 - b) It is not recommended to process several smaller materials in one film.
 - c) Do not cut up the film before the laminating is done.
 - d) The material that is to be laminated, is not allowed to be thicker than 0.5 mm including the film.
 - e) It is imperative to only laminate very thin or soft materials, like newspaper or serviettes for example, with thicker films (125 microns). We recommend refraining from any attempt to do so!
 - f) Do not insert any laminating film without the contents.
 - g) Never utilize laminating pockets on one side or when they are rolled up.
 - h) Only utilize laminating foils that are also described as such. Other kinds of film, like transparent wallets for example, are unsuitable for laminating!
-
4. Insert the material within the laminating film straight and with the closed side first into the feed opening on the machine's front side. The material will feed it in automatically now.
 5. The laminated material that emerges from the delivery opening on the machine's back side is not allowed to be pulled out by force. Wait until it has run out of the machine completely. Let the laminated material to cool down briefly!
 6. Switch off the machine after the laminating has ended, by setting the switch to 'O'. Let the machine cool down and always pull the plug out of the mains socket outlet after using the machine.

Note: Do not feed the laminator further with foil in case of a blockage. Turn off the device immediately!

Clearing a blockage of the film

1. This machine is equipped with a film blockage function in order to resolve any blockage of the film. Such function is featured by ABS button on BACK SIDE of the laminator.
2. Please switch off the machine immediately by setting the switch to "O" and pull out the plug from the mains socket outlet, let the machine to cool down briefly (for hot laminating) and push the 'ABS' anti-film blockage button on back as direction indicated by the arrow sign, whenever there is a blockage of the film.
3. Hold the ABS switch firmly with one hand and pull out the film completely from the machine's feed opening or delivery opening with the other hand.
4. After you have resolved the blockage of the film and released the ABS switch, this will go back to its starting position again. Now you can use the machine again completely.
5. Please contact our service hot line if there is a blockage of the film again.

Cleaning and care

1. Please pull out the plug from the mains socket outlet always, in order to clean the machine. Take care while doing so that the plug does not come into contact with any liquids.
2. Allow the machine to cool down before cleaning it.
3. Clean the machine with a slightly moist, soft cloth. Do not use any caustic or abrasive cleaning agents while doing so.

Technical parameters:

Technical data	
Mains voltage (V)	220 V to 240 V, 50 Hz
Consumption	260W
Laminating width	240 mm
Size of the machine (mm)	355 x 135 x 58 mm
Film of utilizable thickness	80 - 125 microns
Heating up time	3 min. approx..
Speed	400 mm / min

Závady a odstranění

Pokud stroj nefunguje nebo funguje nesprávně, zkontrolujte, zda:

Je napájecí kabel zasunutý do zástrčky.

Hlavní vypínač se nachází v poloze „I“ a zeleně svítí kontrolka.

Není aktivní funkce zablokování filmu v přístroji.

Záruka

Na nový přístroj a výrobní závady se vztahuje záruka v trvání 24 měsíců od data jeho zakoupení.

Záruka se nevztahuje na závady způsobené běžným opotřebením.

Pokud Váš stroj nefunguje správně, pročtěte si znovu důkladně tento návod k obsluze.

Jestliže závada nemůže být odstraněna, uplatněte reklamaci u vašeho prodejce.

Tato záruka se nevztahuje na vady způsobené hrubým zásahem, neopatrnou manipulací, neodbornou obsluhou nebo neodborným zásahem do konstrukce přístroje, kolísáním napětí v rozvodné síti nebo na škody způsobené během přepravy.

Upozornění k prohlášení o shodě EU

Tento přístroj je ohledně shody se základními požadavky a dalšími příslušnými předpisy v souladu s evropskou směrnicí LVD (Směrnice 2014/35/EU), EMC (Směrnice 2014/30/EU) a směrnicí RoHS č. 2011/65/EU vč. změn 2015/863 EU.



WEEE

Tento produkt nesmí být likvidován jako běžný domácí odpad v souladu se směrnicí EU o likvidaci elektrických a elektronických zařízení (WEEE – 2012/19/EU). Místo toho musí být vrácen v místě zakoupení nebo odevzdán ve veřejné sběrně recyklovatelného odpadu. Správnou likvidaci přístroje pomůžete zachovat přírodní zdroje a napomáháte prevenci potenciálních negativních dopadů na životní prostředí a lidské zdraví. Další podrobnosti si vyžádejte od místního úřadu nebo nejbližšího sběrného místa. Při nesprávné likvidaci tohoto druhu odpadu mohou být v souladu s národními předpisy uděleny pokuty.



Dovozce:

Alza.cz a.s.

Jankovcova 1522/53, Holešovice

170 00 Praha 7

www.alza.cz