



**A9**

## **USER MANUAL**








Dear customer, thank you for purchasing our product. Please read the following instructions carefully and follow them to ensure that the product serves you safely and to your full satisfaction. This will prevent it from being misused or damaged. Avoid unprofessional handling of this device and always follow the principles of use of electrical appliances. Keep the operating instructions in a safe place.

## Warnings

- Please read the user manual carefully before using the product.
- This product generates heat while working, please be cautious to avoid any possible harm.
- Please don't shine the product directly into eyes.
- Please keep the light away from children.
- Please use WUBEN or WUBEN recommended batteries.
- Please don't disassemble the light or it will not be covered by WUBEN warranty policy.
- Please don't throw the product or battery into fire.
- This is not a product intended for diving, please do not use it underwater.

## Package List


Before using this product, please check whether the contents of the package are complete.

<b>1. A9 × 1</b> 	<b>2. ABG10200 Li-ion battery × 1</b> 	<b>3. Shoulder strap × 1</b> 
<b>4. Spare O-ring × 2</b> 	<b>5. Type-C charging cable × 1</b> 	<b>6. Adapter × 1</b> 
<b>7. Manual, warranty card, quality certificate × 1</b> 		

## Product Operation

### 1. About Product


The A9 is a high power flashlight, powered by a customized Li-ion battery pack of 10200mAh, and utilizing 3 × CREE XHP70.2 LEDs. It emits as high as 12000 lumens at maximum output. The side switch design makes it possible for the user to operate the device with one hand.

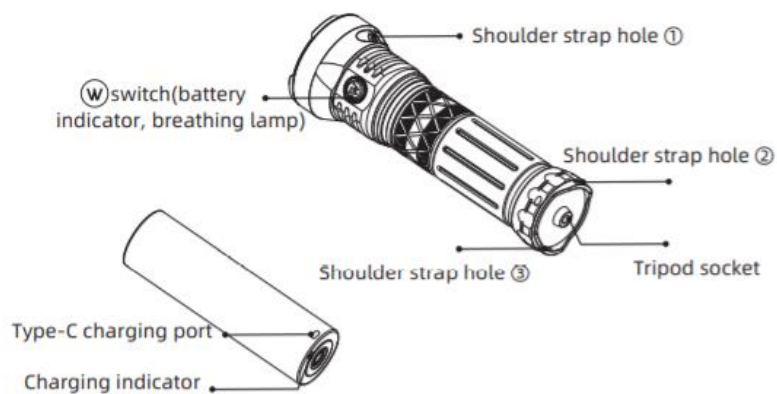

The positive and negative pole are on the same end of the battery, please make sure that there is no conductive material present to avoid a short circuit.


### 2. Installation


Please remove the insulation plate before using.

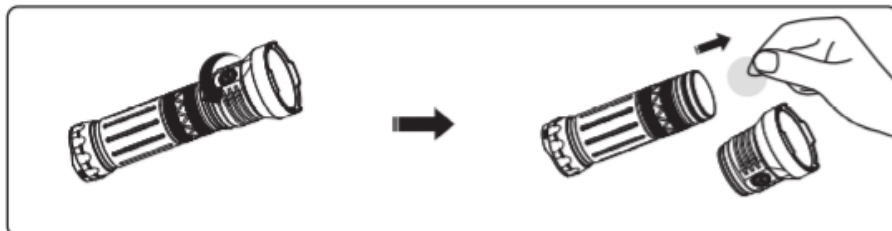



### 3. Operation


#### A. Outdoor Mode

**1. ON/OFF:** Press the  switch to turn on the flashlight, press again to turn it off. This flashlight has a memory function, allowing it to memorize the output levels instead of flash modes.


**2. Default Output Selection:** When the light is on, press and hold the  switch to cycle through Low-Med-High-Turbo, release to select your desired power level.

**3. Continuous Output Selection:** When the light is off, press and hold the  switch to activate the Low output level, and do not release to go from 100 lumens to 12000 lumens and then from 12000 lumens to 100 lumens back and forth, release to select an output in between. Click once to turn the device once, and click again to turn the device on. The device will now have the output level that you last selected between 100 and 12000 lumens.


**4. Instant Turbo:** When the light is on and not on Turbo mode, press the  switch twice to activate Turbo. Release to turn it off.

**5. Flash Mode:** When the light is off or on Turbo, click on the  switch twice to activate Strobe, and click twice again to swap between Strobe and SOS. Press again to exit flash mode.

#### 4. Breathing Lamp

No matter if the device is on or off, press the  switch three times to turn on the green breathing lamp. Click three times to turn it off.

#### 5. Locking and Unlocking

When the light is off, press the  switch four times. The light will blink three times to indicate the lockout status. Any further operations on the device will activate a blue light in the switch to indicate the lockout status, with the exception of another four presses of the switch, which will unlock the device and set it to Low operation mode.

#### 6. Charging

Take out the battery pack, connect the Type-C charging cable with the battery pack and an adapter of 5V/2A to charge. It takes about 12h to fully charge the light (based on 5V/2A adapter)











#### 7. Charging Status Indication


Charging	Red light on
Charging finished	Green light on

## 8. Charging Status Indication

$C \geq 90\%$	Blue light on (turns off after 5s)
$90\% > C \geq 40\%$	Blue light flashes (turns off after 5s)
$40\% > C \geq 15\%$	Red light on (turns off after 5s)
$15\% > C \geq 0$	Red light flashes

## Parameters

FL1 Standard	Turbo	High	Med	Low	Strobe	SOS
	12000  2600 LM	4000  2600 LM	1000LM	20LM	12000LM	00LM
	1 min + 3.6 hours	4 hours	11 hours	23 days	/	/
	4200m				1m	
	40900cd				IP68 (2m underwater for 1h)	
	447g / 15.77oz (without battery)   795g / 28.04oz (with battery)					
	215mm × 68mm   7.58in × 2.4in (L × D)					

 All data is derived from experiments of WUBEN lab according to the ANSI/NEMA FL1 standard, results may vary because of different experimental equipment, experimental environment or other factors. The experiments are based on 2 pieces of WUBEN 18650 Li-ion batteries (3400mAh).

## Maintenance

- The O-Ring may be damaged after long time use. Please replace the O-Ring in time to ensure the waterproofness of the product.
- Please use WUBEN batteries or WUBEN recommended batteries.
- When the flashlight indicates low power, please charge or replace the battery in time to avoid affecting the durability of the battery.
- Please use alcohol and a rag to clean the conductive parts of the flashlight.
- When not in use for a long time, please remove the battery to prevent the battery from leaking or exploding. Store the flashlight in a dry and ventilated place.
- Never use concentrated or abrasive cleaners on the lamp housing.

## FAQs

Problems	Causes	Solutions
Abnormal flash or failure to turn on	Check whether the flashlight is not locked.	Unlock the flashlight.
	Check if the switch is turned on correctly.	Turn on the switch.
	Check if the product is correctly assembled.	Tighten the parts.
	Check whether the battery is not low on power.	Try the battery on other products.
	Check if the battery is not reversed.	Remove the battery and reassemble the product correctly.
	Check the conductive position for dirt or any grime.	Clean the surface with alcohol.
Abnormal noise	Check whether there isn't any foreign matter in the tube.	Pour out possible foreign matter.
	Damage to parts.	Contact your seller.

If your problems still aren't solved, please contact WUBEN headquarters for after-sales service.

## Warranty Policy

A new product purchased in the Alza.cz sales network is warranted for 2 years. If you need repair or other services during the warranty period, contact the product seller directly, you must provide proof of purchase with the original date of purchase.

**The following are considered to be a conflict with the warranty conditions, for which the warranty claim may not be recognized:**

- Use of the product for a purpose other than that for which the product is intended or failure to follow the instructions for maintenance, operation and service of the product.
- Damage to the product due to a natural disaster, the intervention of an unauthorized person or mechanically through the fault of the buyer (eg during transport, cleaning by inappropriate means, etc.).
- Natural wear and aging of consumables or components during use (such as batteries, etc.).
- Exposure to adverse external influences, eg sunlight and other radiation or electromagnetic fields, ingress of fluid or object, mains overvoltage, voltage generated by electrostatic discharge (including lightning), faulty supply or input voltage and inappropriate polarity of this voltage, chemical processes, e.g. used power supplies, etc.
- If modifications, alterations, design changes, or alterations have been made by anyone to change or extend the product's features over the purchase or use of non-genuine components.
- Copies of proof of purchase of the product, altered, supplemented, without the original data or otherwise damaged documents on the purchase of the product will not be considered as documents proving the purchase of the claimed product.

## EU Declaration of Conformity

### Identification data of the manufacturer's / importer's authorized representative:

Importer: Alza.cz a.s.

Registered office: Jankovcova 1522/53, Holešovice, 170 00 Prague 7

IČO: 27082440

### Subject of the declaration:

Title: Rechargeable LED flashlight

Model: A9

### The above product has been tested in accordance with the standard (s) used for demonstration in accordance with the essential requirements laid down in the Directive (s):

Directive No. 2014/30 / EU

Directive No. 2011/65 / EU as amended by 2015/863 / EU

Prague, 7/23/2020



## WEEE

This product must not be disposed of as normal household waste in accordance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE - 2012/19 / EU). Instead it shall be returned to the place of purchase or handed over to a public collection point for the recyclable waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. Contact your local authority or the nearest collection point for further details. Improper disposal of this type of waste may result in fines in accordance with national regulations.





## **Manufacturer**

SHENZHEN SHENGQI LIGHTING TECHNOLOGY CO., LTD.

E-mail: [info@wubenlight.com](mailto:info@wubenlight.com)

Web: [www.wubenlight.com](http://www.wubenlight.com)

Address: 202#, Building A, Jihe E-Business Park, No. 33 Yangmei Road, Bantian Street, Longgang District, Shenzhen, China

## **Importer**

Alza.cz a.s.

Jankovcova 1522/53, Holešovice

170 00 Praha 7

[www.alza.cz](http://www.alza.cz)