

L50

USER MANUAL



Dear customer, thank you for purchasing our product. Please read the following instructions carefully and follow them to ensure that the product serves you safely and to your full satisfaction. This will prevent it from being misused or damaged. Avoid unprofessional handling of this device and always follow the principles of use of electrical appliances. Keep the operating instructions in a safe place.

Warnings

- Please read the user manual carefully before using the product.
- This product generates heat while working, please be cautious to avoid any possible harm.
- Please don't shine the product directly into eyes.
- Please keep the light away from children.
- Please use WUBEN or WUBEN recommended batteries.
- Please don't disassemble the light or it will not be covered by WUBEN warranty policy.
- Please don't throw the product or battery into fire.
- This is not a product intended for diving, please do not use it underwater.

Package List

Before using this product, please check whether the contents of the package are complete.



Product Operation

1. About Product

The L50 is a multifunctional flashlight for use in outdoors and camping activities. It utilizes 1 × OSRAM P9 LED, powered by 1 × high drain 18650 Li-ion battery, with which the product can emit as much as 1200 lumen at max output. The built-in charging design makes it more convenient to use.



2. Installation

Please remove the insulation plate before using.



3. Operation

1. ON/OFF: Press the button once to turn the light on/off.

2. Default Output Selection: When the light is on, press the switch once to cycle through Eco-Low-Med-High outputs. Press the button again to turn it off. The product has a memory function, and therefore it will remember the last output level used when being turned off.

3. SOS: When the light is on, press the button twice to activate SOS, press again to exit.

4. Low Battery Indication

When the remaining runtime is less than 30 minutes no matter in which output, the flashlight will flash 3 times every 5 minutes until it is powered off.

5. Charging

When the light is off, open the rubber cap to expose the Micro-USB charging port, plug the charging cable according to the correct direction, and connect to power source to charge. It takes about 4 hours to fully charge the device (5V/1A).

Red light on	Charging
Green light on	Charging finished
Red light and green light alternating	Poor contact
Red light flashes	Battery damaged
Green light flashes	Light is on or wrong battery installation
Only use batteries with protection circuits	

 \triangle Only use batteries with protection circuits.

△ Make sure the rubber cap is covered well after the charging is finished to not compromise the IP68 waterproof level.

Parameters

FL1	High	Med	Low	Eco	SOS	
Standard						
345	1200LM	400LM	75LM	5LM	200LM	
S	1.5h	2.5h	8.5h	143h	/	
V	200m		N.	1.5m		
-	10008cd		han .	IP68 (2m unde	erwater for 1h)	
۵ ۲ ۵	90g / 3.17oz (without battery) 138g / 4.87oz (with battery)					
لستستستست	138.6mm × 26mm 5.46in × 1.02in (L × D)					

All data is derived from experiments of WUBEN lab according to the ANSI/NEMA FL1 standard, results may vary because of different experimental equipment, experimental environment or other factors. The experiments are based on WUBEN 18650 Li-ion battery (2600mAh).

Accessory Recommendations

Holster, ABE3400 battery, ABE3100C battery.

Maintenance

- The O-Ring may be damaged after long time use. Please replace the O-Ring in time to ensure the waterproofness of the product.
- Please use WUBEN batteries or WUBEN recommended batteries.
- When the flashlight indicates low power, please charge or replace the battery in time to avoid affecting the durability of the battery.
- Please use alcohol and a rag to clean the conductive parts of the flashlight.
- When not in use for a long time, please remove the battery to prevent the battery from leaking or exploding. Store the flashlight in a dry and ventilated place.
- Never use concentrated or abrasive cleaners on the lamp housing.

Problems	Causes	Solutions	
	Check if the switch is turned on	Turn on the switch	
Abnormal flash	correcctly.		
or failure to	Check if the product is	Tighten the assembly parts.	
turn on	assembled correctly.		
	Check if the battery is not	Remove the battery and	
	reversed.	reassemble the product correctly.	
	Check if the battery is not low	Try the battery on other products	
	on power.		
	Check the conductive position	Clean the surface with alcohol.	
	for dirt or any grime.		
Abnormal	Check whether there isn't any	Pour out possible foreign matter.	
noise	foreign matter in the tube.		
	Damage to parts.	Contact your seller.	

FAQs

If your problems still aren't solved, please contact WUBEN headquarters for after-sales service.

Warranty Policy

A new product purchased in the Alza.cz sales network is warranted for 2 years. If you need repair or other services during the warranty period, contact the product seller directly, you must provide proof of purchase with the original date of purchase.

The following are considered to be a conflict with the warranty conditions, for which the warranty claim may not be recognized:

- Use of the product for a purpose other than that for which the product is intended or failure to follow the instructions for maintenance, operation and service of the product.
- Damage to the product due to a natural disaster, the intervention of an unauthorized person or mechanically through the fault of the buyer (eg during transport, cleaning by inappropriate means, etc.).
- Natural wear and aging of consumables or components during use (such as batteries, etc.).
- Exposure to adverse external influences, eg sunlight and other radiation or electromagnetic fields, ingress of fluid or object, mains overvoltage, voltage generated by electrostatic discharge (including lightning), faulty supply or input voltage and inappropriate polarity of this voltage, chemical processes, e.g. used power supplies, etc.
- If modifications, alterations, design changes, or alterations have been made by anyone to change or extend the product's features over the purchase or use of non-genuine components.
- Copies of proof of purchase of the product, altered, supplemented, without the original data or otherwise damaged documents on the purchase of the product will not be considered as documents proving the purchase of the claimed product.

EU DECLARATION OF CONFORMITY

Identification data of the manufacturer's / importer's authorized representative:

Importer: Alza.cz a.s. Registered office: Jankovcova 1522/53, Holešovice, 170 00 Prague 7 IČO: 27082440

Subject of the declaration: Title: Rechargeable LED flashlight Model : L50

The above product has been tested in accordance with the standard (s) used for demonstrationin accordance with the essential requirements laid down in the Directive (s):

Directive No. 2014/30 / EU Directive No. 2011/65 / EU as amended by 2015/863 / EU

Prague, 7/23/2020

CE

WEEE

This product must not be disposed of as normal household waste in accordance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE - 2012/19 / EU). Instead it shall be returned to the place of purchase or handed over to a public collection point for the recyclable waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. Contact your local authority or the nearest collection point for further details. Improper disposal of this type of waste may result in fines in accordance with national regulations.



Manufacturer

SHENZHEN SHENGQI LIGHTING TECHNOLOGY CO., LTD. E-mail: info@wubenlight.com Web: www.wubenlight.com Address: 202#, Building A, Jihe E-Business Park, No. 33 Yangmei Road, Bantian Street, Longgang District, Shenzhen, China

Importer

Alza.cz a.s. Jankovcova 1522/53, Holešovice 170 00 Praha 7 www.alza.cz

All rights reserved. ©2020 alza.cz