

# **GameSir T4 pro**

### User's guide

Importer

Alza.cz a.s. Jankovcova 1522/53 Holešovice 170 00 Prague 7 www.alza.cz Dear customer,

Thank you for purchasing our product. Please read the following instructions carefully before using for the first time and keep this user manual for future reference. Pay particular attention to the safety instructions. If you have any questions or comments about the device, please contact the customer line. Customer line, available 24 hours a day: +44 (0)203 514 4411, www.alza.co.uk.

#### SYSTEM REQUIREMENTS

Android 8.0 iOS 13 or above Windows 7/10 or above Mac OS

#### **DEVICE LAYOUT**



- A. Left joystick
- B. D-Pad
- C. Select Button
- D. Home button
- E. Start button
- F. Right joystick
- G. ABXY button
- H. Turbo button
- I. Indicator
- J. USB reciever





- K. LB Button
- L. RB Button
- M. LT button
- N. RT button
- O. Type-C connector
- P. Phone holder base
- Q. Charging Indicator
- R. M1 M3 button
- S. M2 M4 button

**Power On:** Press and hold the HOME button for 2 seconds to power on.

**Power Off:** Press and hold the HOME button for 5 seconds to power off.

**Pairing mode:** According to the gamepad mode you want to apply, select a buttoncombination to power on to enter the corresponding mode, which is to enter the pairing mode.

**Reconnect:** The game controller will remember the last pairing record. The next time you turn on, you don't need the button-combination. Just press and hold the HOME button and power on will automatically reconnect to the last paired device.

#### **HOW TO USE THE PHONE HOLDER**

Please insert the phone holder from the top gamepad



#### **HOW TO CHARGE THE GAMEPAD**

Use a charging cable to connect the Type-C interface on the top of the gamepad to the USB charging port.

#### **BATTERY STATUS**

When the battery is below 15%, the current Charging Indicator will flash in RED quickly.

Charging indicator	Description
Red light stays on	Charging
Red light goes out	Fully charged



#### HOW TO CONNECT TO A COMPUTER OR ANDROID TV BOX VIA USB RECEIVER

- 1. Plug the USB receiver into the USB port of your computer od Android TV box.
- 2. Press the X + HOME button until the gamepad is turned on.
- 3. The next time you connect to the computer, just press the HOME button to power on, the gamepad will automatically connect.

NOTE: If the gamepad has been switched to another mode, you need to use the key combination to restart.

HOME button indicator	Description	
••	Mode indicator	
••		
Blue slow flash	Connecting	
Blue fast flash	Pairing	
Blue stay on	Connected	



#### HOW TO CONNECT TO PC VIA A USB CABLE

Plug the USB cable to the USB port of your computer.



#### HOW TO CONNECT TO SWITCH OR SWITCH LITE VIA BLUETOOTH

- 1. Go to the main interface of the Switch and click: Joy Con change the grip/ order and enter the pairing interface.
- 2. Press the Y + HOME button until the gamepad is turned on.
- 3. Gamepad will automatically pair with Switch or Switch Lite.
- 4. The next time you connect to Switch or Switch Lite, as long as you press the HOME button to power on, the gamepad will automatically connect.

NOTE: If the gamepad has been switched to another mode, you need to use the key combination to restart.

HOME button indicator	Description	
••	Mode indicator	
••		
••		
Blue slow flash	Connecting	
Blue fast flash	Pairing	
Blue stay on	Connected	

In Switch or Switch Lite, the value of the A button and B button, X button and Y button of the gamepad will be swapped

#### HOW TO CONNECT TO MOBILE PHONE VIA BLUETOOTH

#### PLAY ANDROID CONTROLLER-SUPPORTED GAMES

Refers to mobile games that support using a gamepad.

- 1. Press the A + HOME button until the gamepad is turned on.
- 2. Turn on the phone's Bluetooth, search for GameSir-T4 pro gamepad, click and pair.
- 3. The next time you connect, as long as you press the HOME button to power on, the gamepad will automatically connect.

NOTE: If the gamepad has been switched to another mode, you need to use the key combination to restart.

HOME button indicator	Description
••	Mode indicator
Blue slow flash	Connecting
Blue fast flash	Pairing
Blue stay on	Connected



#### PLAY APPLE ARCADE AND MFI GAMES

Refers to mobile games that support using a gamepad.

- 1. Press the B + HOME button until the gamepad is turned on.
- 2. Turn on the phone's Bluetooth, search for Xbox Wireless Controller gamepad, click and pair.
- 3. The next time you connect, as long as you press the HOME button to power on, the gamepad will automatically connect.

NOTE: If the gamepad has been switched to another mode, you need to use the key combination to restart.

	HOME button indicator	Description	
	••	Mode indicator	
	••		
	••		
	Blue slow flash	Connecting	
	Blue fast flash	Pairing	
	Blue stay on	Connected	
DM	E		



#### HOW TO CONNECT TO APPLE MAC VIA BLUETOOTH

- 1. Press the SELECT + HOME button until the gamepad is turned on.
- 2. Turn on the Apple MAC's Bluetooth Bluetooth, search for GamepadX gamepad, click and pair.
- 3. The next time you connect, as long as you press the HOME button to power on, the gamepad will automatically connect.

NOTE: If the gamepad has been switched to another mode, you need to use the key combination to restart. And back buttons programming is not supported in this mode.

HOME button indicator	Description	
• •	Mode indicator	
••		
Blue slow flash	Connecting	
Blue fast flash	Pairing	
Blue stay on	Connected	



To learn more about Android controller-supported games, Apple Arcade games, MFi games and how to use GameSir T4 pro, please scan the following QR code or refer to the online advanced user guide.



#### **BACK BUTTON FUNCTION**

**BACK BUTTONS LAYOUT** 



Default button value

#### **OTHER FUNCTIONS**

Key binds	Description
Turbo + D-Pad's Up & Down	Adjust the intensity of 5 levels of motor vibration, 1 level is the highest, the default is 1 level.
Hold L2, R2, R3 + D-Pad's Up & Down	Adjust 5 levels of brightness of the backlight, 1 level is the highest, the default is 1 level.
Hold LB + RB for 5 seconds	Open/ Close backlight

#### **TURBO COMBO FUNCTION**

Combo function	Set/ Delete combo	Light Indication	Programmable Buttons
Achieve fast attacks in the game	Press and hold the button that needs to do a combo, and then press the Turbo button	The right joystick backlight flashes red means set was done. After deleting the combo, the right joystick backlight returns to blue.	A, B, X, Y, LB, RB, LT, RT

#### BACK BUTTONS PROGRAMMING SINGLE BUTTON OR MULTIPLE BUTTONS CAN BE SET

SINGLE BUTTON OR MULTIPLE BUTTONS CAN BE SET				
Turbo mode	How to start	Description	Indicator tips	
Triggered at	Any M button + SELECT	E.g.:	The red and blue	
the same time	1. In Switch mode,	1. M1 + SELECT	lights of the right	
	combination key	enters the Same	joystick backlight	
	programming is not	Trigger	circle are stay om	
	supported, only single	programming	at the same time,	
	key programming is	mode	which means	
	supported.	2. Press and hold	entering the	
	(In Apple Mac Mode,	the button you	programming	
	back buttons	want to program.	mode. The blue	
	programming is not	3. Press and hold	light of the right	
	supported.)	the LB and R3	joystick backlight	
		4. Press M1 again	circle is stay on,	
		to confirm.	which means the	
		5. Press M1 to	programming is	
		enable the LB and	completed.	
		R3 to be triggered		
		simultaneously		
Triggered in	Any M button + START	E.g.:	The red and blue	
sequence	1. In Switch mode,	1. M1 + START	lights of the right	
	combination key	enters the	joystick backlight	
	programming is not	Sequential Trigger	circle are stay om	
	supported, only single	programming	at the same time,	
	key programming is	mode	which means	
	supported.	2. Press and hold	entering the	
	(In Apple Mac Mode,	the button you	programming	
	back buttons	want to program.	mode. The blue	
	programming is not	3. Press and hold	light of the right	
	supported.)	the LB first and	joystick backlight	
		then Press and hold	circle is stay on,	
		the R3	which means the	
		4. Press M1 again	programming is	
		to confirm.	completed.	
		5. Press M1 to		
		enable the LB and		
		R3 to be triggered		
		in sequence		

#### NOTICE

Please read this carefully.

- CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed or inhaled.
- DO NOT use the product near fire.
- DO NOT expose to direct sunlight or high temperatures.
- DO NOT leave the product in a humid or dusty environment.
- DO NOT impact the product or cause it to fall due to strong impact.
- DO NOT touch USB port directly or it might cause malfunctions.
- DO NOT strongly bend or pull cable parts.
- Use a soft, dry cloth while cleaning.
- DO NOT use chemicals such as gasoline or thinner.
- DO NOT disassemble, repair or modify.
- DO NOT use for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes.
- DO NOT look directly at the optical light. It might damage your eyes. If you have any quality concerns or suggestions, please contact GameSir or your local distributor.

#### **WARRANTY CONDITIONS**

A new product purchased in the Alza.cz sales network is guaranteed for 2 years. If you need repair or other services during the warranty period, contact the product seller directly, you must provide the original proof of purchase with the date of purchase.

## The following are considered to be a conflict with the warranty conditions, for which the claimed claim may not be recognized:

- Using the product for any purpose other than that for which the product is intended or failing to follow the instructions for maintenance, operation and service of the product.
- Damage to the product by a natural disaster, the intervention of an unauthorized person or mechanically through the fault of the buyer (e.g. during transport, cleaning by inappropriate means, etc.).
- Natural wear and aging of consumables or components during use (such as batteries, etc.).
- Exposure to adverse external influences, such as sunlight and other radiation or electromagnetic fields, fluid intrusion, object intrusion, mains overvoltage, electrostatic discharge voltage (including lightning), faulty supply or input voltage and inappropriate polarity of this voltage, chemical processes such as used power supplies, etc.
- If anyone has made modifications, modifications, alterations to the design or adaptation to change or extend the functions of the product compared to the purchased design or use of non-original components.

This product has been tested in accordance with the standards used to demonstrate compliance with the essential requirements set out in the relevant directives. You can find the declaration of conformity on the alza.cz website.

# CE

#### WEEE

This product must not be disposed of as normal household waste in accordance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE - 2012/19 / EU). Instead it shall be returned to the place of purchase or handed over to a public collection point for the recyclable waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. Contact your local authority or the nearest collection point for further details. Improper disposal of this type of waste may result in fines in accordance with national regulations.



All rights reserved. © 2020 Alza.cz a.s.