 


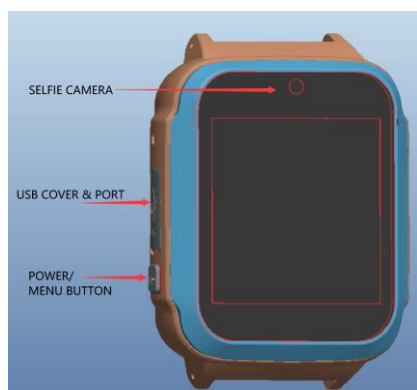

Game Watch User Manual

1.1) Power On and Power Off:

- Power On: Pres and hold the power button to turn on the watch.
- Power Off: Pres and hold the power button to turn off the watch.
- Home menu: Press the power button once to display the clock






1.2) Clock Face:

- Press and hold the center of the clock to change the clock face.



*Swipe in any direction from the clock face to proceed to the main menu.

1.3) Status Bar Icons:

	ALARM CLOCK IS ON
	DEVICE SOUND IS ON
	BATTERY STATUS

1.4) Battery Recharging:

*Note: Adult operation is suggested.

- Gently pull out the cover of the Micro-USB port on the left side of the watch.

- Insert the included Micro-USB cable (small end) into the Micro-USB

port on the watch.

- Insert the large end of the Micro-USB cable on your computer or to a standard USB power outlet adapter.
- Once the connection is successful, you will see a battery-charging symbol appear on the watch screen.
- When the battery is fully charged, the charging icon will stop animating and the battery symbol on the screen will show full.
- When the battery is fully charged, disconnect the charger from the power outlet first, then disconnect the watch from the charging cable.
- The battery strength icon on the status bar will scroll until the device is fully charged.

Note: Please charge your watch before you use it. It takes approximately 1 hour to fully charge the battery.

Battery Notice:

Misuse of batteries can lead to them bursting, causing a fire or chemical burns. Please read the following precautions:

- Do not disassemble the battery.
- Do not crush and do not expose the battery to any shock or force such as hammering, dropping, or stepping on it.
- Do not expose to high temperatures or place near a heat source.
- Do not leave in direct sunlight.
- Do not dispose of in a fire.

- Do not handle damaged or leaking batteries.
- Keep the battery dry.

1.5) Splash Proof for Everyday Play:

 
- Do not put the watch under running water.
- Do not submerge under water. Not suitable for showering, bathing, or swimming.
- Keep the cover of the Micro-USB port closed tightly while it is not in use in order to prevent any water getting in the watch.



2) Games:

Click the game menu on the watch, and there are 6 game options:

● TETRIS

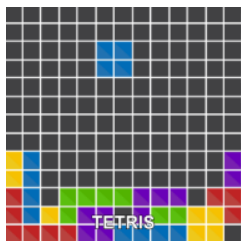

There are buttons for start, sound, help, highest score and “exit” settings. Click the start button to start the game. Use your finger to control the square to move left and right. Click the square on the screen to change the shape and place the various blocks automatically output in the game. Arrange them into a complete line or multiple lines and eliminate them to get a score, spell out a complete one or several at the bottom of the screen. These complete bars will disappear immediately to make room for the newly-falling plates. At the same time, players will be rewarded

 
with points. Blocks that have not been eliminated continue to pile up. Once they reach the top of the screen, the player loses and the game ends. The drop-down interface is to exit the game, and the option changes to continue or drop-down the interface to restart the game.

- MARIO EAT GOLD



There are start, difficulty level, highest score, sound, help setting buttons, click NEW to start the game, press the center button to jump with your finger, press the center twice to make a big jump, you need to collect as many coins as possible and cross platform. Don't fall or hit the pillar, otherwise the game is over!

- STICK HERO

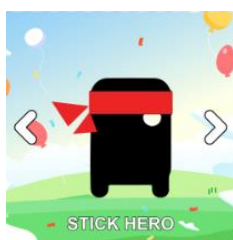

There are start, help, and exit settings buttons. Click NEW to start the game. Long press the screen to generate a bridge. The length of the bridge cannot be less than the distance to the top of the cliff. The bridge cannot be too long and cannot exceed the maximum distance from the cliff, otherwise the hero will fall into the cliff and end the game.

- CRAWL 2048



There are start, help, and exit settings buttons. Click NEW to start the game, use the up, left, right and down buttons to slide the number box to the new direction.

- BEE WAR



There are buttons for start, highest score, sound, and help settings. Click NEW to start the game and protect your planet from new enemies. Destroy them all before they reach your base. The purple enemy needs to be hit 2 times. To get as many points as possible!

- CAR GRAB GOODS



There are buttons for start, difficulty level, highest score, sound, and help setting. Click NEW to start the game. Use your finger to control the

car to move left and right to receive the gold coins dropped by the plane.


To get as many gold coins as possible, there are a total of three chances.

Automatically exit the game when it is used up.

3) Camera:



- Tap the camera icon in the main menu to enter camera mode.

- Tap the shutter icon to take a photo. 


- Swipe left or right to choose different filters.

4) Video:



- Tap the video icon in the main menu to enter video mode.

- Tap the record icon to begin recording video.

- When you are finished, tap the same icon. 

- Tap the right corner icon to save your last video.

5) Pedometer:



* This is a basic pedometer to count your movements. The watch should be worn on the wrist for greatest accuracy.

- Tap the start icon to start the pedometer and you can tap the stop icon

to stop it from counting any further.



 
- Tap the reset icon to reset the counter back to zero.



- On the pedometer screen you can check the distance walked and calories burned.

* This pedometer is just for fun and is not 100% accurate. The pedometer only counts movement when the pedometer feature is open and activated. The pedometer will only count movement if it is worn on the arm that is moving. Swipe right to exit to the main menu.

6) Album Viewer:

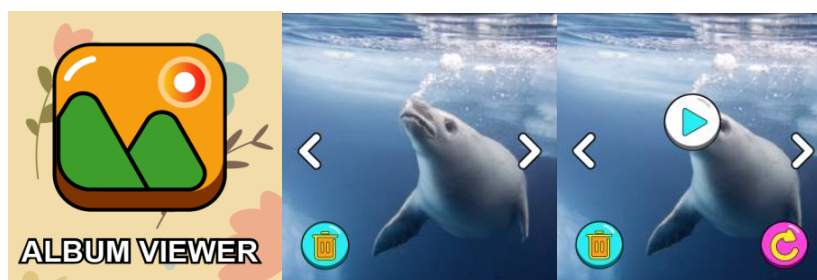

- Tap the album viewer icon on the main menu to browse or delete your photos and videos.

7) Time Tools

 


7.1) Alarm



- Select the hour and minute by tapping up or down on the hours, minutes.
- Tap the tone icon to display the alarm tone selection menu. There are 3 built-in alarm sounds, tap left or right to preview and select one of the three different tones.
- Once you choose an alarm, tap the check icon to confirm and start your alarm.

7.2) Stopwatch

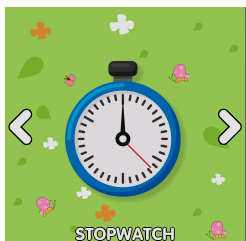

- Tap the play icon to start your stopwatch.
- While the stopwatch is running, tap the pause icon to pause the

stopwatch. Tap it again to resume.

- Tap the reset icon to stop the stopwatch and reset the time back to zero.

7.3) Timer

 


- Tap the timer to enter timer settings.
- Tap the play icon to start the timer immediately. Tap up or down on the minutes and seconds to change the time. Once set, tap the white check to confirm.
- While the time is running, tap the pause icon to pause the countdown and tap it again to resume. Tap the reset icon to stop the countdown and reset the timer.

8) Voice Recorder:





- Tap the record icon to start recording, when you finish recording, tap it again to stop.

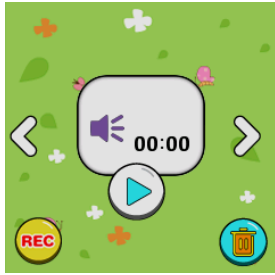


- Tap left or right to review the previous or next recording.
- Tap the play icon to display and play back your last recording.
- To delete a recording, tap the trash bin icon to delete.

 9) Calculator:

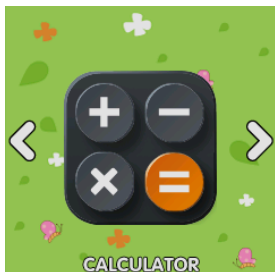

- Tap the calculator icon to enter the calculator function.
- Tap the "C" button to clear the calculator.
- Tap the  button to delete the last number typed.

 10) Settings:

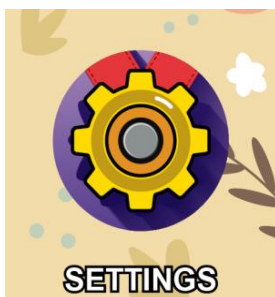


- * Tap left or right to scroll through the setting options.

10.1) Wallpaper: Tap the "set" button to choose one of two wallpapers to select.



10.2) Date: Tap up or down on the day, month and year to set the date.

 Tap the check icon to save.

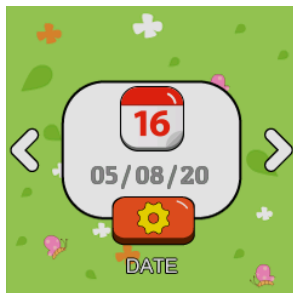

10.3) Time: Tap up or down on the hours and minutes to set the time.

 
Tap the check icon to save.



10.4) Storage:


* An adult is recommended for adding micro SD storage to this device in a dry and safe environment. Expandable up to 32GB.

- Tap the “set” button to enter the storage menu.

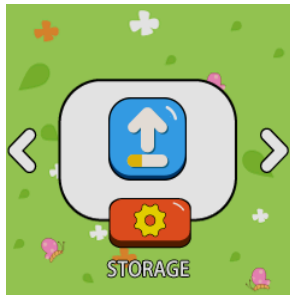

- Tap “watch” to save photo, video and voice recording to the watch.
- Tap “card” to save photo, video and voice recordings to the memory card if one has been added.
- Tap “space” to view the space remaining in both watch storage and micro SD storage.

 10.5) Brightness: Tap the “+” or “-” icons to set the screen brightness.

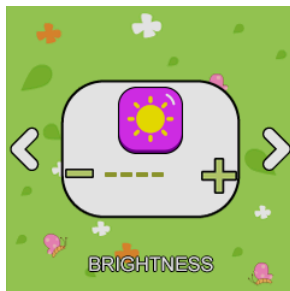

10.6) Volume: Tap the “+” or “-” icons to set the system volume.



10.7) Device Reset: Tap the “set” button to reset the watch to its factory settings. Once prompted, type password “1122” and the watch will restart and reset.

